

HEKMAN®

A HOWARD MILLER COMPANY

23865 QUEEN BED
23866 KING BED


Hardware List

A	B	C	D	E	F	G	H	
BOLT M8 x 100 8 PCS.	HALF WASHER M8 8 PCS.	SPRING W. M8 8 PCS.	HEXAGONAL BOLT M8 (8 PCS.)	ALLEN BOLT M6 X 40 (4 PCS.)	ALLEN KEY L4 (FOR ALLEN BOLT) 1 PC.	WRENCH KEY (FOR HEXA BOLT) 1 PC.	DOWEL Ø10 X 40 mm 4 PCS.	
							I SCREW Ø8 X 1 1/2" (8 PCS.) 	

Assembly Instruction


STEP 1:

INSERT CONNECTING BOLT (A) TO INSERT THAT ARE FIXED IN HEADBOARD AND FOOTBOARD. PLACE SIDE RAIL IN POSITION AND LOCK BY TURNING CLOCKWISE THE HALFMOON WASHER (B), SPRING WASHER (C), HEX BOLT (D) USING WRENCH KEY (G) PROVIDED.

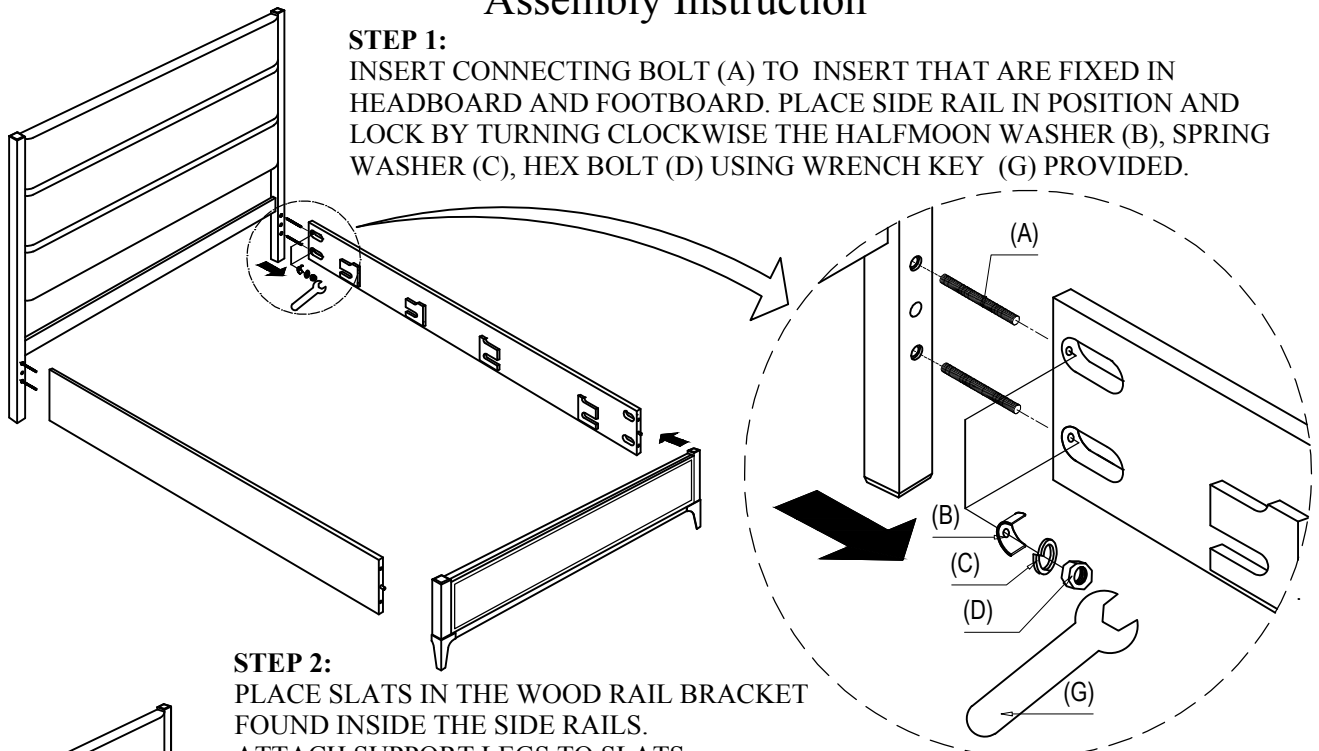

STEP 2:

PLACE SLATS IN THE WOOD RAIL BRACKET FOUND INSIDE THE SIDE RAILS. ATTACH SUPPORT LEGS TO SLATS, FIX WITH ALLEN BOLT (E) AND TIGHTEN USING ALLEN KEY M4 (F). PUT THE SLATS ON SUPPORT RAILS USING SCREW (I) AND TIGHTEN WITH SCREW DRIVER (NOT INCLUDED)

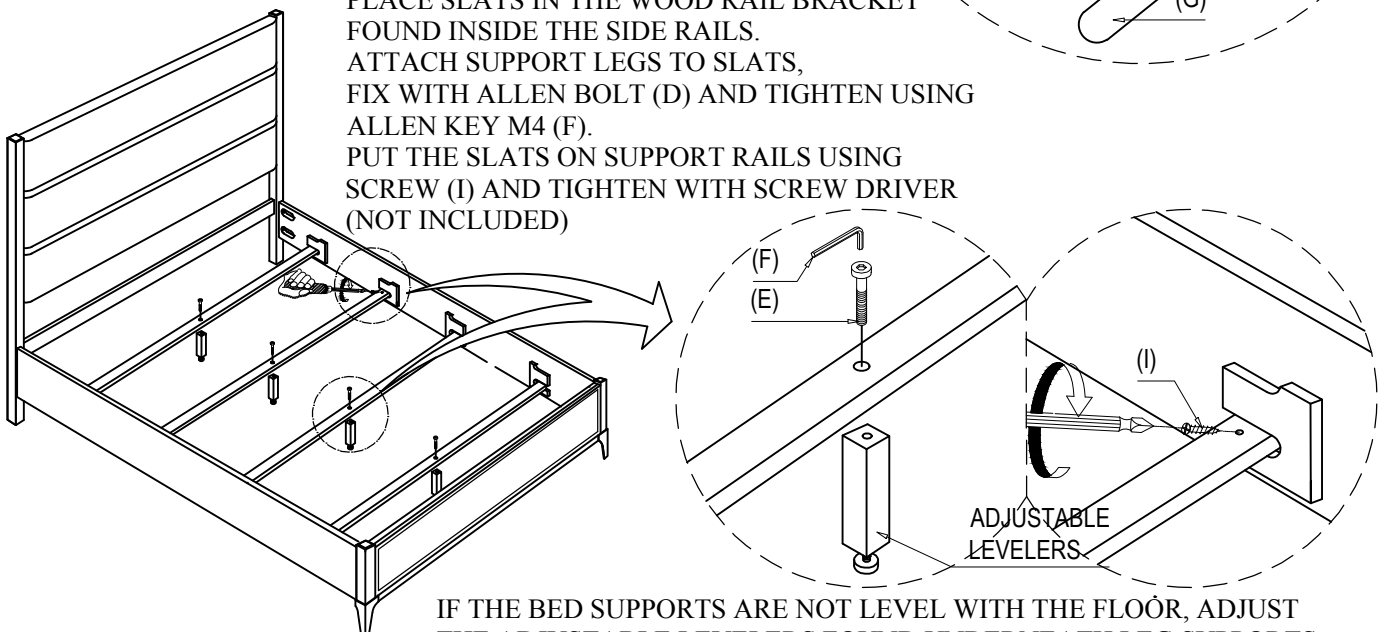

IF THE BED SUPPORTS ARE NOT LEVEL WITH THE FLOOR, ADJUST THE ADJUSTABLE LEVELERS FOUND UNDERNEATH LEG SUPPORTS.