

SUMMIT UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATION


BOX #1:
A. HEADBOARD

1 PC

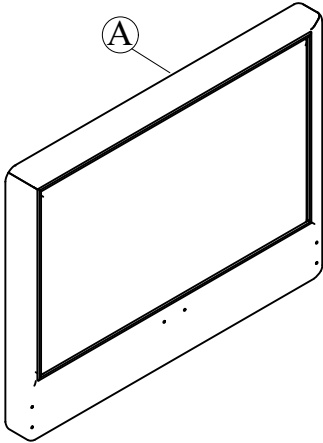


BOX #2:
B. FOOTBOARD
C. SLAT ROLL

1 PC
1 SET

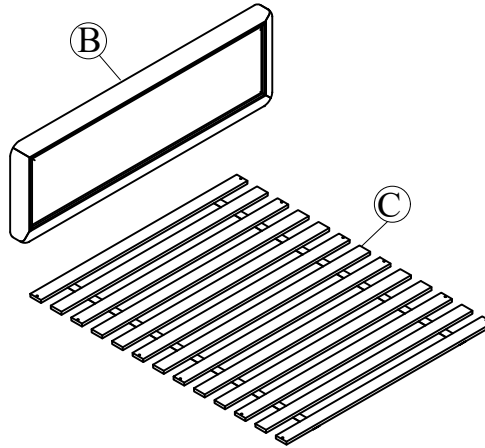


BOX #3:
D. SIDE RAIL
E. CENTER SLAT SUPPORT
F. SUPPORT LEG

2 PCS
1 PC
4 PCS

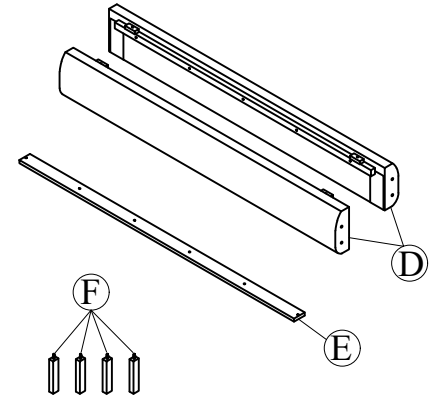

FULLY ASSEMBLED

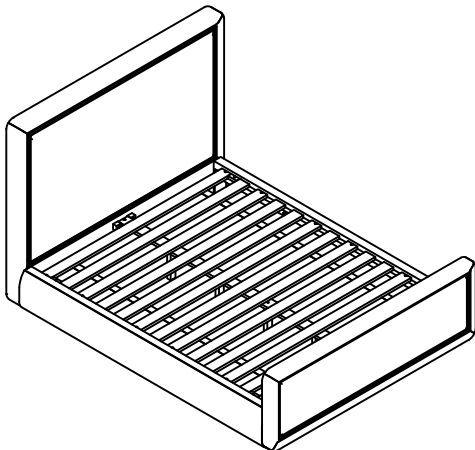


Not provided

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8×110mm)		8 PCS
2	CONNECTING BRACKET		4 PCS
3	FLAT WASHER(8mm)		12 PCS
4	LOCK WASHER (8mm)		12 PCS
5	HEX NUT (8mm)		8 PCS
6	WRENCH (13mm)		1 PC
7	CENTER SLAT SUPPORT CLEAT		2 PCS
8	ALLEN BOLT (8×60mm)		4 PCS
9	ALLEN KEY (5mm)		1 PC
10	PHILLIPS SCREW (4×40mm)		14 PCS

STEP 1:

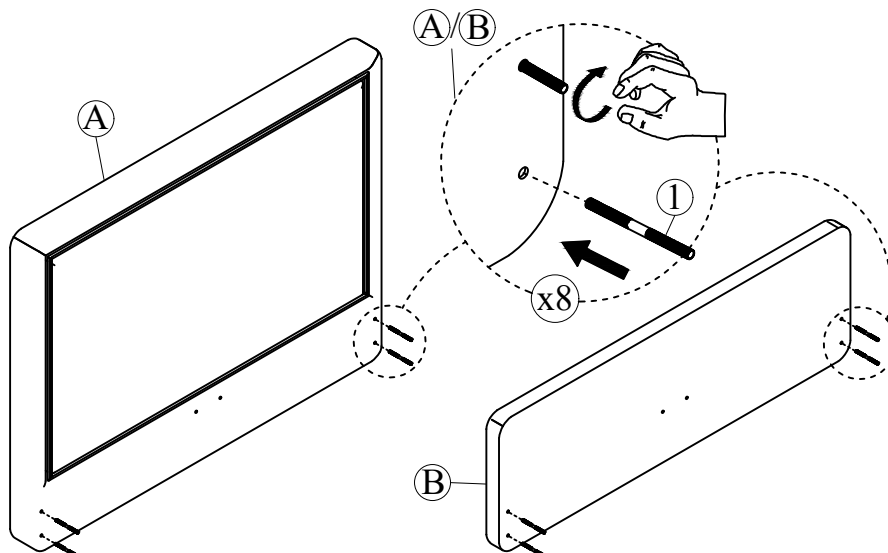


SUMMIT UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 2:

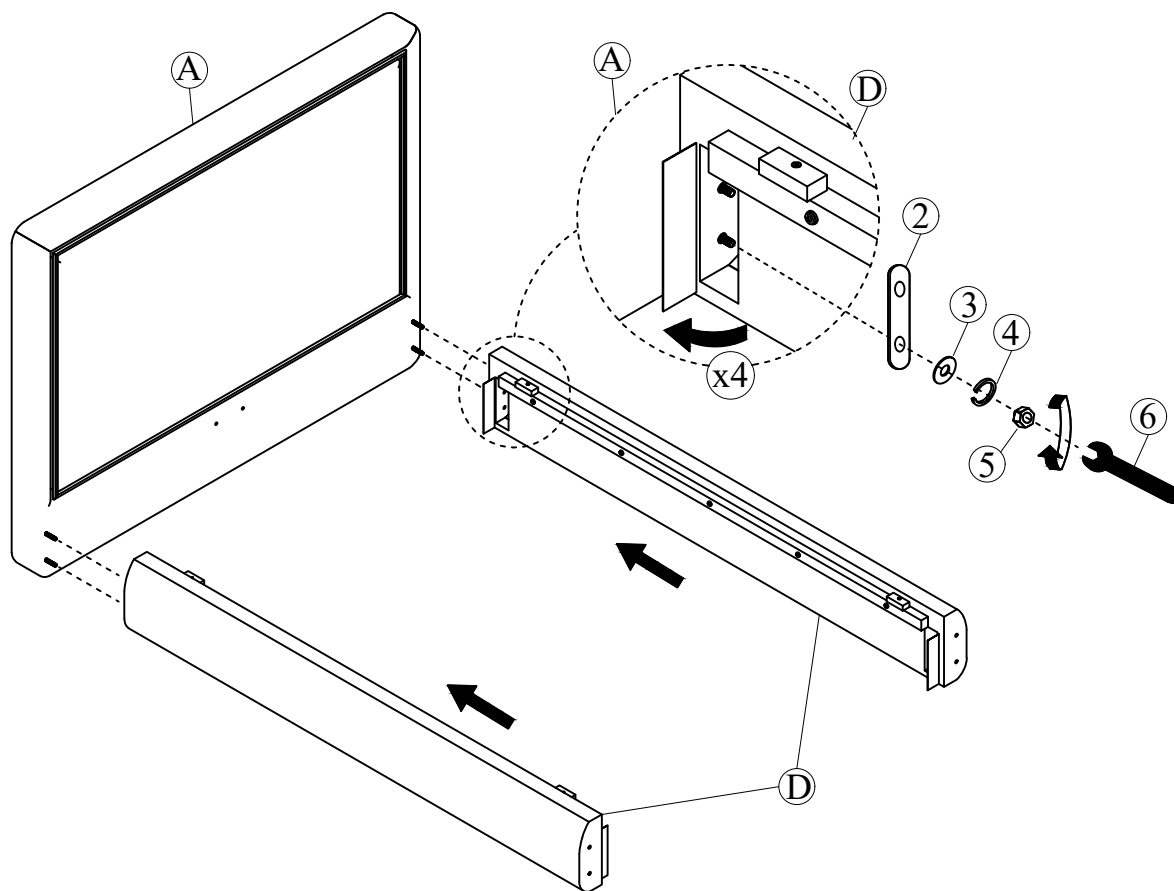

STEP 3:

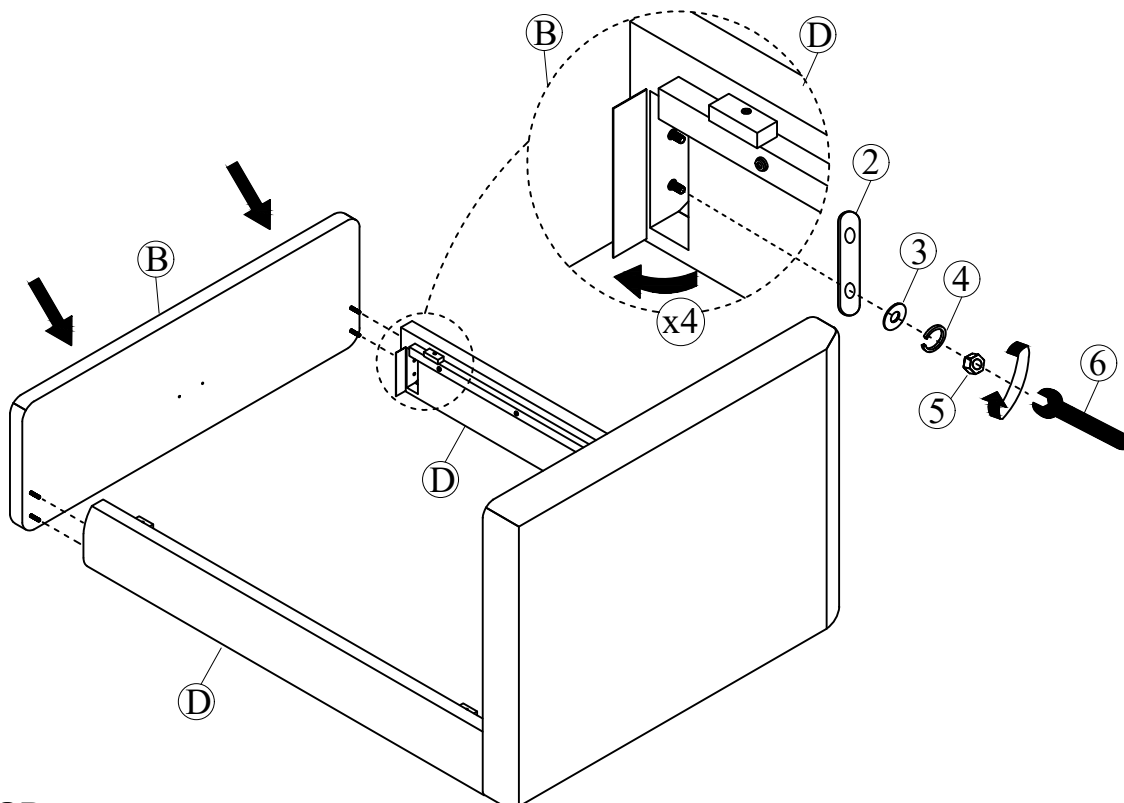

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6 & 7 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

SUMMIT UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 4:

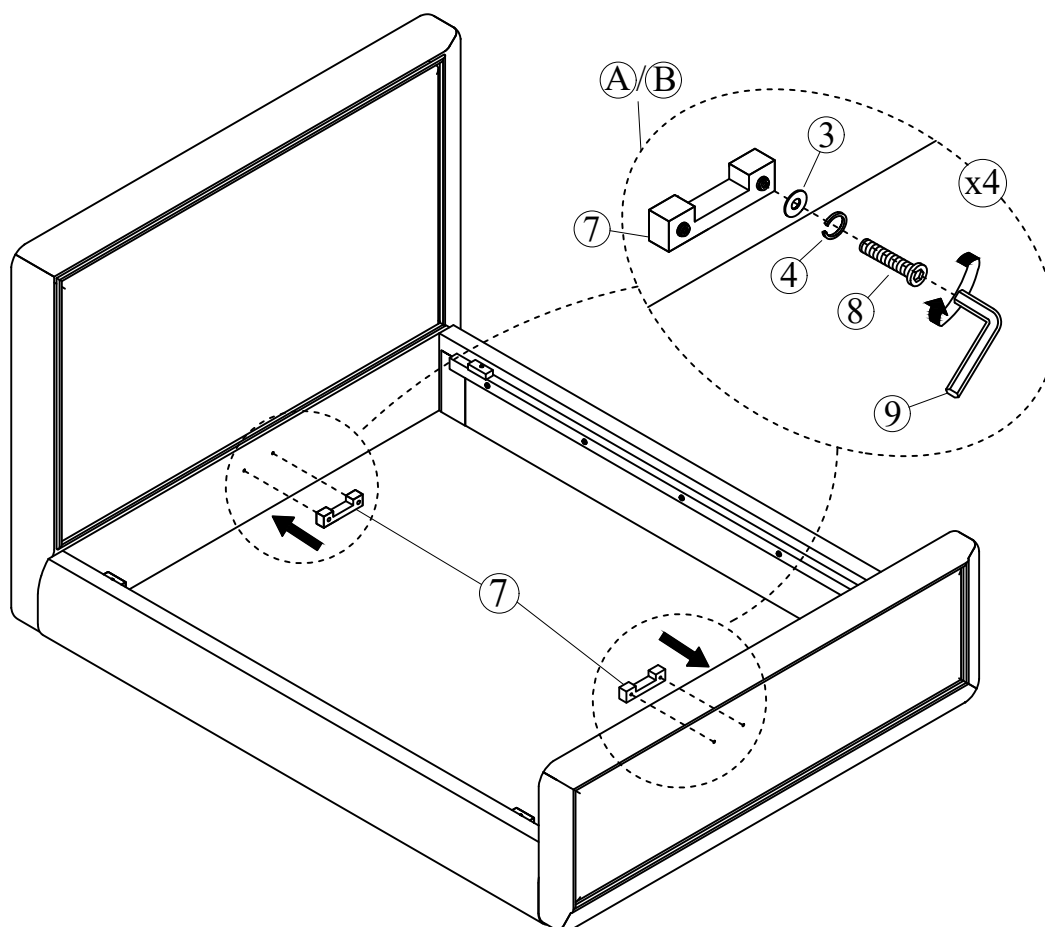

STEP 5:

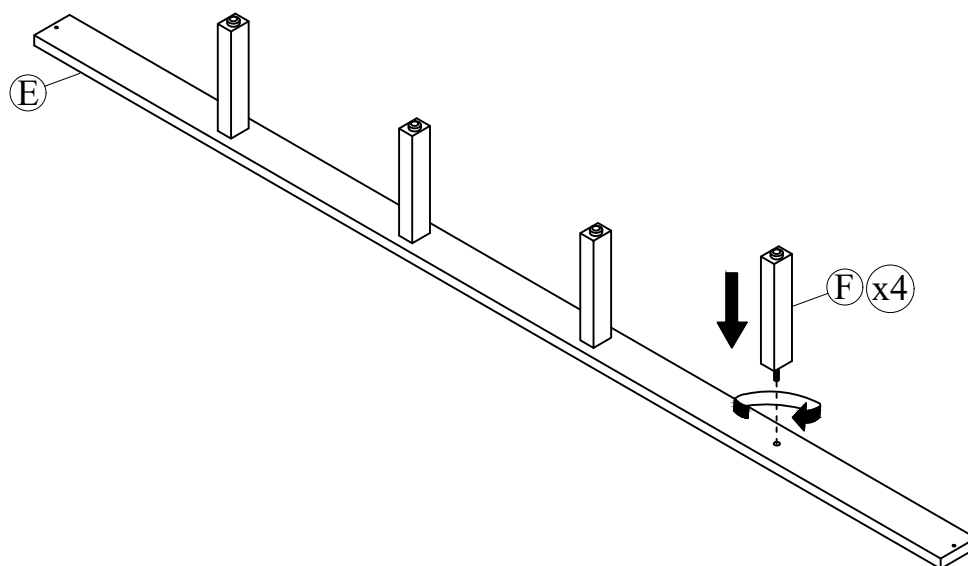


SUMMIT UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 6:

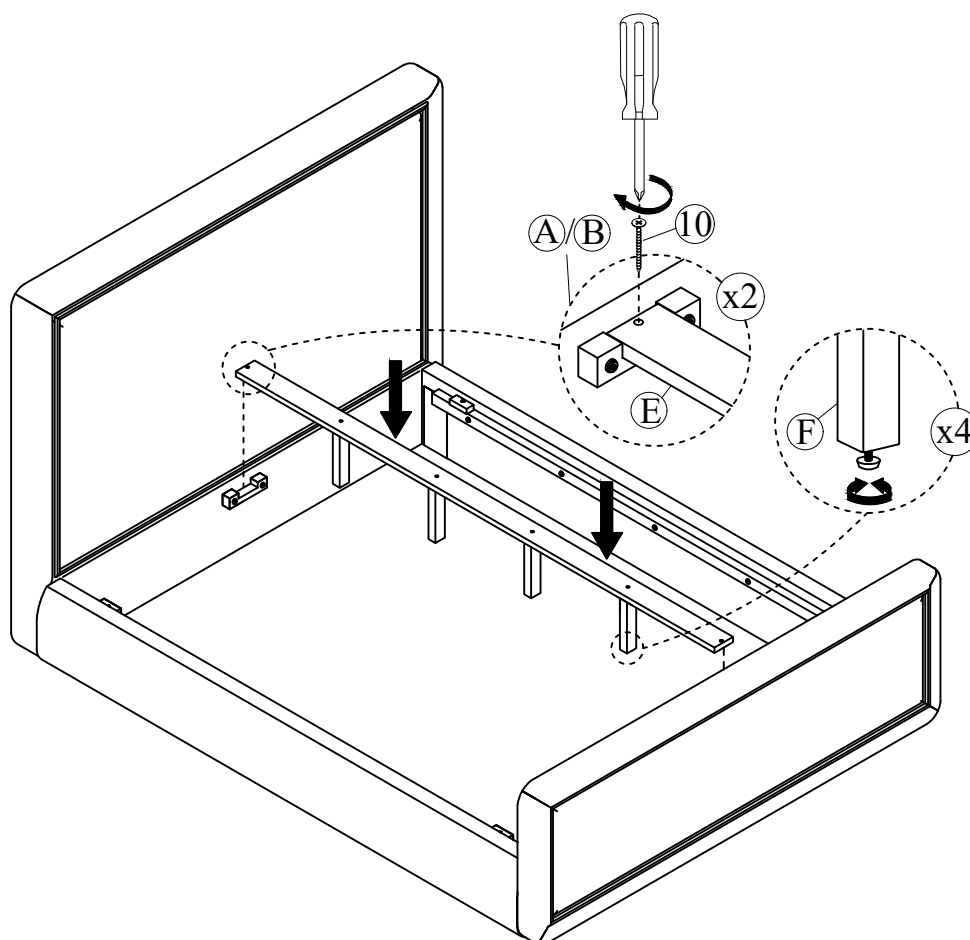


STEP 7:

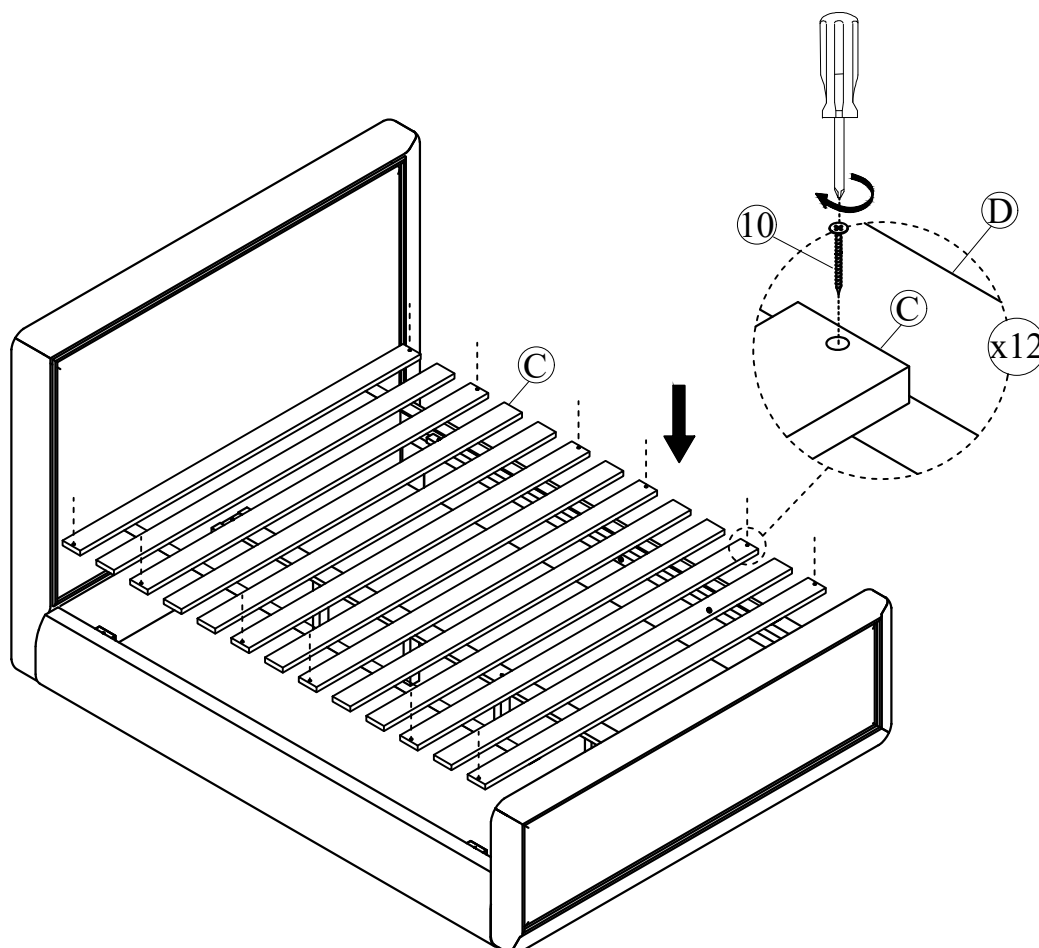

SUMMIT UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

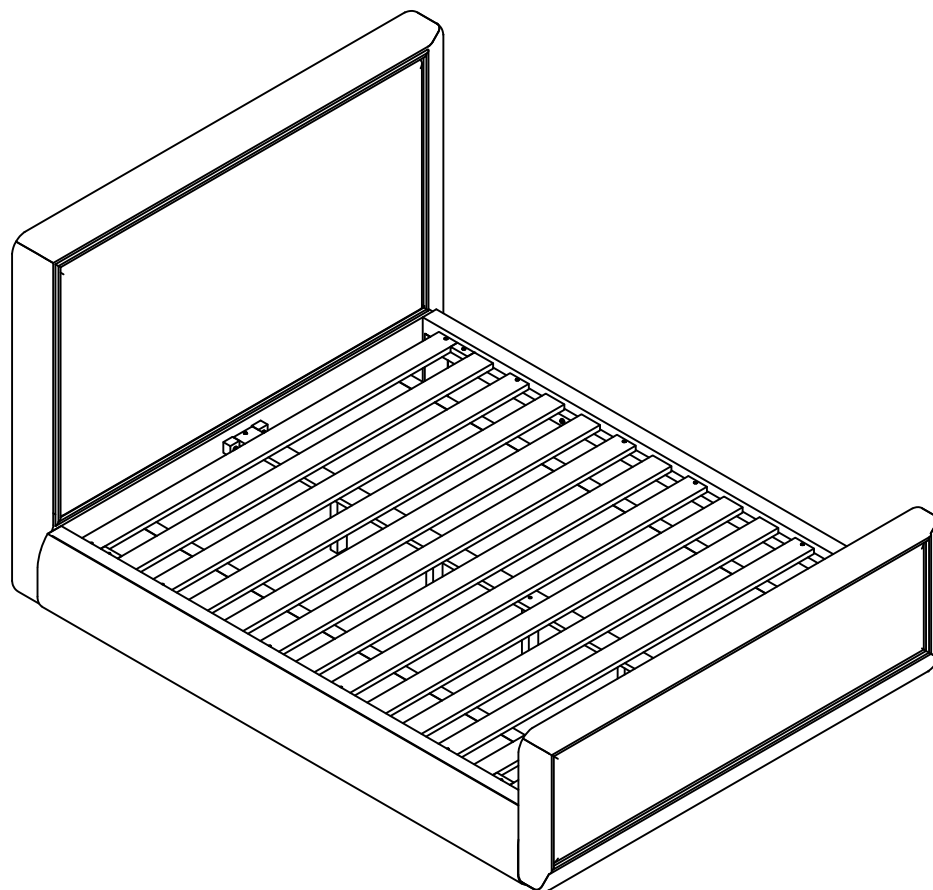


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

SUMMIT UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET	7. CENTER SLAT SUPPORT CLEAT	2 PCS
E. CENTER SLAT SUPPORT	1 PC		
F. SUPPORT LEG	4 PCS		

STEP 1:

USE ALLEN KEY (9) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

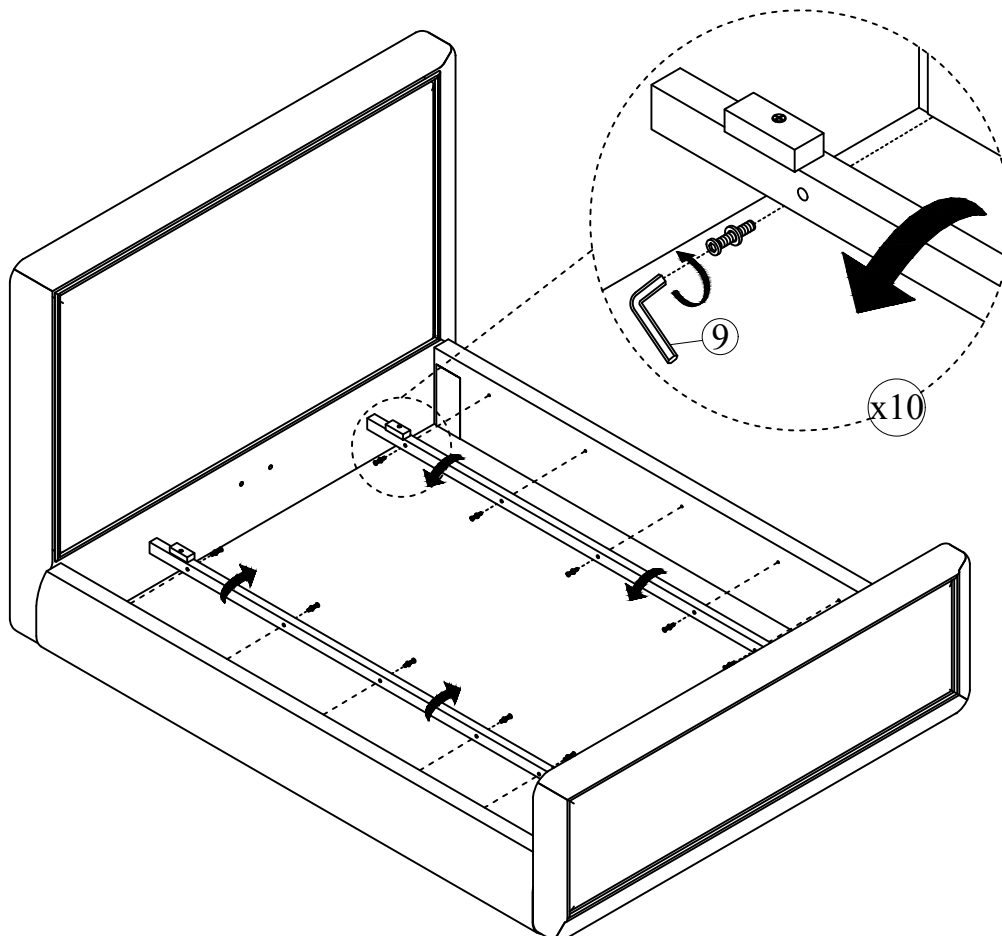

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

SUMMIT UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATION


BOX #1:
A. HEADBOARD

1 PC

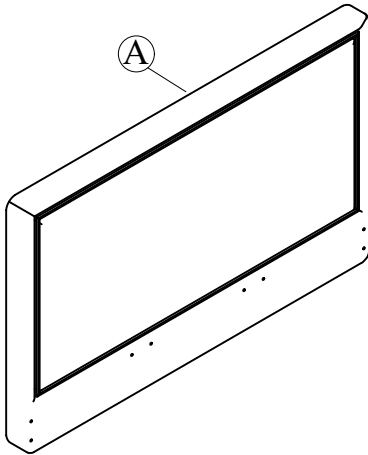


BOX #2:
B. FOOTBOARD
C. SLAT ROLL

1 PC
1 SET


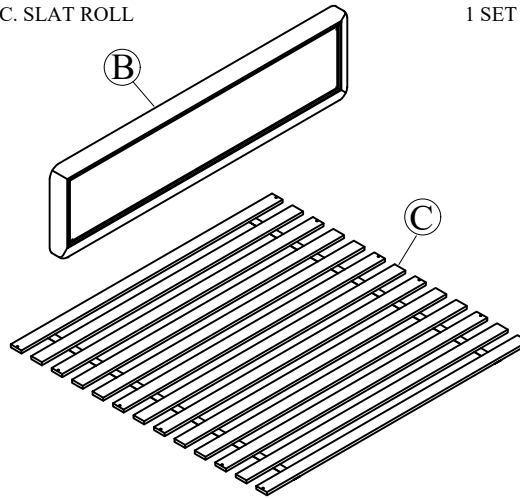


BOX #3:
D. SIDE RAIL
E. CENTER SLAT SUPPORT
F. SUPPORT LEG

2 PCS
2 PCS
8 PCS

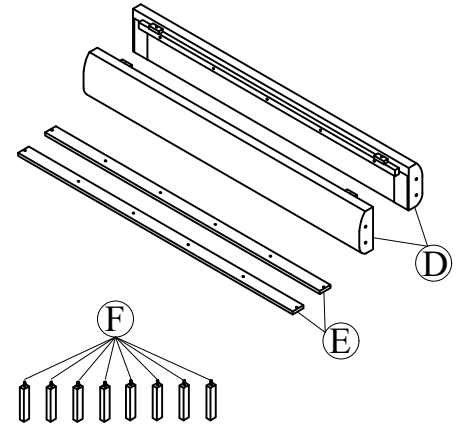

FULLY ASSEMBLED

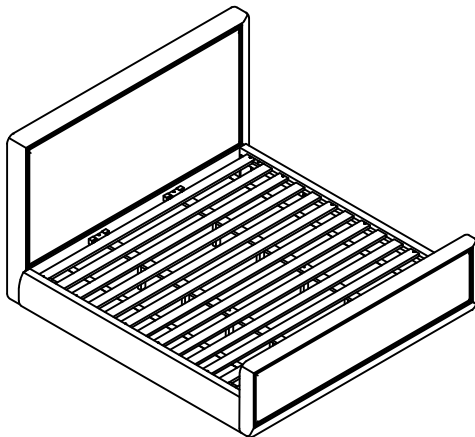


Not provided

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8×110mm)		8 PCS
2	CONNECTING BRACKET		4 PCS
3	FLAT WASHER(8mm)		16 PCS
4	LOCK WASHER (8mm)		16 PCS
5	HEX NUT (8mm)		8 PCS
6	WRENCH (13mm)		1 PC
7	CENTER SLAT SUPPORT CLEAT		4 PCS
8	ALLEN BOLT (8×60mm)		8 PCS
9	ALLEN KEY (5mm)		1 PC
10	PHILLIPS SCREW (4×40mm)		16 PCS

STEP 1:

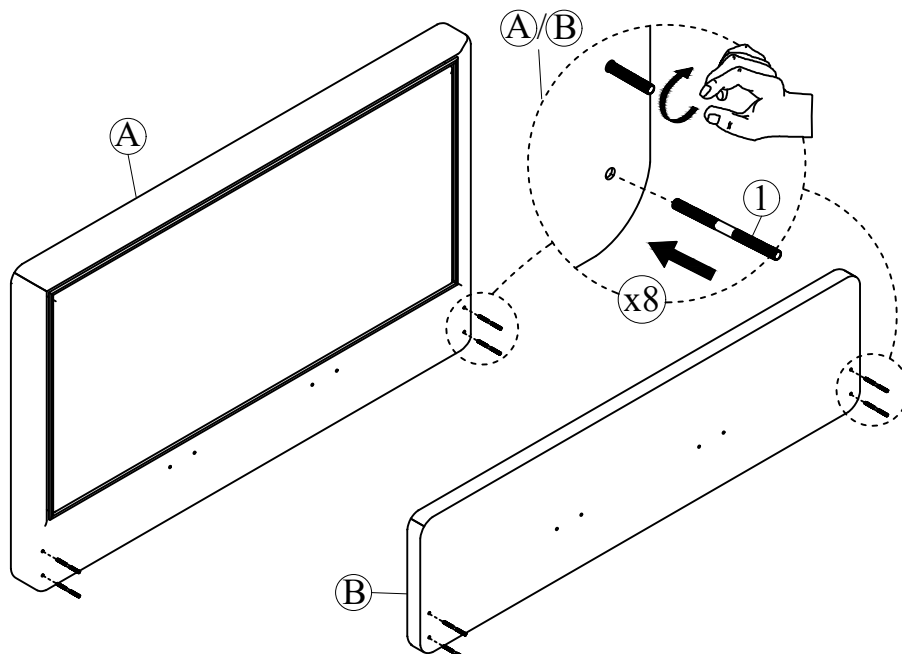


SUMMIT UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



STEP 2:

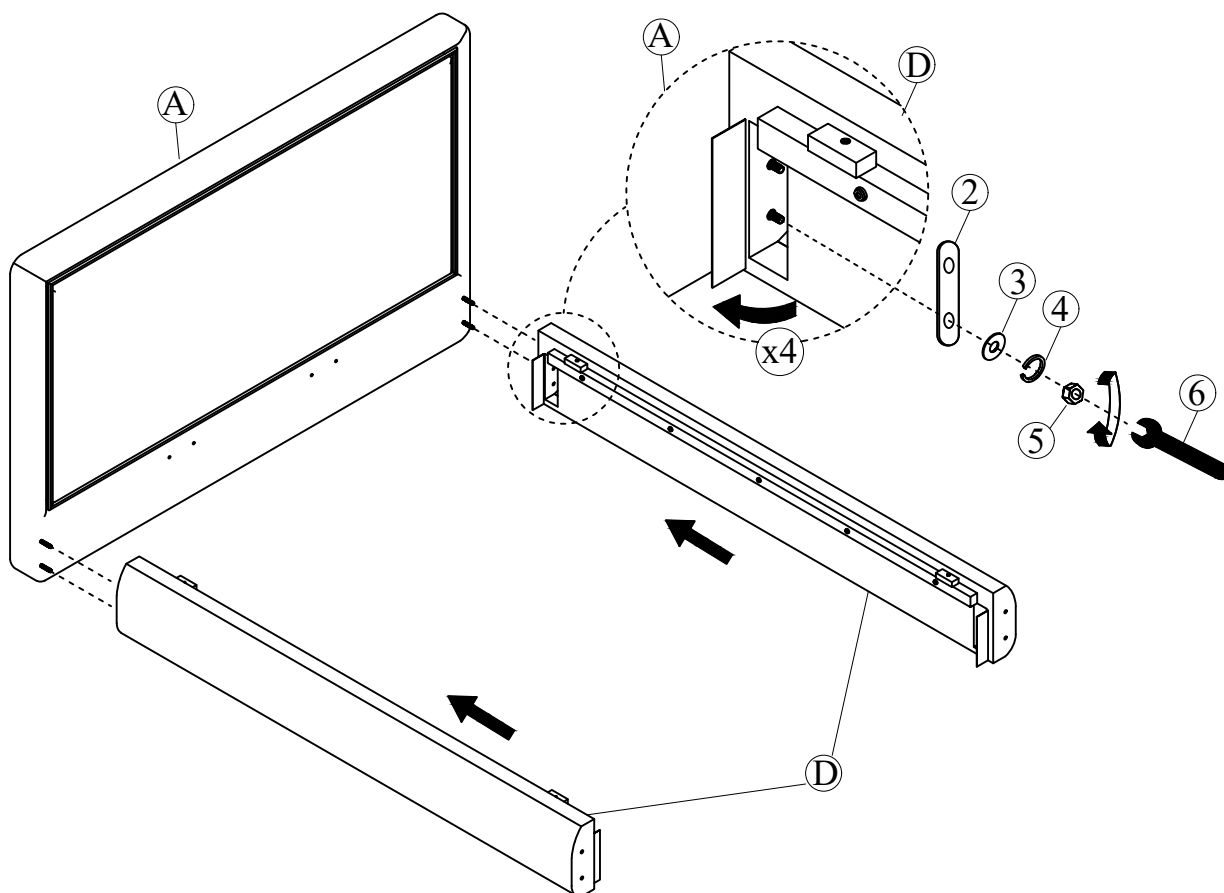

STEP 3:

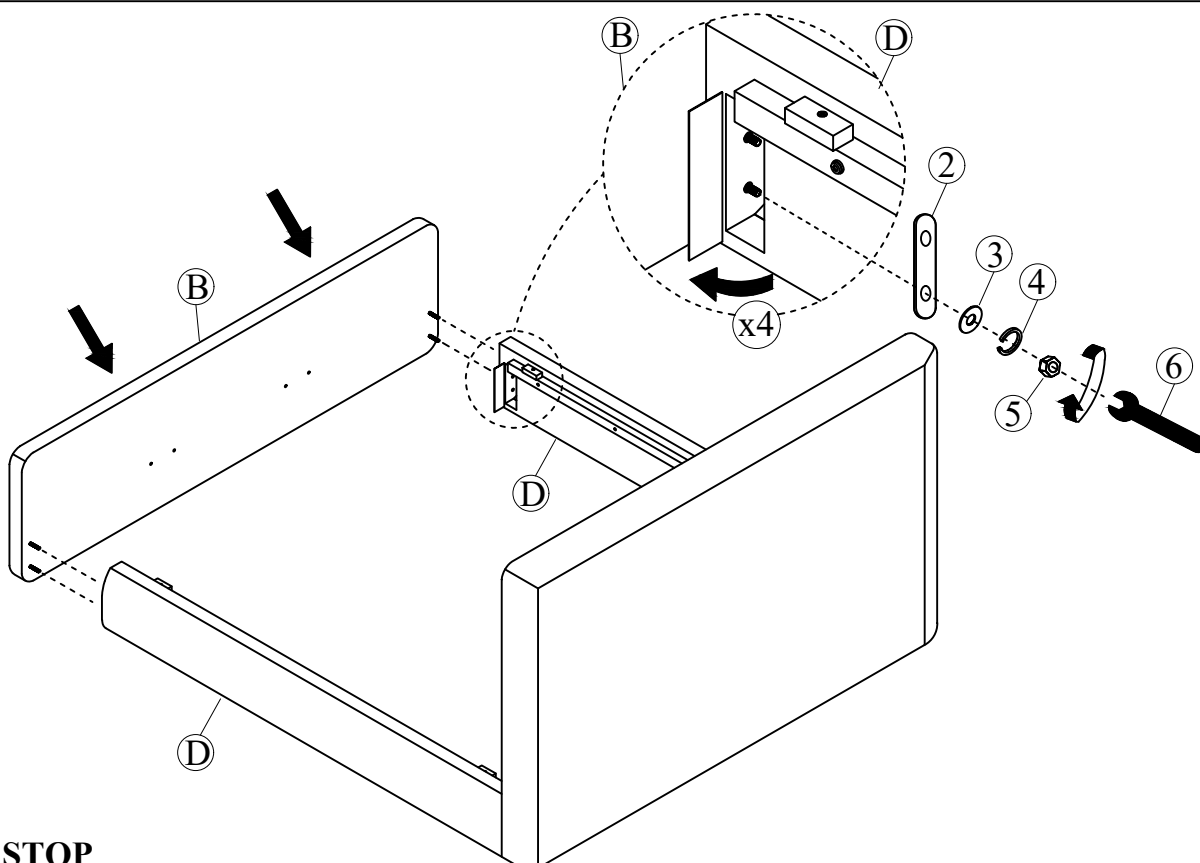

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6 & 7 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

SUMMIT UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



STEP 4:

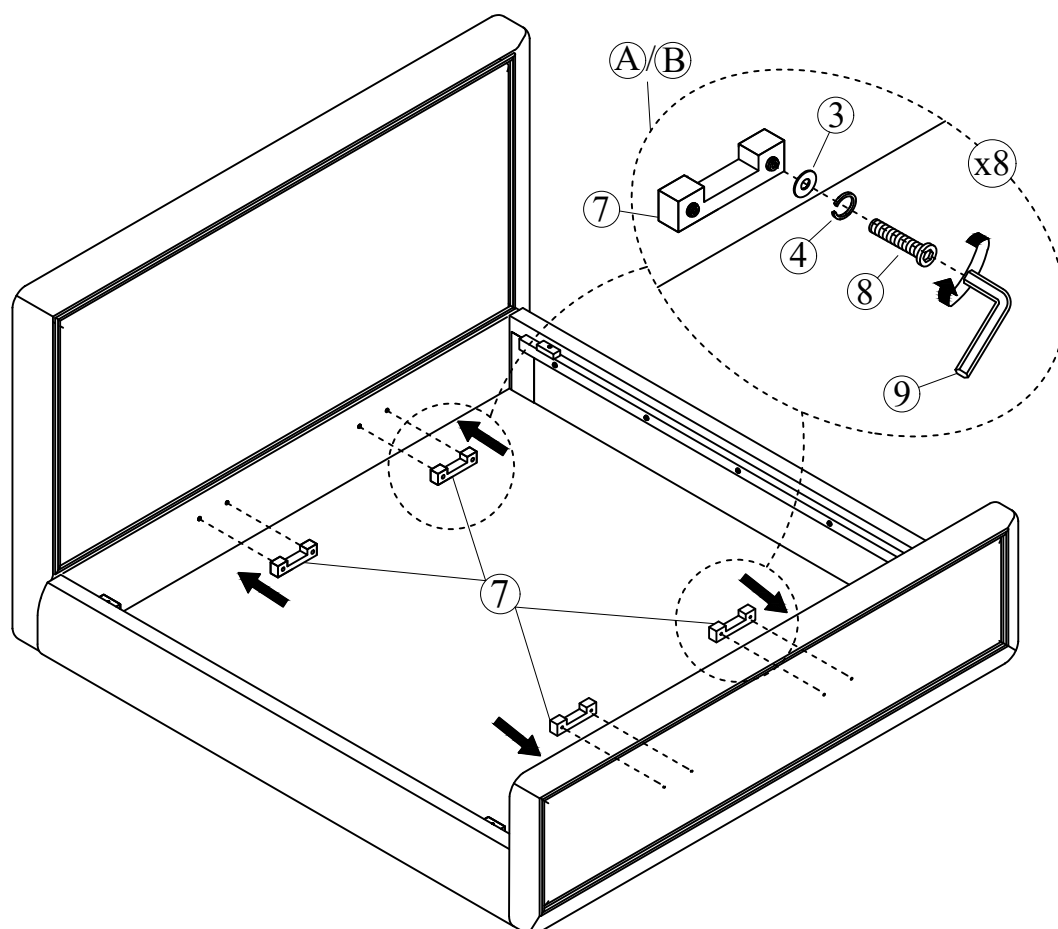

STEP 5:

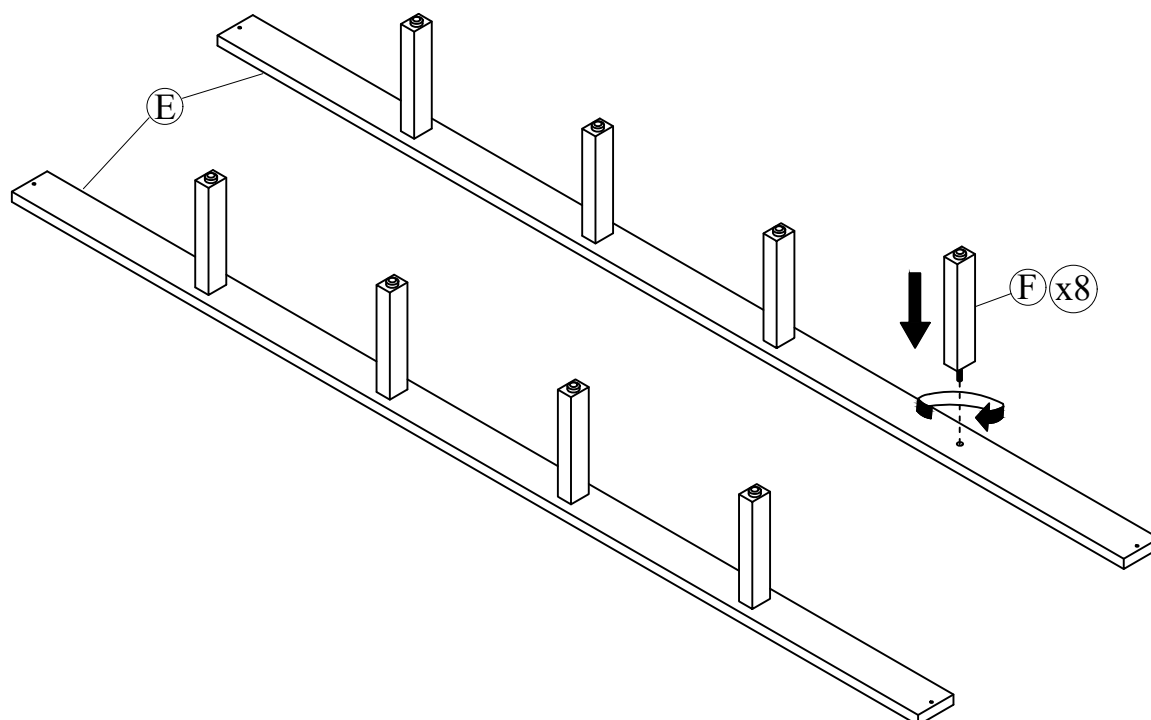


SUMMIT UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



STEP 6:

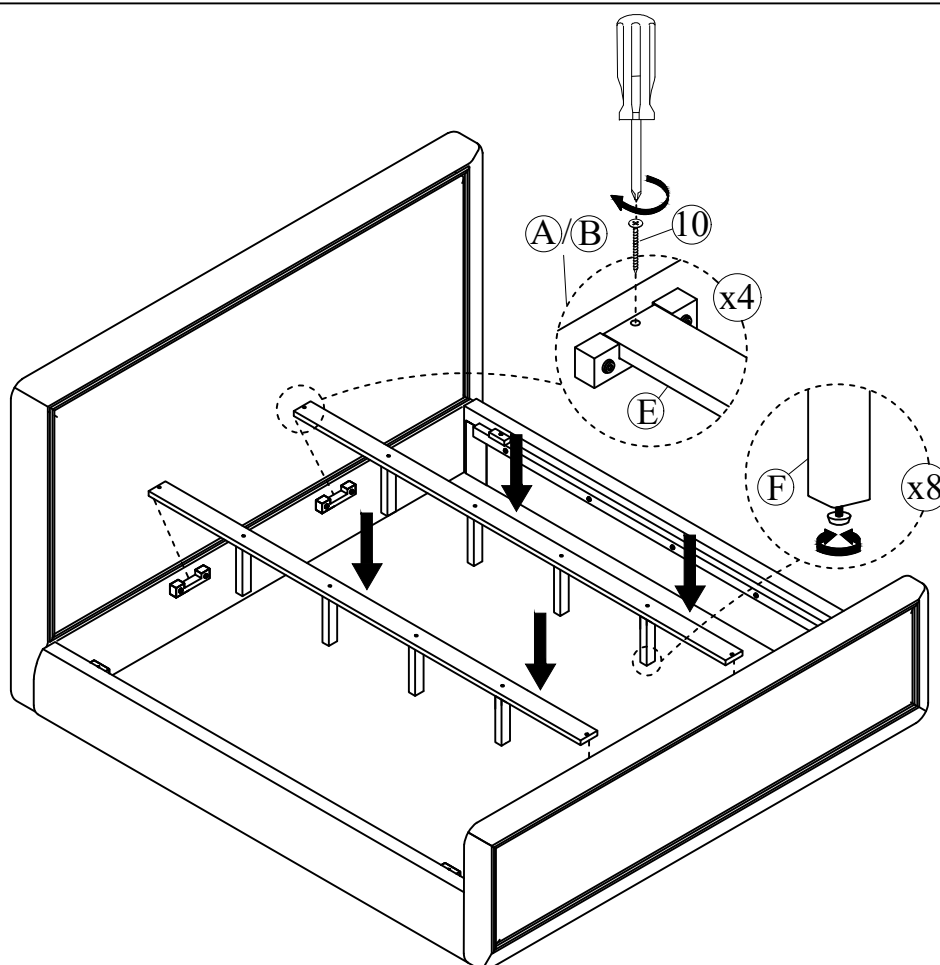


STEP 7:

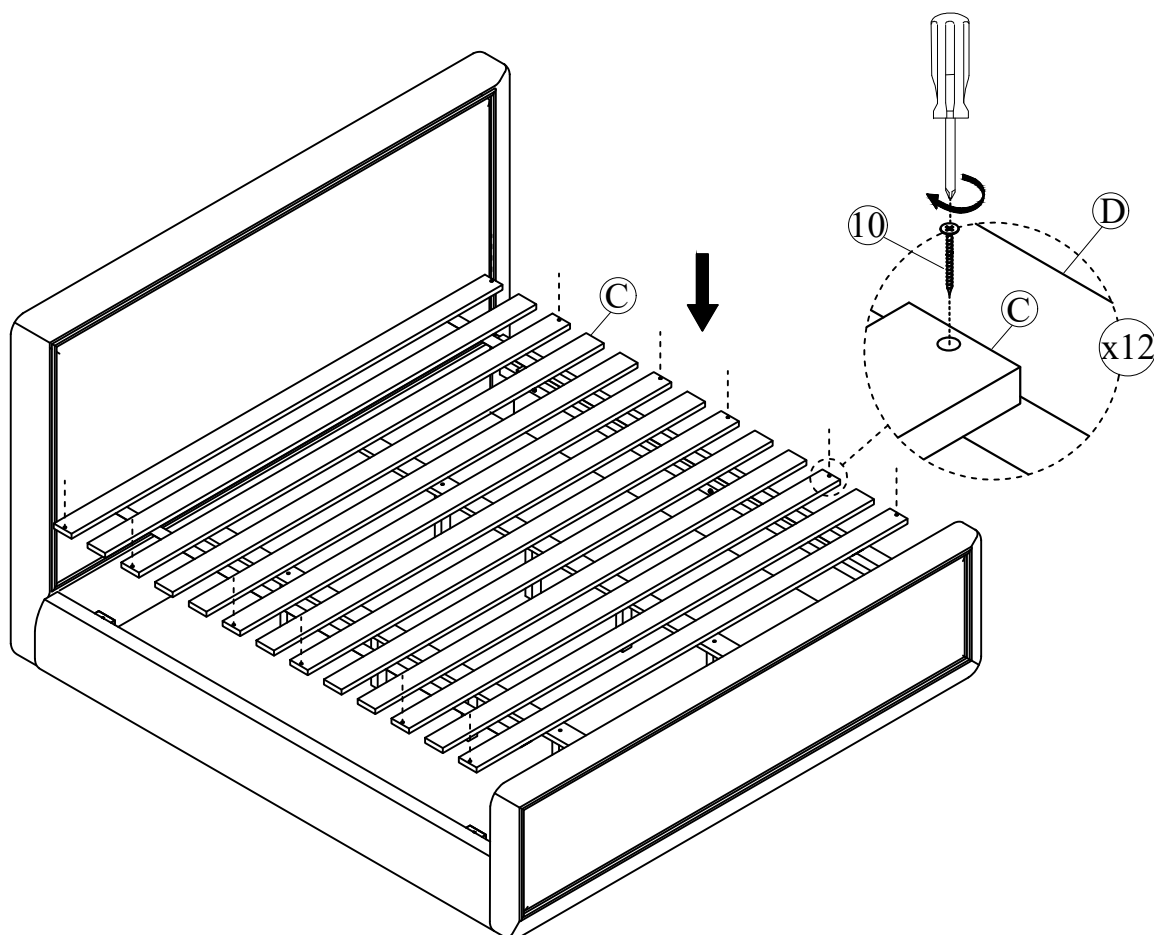

SUMMIT UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

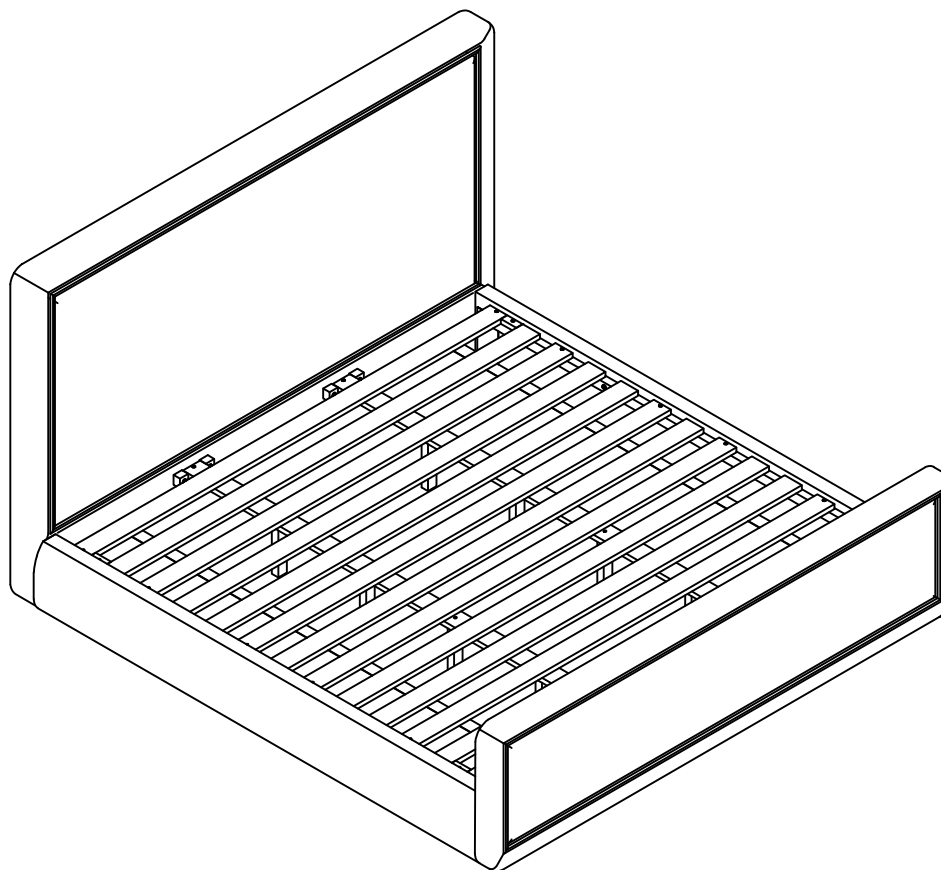


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

SUMMIT UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET	7. CENTER SLAT SUPPORT CLEAT	4 PCS
E. CENTER SLAT SUPPORT	2 PCS		
F. SUPPORT LEG	8 PCS		

STEP 1:

USE ALLEN KEY (9) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

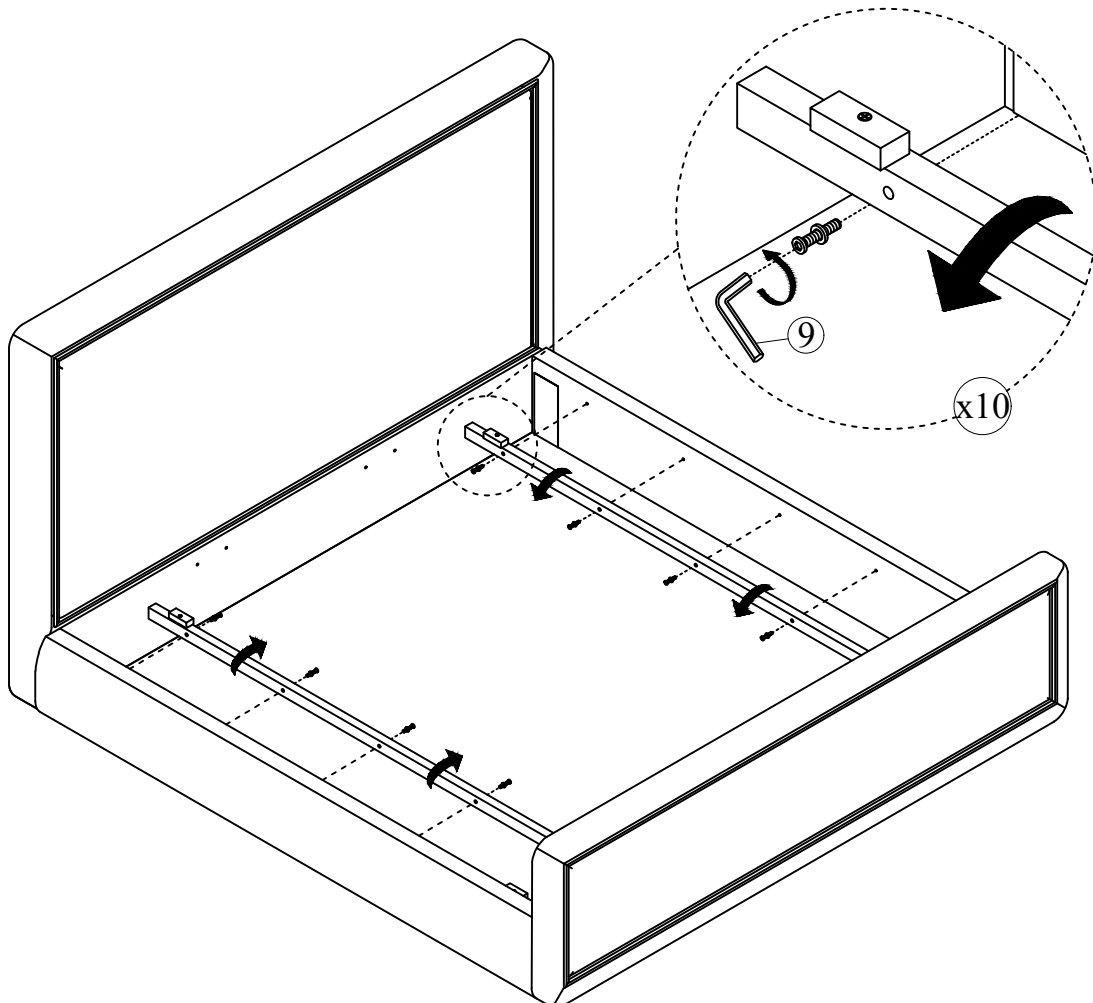

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

SUMMIT UPHOLSTERED C. KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATION


BOX #1:
A. HEADBOARD

1 PC

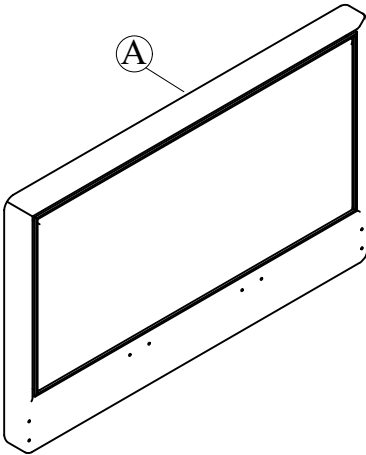


BOX #2:
B. FOOTBOARD
C. SLAT ROLL

1 PC
1 SET


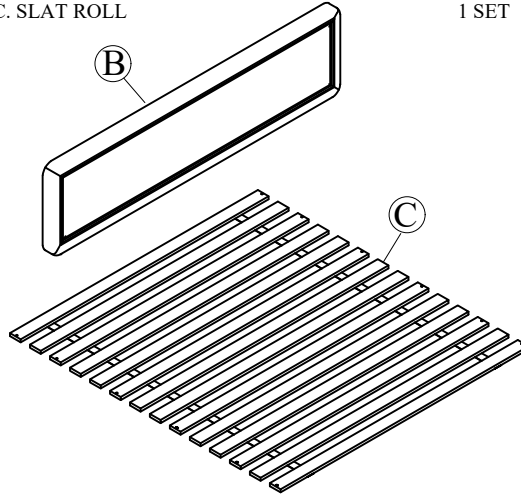


BOX #3:
D. SIDE RAIL
E. CENTER SLAT SUPPORT
F. SUPPORT LEG

2 PCS
2 PCS
8 PCS

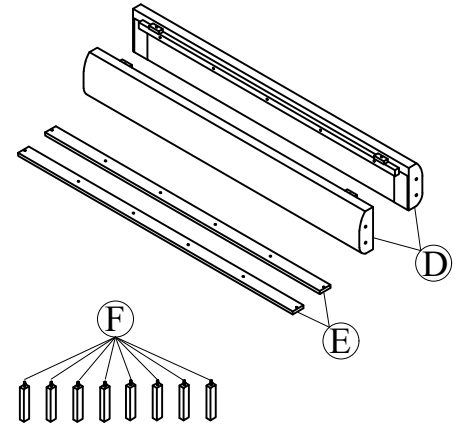

FULLY ASSEMBLED

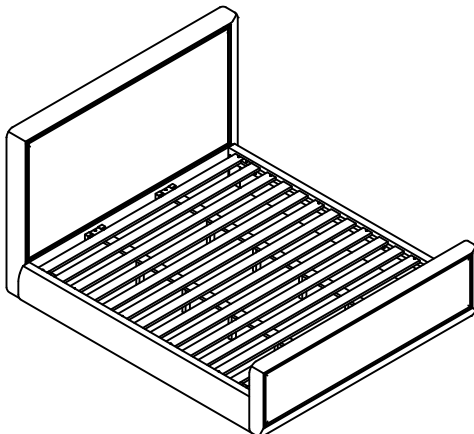


Not provided

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8×110mm)		8 PCS
2	CONNECTING BRACKET		4 PCS
3	FLAT WASHER(8mm)		16 PCS
4	LOCK WASHER (8mm)		16 PCS
5	HEX NUT (8mm)		8 PCS
6	WRENCH (13mm)		1 PC
7	CENTER SLAT SUPPORT CLEAT		4 PCS
8	ALLEN BOLT (8×60mm)		8 PCS
9	ALLEN KEY (5mm)		1 PC
10	PHILLIPS SCREW (4×40mm)		16 PCS

STEP 1:

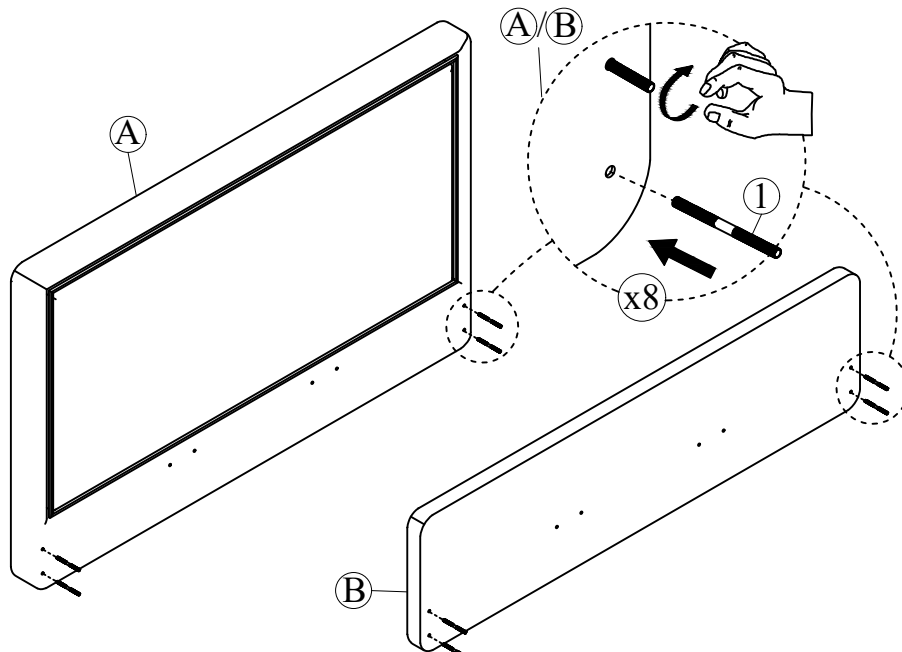


SUMMIT UPHOLSTERED C. KING BED


ASSEMBLY INSTRUCTIONS



STEP 2:

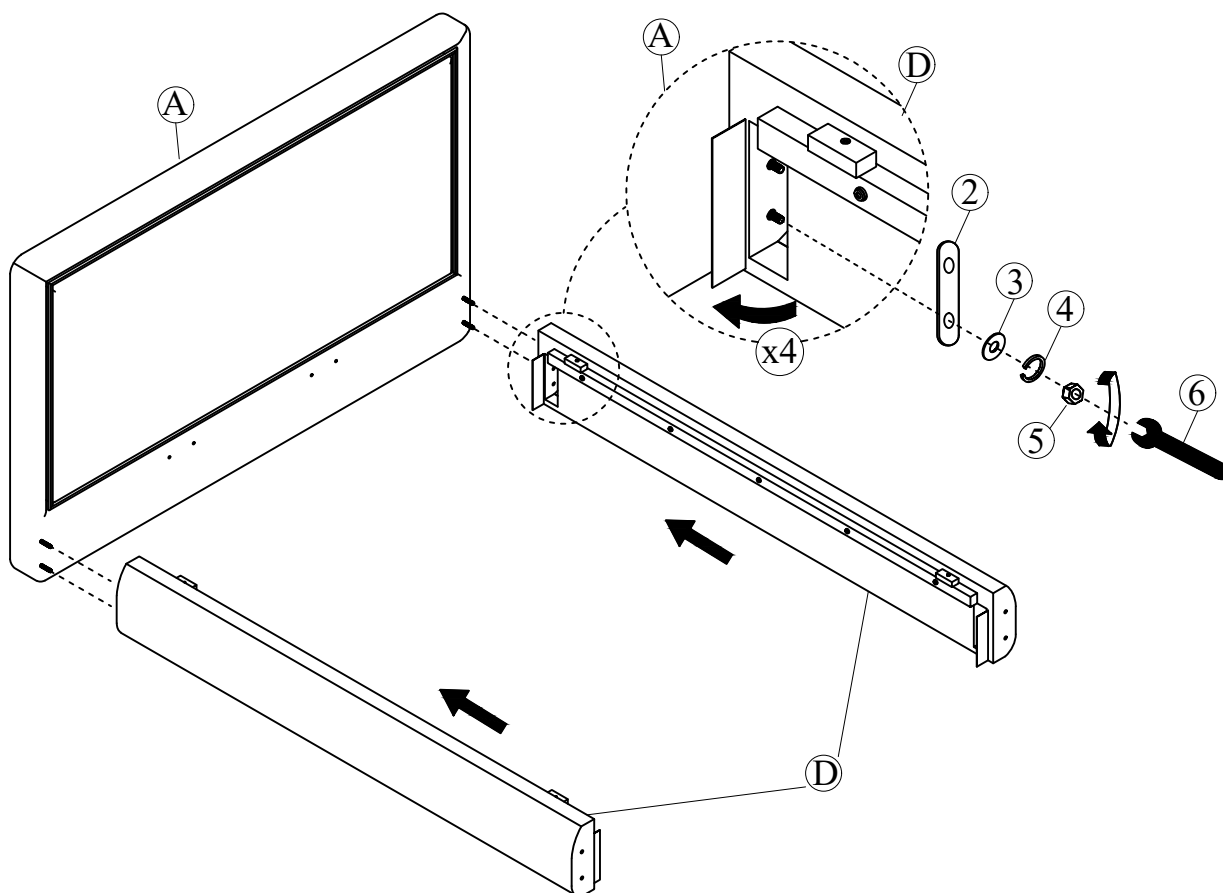

STEP 3:

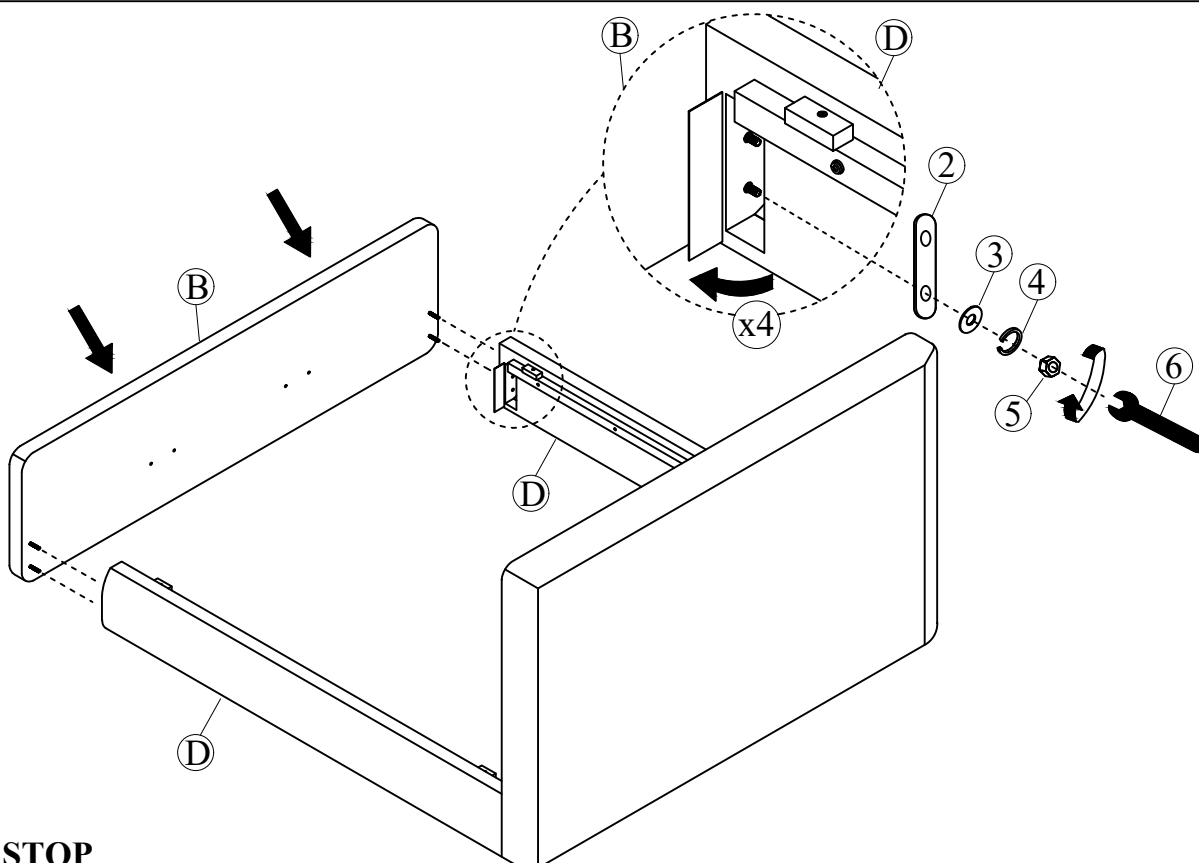

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6 & 7 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

SUMMIT UPHOLSTERED C. KING BED


ASSEMBLY INSTRUCTIONS



STEP 4:

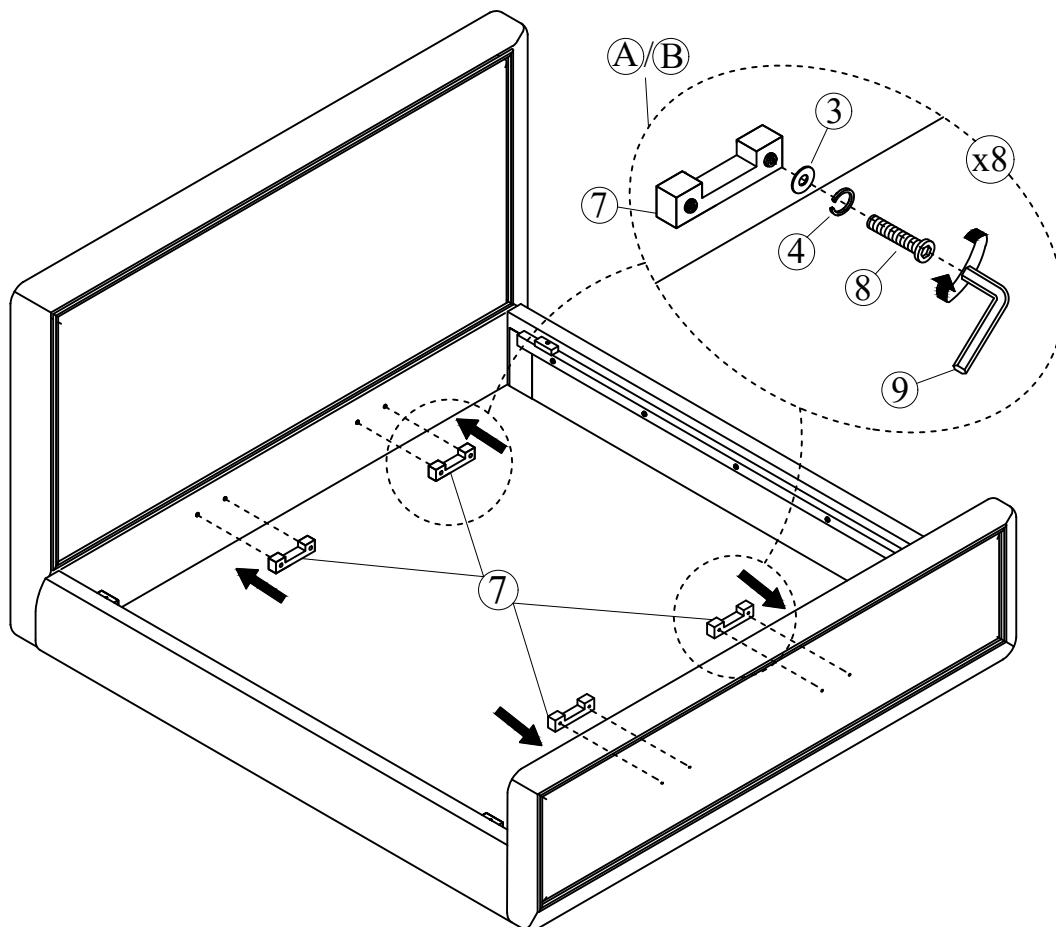

STEP 5:

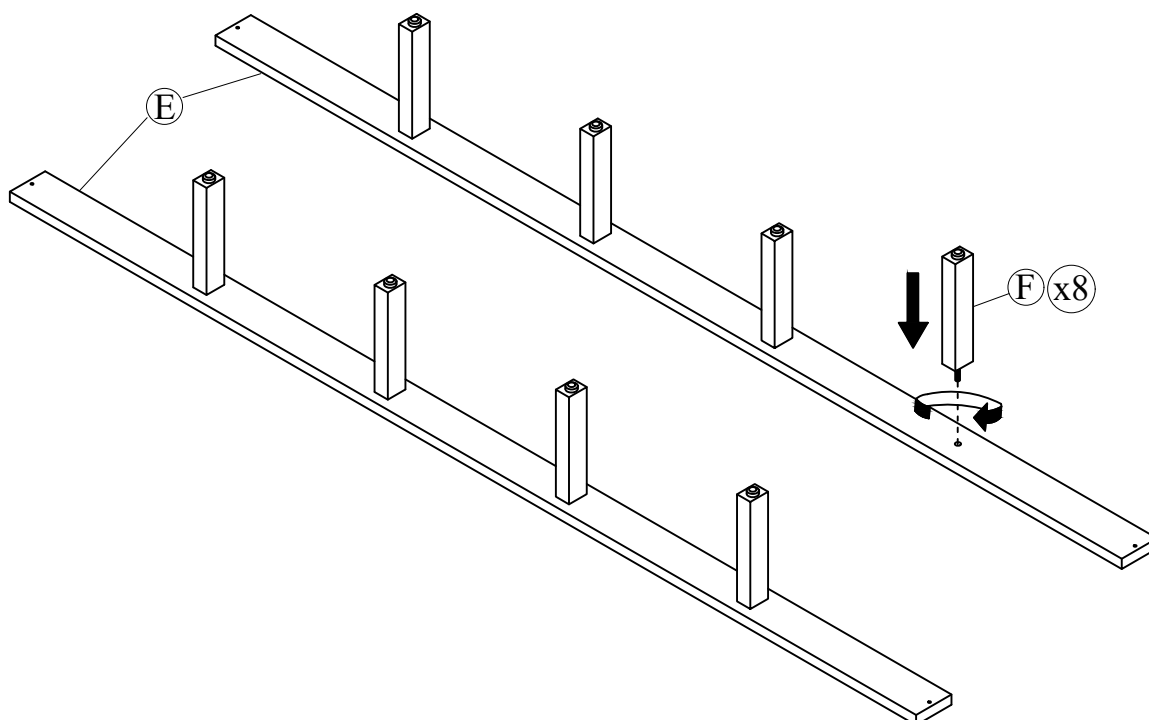


SUMMIT UPHOLSTERED C. KING BED


ASSEMBLY INSTRUCTIONS



STEP 6:

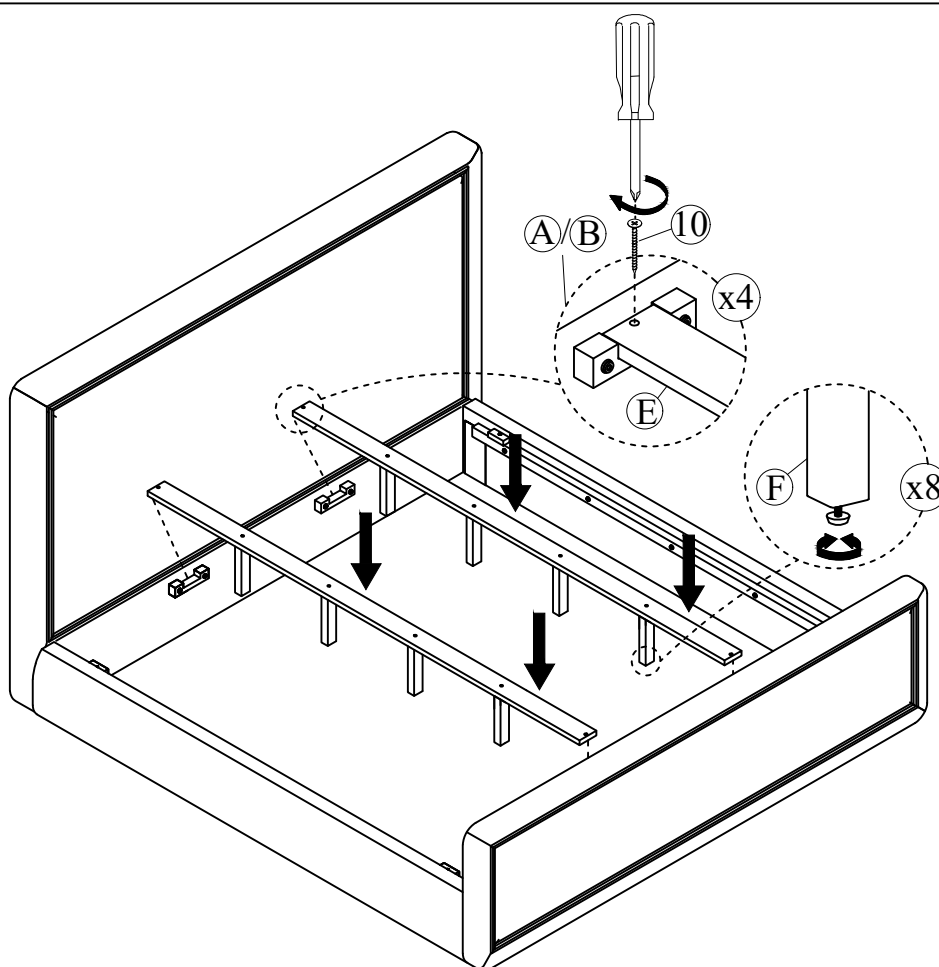


STEP 7:

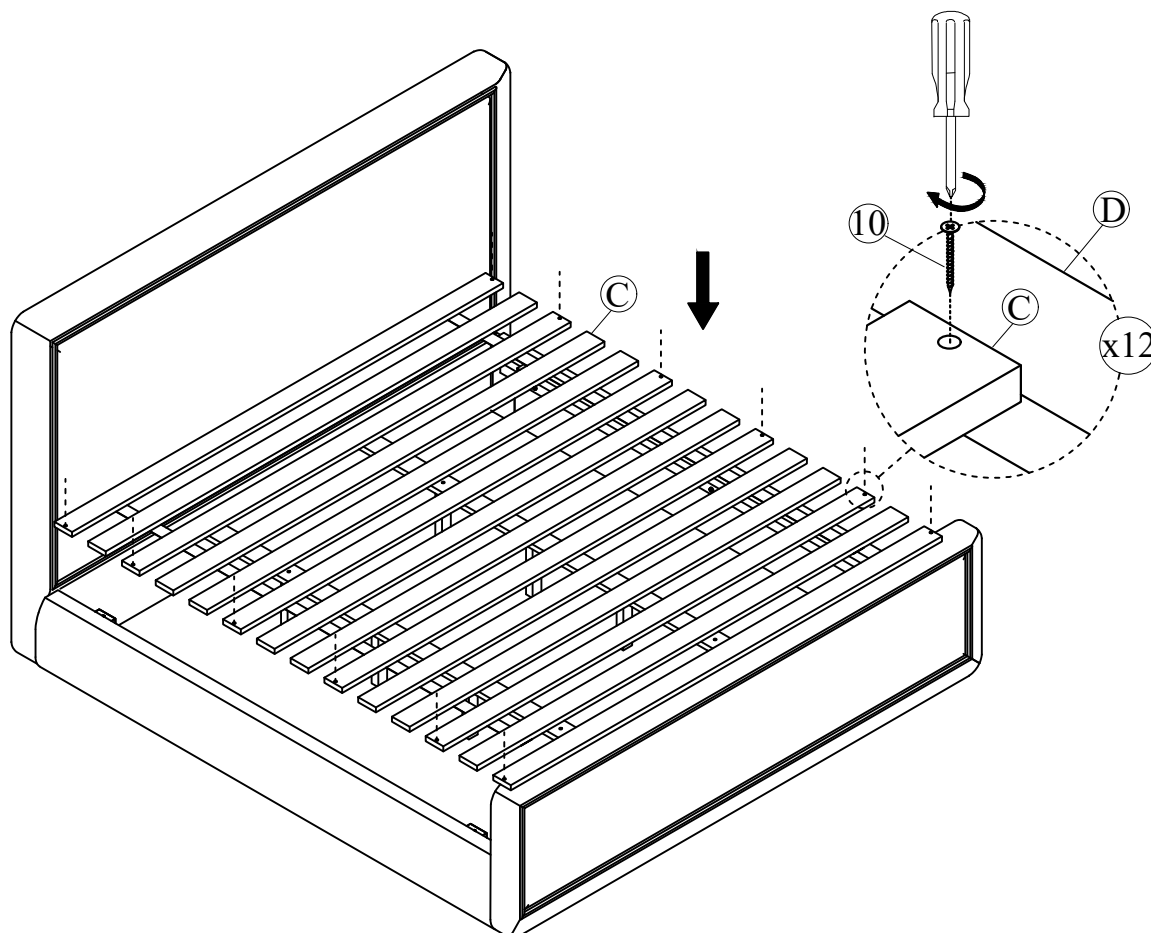

SUMMIT UPHOLSTERED C. KING BED

ASSEMBLY INSTRUCTIONS

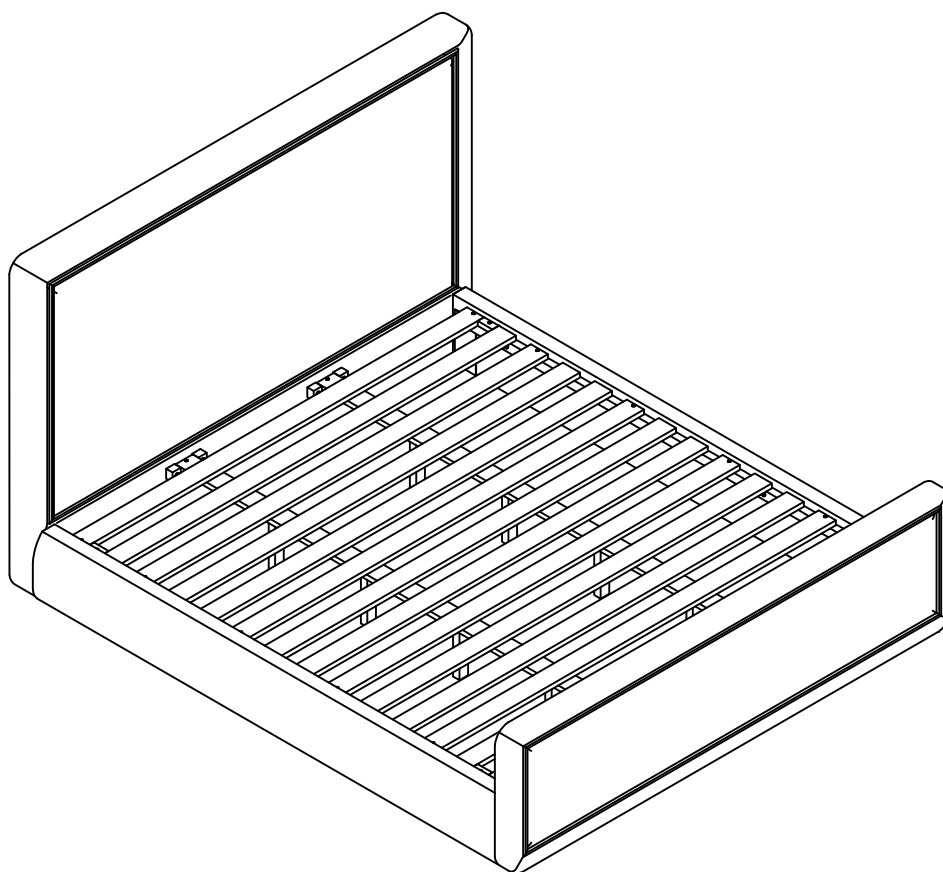


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

SUMMIT UPHOLSTERED C. KING BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET	7. CENTER SLAT SUPPORT CLEAT	4 PCS
E. CENTER SLAT SUPPORT	2 PCS		
F. SUPPORT LEG	8 PCS		

STEP 1:

USE ALLEN KEY (9) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

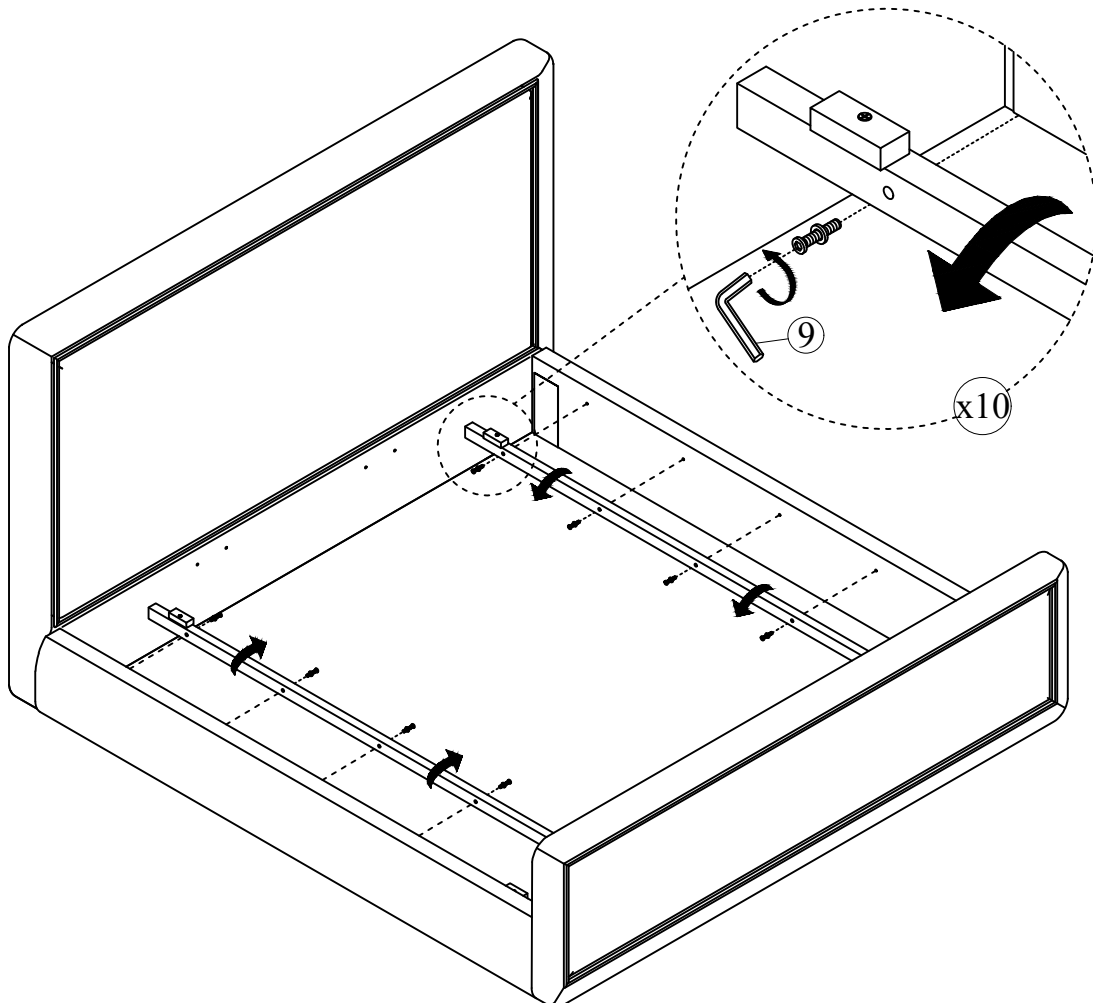

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.