


COMPONENTS:

- 1 Sign Frame
- 2 Bolts
- 1 Allen Key

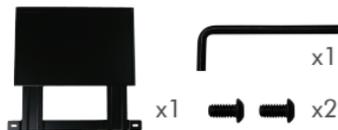

- 1 On the back of the units, remove the two top plugs.



- 2 Align the Sign Frame to the nut that is molded into the body on one side.



- 3 Thread the bolt through the Sign Frame and into the nut and repeat



- 4 Tighten bolts with the Allen Key.