


**Note 1:** For #8 screws, use 1/16 diameter drill bit for maple and 3/32 diameter drill bit for oak & particle board

**Note 2:** For #6 screw, use a #55 drill bit for maple and 5/64 diameter drill bit for oak & particle board

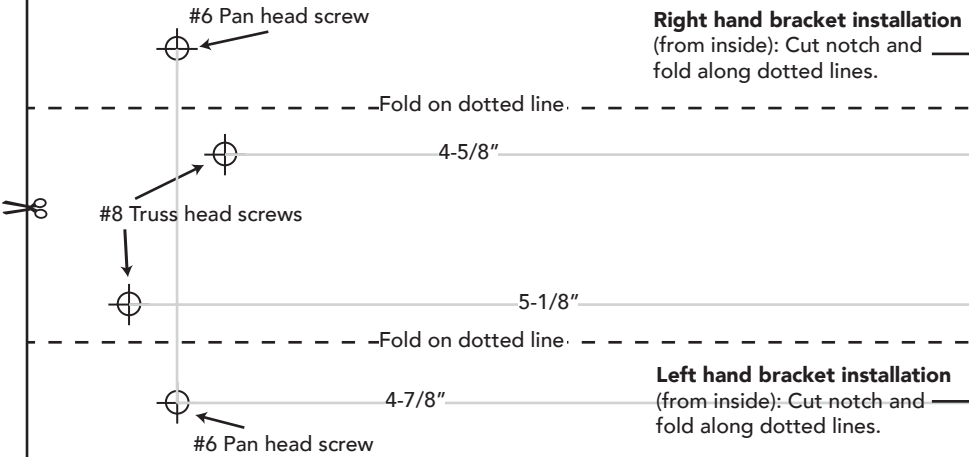


Drill (4) holes at least 3/4" deep for #8 wood screws

**Base of cabinet**

For left and right hand

Place template inside cabinet

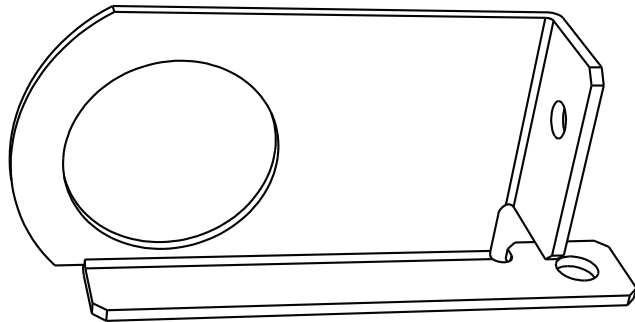


**Nota 1: Para los tornillos #8, use la broca de diámetro 1/16 para arce y la broca de diámetro 3/32 diameter para roble y compensado.**

Remarque 1 : Pour les vis #8, utiliser une mèche de 1/16 de diamètre pour l'érable et de 3/32 de diamètre pour le chêne et les panneaux de particules.

**Nota 2: Para los tornillos #6, use una broca #55 para arce y una broca de diámetro 5/64 para roble y compensado**

Note 2 : Pour la vis #6, utiliser une mèche #55 pour l'érable et une mèche de diamètre 5/64 pour le chêne et les panneaux de particules.

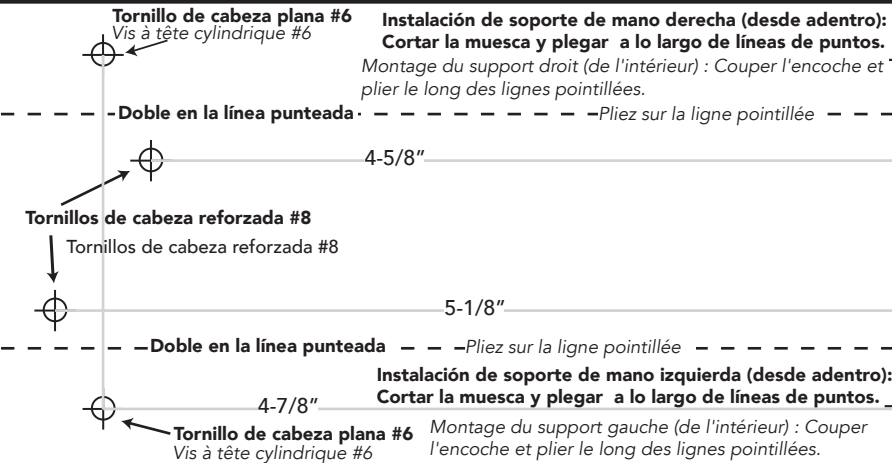

**Para el lado izquierdo y derecho**  
Pour la droite et la gauche

**Colocar la plantilla dentro del gabinete**  
Placez le modèle dans le cabinet