




IMPORTANT:

Before beginning, familiarize yourself with the included instructions and parts list.

CUSTOMER SERVICE:

Toll-free customer service is available weekdays from 7:00 AM to 6:00 PM Central Time at **800-463-0660**.


TOOLS NECESSARY:

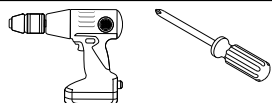

Screw Gun Phillips Screwdriver

NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

PARTS IDENTIFICATION:

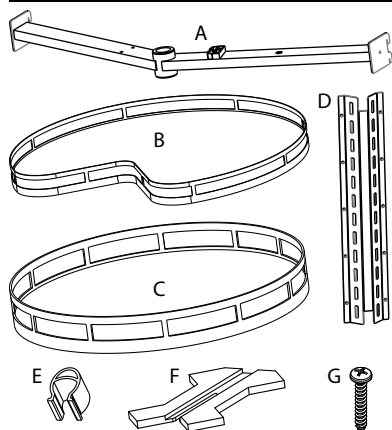



A	Tray Support Arm	2X
B	Kidney Shelf (LSKNP)	2X
C	Round Shelf (LSRNP)	2X
D	Vertical Support Bracket	2X
E	Lift Lock Holder	4X
F	Installation Jig	1X
G	#8 X 3/4" Philips pan head wood screws	20X



Place both vertical support brackets and one tray support arm inside the cabinet. Position one vertical support bracket against each rear cabinet wall.



Hook tray support arm into the lowest position on both vertical support brackets. Temporarily hook remaining tray support arm into the highest position on vertical rails.

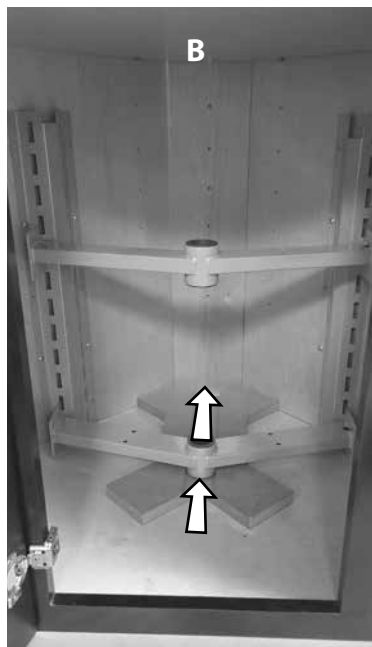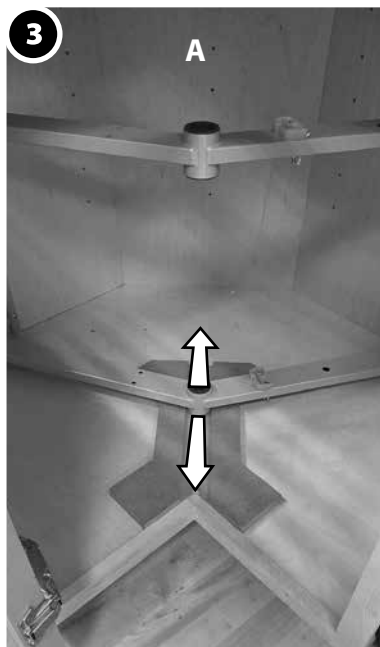


Slide the installation jig under the tray support arm to center side to side.

A. If installing in a base cabinet: At the same time, hold the jig snug against the corner of the door face frame and push the center of the lower tray support arm towards the back of the cabinet.

B. If installing in a wall cabinet: At the same time, hold the jig snug against the back corner of the cabinet and push the center of the lower tray support arm towards the back of the cabinet.


The vertical support brackets should be flat against the rear cabinet walls and level. Secure with provided #8 x 3/4" Philips pan head wood screws, 10 per support.

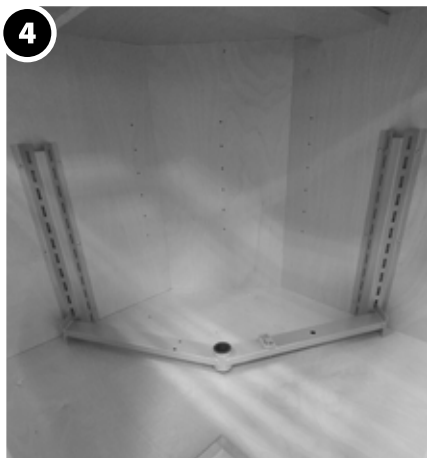

Remove the installation jig.
Temporarily unhook upper tray support arm, and remove from cabinet.



Squeeze a lift lock holder and press it into the vertical support bracket above the lower tray support arm to lock the arm into place. Repeat on the other side.

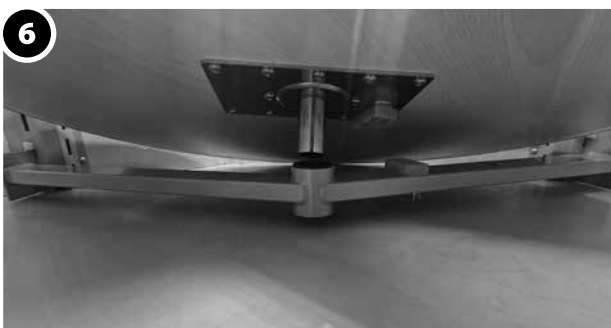

Carefully insert the bottom shelf into the cabinet, pie cut facing down to allow for more maneuverability. Locate the pin on the bottom of the shelf and insert it into the hub of the bottom tray support arm.



Temporarily place the second tray support arm on top of the first shelf.



Carefully insert the second shelf into the cabinet, pie cut facing down to allow for more maneuverability. Locate the pin on the bottom of the shelf and insert it into the hub of the upper tray support arm.



Raise and insert the upper tray support arm with shelf into the vertical support brackets at your desired height. *To aid with installation, make a small mark on both sides of vertical support brackets at desired height.

Squeeze a lift lock holder and press it into the vertical support bracket above the upper tray support arm to lock the arm into place. Repeat on the other side.

Rotate the shelves to ensure proper clearance.