

# 88 5219 95 Kitchen Cart

## IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home  
Styles




## Part List




A.  
Top  
1 Pc.



E.  
Front Rail  
1 Pc.




D.  
Divider  
1 Pc.

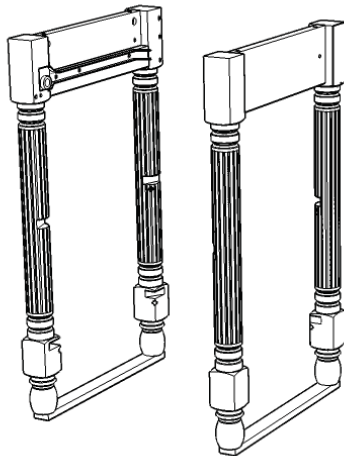


B.  
Side Frame  
1 Pc.


C.  
Side Frame  
1 Pc.



F.  
Back Rail  
1 Pc.

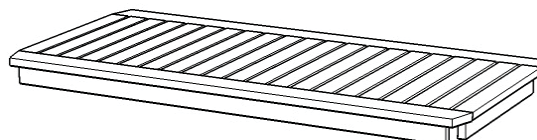


G.  
Shelf  
2 Pcs.



H.  
Drawer  
2 Pcs.

*(Knock-Down Construction,  
please refer to the last page of  
instructions for steps to complete drawer assembly)*

## Hardware List

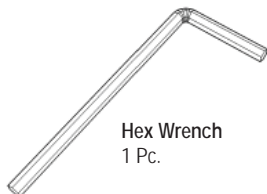

Hex Wrench  
1 Pc.



Cam Lock  
13 Pcs. (+2 extra)



M4x24  
Cam Lock Screw  
13 Pcs. (+1 extra)



M3.5x13  
Wood Screw (short)  
for bottom drawer  
12 Pcs. (+1 extra)



M3.5x25  
Wood Screw (long)  
for side drawer  
16 Pcs. (+1 extra)




M4x25  
Machine Screw  
4 Pcs.



Pull Handle  
2 Pcs.



Small Hex Wrench  
1 Pc.

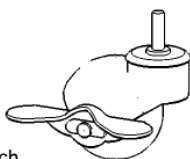

Caster  
2 Locking  
2 Non-Locking  
4 Pcs.



M6x25  
Head Cap Bolt (short)  
5 Pcs. (+1 extra)




M6x50  
Head Cap Bolt (long)  
8 Pcs. (+1 extra)



Flat Washer  
8 Pcs. (+1 extra)



Spring Washer  
8 Pcs. (+1 extra)



Side Bar  
2 Pcs.

Tools required for assembly : **Phillips** screwdriver


Home Styles Consumer Assistance: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

## IMPORTANT

- \* Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- \* Do not tighten up all the screws until each part is properly assembled.
- \* Use a soft cloth between these parts and the floor.


## STEP 1


Remove the Supports from Side Frames (B) and (C).

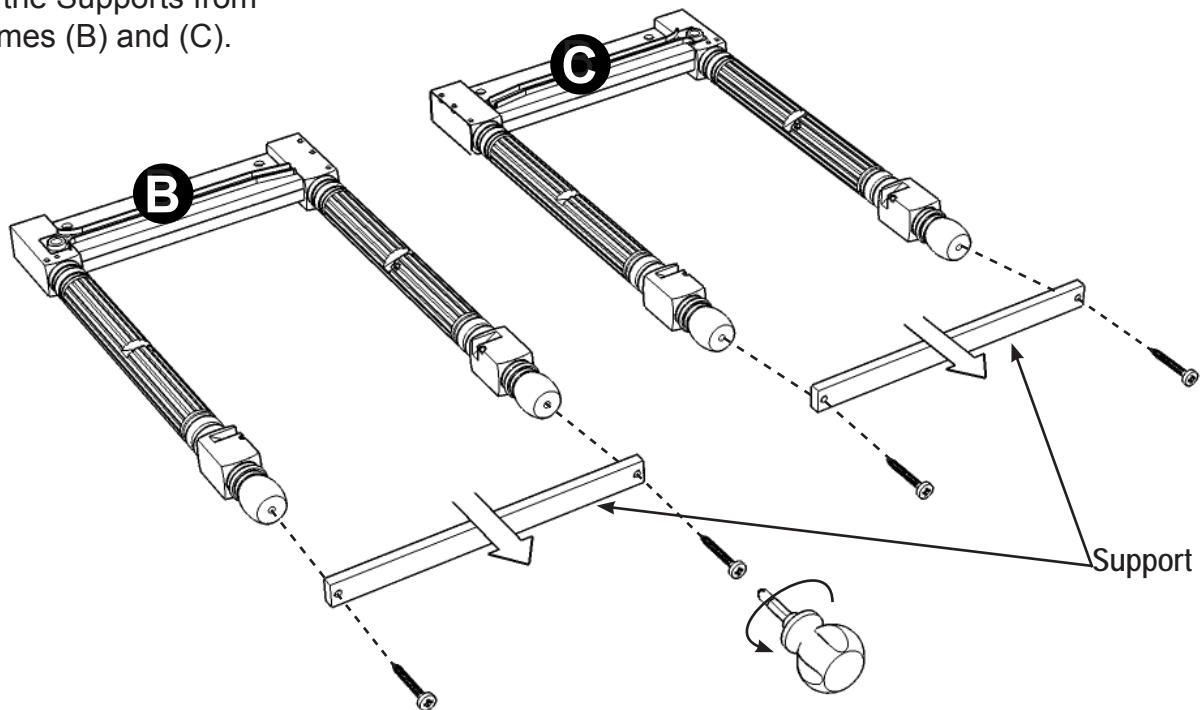

## STEP 2

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Frames (B) and (C), and Back Rail (F).

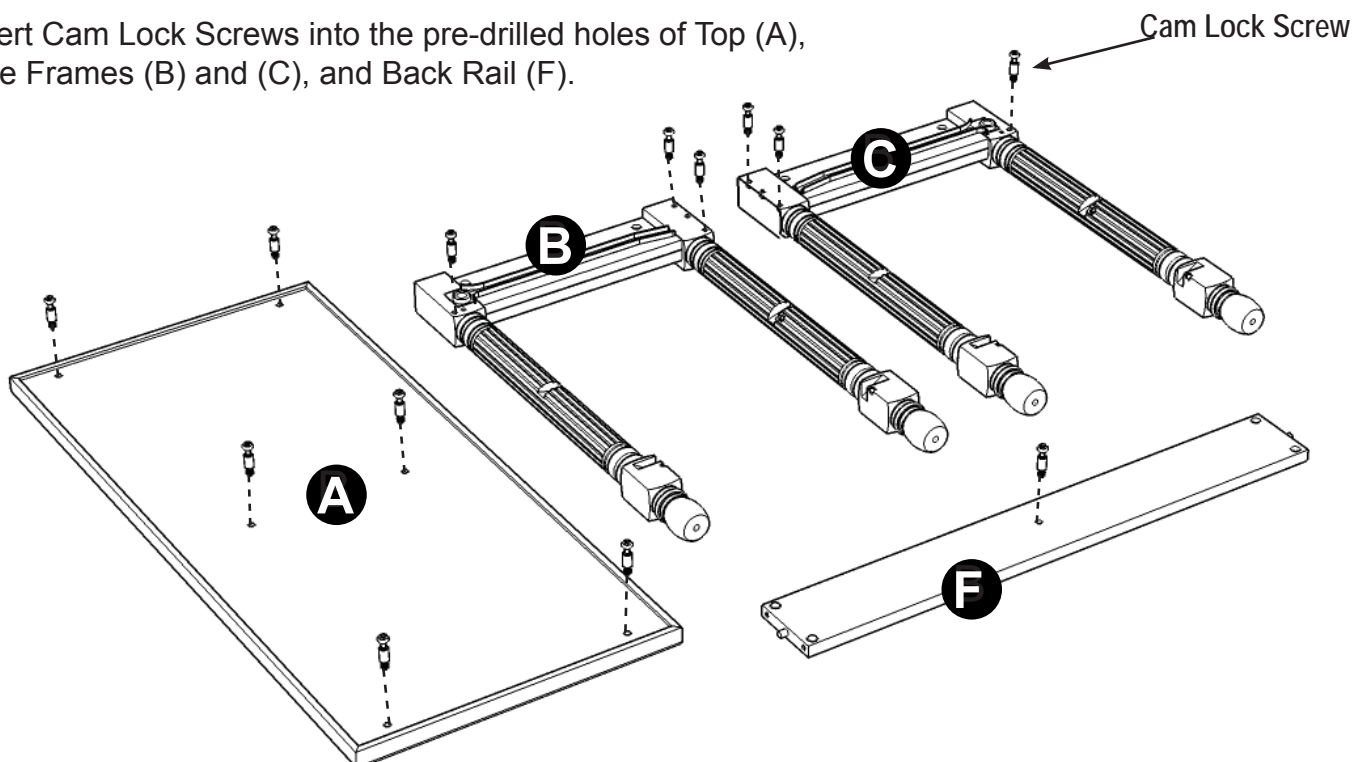

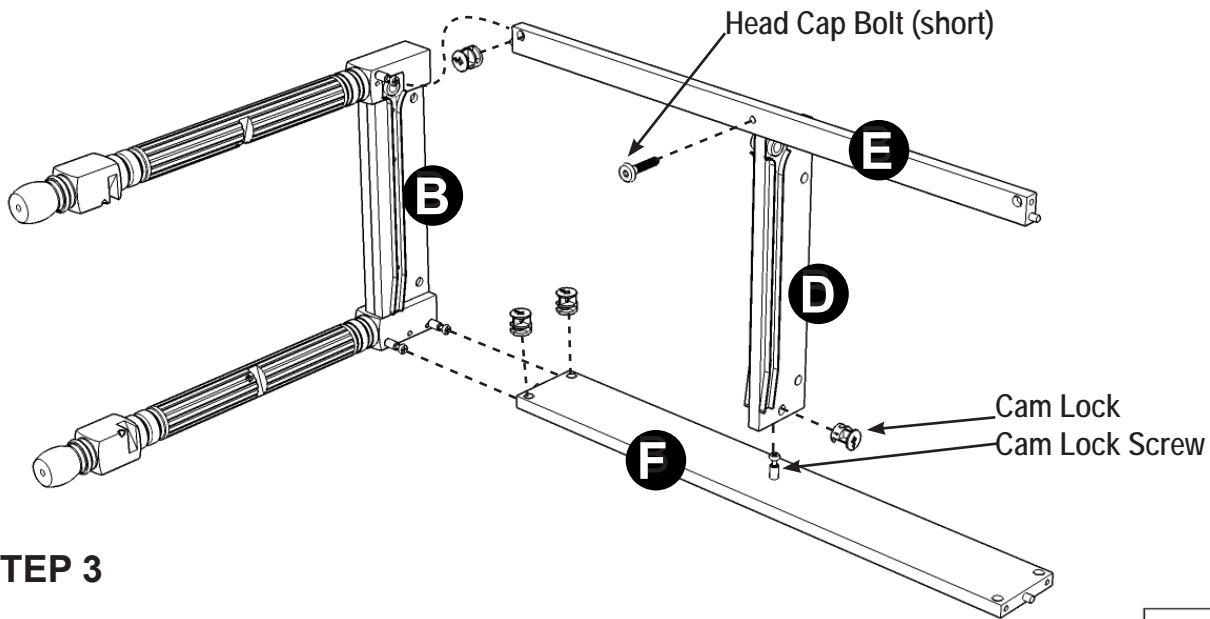

## STEP 3

Assemble Front Rail (E), Divider (D) and Back Rail (F) with Cam Lock and Head Cap Bolt (short).

Attach unit to Side Frame (B) with Cam Locks.  
(See Figure 1)

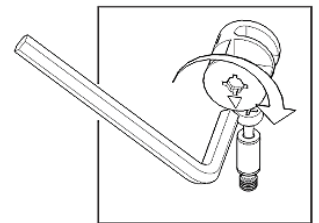


Figure 1




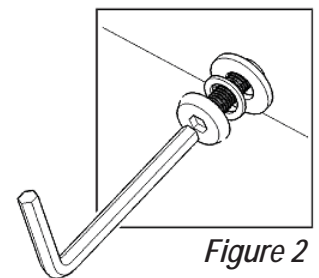



Figure 2

## STEP 4

Attach Shelves (G) to unit with Head Cap Bolts (long), Spring Washers and Flat Washers.  
(See Figure 2)

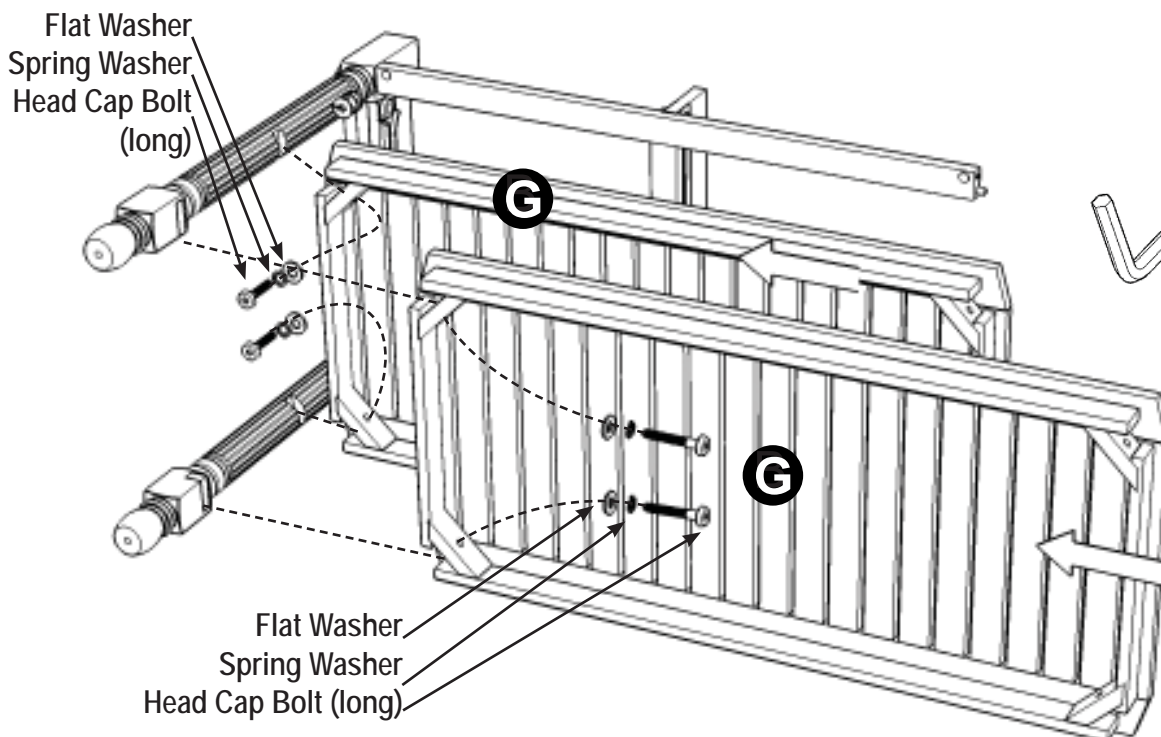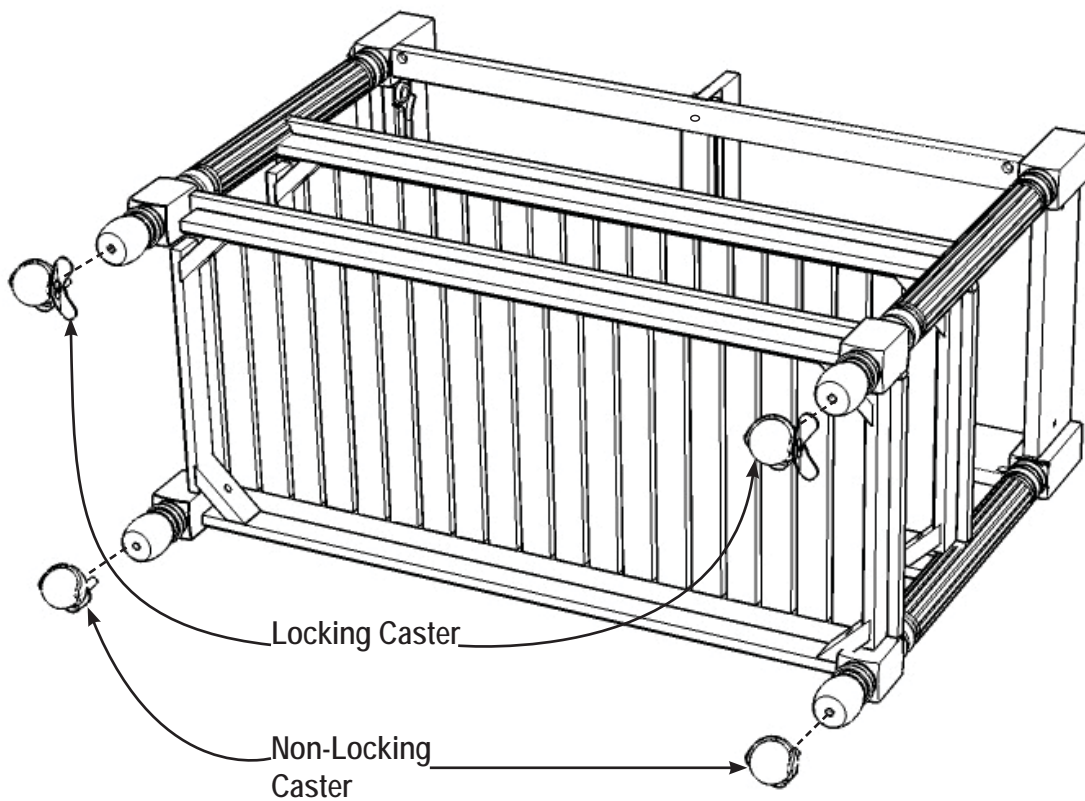

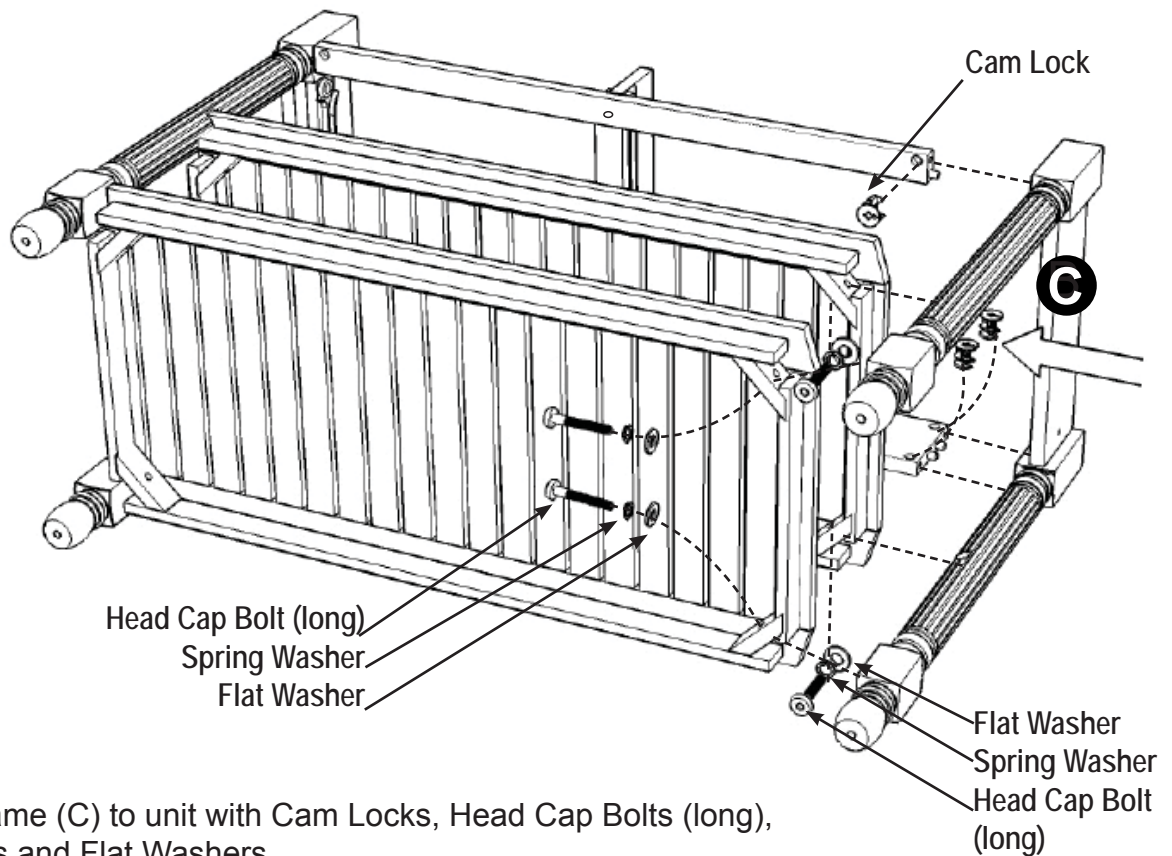


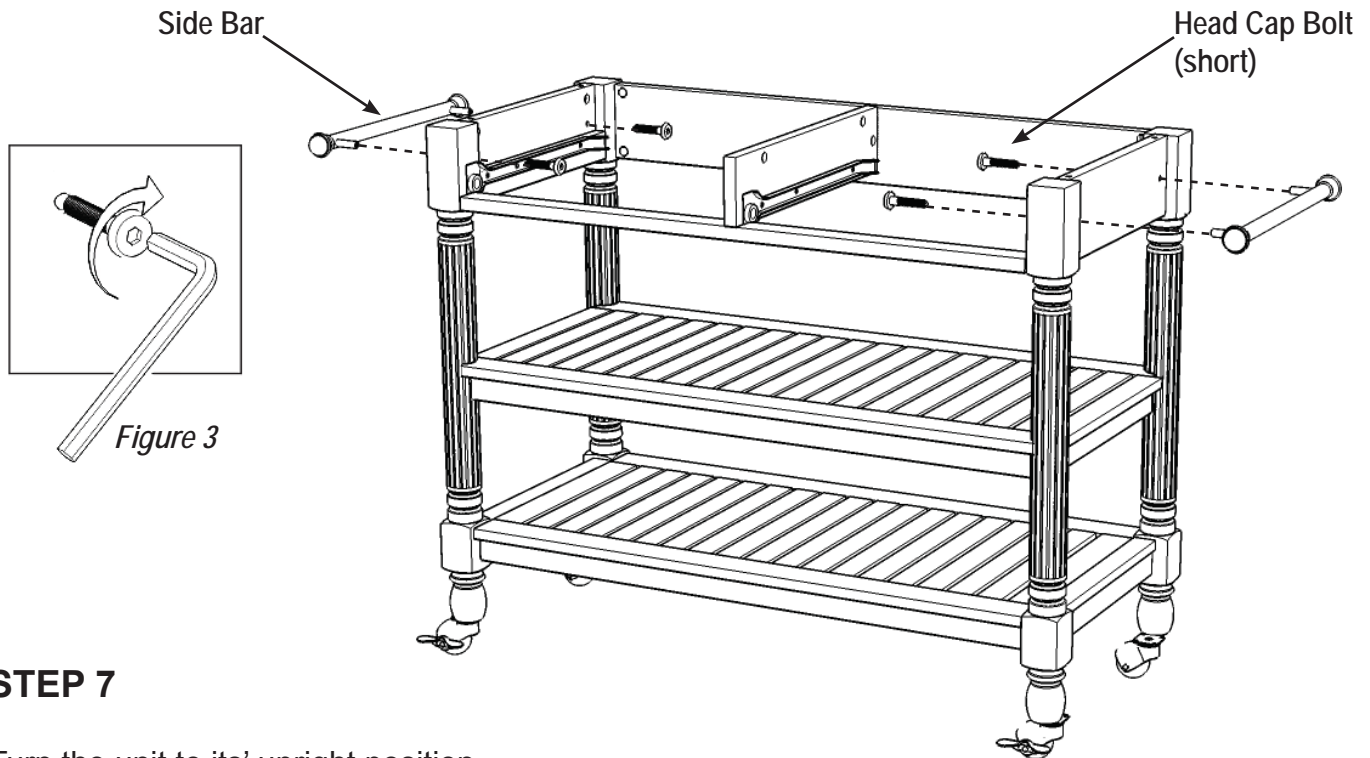

## STEP 7

Turn the unit to its' upright position.

Attach Side Bars to unit with Head Cap Bolts (short).  
(See Figure 3)

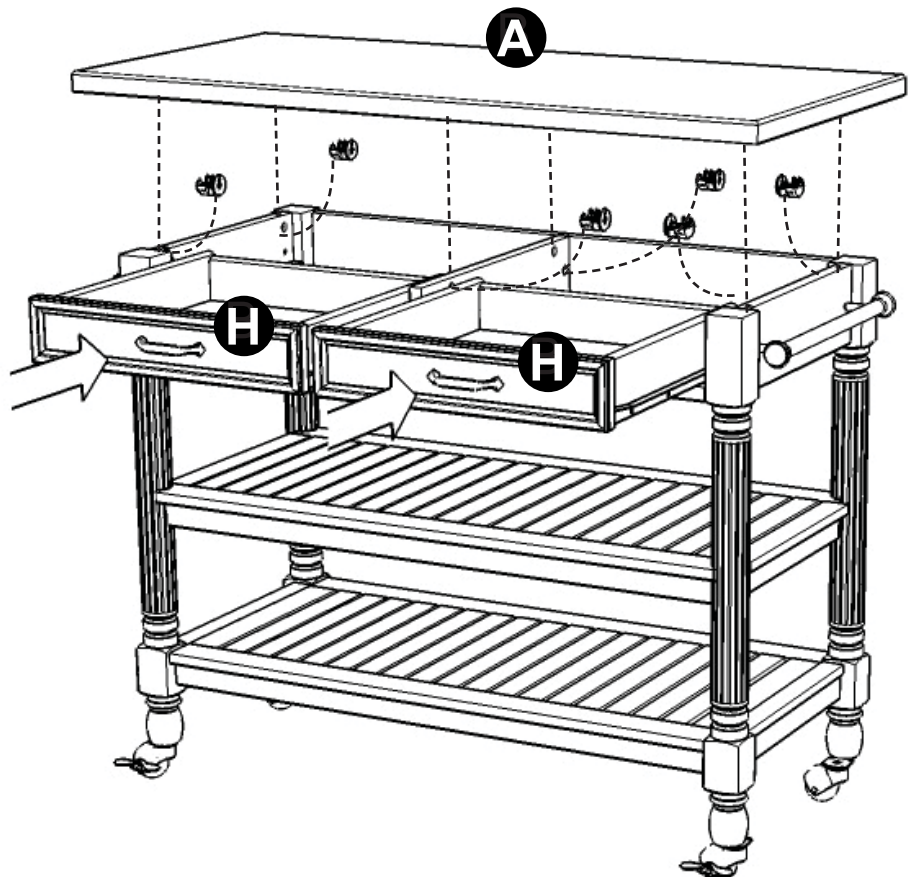


## STEP 8

Place Top (A) onto unit with  
Cam Locks.

Slide Drawers (H) into place.

## Drawer (H)

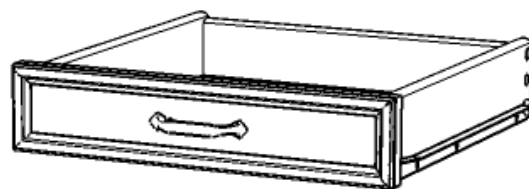

### STEP 1

Attach H1 to H3 and H4, using a Phillips screwdriver and long wood screws (4X), tighten halfway.

Attach H2 to H3 and H4 using long wood screws (4X), tighten halfway. (See Figure 1)

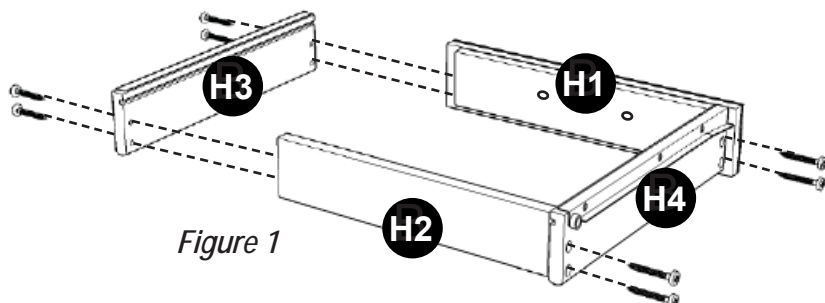


Figure 1

### STEP 2

Slide H5 into the grooves in H3 and H4.

Be sure to push H5 all the way forward so it meets H1 (See Figure 2)

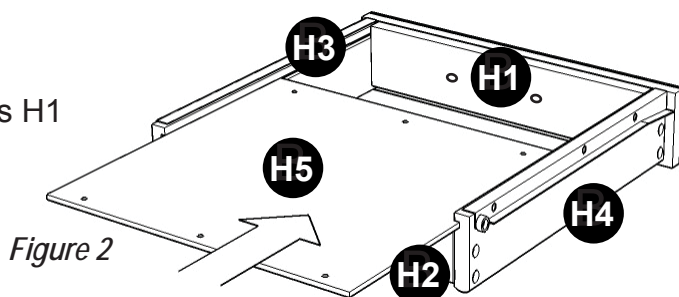


Figure 2

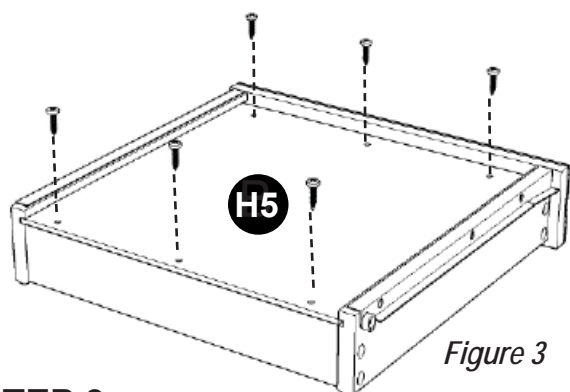


Figure 3

### STEP 3

Insert short wood screw (6X) into the pre-drilled holes in H5 and tighten. (See Figure 3)

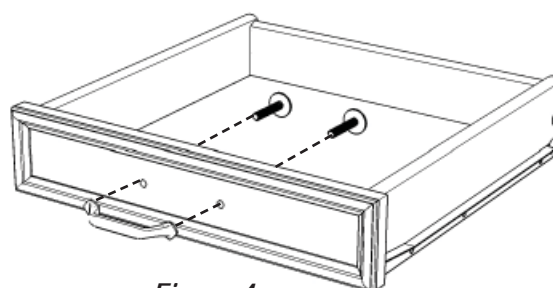


Figure 4

### STEP 4

Assemble Pull Handle with machine screws. (See Figure 4)

**Tighten all screws used in drawer assembly.**


## Part List



H1.  
Front Part  
2 Pcs.



H2.  
Back Part  
2 Pcs.

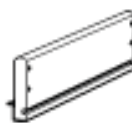

H3.  
Side Part  
2 Pcs.



H4.  
Side Part  
2 Pcs.



H5.  
Bottom Part  
2 Pcs.