


PREPARATION

1. Record your model number for future reference.
2. **DANGER: Risk of electric shock.** To avoid electric shock, the power must be turned off at the circuit breaker or fuse box before beginning the installation procedure.
3. **DANGER: Risk of electric shock.** To avoid electric shock, the outlet box must be properly grounded.
4. **Important Information.** Inspect the product for any damage. This product is for indoor use only. Observe all local codes.
Please see next page for a larger installation image

TOOLS AND MATERIALS NEEDED

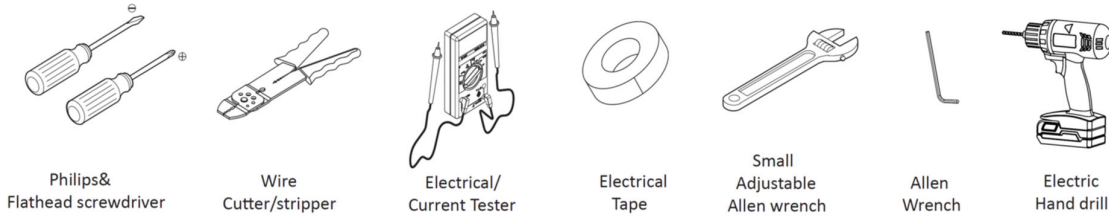

FIXTURE INSTALLATION

1. Remove the fixture and parts bag(s) from the carton. Put them onto a clean and soft cloth to protect finish. Confirm all parts are included.
2. Loosen screws (H) and remove mounting plate (B) from canopy (F).
3. Attach mounting plate (B) onto outlet box with screws (D) and mark anchor holes position on the wall. Then loosen screws (D) and take down mounting plate (B). Drill anchor holes in dia. 1/4" for concrete ceiling or Dia.3/8" for wood or drywall ceiling.
4. Insert anchors (T) or (U) into ceiling (T for wood/drywall, U for concrete ceiling).
5. Determine what height you want the fixture to rest at by choosing the appropriate combination of downrods (K, L, M and N).
6. Thread wire (Q) and ground wire through desired downrods (K, L, M, & N) and loop (J). Then tighten the desired rods together and attach to housing (O).
7. Attach mounting plate (B) onto outlet box with screws (D) and tapping screws (R). Ensure ground screw (C) is attached to mounting plate (B).
8. Connect loops (J) and loops (G) with locks (I). Thread wire (Q) and ground wire through loop (G) and canopy (F). Trim excess cord to minimum 13" beyond canopy (F). Strip wire 5/8" at the end, and twist.
9. Lift fixture and lace safety cord (E) around mounting plate (B), then secure by tightening set screws (S) with Allen wrench.
10. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture green or bare ground wire to the green or bare copper wire in outlet box with wire nut (A) or fasten onto ground screw (C) on mounting plate.
11. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture neutral wire (with ridges and no text)/white wire to the white wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A). See diagram 1.
12. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten the fixture live wire (with text and without ridges)/black wire to the black wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A). See diagram 1.
13. Tuck wires carefully inside outlet box. Lift fixture then attach canopy (F) onto mounting plate (B) with knurled nuts (H).
14. **NOTICE:** Do not exceed recommended wattage. Rated **Max 60 W, Type T/B10.** (Bulb(s) not included).
15. Install bulb into socket.
16. Install glass shade (P) onto socket by turning it until the connection is tight.
17. Repeat steps 14-16 for all glass shades.
18. Restore power to circuit at breaker or fuse box.


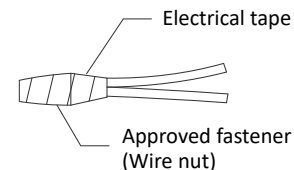


Diagram 1

CLEANING: Please clean fixture with a soft and dry cloth ONLY. Clean glass with a mild soap.

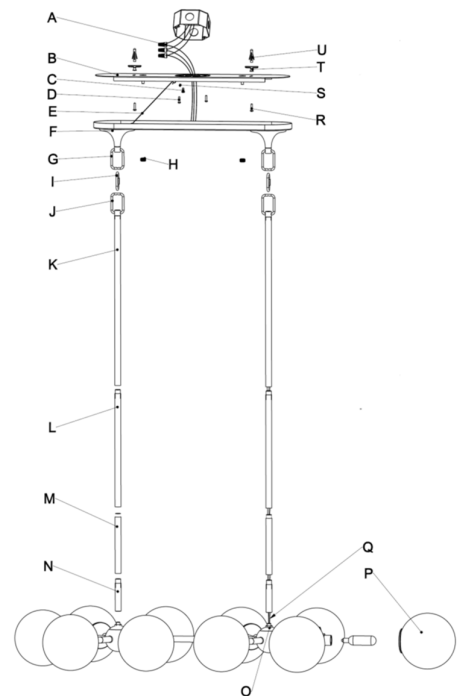