
## ASSEMBLY INSTRUCTION

HOME BAR			
A Back Frame	B Top Panel	C Middle Shelf Panel	D Lower Shelf Panel
1pc	1pc	1pc	1pc
E Bottom Panel	F Divider Panel	G Leaf Panel	H Horizontal Wine Rack
			Panel
1pc	1pc	1рс	2pcs
Vertical Wine Rack Panel	J Support Bar	K Bolt Ø1/4"x1-1/8"	L Bolt Ø1/4"x1"
4pcs	3pcs	2pcs	32pcs
M Bolt Ø1/4"x1/2"	N Bolt Ø5/32"x1/2"	O Rubber Feet	P Leveler
4pcs	8pcs	2pcs	3pcs
Q Metal Bracket (Anti - Tipping)	R Wood Screw (Anti - Tipping)	S Plastic Anchor (Anti - Tipping)	T Plastic Mounting Strap (Anti - Tipping)
0	E Manage	O TATATA	Concerned and
4pcs	2pcs	2pcs	2pcs
U Screwdriver (Not Provided)			


1pc




This page list all the contents included in the box Please take the time to identify the hardware as well as the individual components to this product As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Unfold the Back Frame (A) as below shown.

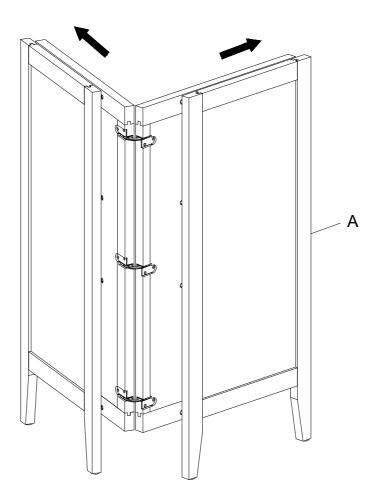




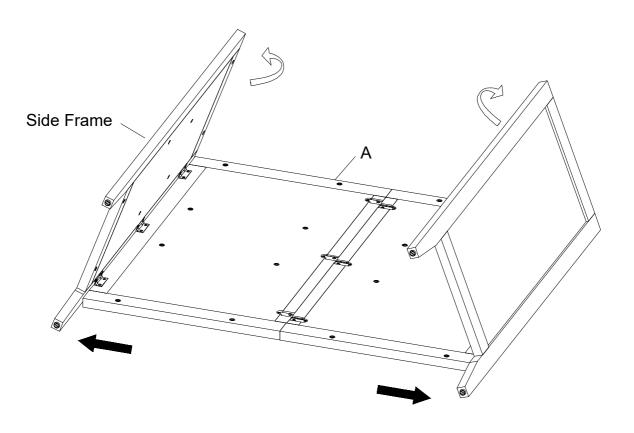


3 Assemble Middle Shelf Panel (C) to Back Frame (A), using Bolt (L) to lock as below shown.

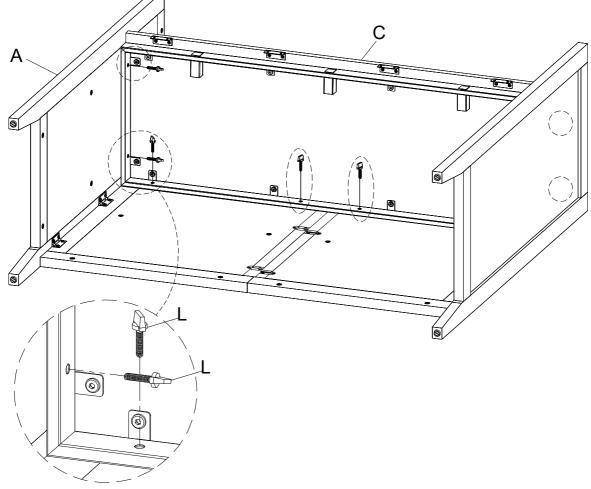


Assemble Lower Shelf Panel (D) to Back Frame (A), using Bolt (L) to lock as below shown.

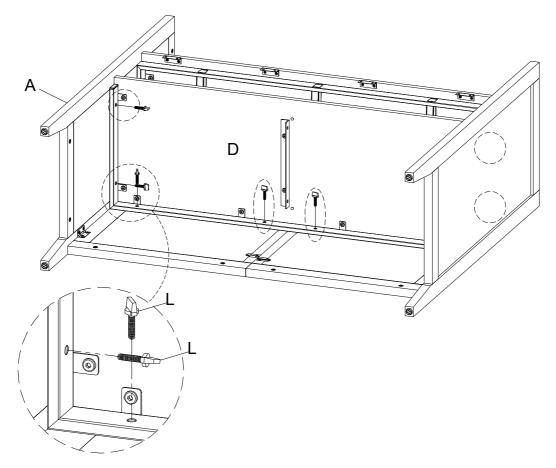

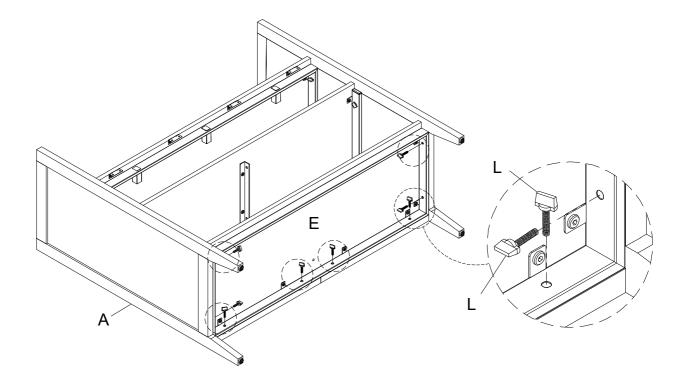


6 Assemble Divider Panel (F) to Lower Shelf Panel (D) and Bottom Panel (E), using Bolt (K) and Bolt (M) to lock as below shown.

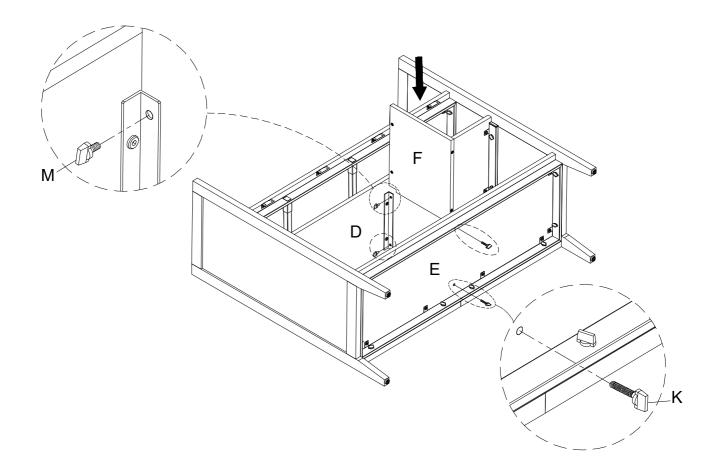


Insert Support Bar (J) to the holes on the metal base frame of Middle Shelf Panel (C), then assemble Leveler (P) to Support Bar (J) as below shown.


7

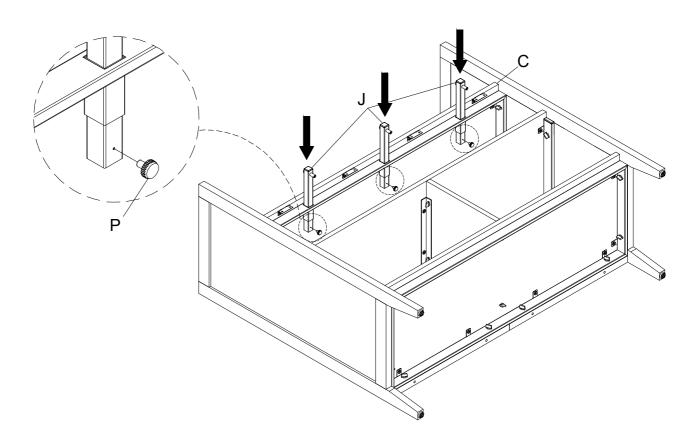


8 Assemble Leaf Panel (G) to the hinges of Middle Shelf Panel (C), using Bolt (N) by Screwdriver (U) as below shown.

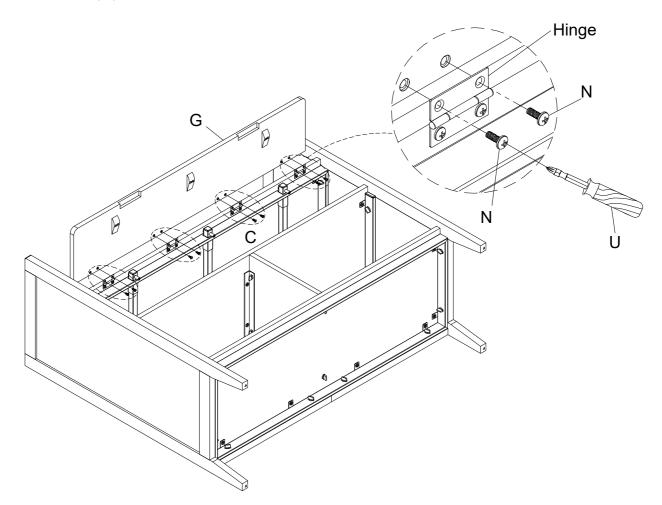


6

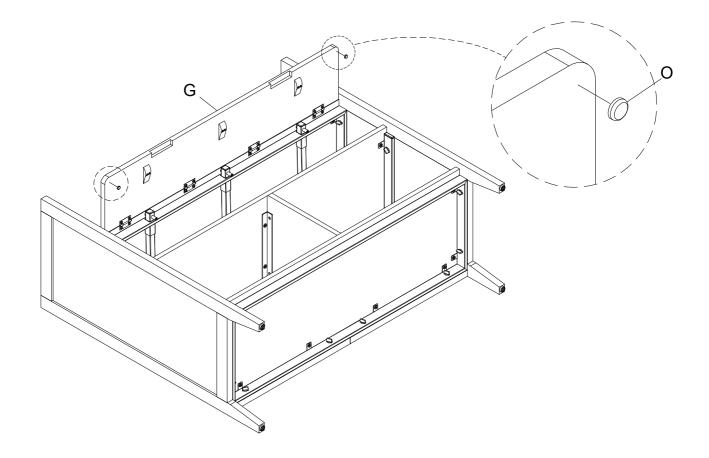


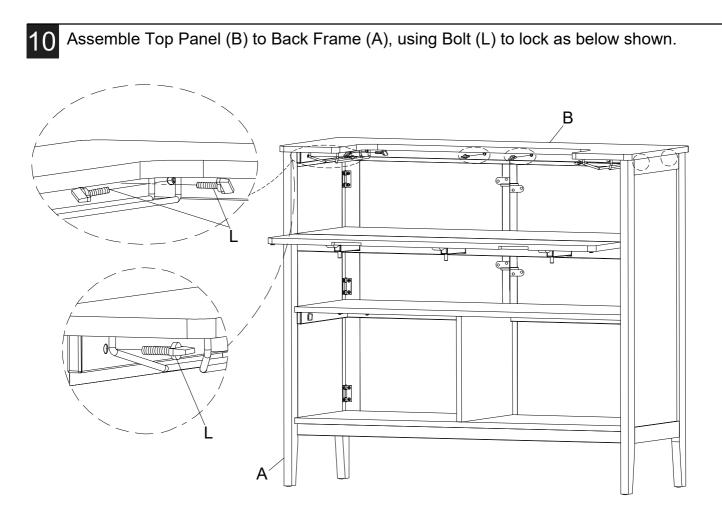

1 Assemble Horizontal Wine Rack Panel (H) to Vertical Wine Rack Panel (I) as below shown.

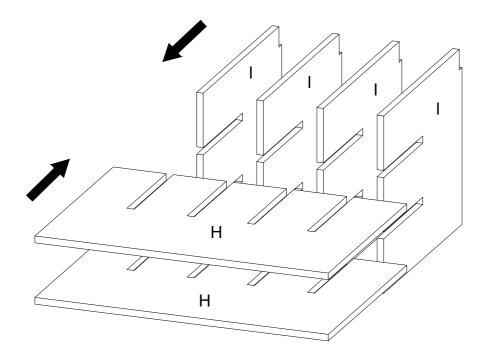

12 Insert the pre-assembled and removable Wine Rack Panels into bottom compartment of the Home Bar as below shown.

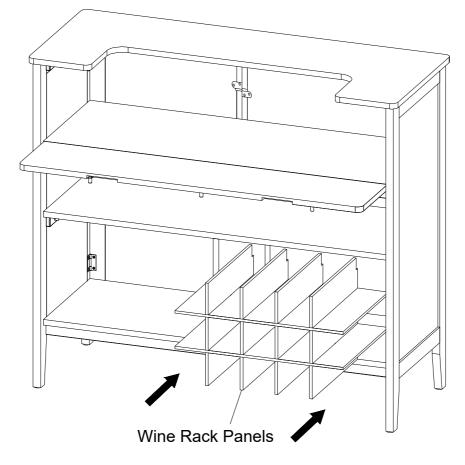


13 \*NOTE: WE RECOMMEND THAT YOU ATTACH THE PRODUCT TO YOUR WALL AS A SAFETY PRECAUTION USING ANTI-TIPPING KIT AS BELOW INSTRUCTION.

1. Attach 2pcs of the Metal Bracket (Q) to the holes on back of Back Frame (A), using Bolt (M) as below shown, making sure the Metal Bracket (Q) extend DOWNWARD.

2. Determine where furniture is to be placed and mark location on the wall for the Metal Bracket (Q). Drill 2 holes in your wall approximately 2" (Inches) BELOW the corresponding positions of Metal Bracket (Q) and insert Plastic Anchor (S) as shown.

3. Position the Metal Bracket (Q) over the Plastic Anchor (S) and use the Wood Screw (R) to securely attach the bracket to the wall.

4. Place the furniture so the bracket on the back of Back Frame (A) is in line with the bracket to the wall. Now connect the corresponding Metal Bracket (Q) with Plastic Mounting Strap (T) and tighten as described before locking in place

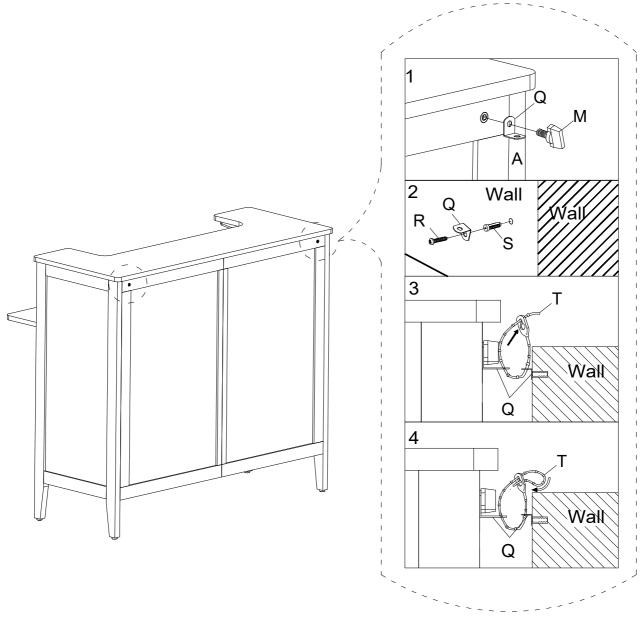

## **Cleaning & Care**

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.