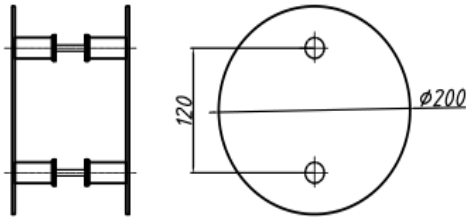
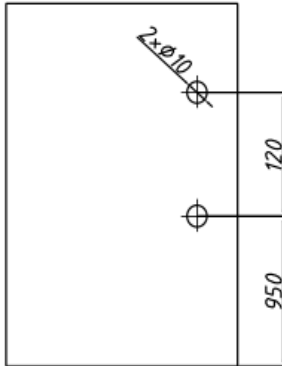
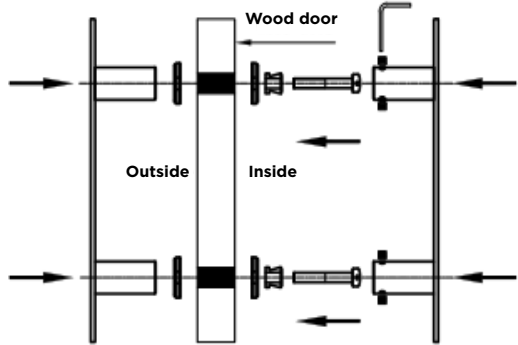
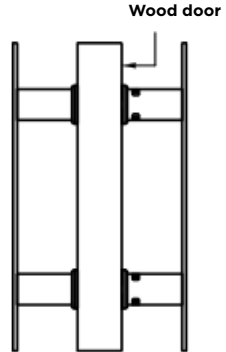
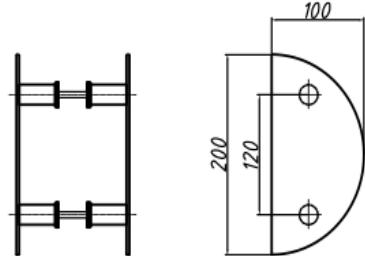


Installation Instructions

CIRCULAR / SEMI-CIRCULAR PULL HANDLES

		Installation Steps		
Wooden Door				
		1. Drill two mounting holes in the wooden door as the diagram shown NOTE: Wood Panel Thickness: 32-45mm	PLEASE NOTE: Install the Handle with threaded holes on inside door. 2. Strip down the handles by removing the screws with the tool. Position through the holes in the wood panel making sure that the SS Washers and SS Adapter Sleeves are fitted - see diagram then tighten the screws.	3. Installation effect picture