
# **ASSEMBLY INSTRUCTION**

### **SERVER**




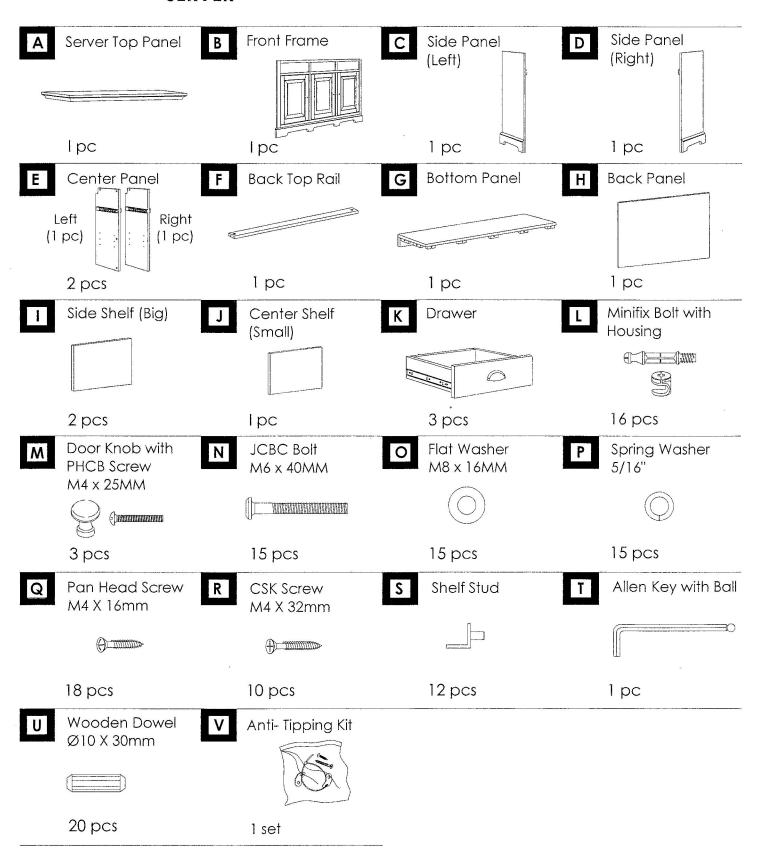


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


### **IMPORTANT NOTE:**

- Do not tighten all screws / bolts until all completely assemble.
- Keep all hardware parts out of reach of children.

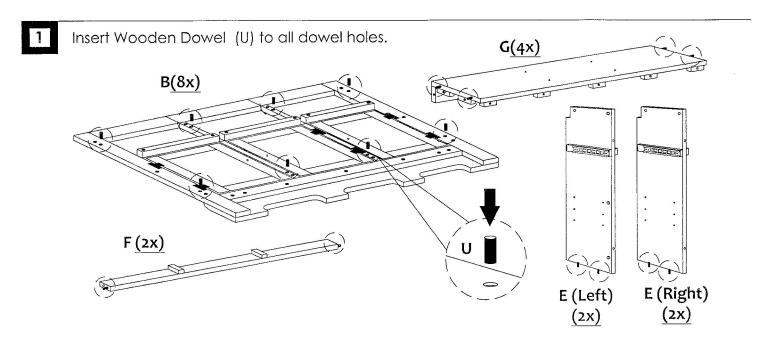


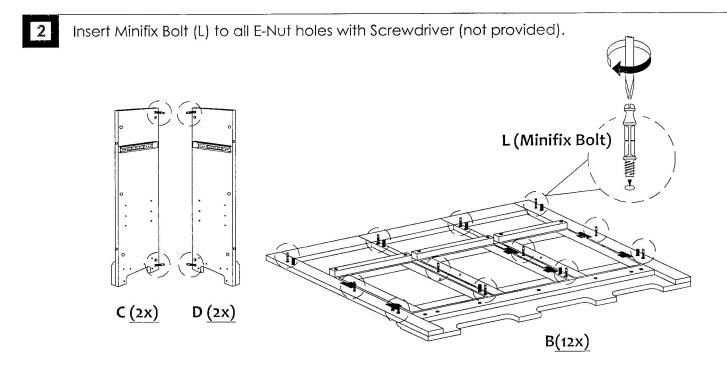


Insert Bottom Panel (G) to Center Panel (E) and secure it with Flat Washer (O), Spring Washer (P) and JCBC Bolt (N) and tighten with Allen Key (T).

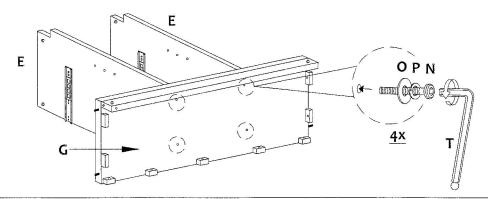


Gently insert Side Panel (Left) (C) to the Bottom Panel (G) and secure it with Flat Washer (O), Spring Washer (P) and JCBC Bolt (N) and tighten with Allen Key (T).

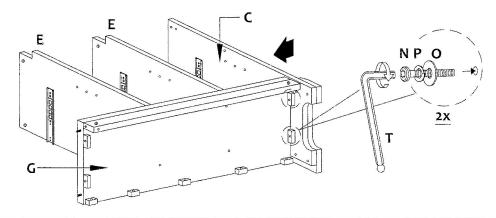


Place Back Top Rail (F) to Center Panel (E) and tighten it with Flat Washer (O), Spring Washer (P) and JCBC Bolt (N). Insert Minifix Housing (L) to Side Panel (Left)(C) and follow the arrow to lock it.

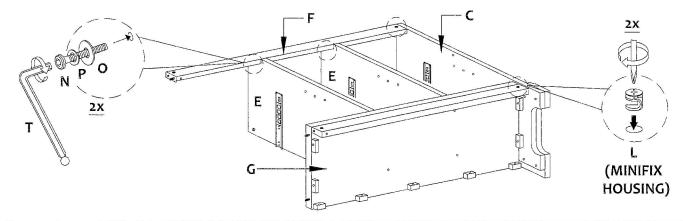


Insert the other Side Panel (Right) (D) to Bottom Panel (G). Secure the Bottom Panel (G) to Side Panel (Right) (D) with Flat Washer (O), Spring Washer (P) and JCBC Bolt (N) and tighten it with Allen Key (T). Insert Minifix Housing (L) to Side Panel (Right) (D) and follow the arrow to lock it.

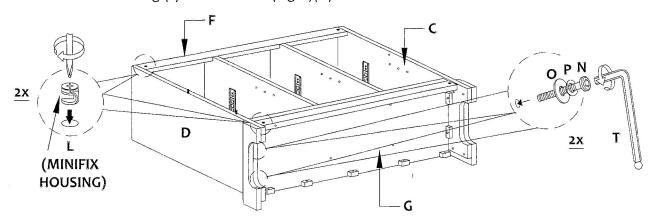


Turn the Front Frame (B) upside down and place it on a piece of cloth to prevent from scratching. Gently insert the semi asembled Server to the Front Frame (B). Insert Minifix Housing (L) and follow the arrow to lock it.

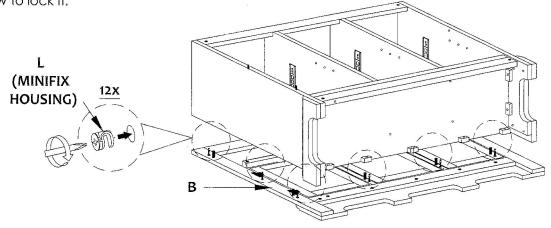


Secure the Bottom Panel (G) to Front Frame (B) with Flat Washer (O), Spring washer (P) and JCBC Bolt (N) and tighten it with Allen Key (T).

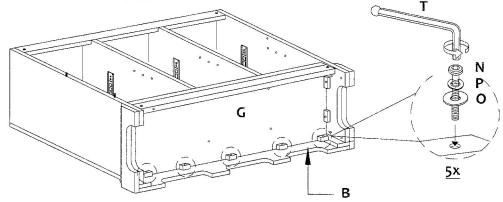


Insert Wooden Dowel (U) to the pre-drill holes at the Top Panel (A). Gently place the semi assembled Server to the Top Panel (A). Then, secure the Top Panel (A) with CSK Screw (R).

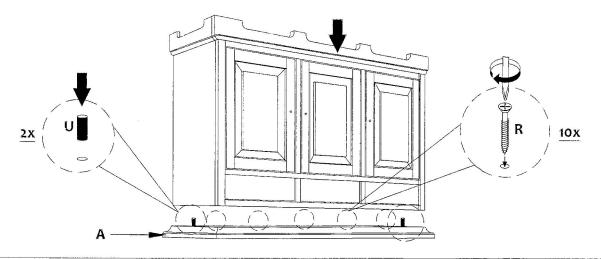


Place the Back Panel (H) and screw it with Pan Head Screw (Q).

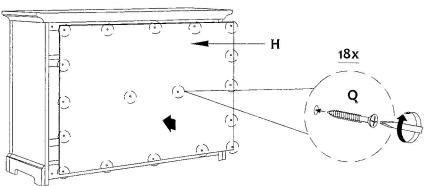


In order to insert the Drawer (K), pull out the drawer glide to the end. Then, gently insert the drawer.

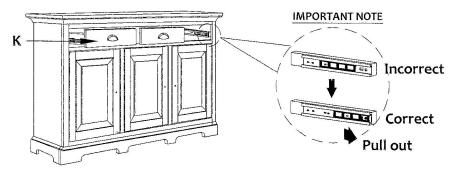


Insert the Shelf Stud (S) to the pre-drill holes at the Side Panel (C & D) and Center Panel (E) and place the Shelf following the note below.

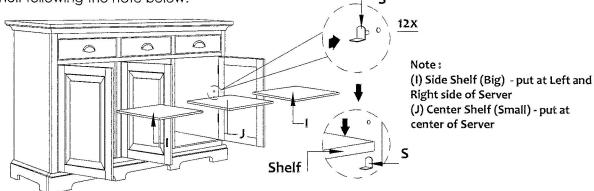

Attached the Door Knob (M) to the pre-drilled holes and tighten it with the screw given using Phillip Headscrewdriver.

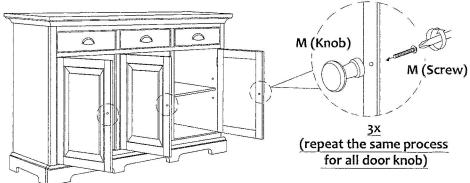

Attach Anti-Tipping Kit (V) to wall. Attached bracket (vertically) to wall using the long screw provided. Attach bracket (vertically) to furniture back (directly below top) with short screw. Place bracket as close to center of furniture back as possible in relation to wall stud and the desired position in the room. Move furniture to its final position. Thread the strap through bracket, pull it tight.

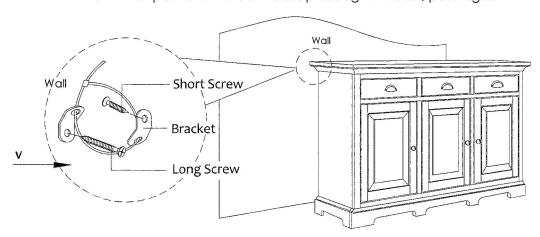


#### **CLEANING & CARE**

Treat surface with care. Surface is resistant to scratches but is not scratches resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen overtime. Periodically check that all connections are tight.


# **ASSEMBLY INSTRUCTION**

## **HUTCH WITH 2 LED LIGHT**

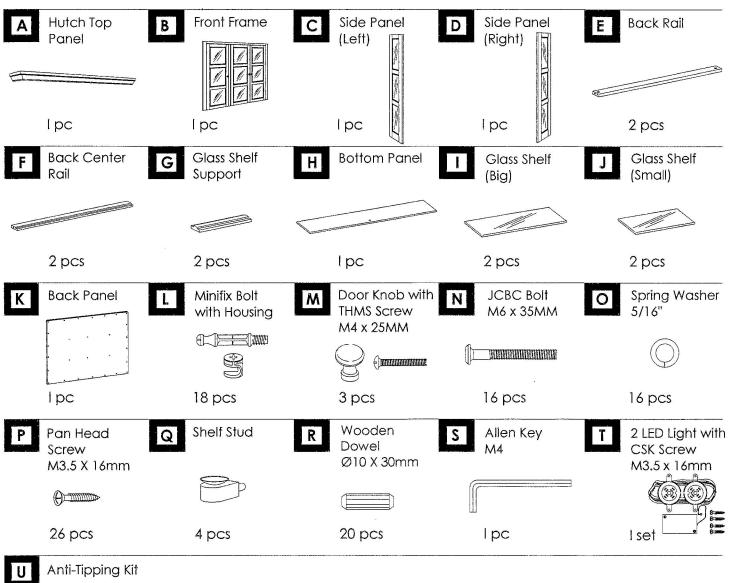

U Anti-Tipping Kit

1 set

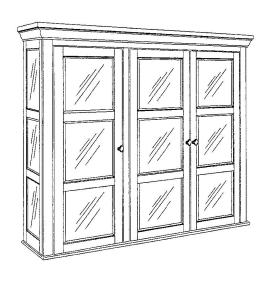


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


#### **IMPORTANT NOTE:**

- Do not tighten all screws / bolts until all completely assemble.
- 2. Keep all hardware parts out of reach of children.


Insert Wooden Dowel (R) to all dowel holes.

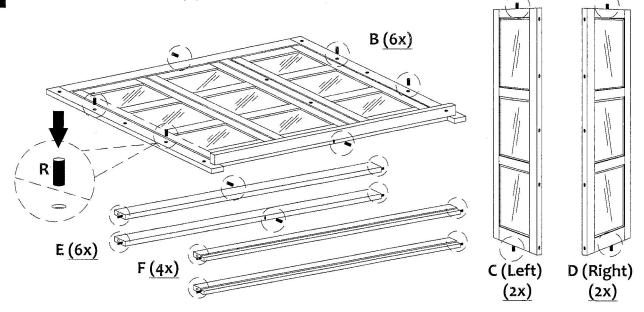


Insert Minifix Bolt (L) to all E-Nut holes with Screwdriver (not provided).

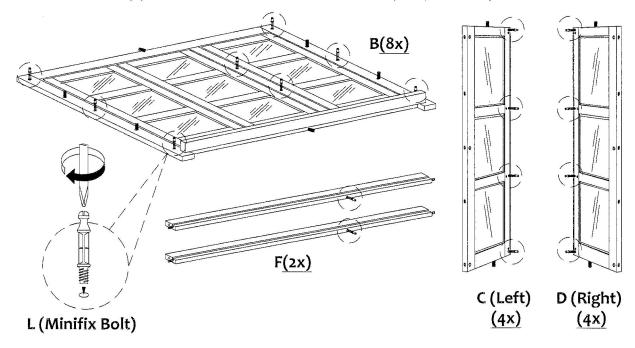


Turn the Front Frame (B) upside down and place it on a piece of cloth to prevent from scratching. Gently insert Side Panel (Left)(C) to the Front Frame (B). Insert Glass Shelf Support (G) to the Front Frame (B). Insert Minifix Housing (L) and follow the arrow to lock it.

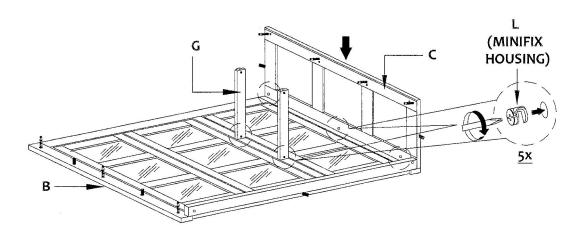


Insert Back Rail (E) to Side Panel (Left)(C). Insert Minifix Housing (L) and follow the arrow to lock it.

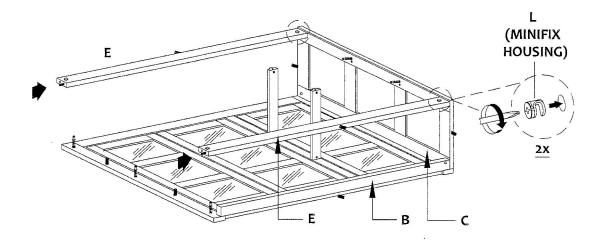


Insert Back Center Rail (F) to Side Panel (Left)(C), Insert Minifix Housing (L) and follow the arrow to lock it.

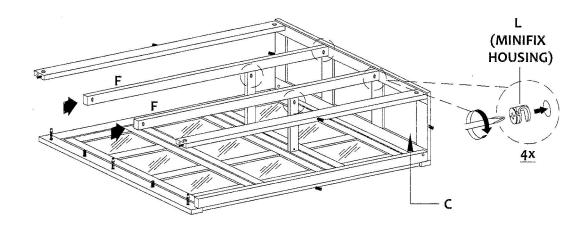


Place Side Panel (Right)(D) to Front Frame (B). Insert Minifix Housing (L) and follow the arrow to lock it.

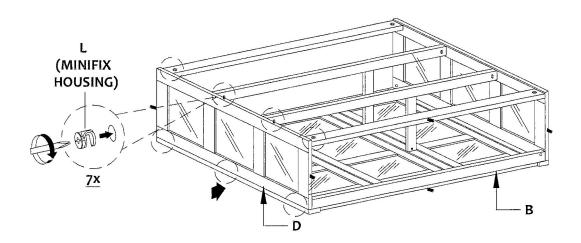


Insert Bottom Panel (H) to Front Frame (B), Side Panel (Left)(C), Side Panel (Right)(D). Secure the Bottom Panel (H) with Spring Washer (O) and JCBC Bolt (N) and tighten it with Allen Key (S).

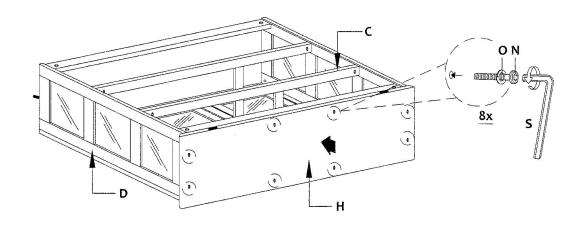

Turn the semi assembled Hutch up-right and gently place the Top Panel (A). Secure the Top Panel (A) with Spring Washer (O) and JCBC Bolt (N) and tighten it with Allen Key (S).

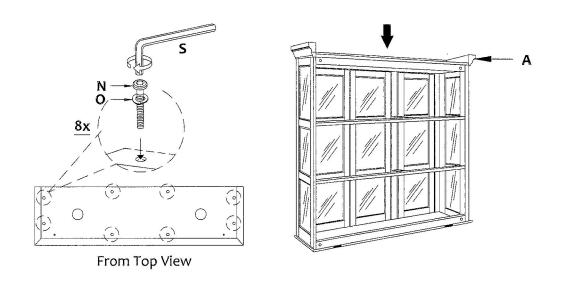


Place the Back Panel (K) and screw it with Pan Head Screw (P).

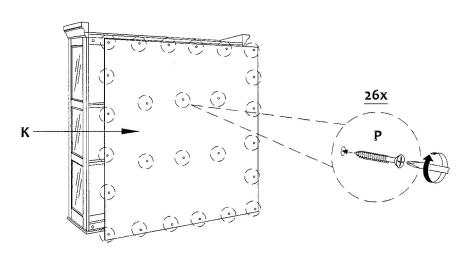


10

Insert the Shelf Stud (Q) to the pre-drill holes at the Side Panel (Left)(C) & Side Panel (Right)(D). Place the Glass Shelf (I) & (J) following the note below.

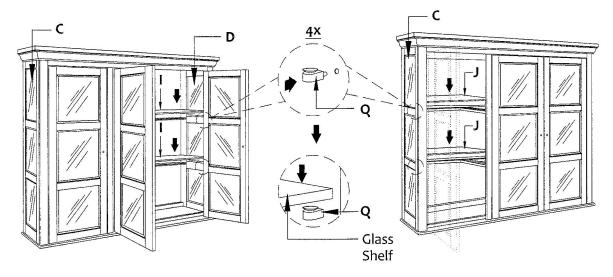


Note:

- (I) Glass Shelf (Big) put at Right side of Hutch
- (J) Glass Shelf (Small) put at Left side of Hutch
- Attached the Door Knob (M) to the pre-drilled holes and tighten it with the screw given using Phillip Headscrewdriver. (Not provided)

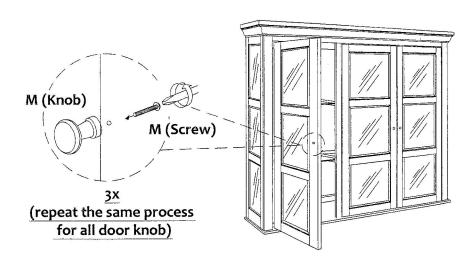


Place the LED Light (T) to the holes on the top of Hutch and secure it with CSK Screw. Insert the sensor through the small hole (either left or right side) and pull it down.

## \* REMARK : Sensor can be located either on right or left side

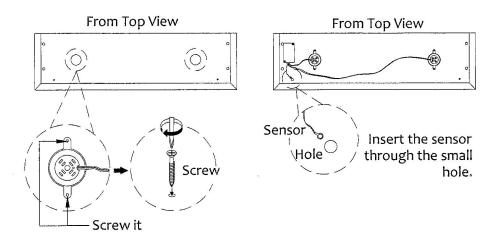


13


Loosen one of the screw at the door hinges. Insert the sensor through the screw and tighten it back.

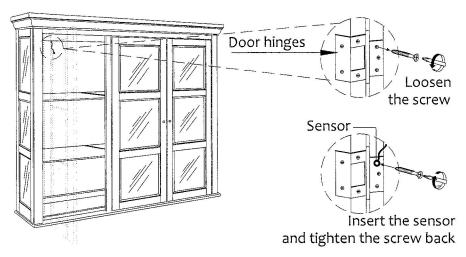

14 Take the power cord from top of Hutch and plug it into a socket.

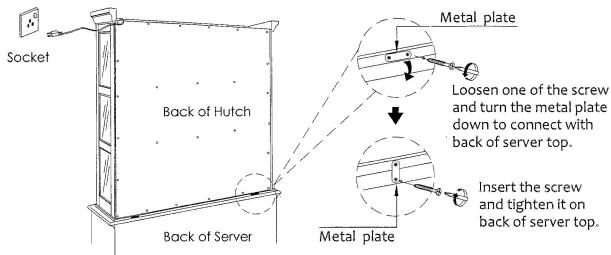

Attach Anti-Tipping Kit (U) to wall. Attached bracket (vertically) to wall using the long screw provided. Attach bracket (vertically) to furniture back (directly below top) with short screw. Place bracket as close to center of furniture back as possible in relation to wall stud and the desired position in the room. Move furniture to its final position. Thread the strap through bracket, pull it tight.

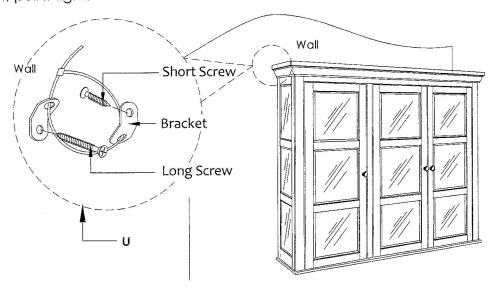

### **CLEANING & CARE**

Treat surface with care. Surface is resistant to scratches but is not scratches resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.