

Adventure Starts Here.


36" X 18.5" BUFFET TABLE

SEAHAWK
DESIGNS

EST. 2005

! NOTICE

- Do not overtighten hardware.
- Do not exceed the weight capacity of this item.
- Only use this item for what it is intended for, improper use will void any warranty.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are firmly secured every 90 days.
- Keep this furniture clear of all uncontrolled open flames or flammable/combustible materials.
Exposure to fire, high heat, or embers will permanently damage the material.
- To avoid stripping and cracking of the material, DO NOT use power tools for assembly.
- Always prioritize caution and safety throughout the assembly process.

TOOLS REQUIRED

ALLEN WRENCH
(PROVIDED)



**CHECK PARTS
& HARDWARE
FIRST***



**SUGGESTED
1 PERSON
ASSEMBLY**



**ESTIMATED
ASSEMBLY
TIME: 20 MIN**

*For missing parts or hardware, please email cs@seahawkdesigns.com.

HARDWARE

REF#: OP8050

1

SCREW
M6 x 70mm



8 PCS

2

SCREW
M6 x 90mm



8 PCS

3

SCREW HOLE PLUG




16 PCS

PARTS

A


TABLE TOP

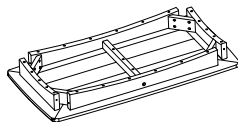

1 PC

B


SHELF



1 PC

C


LEG I

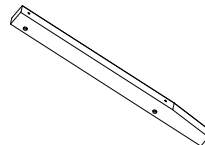

2 PCS

D

LEG II

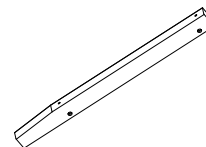


2 PCS

PRODUCT ASSEMBLY - OVERALL VIEW

REF#: OP8050


Please refer back to this image during the assembly process for part placement.

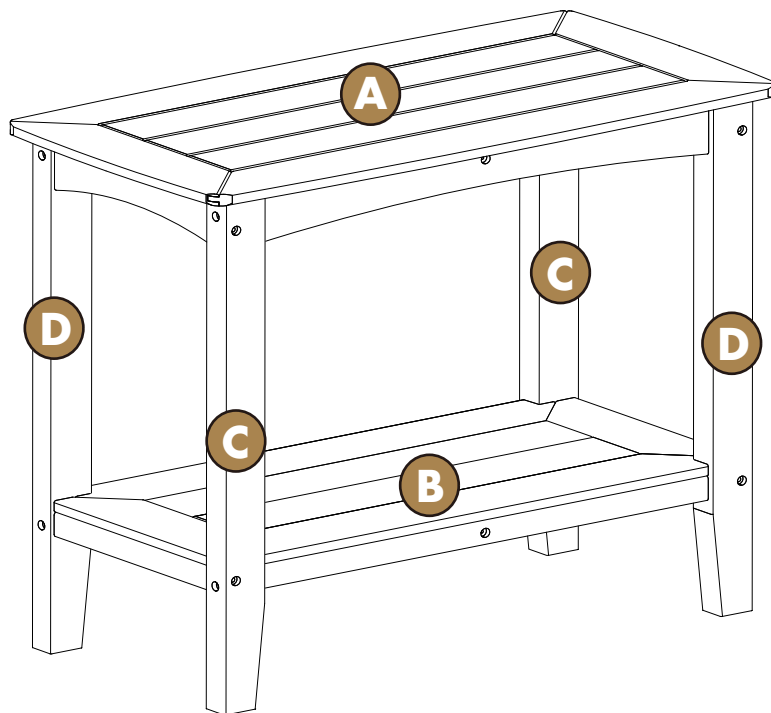

1

Step 1: Assemble the Table Legs to the Shelf


- Attach **Part C (Leg I)** and **Part D (Leg II)** to **Part B (Shelf)** using **2 - M6 Screw (#1)** and **2 - M6 Screw (#2)** (see image below).
Ensure the longer screws are installed parallel to the table's length (see image below).
- Do not fully tighten the screws yet. Tighten them to approximately 70% to allow for adjustments during final assembly.

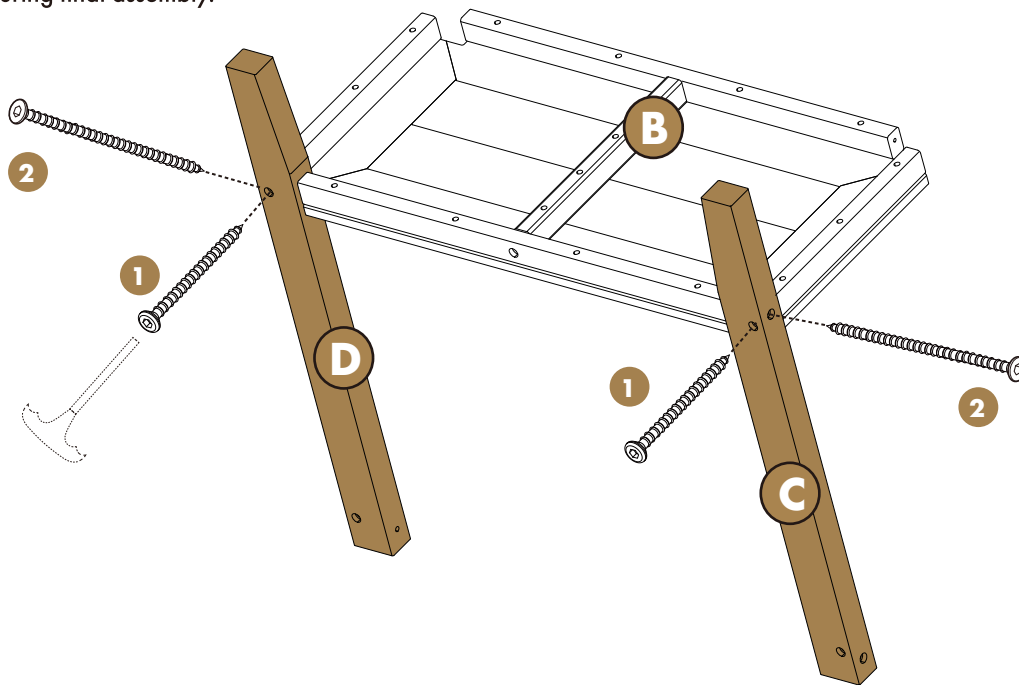

2

Step 2: Assemble the Other Table Legs to the Shelf


- Repeat previous step (Step 1) to assemble another **Part C (Leg I)** and **Part D (Leg II)** to **Part B (Shelf)** (see image below).

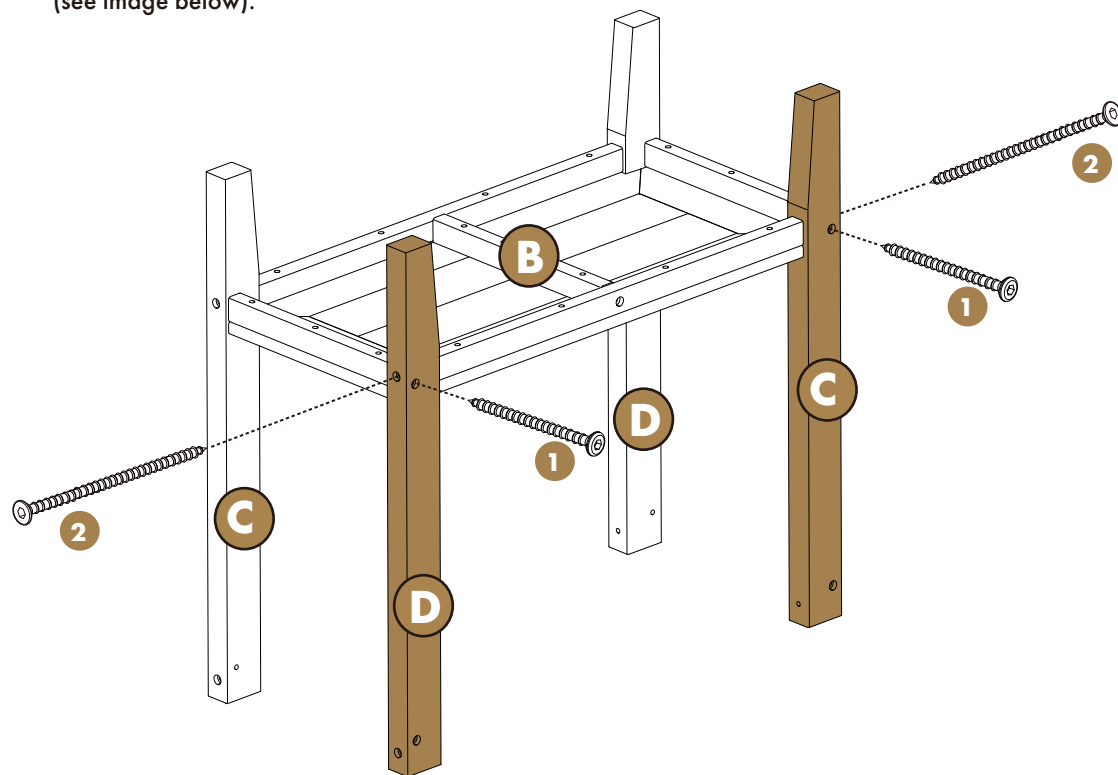

3

Step 3: Attach the Assembled Frame to the Table Top


- Place **Part A (Table Top)** on a flat surface. Attach the **Assembled Frame (Part B, 2 - Part C and 2 - Part D)** to **Part A (Table Top)** using **4 - M6 Screw (#1)** and **4 - M6 Screw (#2)** (see image below).

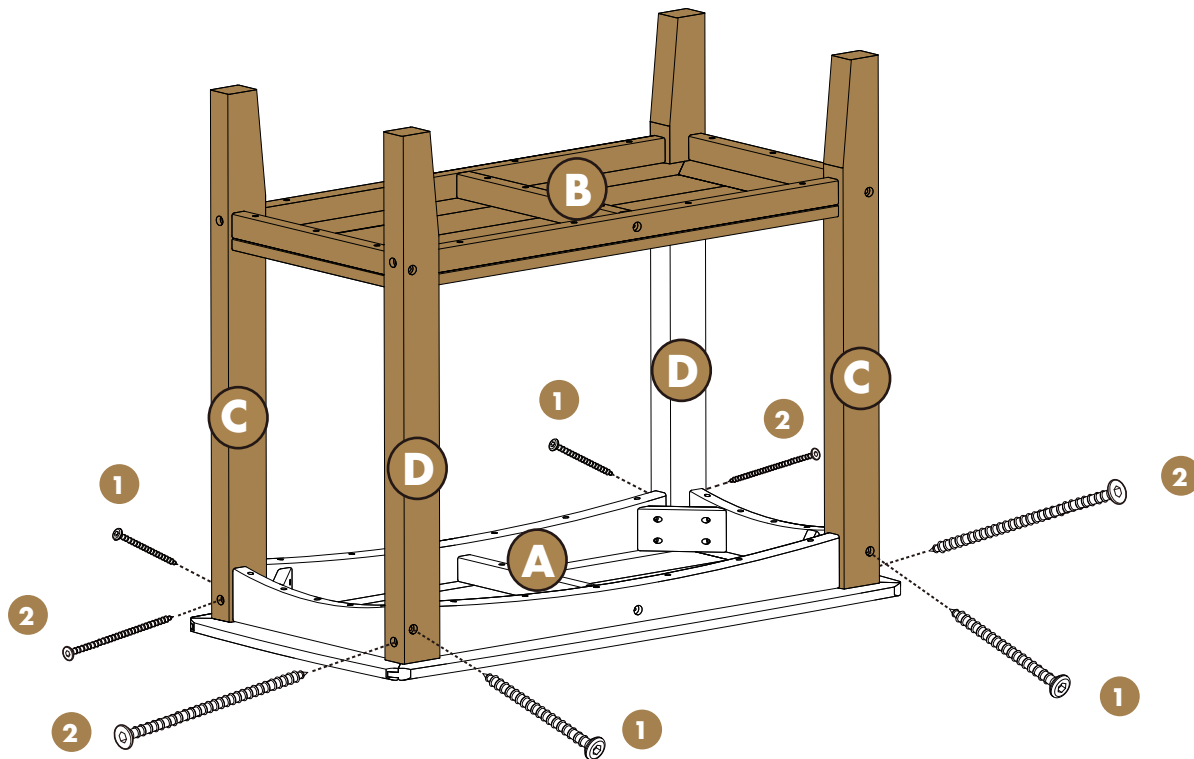

4

Step 4: Final Tightening and Stability Check

- Tighten all previously installed screws, bolts, and nuts. Check every connection to ensure the table is steady and stable.

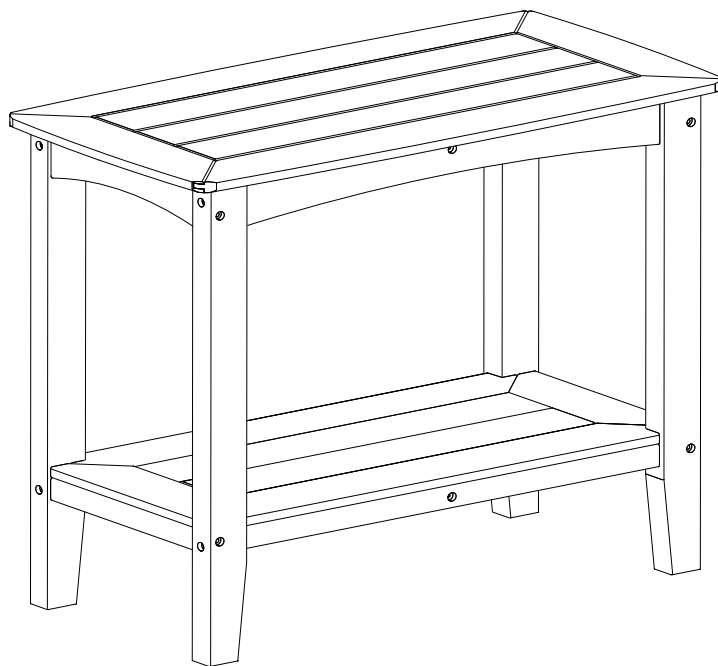


5

Step 5: Apply Screw Hole Plugs

- Cover all exposed screw holes using **16 - Screw Hole Plug (#3)**. Insert all plugs into the exposed screw holes. Gently tap each plug into place using a rubber mallet to prevent damage. Ensure each plug is fully seated and flush with the surface (see image below).

ATTENTION: Do not use a metal hammer as it will damage the poly lumber.

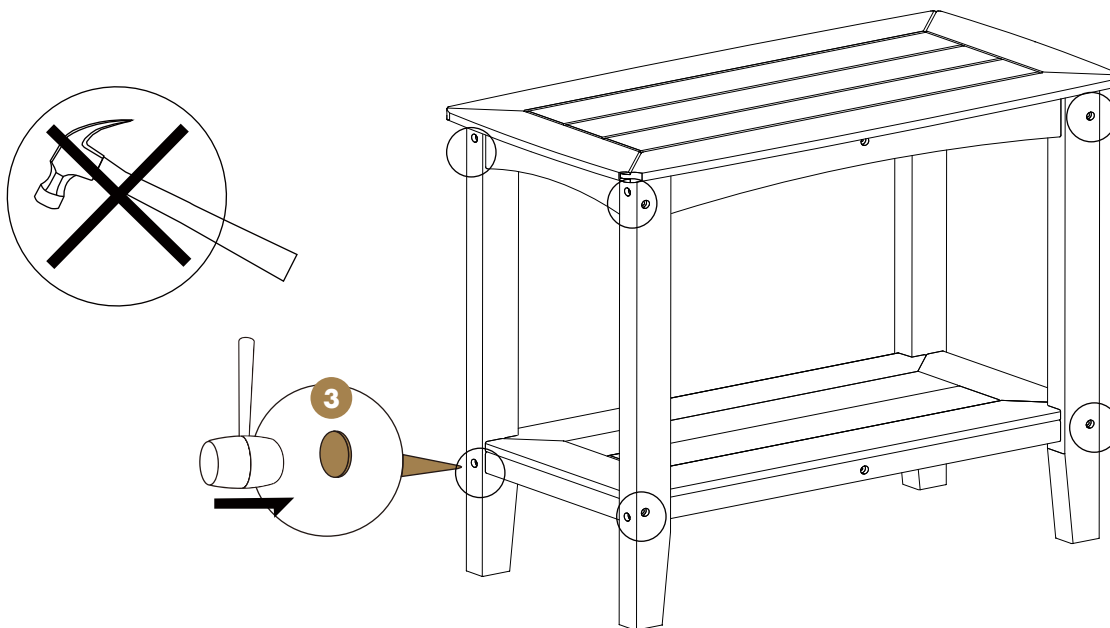

- **REGULAR CLEAN:** Mix **warm water** and **mild soap**. Use **a soft bristle brush** to gently scrub the surface and remove any dirt or stains.
- **QUICK CLEAN:** Simply wipe the furniture down using a damp cloth.

Tip: Cleaning your furniture regularly helps maintain its aesthetic appeal and extends its lifespan.

Enjoy!

Join our community and be the first to see what's new!

Follow us on socials:



Quickly register your outdoor furniture purchase to activate your warranty and enjoy peace of mind with guaranteed product protection:



Have questions or need assistance? Reach out to our dedicated team at **(909) 284-1052** or email us at **cs@seahawkdesigns.com**.