














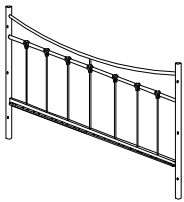


ASSEMBLY INSTRUCTION


METAL DAYBED

A	Headboard	B	Footboard	C	Side rail	D	Slats
							
2PCS		1PC		1PC		3PCS	
E	Extension leg	F	Bentwood slats	G	Plastic knots	H	Iron ball with bolt
							
2PCS		12PCS		24PCS		4PCS	
I	Bolt M8*50mm	J	Bolt M6*20mm	K	Bolt M6*15mm	L	Nut M8
							
4PCS		2 PCS		10PCS		2PCS	
M	Flat washer	N	Allen wrench 4*4mm	O	Wrench		
							
4PCS		1PC		1PC			

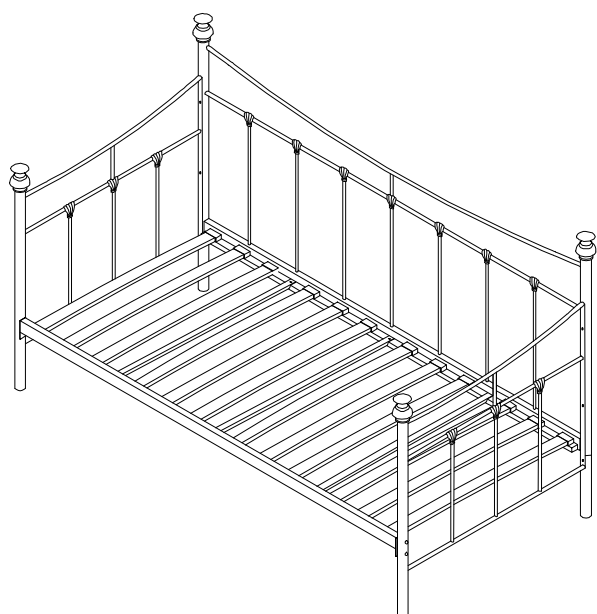


This page lists all the contents included in the box. please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Assemble the Iron ball with bolt (H) to the Headboard (A) and the Footboard (B).
Assemble the Headboard (A), Footboard (B) and Extension Leg (E) with 2 pcs Bolt (J) and 4 pcs Bolt (K) by Allen wrench (N).

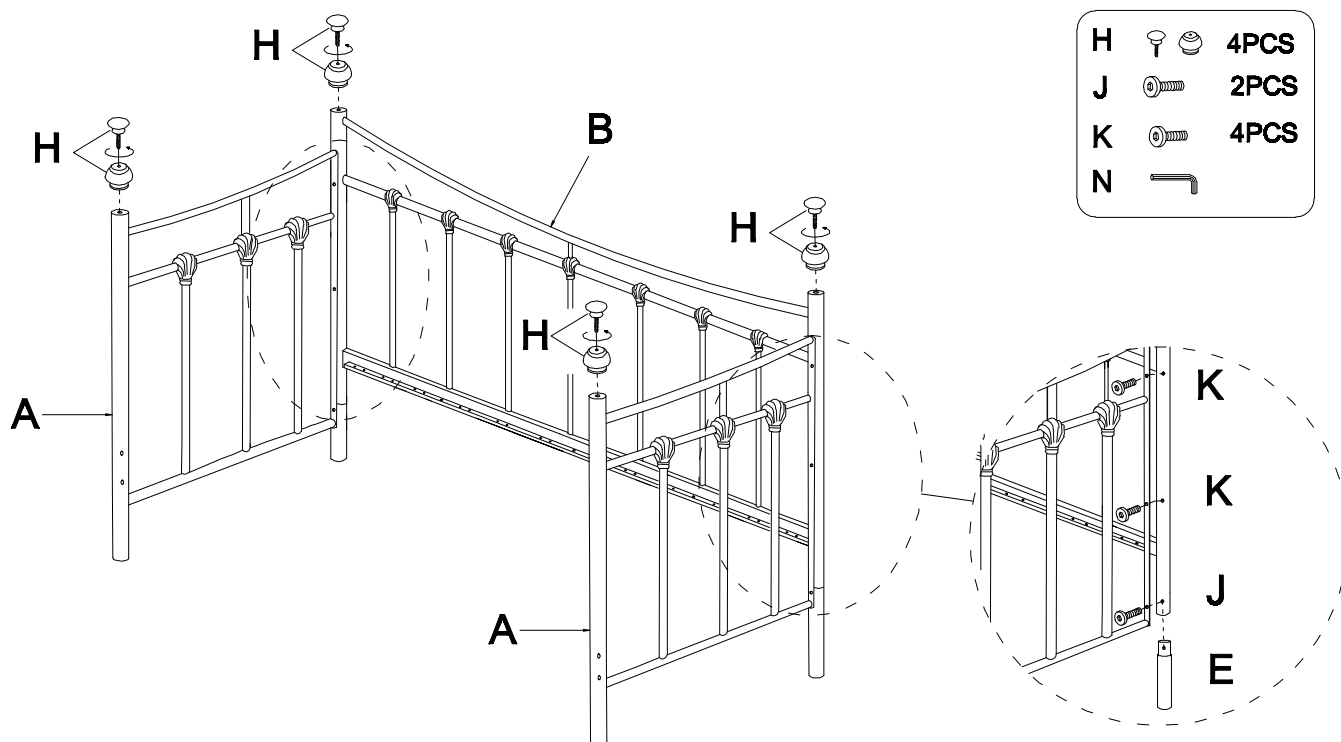


- 2** Assemble the Side rail (C) to the Headboard (A) with 4 pcs Bolt (I), 4 pcs Flat washer (M) and 2 pcs Nut (L) by Wrench (O) and Allen wrench (N).

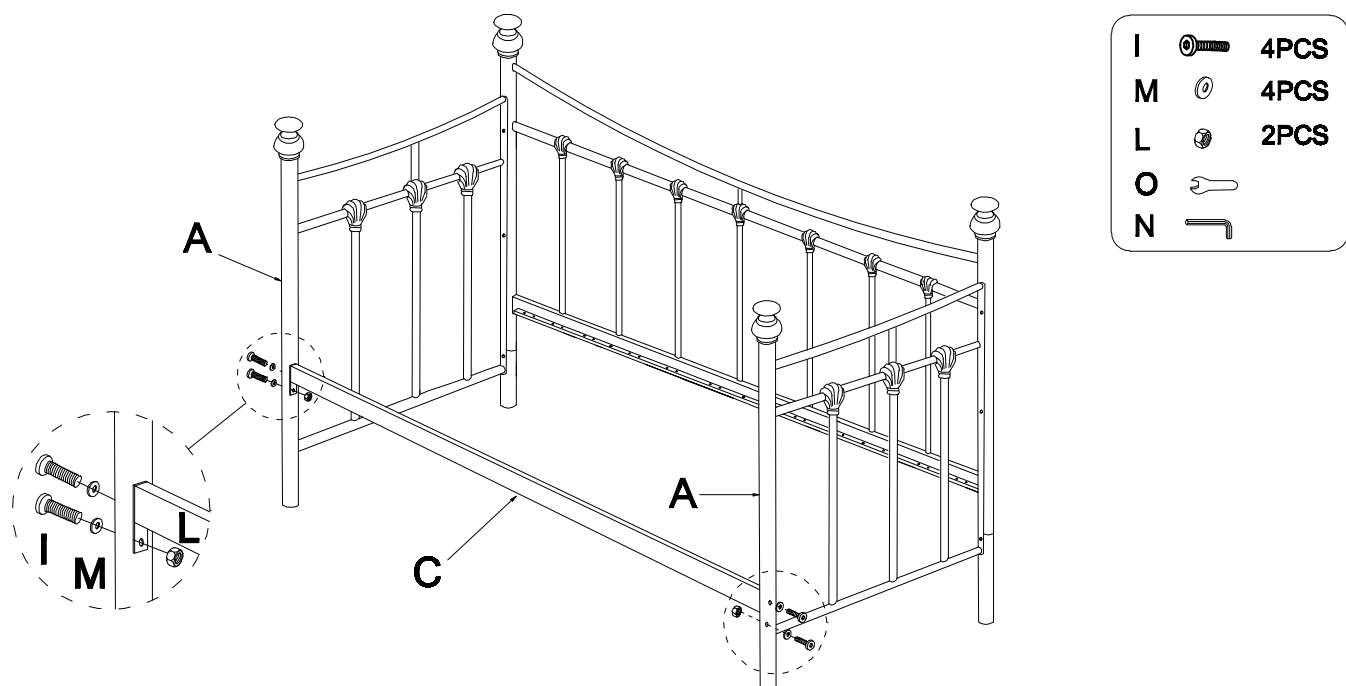

- 3** Assemble the Slats (D) to the Side rail (C) and Footboard (B) with 6 pcs Bolt (K) by Allen wrench (N).

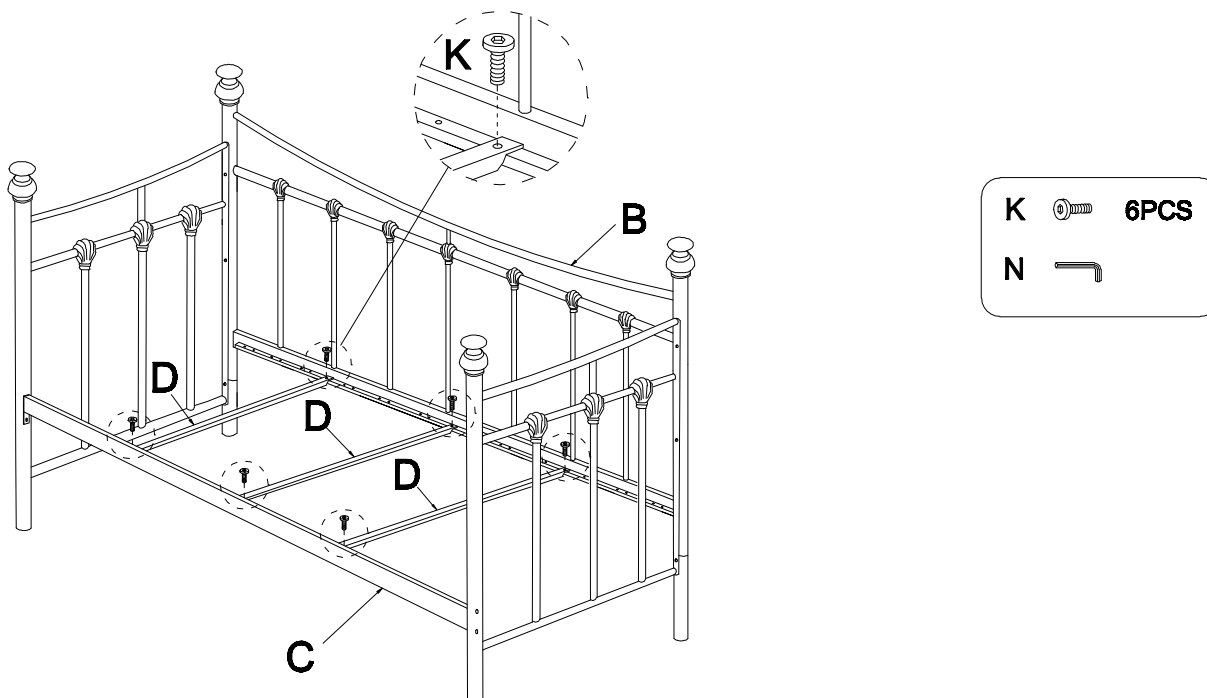

- 4** Insert the Bentwood slats (F) to the Plastic knots (G), then insert to the Side rail (C) and Footboard (B).

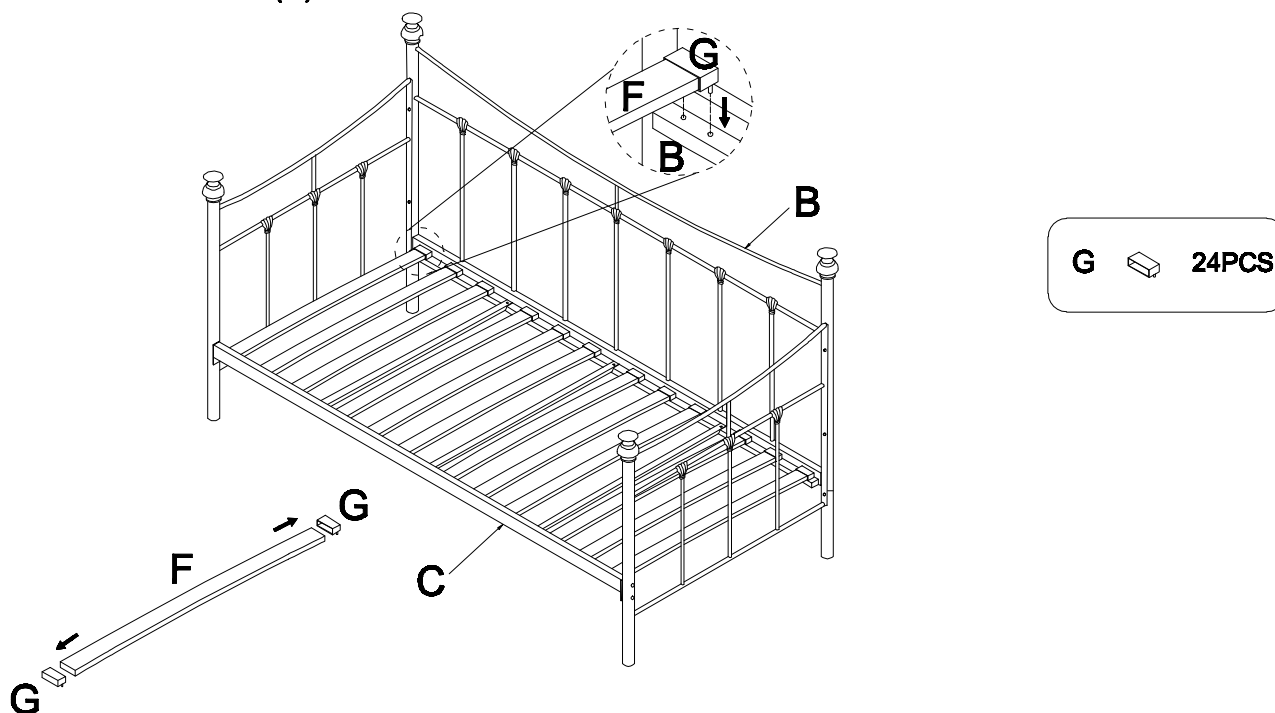

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.