

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS



INSTALLATION INSTRUCTIONS - OVER CHALKBOARD

1. Clean chalkboard surface thoroughly with soap and water
 - If you use solvent acetone or denatured alcohol, use soap and water as a final step
 - Allow to dry thoroughly
2. Tape off the frame and all other areas not intended to be painted with 3M Multipurpose blue painter's tape
3. Prime surface with FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, or PPG Seal Grip – for a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - Prime board with 2-3 coats, until color is hidden
 - Wait 24 hours before applying IdeaPaint
4. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
5. Dry wipe the surface with a clean cloth to remove dust from sanding
6. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS



INSTALLATION INSTRUCTIONS - OVER DRY ERASE WALL COVERING

1. Scuff wall covering surface
 - Use medium grit sandpaper (100-120 grit). For smoother profile, use of 220 grit or higher is recommended.
2. Dry wipe the surface with a clean cloth to remove dust from sanding
 - If you use solvent acetone or denatured alcohol use soap and water as a final step
3. Prime surface with FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, or PPG Seal Grip – for a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - Prime board with 2-3 coats, until color is hidden
 - Wait 24 hours before applying IdeaPaint
4. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
5. Dry wipe the surface with a clean cloth to remove dust from sanding
6. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS




INSTALLATION INSTRUCTIONS - OVER EXISTING IDEAPAIN

1. Thoroughly scuff surface
 - Use medium grit sandpaper (100-120 grit).
 - Remove as much gloss as possible and leave the surface as smooth as possible. For smoother profile, use of 220 grit or higher is recommended.
2. Dry wipe the surface with a clean cloth to remove dust from sanding
 - If you use solvent acetone or denatured alcohol use soap and water as a final step
3. Prime surface with FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, or PPG Seal Grip – for a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - Apply 2 coats of primer
 - Allow primer to dry according to manufacturer's instructions - if time allows wait 24 hours before applying IdeaPaint
4. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
5. Dry wipe the surface with a clean cloth to remove dust from sanding
6. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS

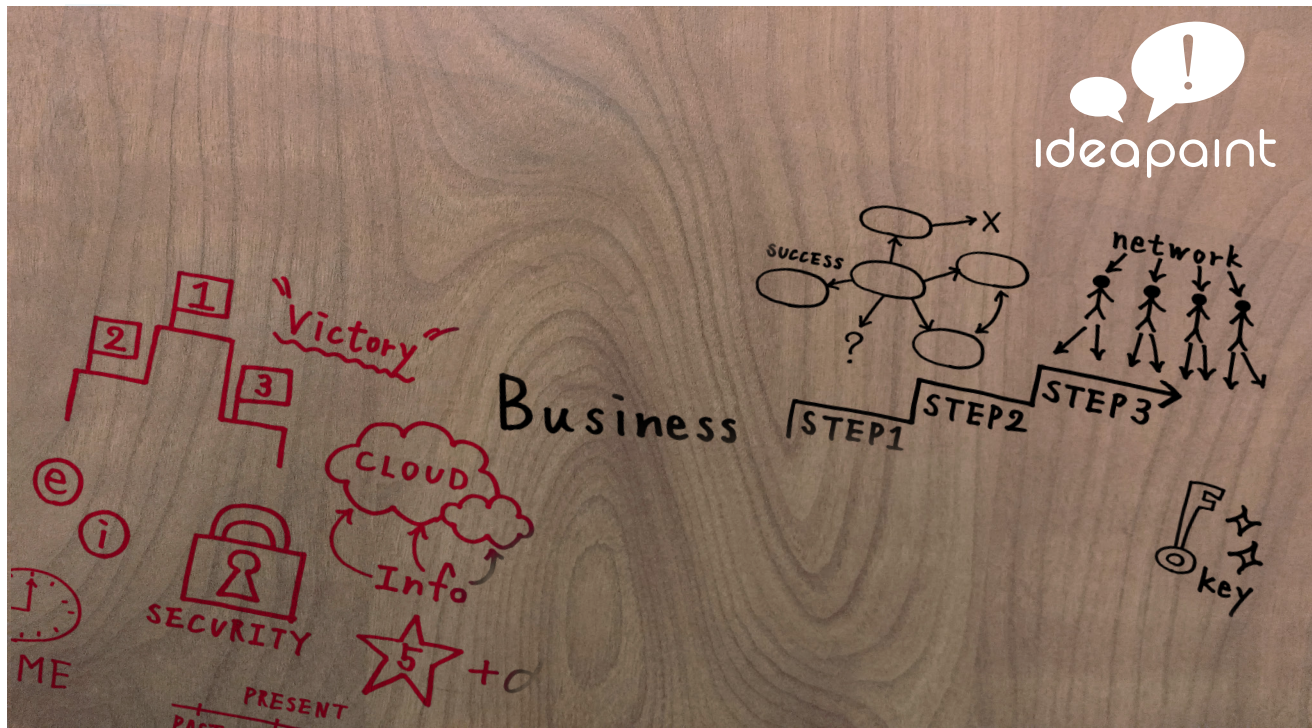


INSTALLATION INSTRUCTIONS - OVER WOOD

1. Sand wood surface with 120-150 grit sandpaper to achieve a smooth finish. For smoother profile, use of 220 grit or higher is recommended.
2. Dry wipe the surface with a clean cloth to remove dust from sanding
3. If the wood is a wall, tape off the frame and all other areas not intended to be painted with 3M Multipurpose blue painter's tape. If the wood piece is free floating, paint it vertically and not horizontally.
4. Seal wood with oil based sealing primer, follow manufactures recommendations for drying and sanding. After 24 hour dry, apply 100% acrylic primers such as: FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, or PPG Seal Grip – for a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - Allow primer to dry according to manufacturer's instructions - if time allows wait 24 hours before applying IdeaPaint
5. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
6. Dry wipe the surface with a clean cloth to remove dust from sanding
7. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS

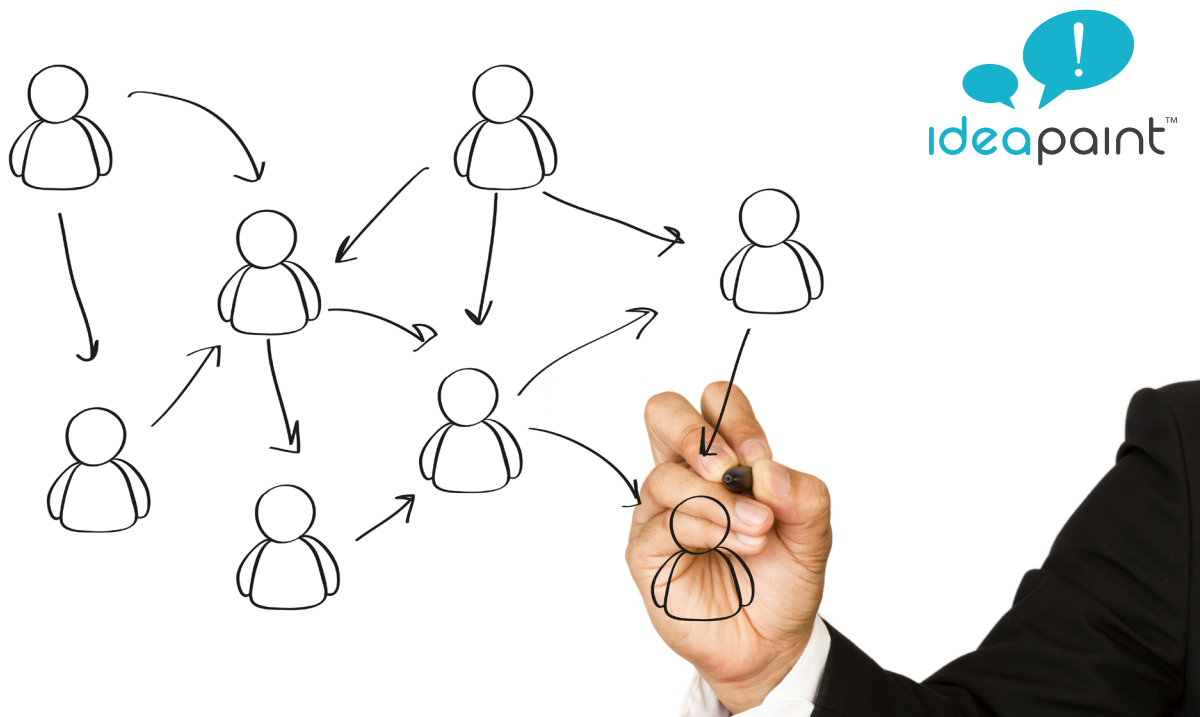


INSTALLATION INSTRUCTIONS - OVER GLASS

1. Clean surface thoroughly
 - If you use solvent acetone or denatured alcohol, use soap and water as a final step
 - Allow to dry thoroughly
2. Tape off the frame and all other areas not intended to be painted with 3M Multipurpose blue painter's tape
3. Prime surface with FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, PPG Seal Grip – for a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - Allow primer to dry as directed by instructions on primer can - if time allows, wait 24 hours before applying IdeaPaint
4. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
5. Dry wipe the surface with a clean cloth to remove dust from sanding
6. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS

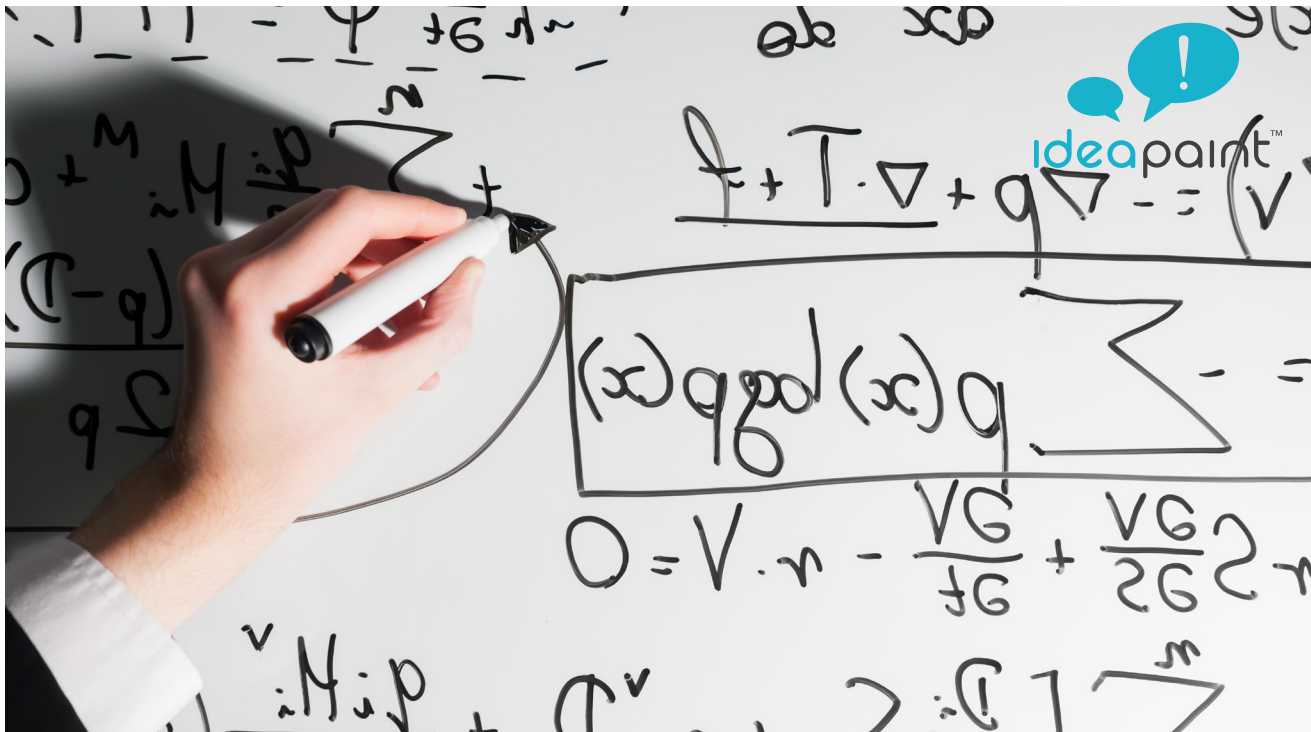


INSTALLATION INSTRUCTIONS - LAMINATE

1. Clean surface thoroughly
 - If you use solvent acetone or denatured alcohol, use soap and water as a final step
 - Allow to dry thoroughly
2. Tape off the frame and all other areas not intended to be painted with 3M Multipurpose blue painter's tape
3. Prime surface with FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, PPG Seal Grip – for a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - If the laminate is dark, apply 2 coats of primer to hide the color
 - Wait 24 hours before applying IdeaPaint
4. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
5. Dry wipe the surface with a clean cloth to remove dust from sanding
6. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

*There are many types of laminate; be sure to test the adhesion of any primer you choose. Email us with any questions at install@ideapaint.com.

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS

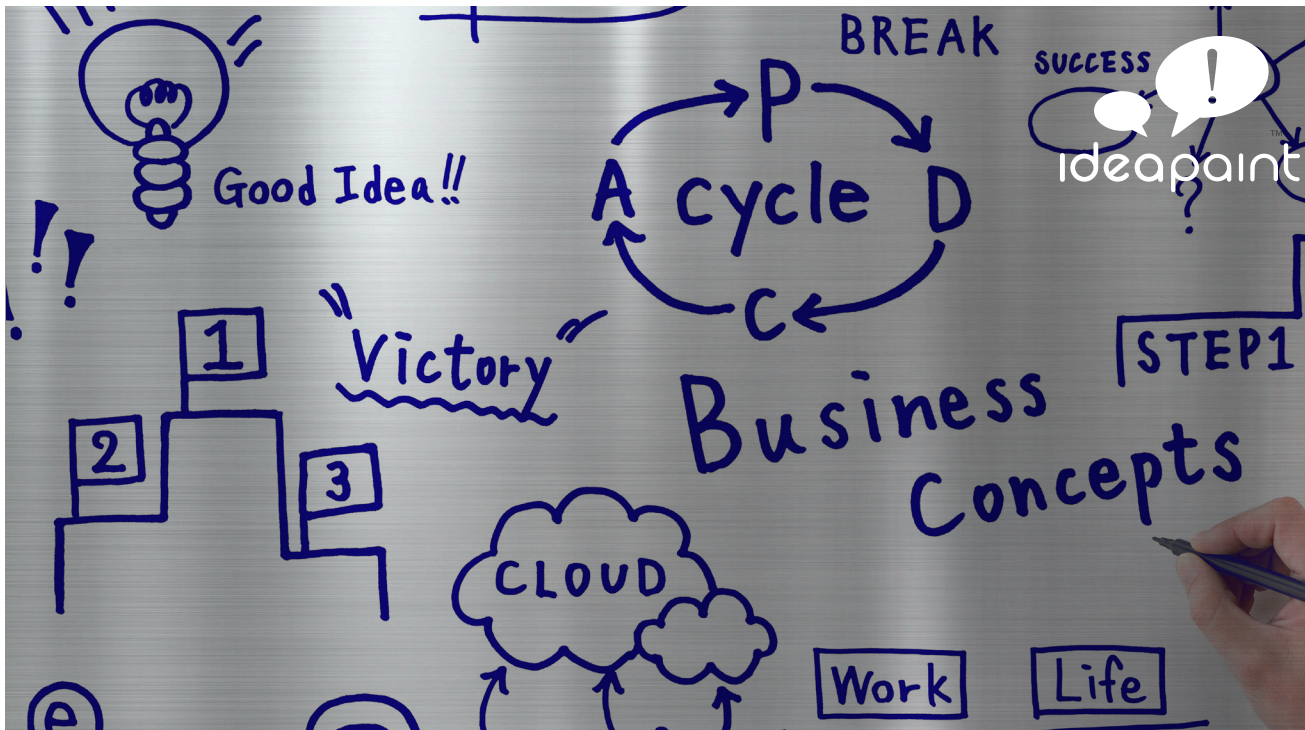


INSTALLATION INSTRUCTIONS - OVER GALVANIZED STEEL

1. Clean surface thoroughly
 - Use vinegar to neutralize the surface. Make sure the surface is free from vinegar by an acetone or denatured alcohol rinse.
 - If the surface is too smooth abrasion might be required, call us for specifics if unknown.
2. Tape off the frame and all other areas not intended to be painted with 3M Multipurpose blue painter's tape
3. Prime the surface with FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, PPG Seal Grip. For a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - llow primer to dry according to manufacturer's instructions - if time allows, wait 24 hours before applying IdeaPaint
4. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
5. Dry wipe the surface with a clean cloth to remove dust from sanding
6. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS

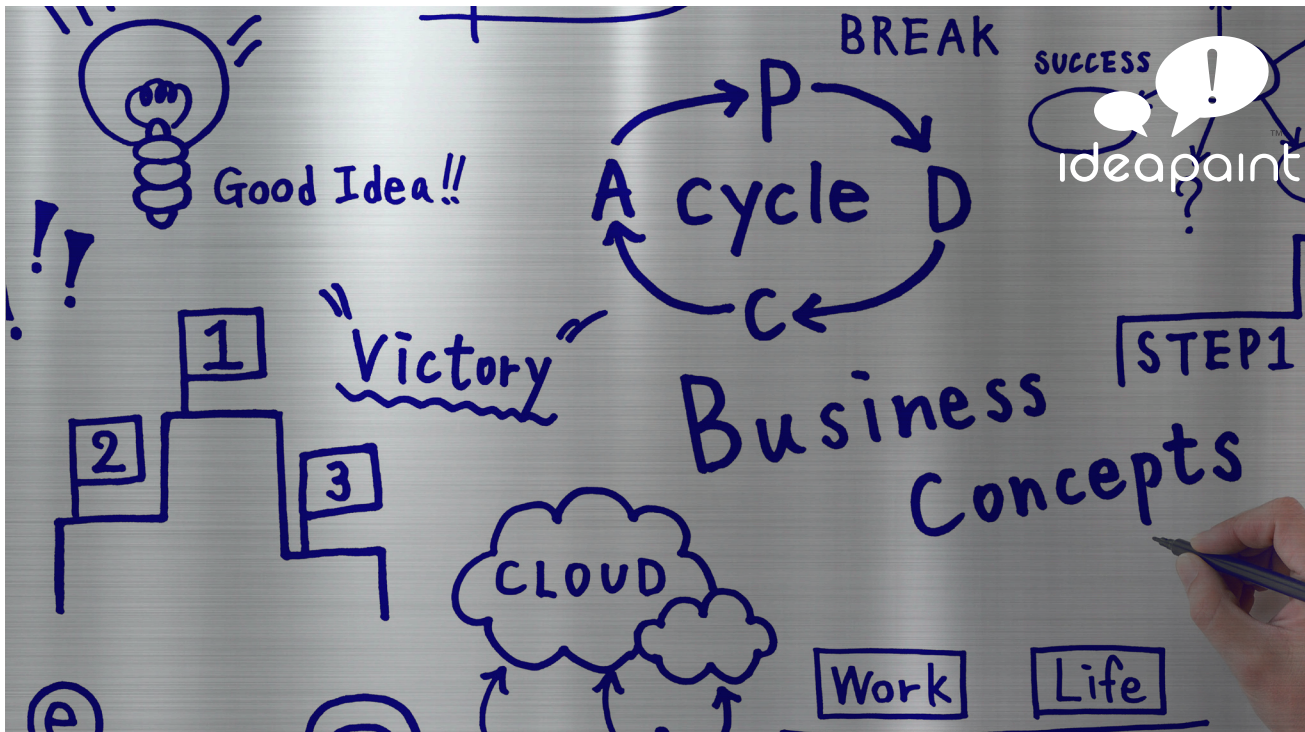


INSTALLATION INSTRUCTIONS - OVER UNGALVANIZED STEEL

1. Clean surface thoroughly
 - Use vinegar to neutralize the surface. Make sure the surface is free from vinegar by an acetone or denatured alcohol rinse.
 - If the surface is too smooth abrasion might be required, call us for specifics if unknown.
2. Tape off the frame and all other areas not intended to be painted with 3M Multipurpose blue painter's tape
3. A flash rust inhibiting primer may be required before application of FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, PPG Seal Grip. For a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - Allow primer to dry according to 24 hours after the final coat has been applied
4. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
5. Dry wipe the surface with a clean cloth to remove dust from sanding
6. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.

IDEAPAIN SUBSTRATE SPECIFIC INSTALLATION INSTRUCTIONS

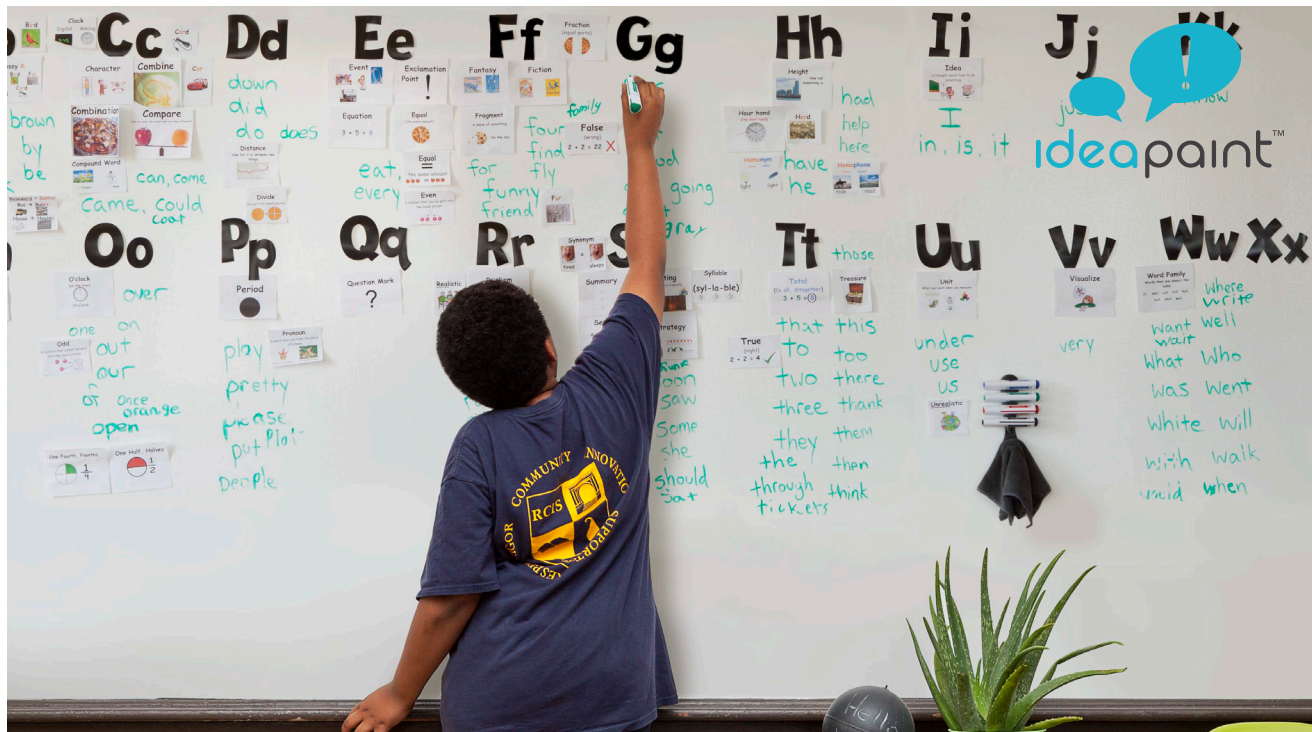

INSTALLATION INSTRUCTIONS - OVER WHITEBOARD

1. Tape off the frame and all other areas not intended to be painted with 3M Multipurpose blue painter's tape
2. Scuff wall covering surface
 - Use medium grit sandpaper (100-120 grit). For smoother profile, use of 220 grit or higher is recommended.
3. Dry wipe the surface with a clean cloth to remove dust from sanding. The surface may also be vacuumed
 - If you use solvent acetone or denatured alcohol use soap and water as a final step
4. Prime surface with FixAll GripCoat Bonding Primer, F50700; Sherwin-Williams Extreme Bond, or PPG Seal Grip – for a complete list of preferred primers, visit <https://ideapaint.com/pages/installation-and-specs>
 - Use 1/4" or 3/8" soft woven or microfiber roller for smoothest finish
 - Prime board with 2-3 coats, until color is hidden
 - Wait 24 hours before applying IdeaPaint
5. Lightly sand smooth the primed surface
 - Use fine grit sandpaper (220 grit)
6. Dry wipe the surface with a clean cloth to remove dust from sanding
7. Apply IdeaPaint according to installation instructions included in each kit, or found at <https://ideapaint.com/pages/installation-and-specs>

EMAIL US AT INSTALL@IDEAPAIN.COM WITH ANY QUESTIONS.