

Adventure Starts Here.

ADIRONDACK COUNTER GLIDER


SEAHAWK
DESIGNS

EST. 2005

! NOTICE

- Do not overtighten hardware.
- Do not exceed the weight capacity of this item.
- Only use this item for what it is intended for, improper use will void any warranty.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are firmly secured every 90 days.
- Keep this furniture clear of all uncontrolled open flames or flammable/combustible materials.
Exposure to fire, high heat, or embers will permanently damage the material.
- To avoid stripping and cracking of the material, DO NOT use power tools for assembly.
- Always prioritize caution and safety throughout the assembly process.


TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



**CHECK PARTS
& HARDWARE
FIRST***



**SUGGESTED
2 PERSON
ASSEMBLY**



**ESTIMATED
ASSEMBLY
TIME: 30 MIN**

*For missing parts or hardware, please email cs@seahawkdesigns.com.

1

SCREW
M6 x 40mm



3 PCS

2

SCREW
M6 x 70mm



12 PCS

3

SCREW
M6 x 80mm



12 PCS

4

SCREW
M6 x 90mm



14 PCS

5


BOLT
M6 x 30mm



8 PCS

6

BOLT
M6 x 60mm



10 PCS

7

M6-NUT



10 PCS

8

M6-WASHER



18 PCS

9


CAP NUT



8 PCS

10

GLIDER BRACKET



4 PCS

11


SCREW HOLE PLUG



42 PCS

A


CHAIR SEAT



1 PC

B


CHAIR BACKREST

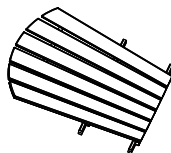

1 PC

C


LEFT FRONT LEG

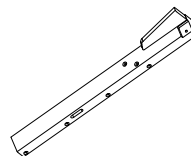

1 PC

D


RIGHT FRONT LEG

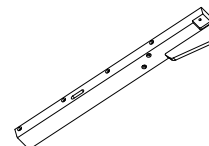

1 PC

E


LEFT REAR LEG

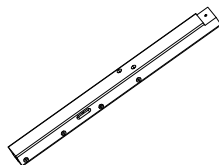

1 PC

F


RIGHT REAR LEG

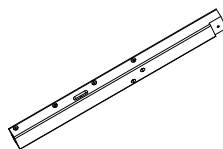

1 PC

G


LEFT ARMREST



1 PC

H


RIGHT ARMREST



1 PC

I

CUP HOLDER



1 PC

J

FOOT BASE



2 PCS

K


SIDE RAIL



2 PCS

L


GLIDER LEG I

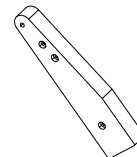

1 PC

M


GLIDER LEG II

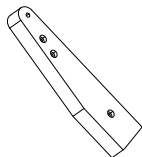

1 PC

N


GLIDER LEG III

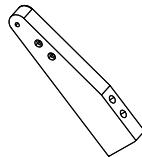

1 PC

O


GLIDER LEG IV

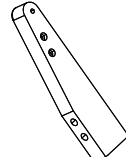

1 PC

P

RAIL I



2 PCS

Q

RAIL II



1 PC

R


FOOTREST



1 PC

S


END BLOCK I



1 PC

T


END BLOCK II



1 PC

U

GLIDER FOOT BASE




2 PCS

PRODUCT ASSEMBLY - OVERALL VIEW

REF#: OP5017


Please refer back to this image during the assembly process for part placement.

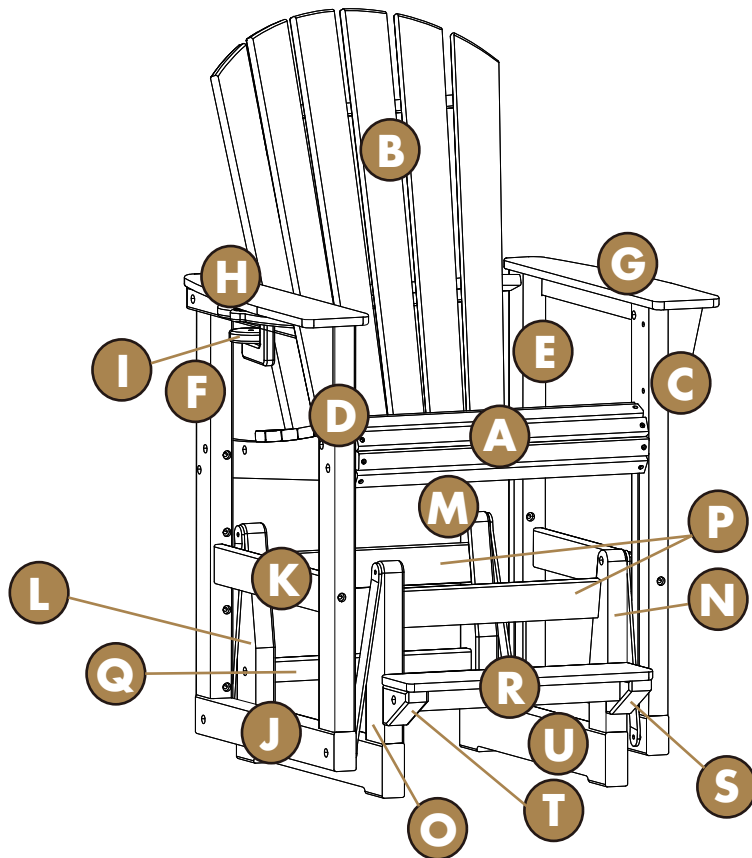

1

Step 1: Assemble the Side Rail and the Chair Legs


- Attach **Part K (Side Rail)** to **Part D (Right Front Leg)** and **Part F (Right Rear Leg)** using **2 - M6 Screw (#3)** (see image below).
- Do the same to attach **Part K (Side Rail)** to **Part C (Left Front Leg)** and **Part E (Left Rear Leg)** (see image below).
- Do not fully tighten the bolts yet. Tighten them to approximately 70% to allow for adjustments during final assembly.

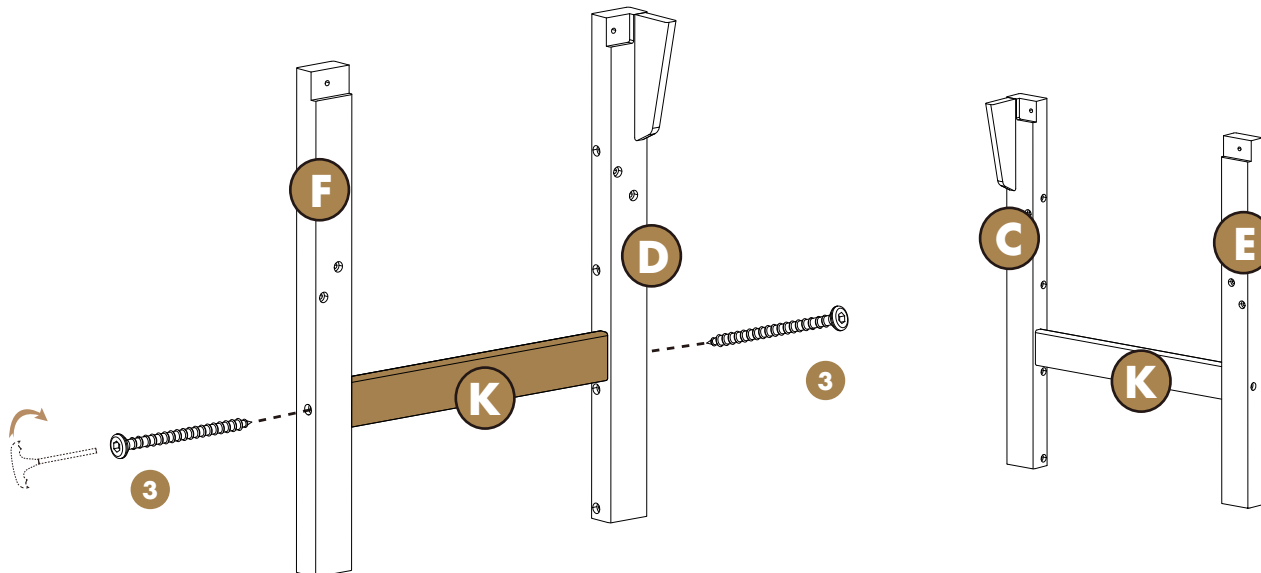

2

Step 2: Attach the Foot Base to the Chair Legs


- Attach **Part J (Foot Base)** to the **Assembled Right Legs (Part D, Part K and Part F)** using **4 - sets** of the **M6 Screw (#3)** (see image below).
- Do the same to attach the other **Part J (Foot Base)** to the **Assembled Left Legs (Part C, Part K and Part E)** (see image below).

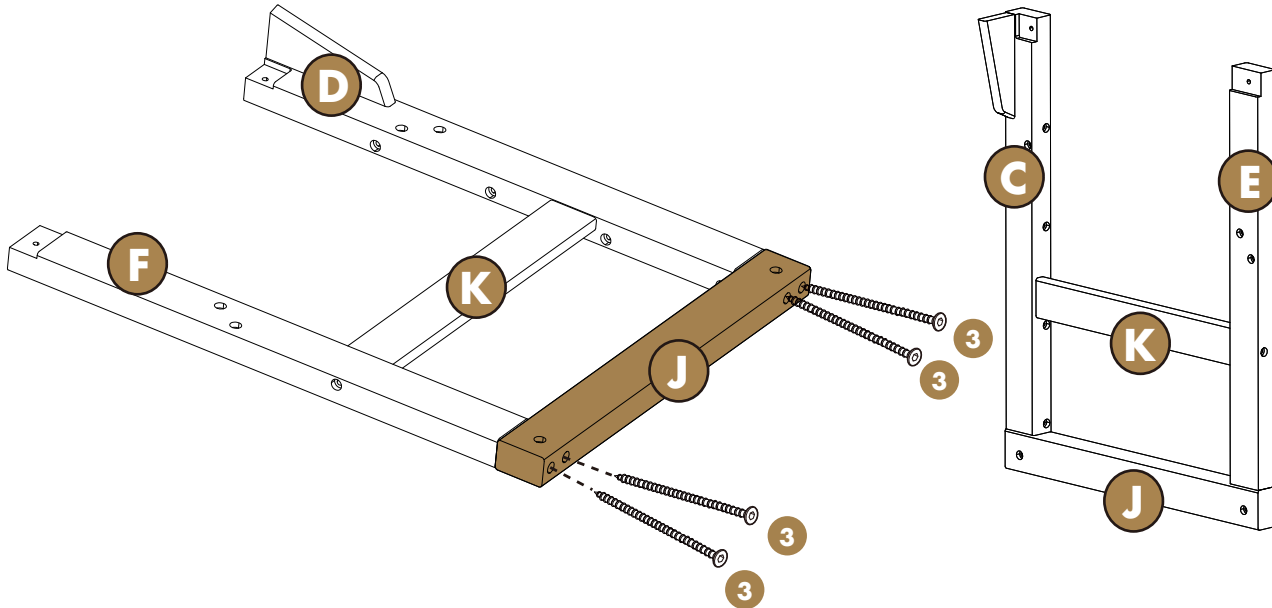

3

Step 3: Attach the Right Legs to the Chair Seat


- Attach the **Assembled Right Legs (Part D, Part K, Part J and Part F)** to **Part A (Chair Seat)** using **4 - sets** of the **M6 Screw (#6)**, **M6 Washer (#8)** and **M6 Nut (#7)** (see image below).

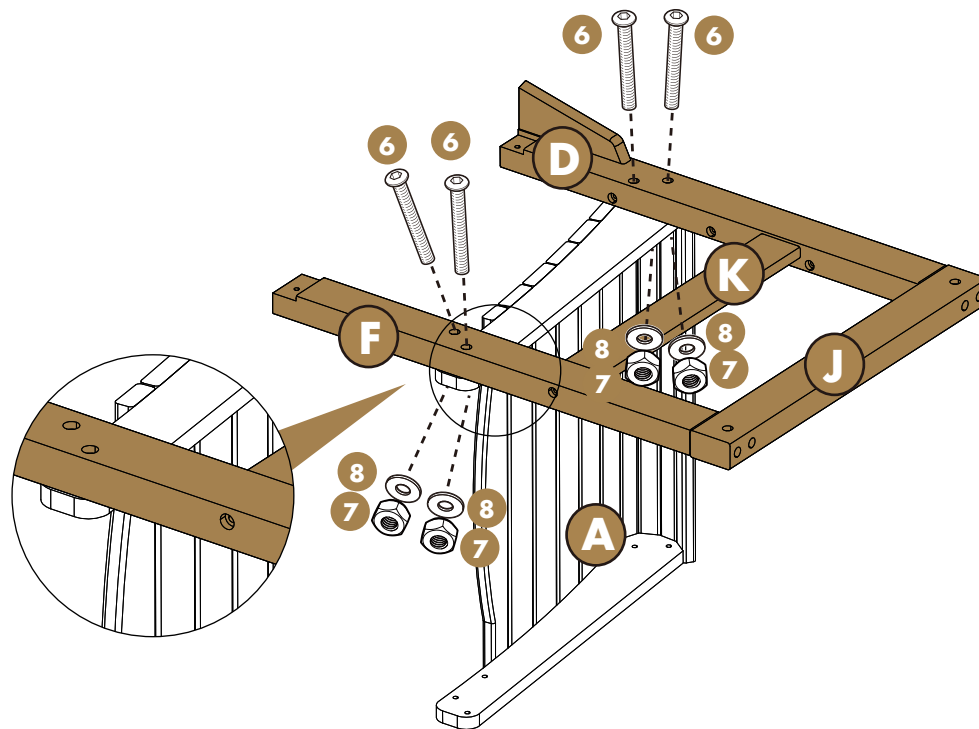

4

Step 4: Attach the Left Legs to the Chair Seat


- Attach the **Assembled Right Legs (Part C, Part J, Part K and Part E)** to **Part A (Chair Seat)** using **4 - sets** of the **M6 Screw (#6)**, **M6 Washer (#8)** and **M6 Nut (#7)** (see image below).

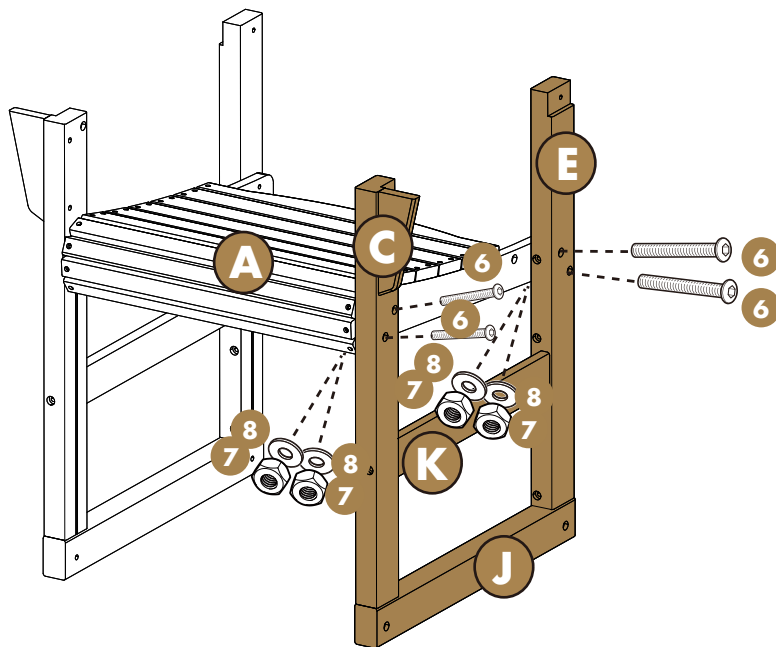

5

Step 5: Attach the Left Armrest to the Chair


- Attach **Part G (Left Armrest)** to **Part C (Left Front Leg)** and **Part E (Left Rear Leg)**. This requires 1 - set of the **M6 Bolt (#6)**, **M6 Washer (#8)**, and **M6 Nut (#7)** (see image below).

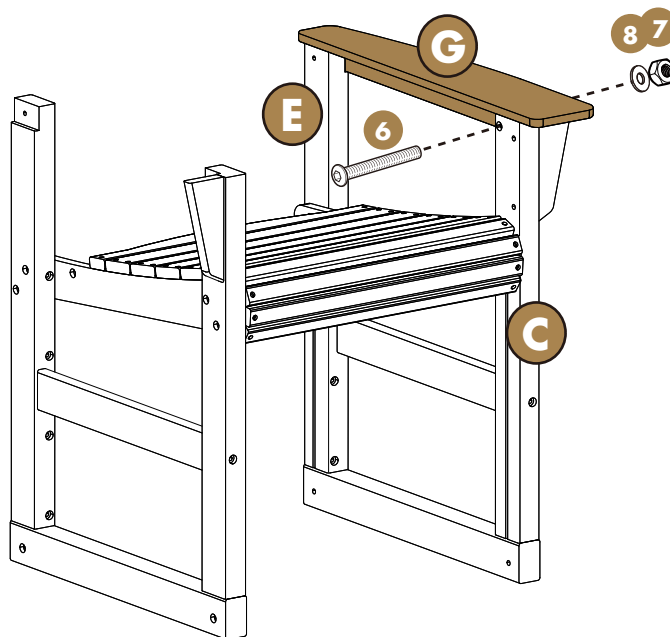

6

Step 6: Attach the Cup Holder to the Armrest, and Armrest to the Chair


- Attach **Part I (Cup Holder)** to the bracket on **Part H (Right Armrest)** using **1 - M6 Screw (#1)** (see image below).
- Next, secure the combined **Part H (Right Armrest with Cup Holder)** unit to the right chair legs (**Part F and Part D**). This requires **1 - set of the M6 Bolt (#6), M6 Washer (#8), and M6 Nut (#7)** (see image below).

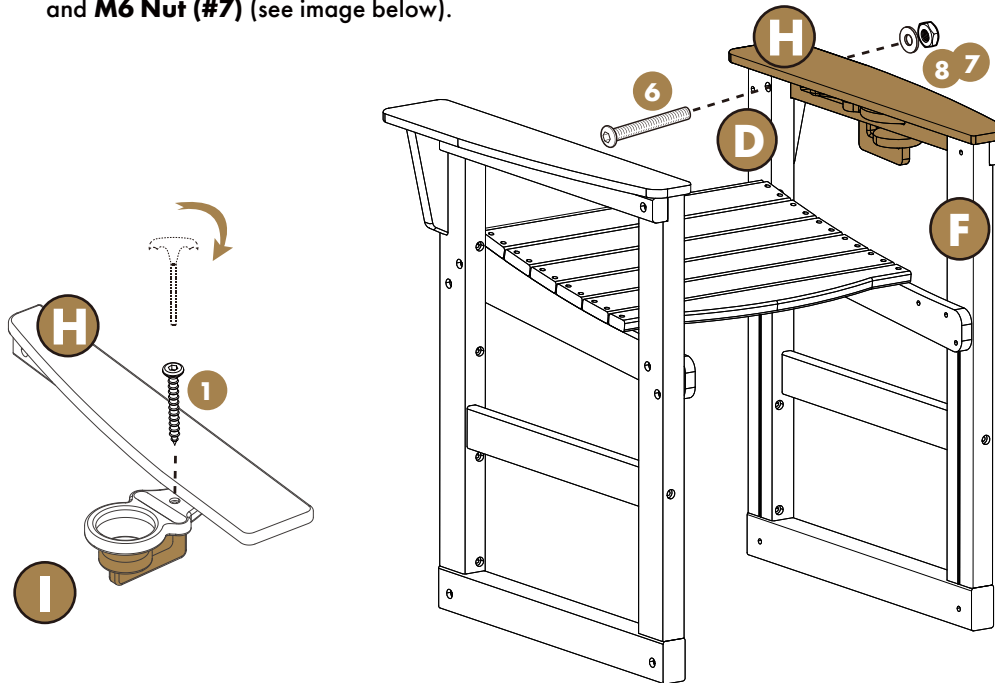

7

Step 7: Attach the Backrest to the Assembled Frame


- Attach **Part B (Chair Backrest)** to the assembled frame. Use **2 - M6 Screw (#4)** and **2 - M6 Screw (#1)** to secure it (see image below).

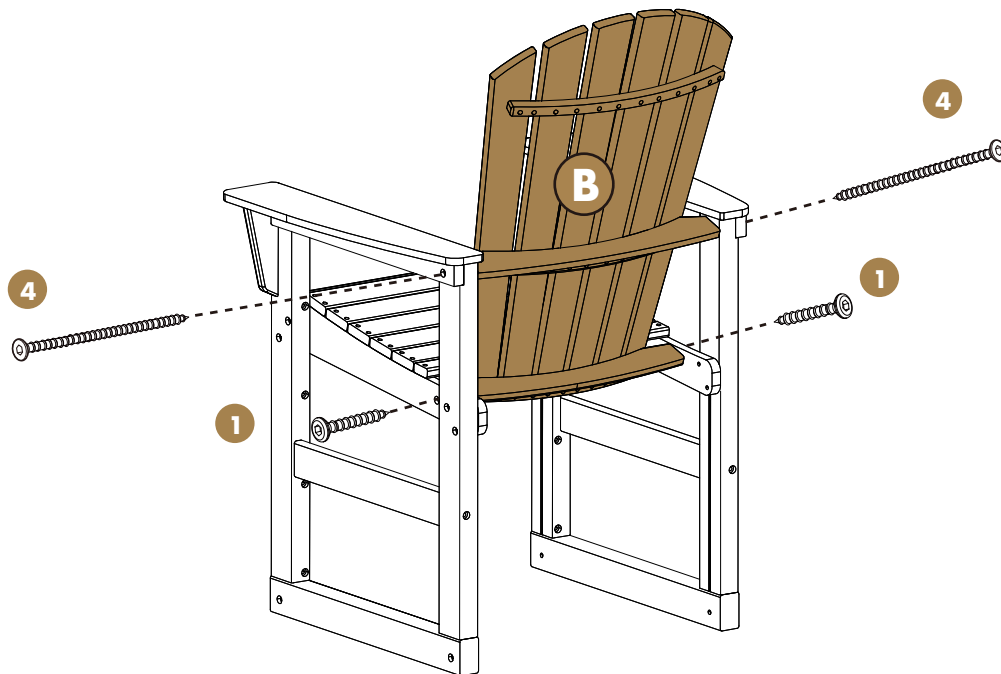

8

Step 8: Attach the End Block to the Footrest



- Attach **Part S and T (2 - End Block)** to **Part R (Footrest)** using **2 - M6 Screw (#2)** (see image below).

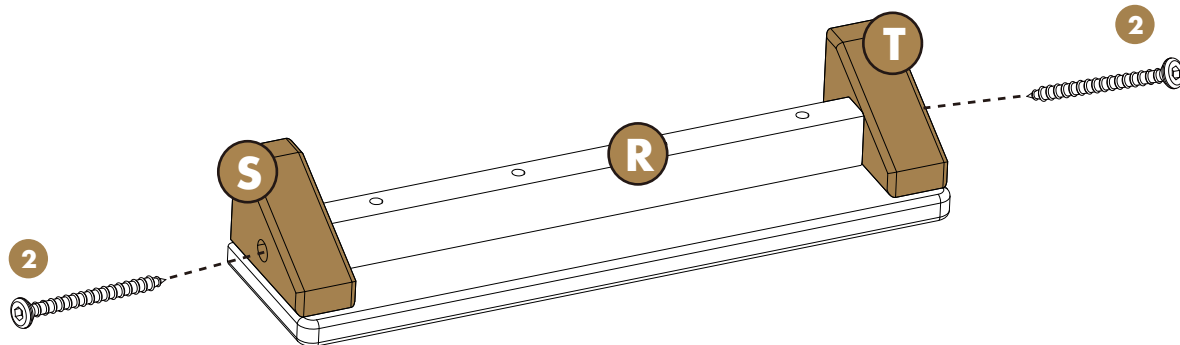

9

Step 9: Attach the Glider Foot Base to the Glider Legs


- Attach **Part U (Glider Foot Base)** to **Part M** and **Part N (2 - Glider Legs)** using **4 - M6 Screw (#4)** (see image below).
- Do the same to assemble another set of the **Glider Legs (Part L, Part U and Part O)**.

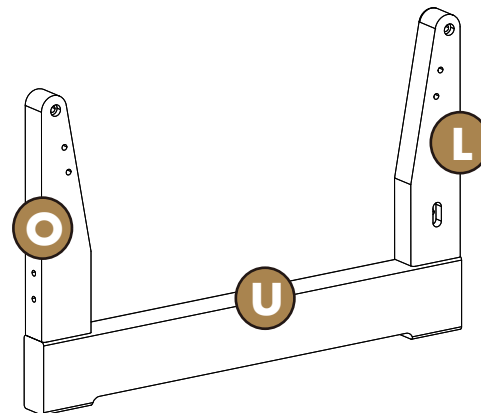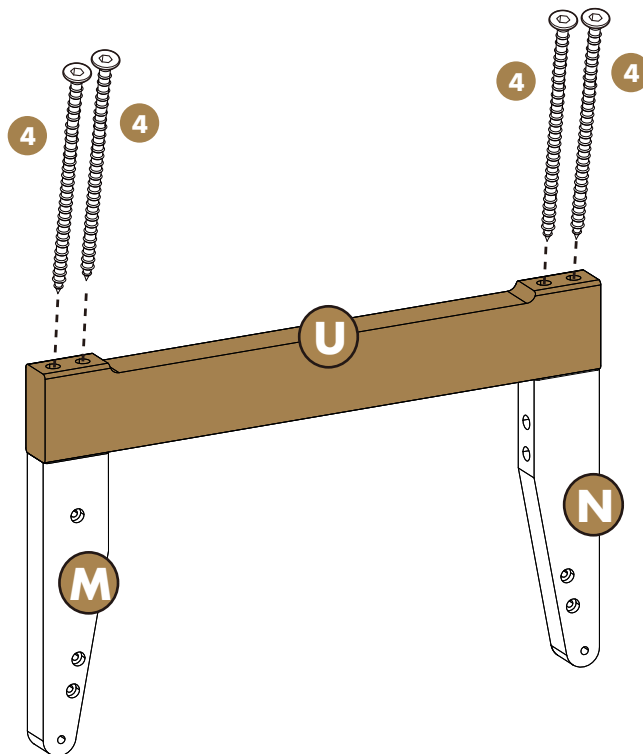

10

Step 10: Attach the Rails to Assemble the Glider Base


- Attach **Part Q (Rail II)** and **2 - Part P (Rail I)** to the **Assembled Glider Legs (Part L, Part M, Part N and Part O)**.
Use **10 - M6 Screw (#2)** to secure them (see image below).

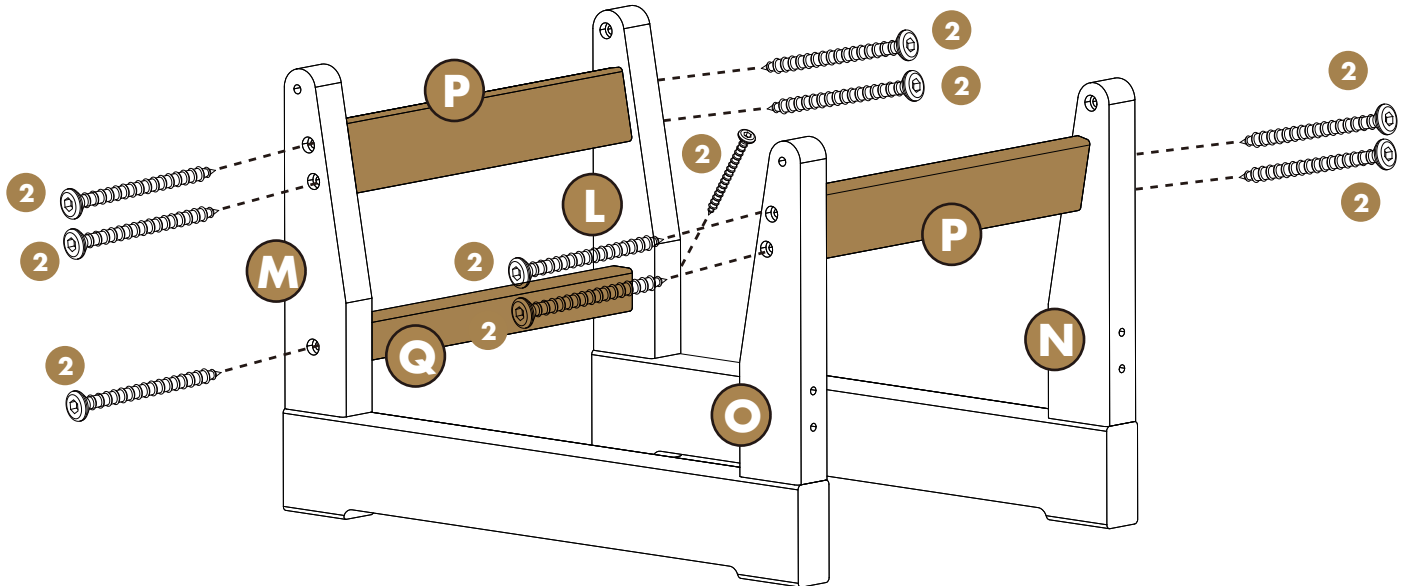

11

Step 11: Attach the Footrest to the Assembled Glider Base


- Attach **Part R (Footrest)** to the **Assembled Glider Legs (Part N and Part O)** using **4 - M6 Screw (#4)** to secure it (see image below).

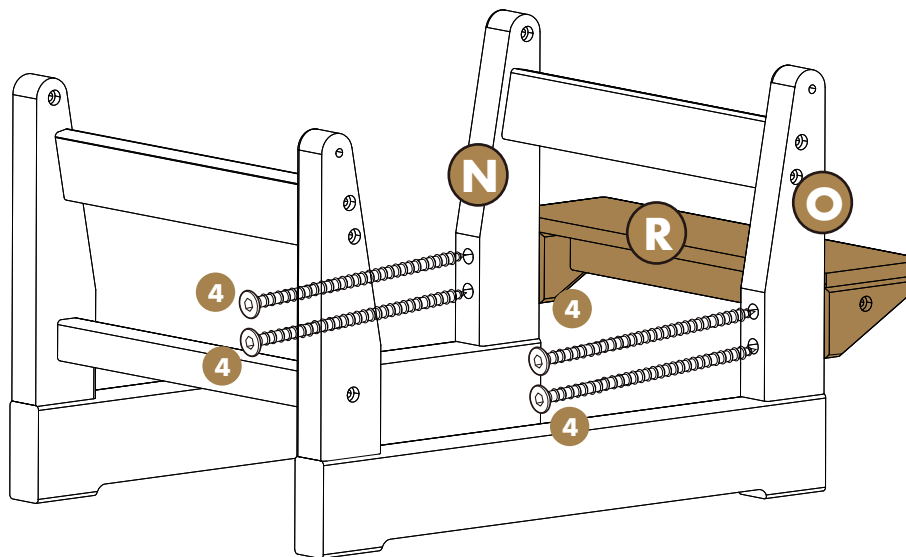

12

Step 12: Attach the Glider Bracket to the Assembled Glider Base


- Attach 4 - **Glider Bracket (#10)** to the **Assembled Glider Base**. This requires 4 - sets of the **M6 Bolt (#5)**, **M6 Washer (#8)** and **M6 Cap Nut (#9)** to secure them (see image below).

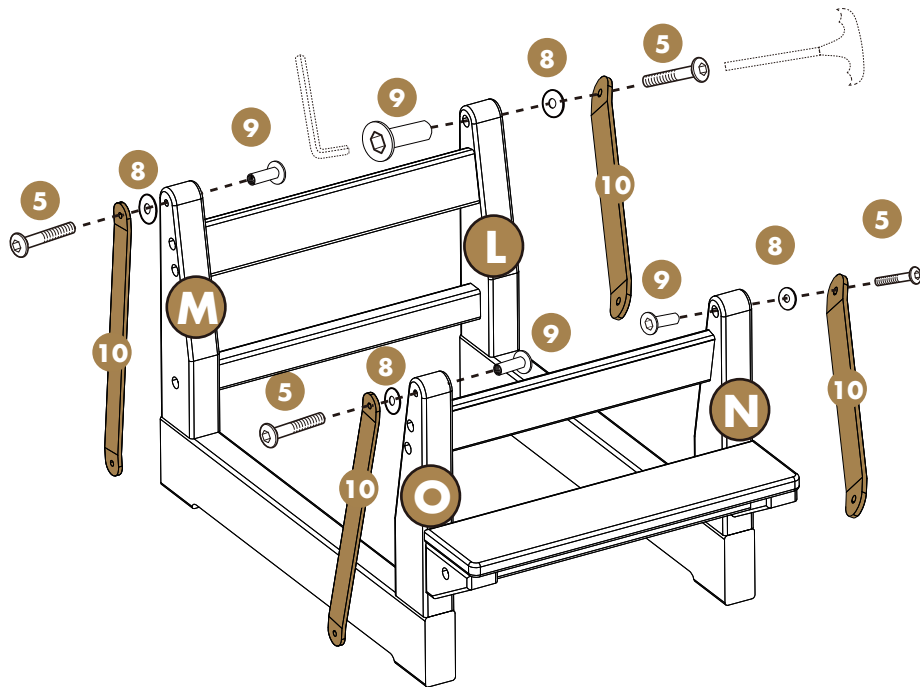

13

Step 13: Attach the Chair to the Assembled Glider Base


- Lift the Chair legs a little and attach **4 - Glider Bracket (#10)** to the **2 - Part J (Foot Base)**. This requires **4 - sets** of the **M6 Bolt (#5)**, **M6 Washer (#8)** and **M6 Cap Nut (#9)** to secure them (see image below).

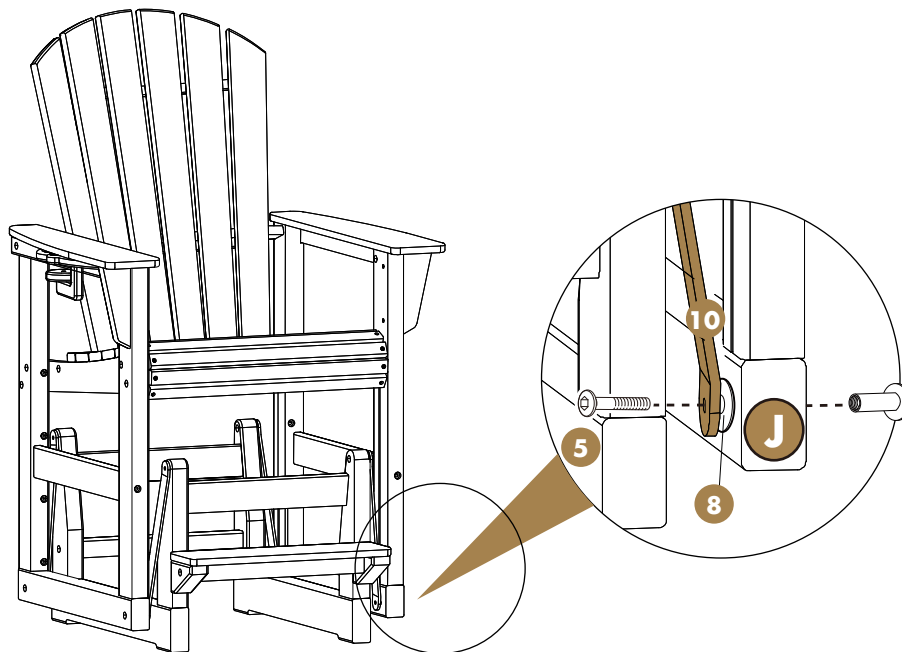

14

Step 14: Final Tightening and Stability Check

- Tighten all previously installed screws, bolts, and nuts. Check every connection to ensure the glider is steady and stable.

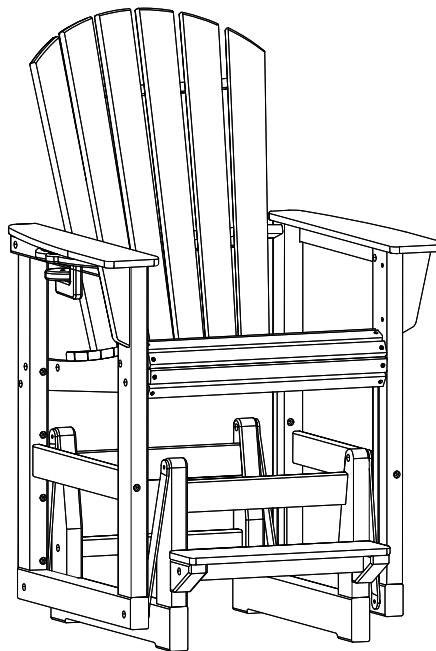


15

Step 15: Apply Screw Hole Plugs

- Cover all exposed screw holes using **42 - Screw Hole Plug (#11)**. Insert all plugs into the exposed screw holes. Gently tap each plug into place using a rubber mallet to prevent damage. Ensure each plug is fully seated and flush with the chair surface (see image below).

ATTENTION: Do not use a metal hammer as it will damage the poly lumber.

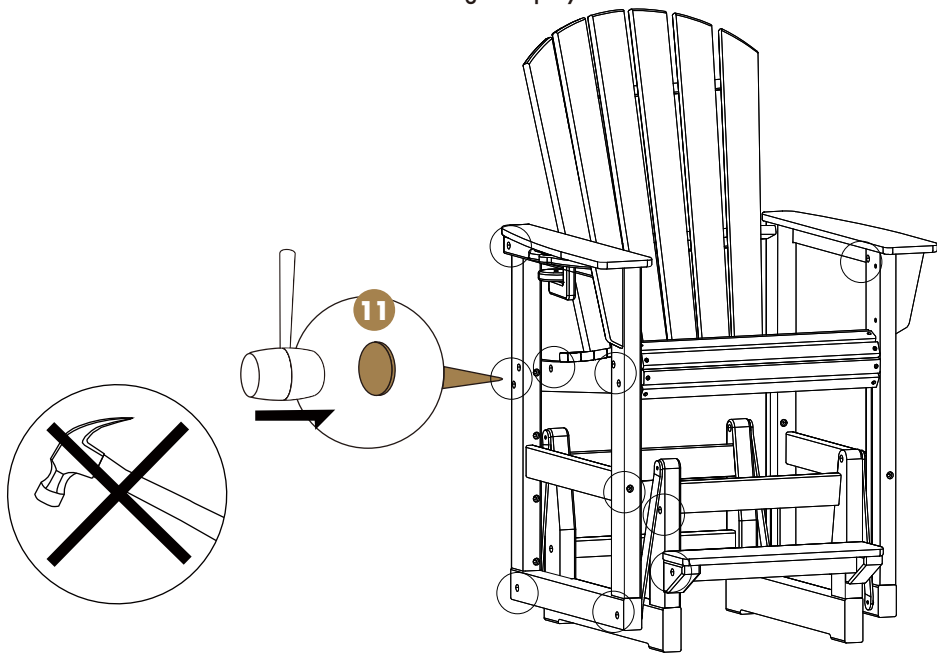

- **REGULAR CLEAN:** Mix **warm water** and **mild soap**. Use **a soft bristle brush** to gently scrub the surface and remove any dirt or stains.
- **QUICK CLEAN:** Simply wipe the furniture down using a damp cloth.

Tip: Cleaning your furniture regularly helps maintain its aesthetic appeal and extends its lifespan.

Enjoy!

Join our community and be the first to see what's new!

Follow us on socials:



Quickly register your outdoor furniture purchase to activate your warranty and enjoy peace of mind with guaranteed product protection:



Have questions or need assistance? Reach out to our dedicated team at **(909) 284-1052** or email us at **cs@seahawkdesigns.com**.