# 88 5001 301 Buffet and Hutch (Natural Finish)

### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





Thai Patent Pending Numbers 0602000973



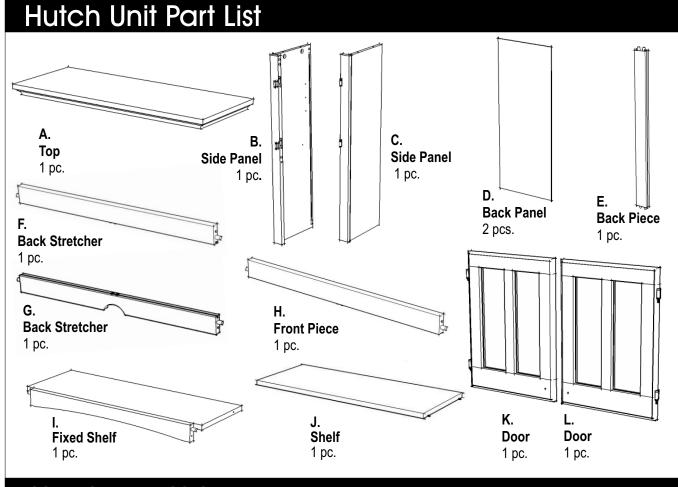





# 88 5001 302 Buffet and Hutch (White Finish)

### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.






Thai Patent Pending Numbers 0602000973



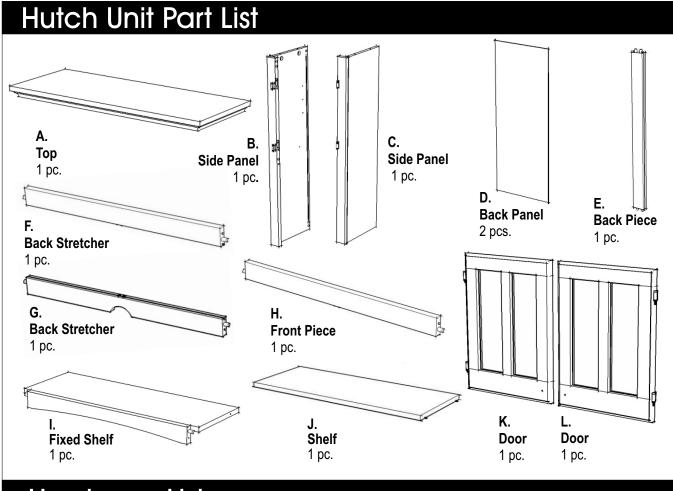

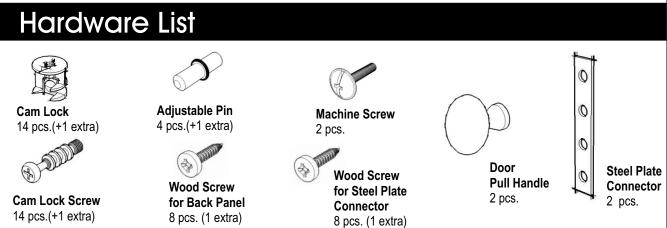


# 88 5001 303 **Buffet and Hutch** (Red Finish)

### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



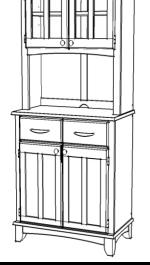

Thai Patent Pending Numbers 0602000973



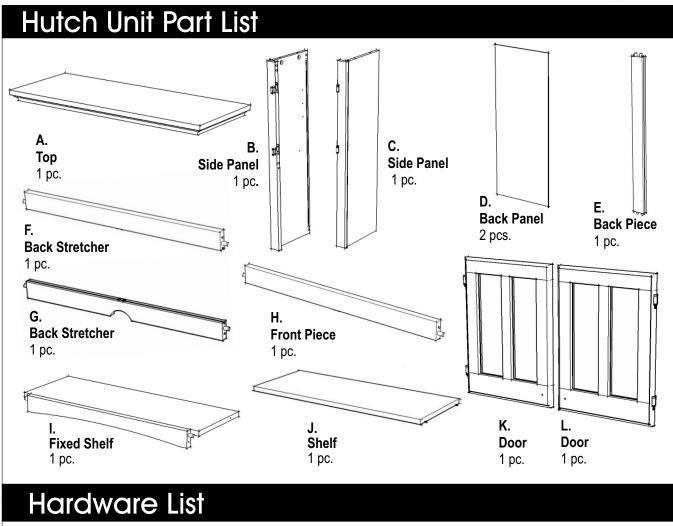



Tools Required For Assembly: Phillips screwdriver

8 pcs. (1 extra)

14 pcs.(+1 extra)

Connector

8 pcs. (1 extra)

# 88 5001 304 **Buffet and Hutch** (Black Finish)

### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





Thai Patent Pending Numbers 0602000973



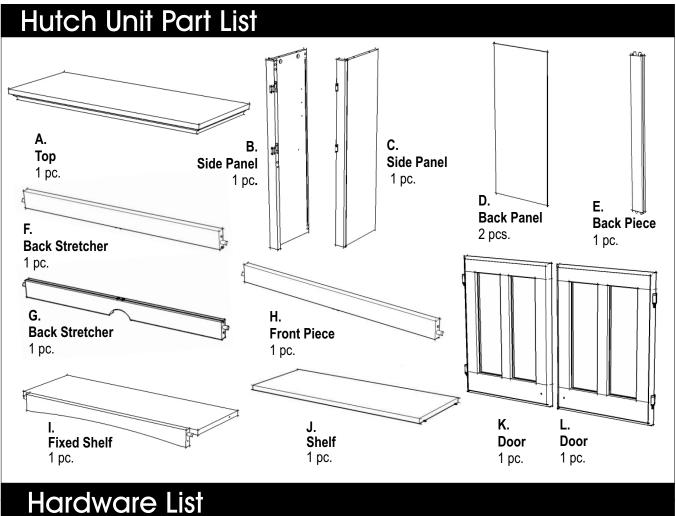



# 88 5001 306 Buffet and Hutch (Cottage Oak)

### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





Thai Patent Pending Numbers 0602000973



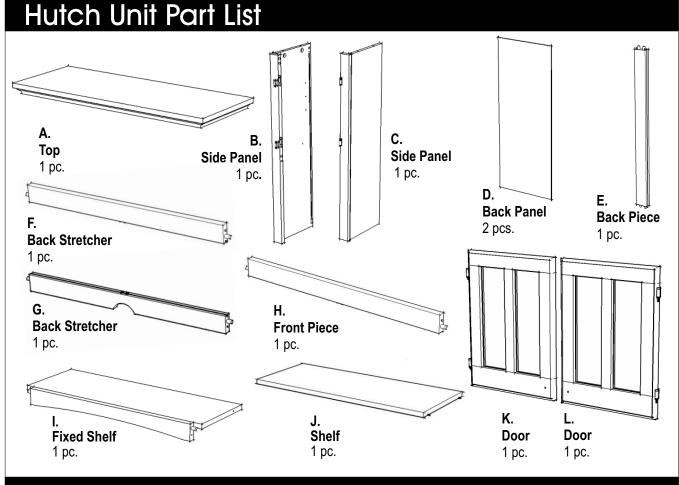





# 88 5001 307 **Buffet and Hutch** (Cherry Finish)

### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





Thai Patent Pending Numbers 0602000973



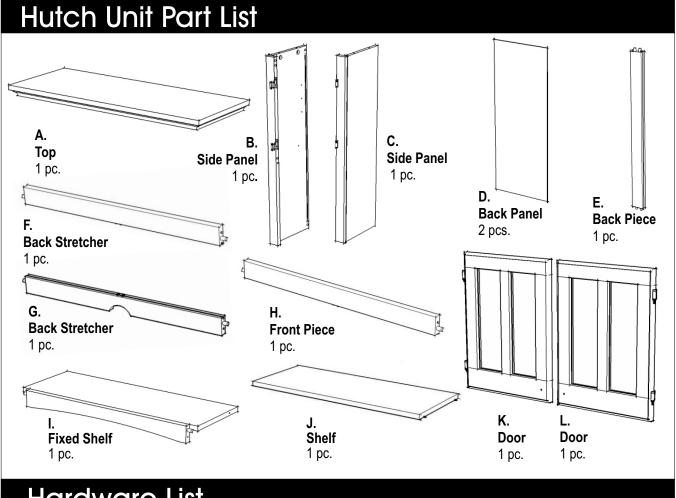





**Cam Lock Screw** 

14 pcs.(+1 extra)



Adjustable Pin 4 pcs.(+1 extra)



Wood Screw for Back Panel 8 pcs. (1 extra)



**Machine Screw** 2 pcs.






**Pull Handle** 2 pcs.



**Steel Plate** Connector 2 pcs.

### Assembly Instructions 2/3

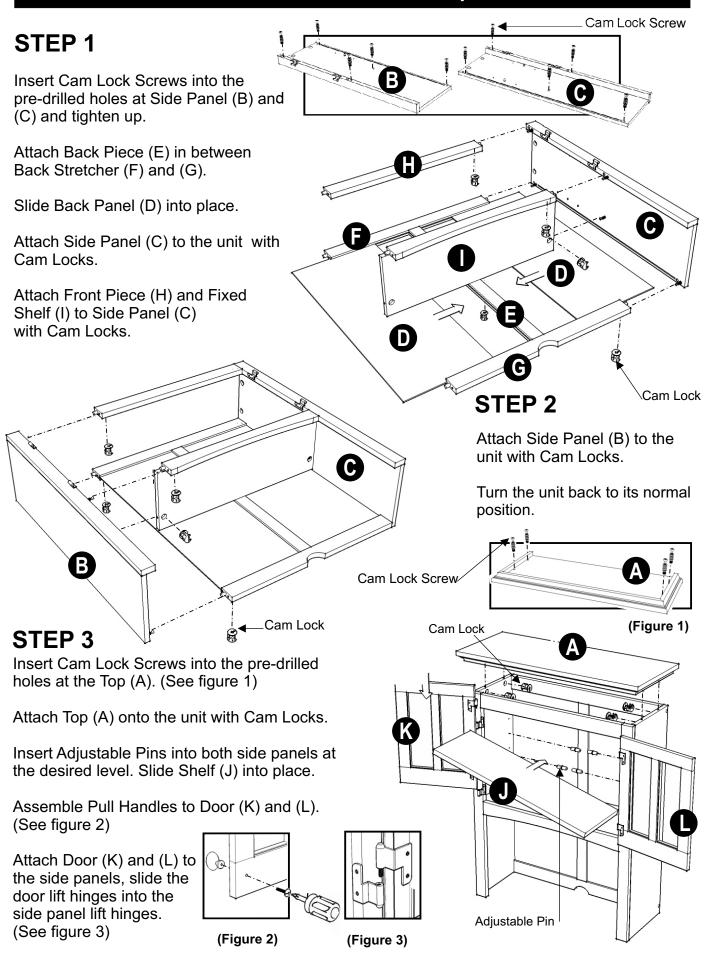

# Assembly Instructions 3/3


### STEP 4


Insert Wood Screws from the back and tighten up.

### STEP 5

Place the Hutch unit onto the Buffet unit.


To hold firmly the Hutch and Buffet, attach Steel Plate Connectors, insert Wood Screws and tighten up. (See figure 4)

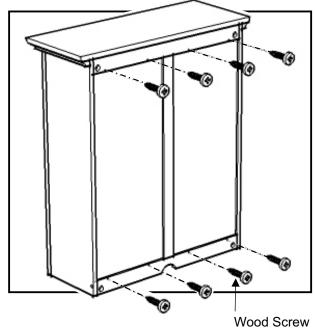

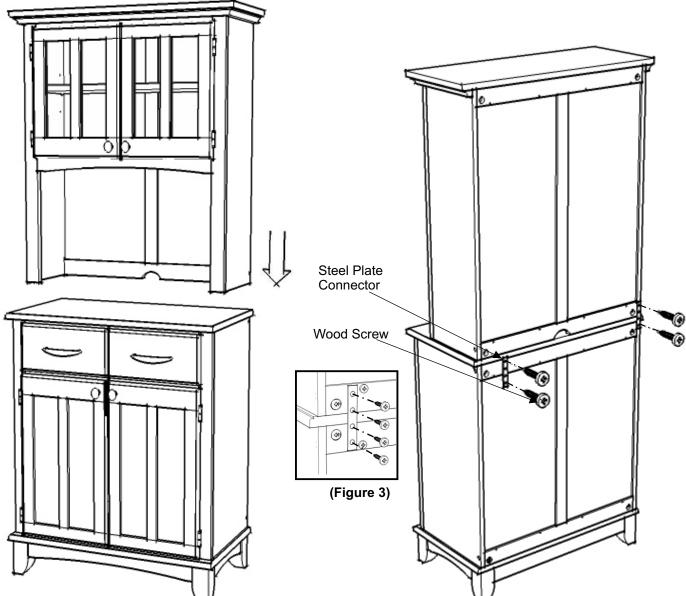

### **Attention!**

For safety reasons, we recommended you strictly follow this additional instructions as to prevent this Buffet & Hutch Unit from tipping over.

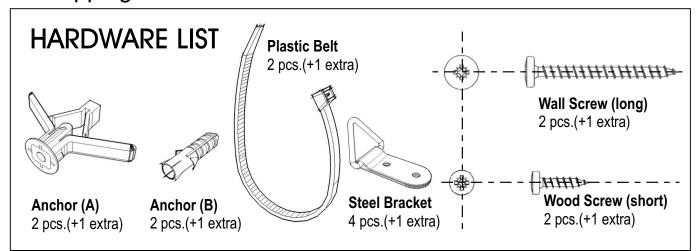

### **Assembly Instructions**

