
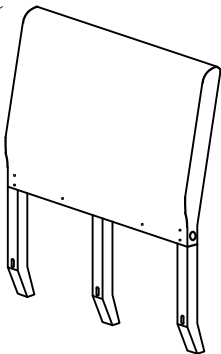


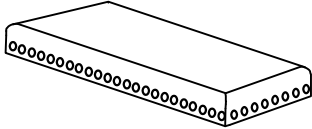
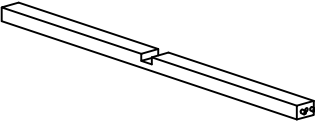
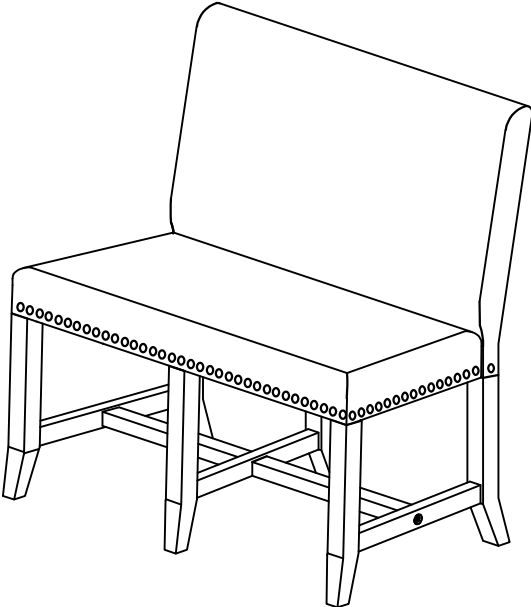






YOSEMITE BANQUETTE CHAIR ASSEMBLY INSTRUCTIONS




A. BACK FRAME 1 PC 	G. LEFT STRETCHER 1 PC 	H. RIGHT STRETCHER 1 PC 
B. SEAT FRAME 1 PC 	I. MIDDLE STRETCHER 1 PC 	
	YOSEMITE BANQUETTE CHAIR ASSEMBLED 	
C. CROSS BAR 1 PC 	D. MIDDLE LEG 1 PC 	
E. LEFT LEG 1 PC 	F. RIGHT LEG 1 PC 	

HARDWARE ENCLOSED IN BOX

1 ALLEN BOLT M6 x 40 MM 02 PCS	2 ALLEN BOLT M6 x 50 MM 06 PCS	3 ALLEN BOLT M6 x 70 MM 04 PCS	4 SPRING WASHER M9/11 12 PCS	5 WASHER M9/22 12 PCS
				
6 SCREW M4 x 30 MM 01 PCS	7 SCREW M4 x 40 MM 08 PCS	8 ALLEN KEY N4 01 PC		
				


TOOL REQUIRED

PHILLIPS HEAD SCREW
DRIVER NOT PROVIDED

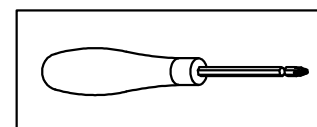


STEP 1:

Insert 3 legs (D,E,F) to seat frame (B). Connect them with bolt (2) spring washer (4) and flat washer (5).

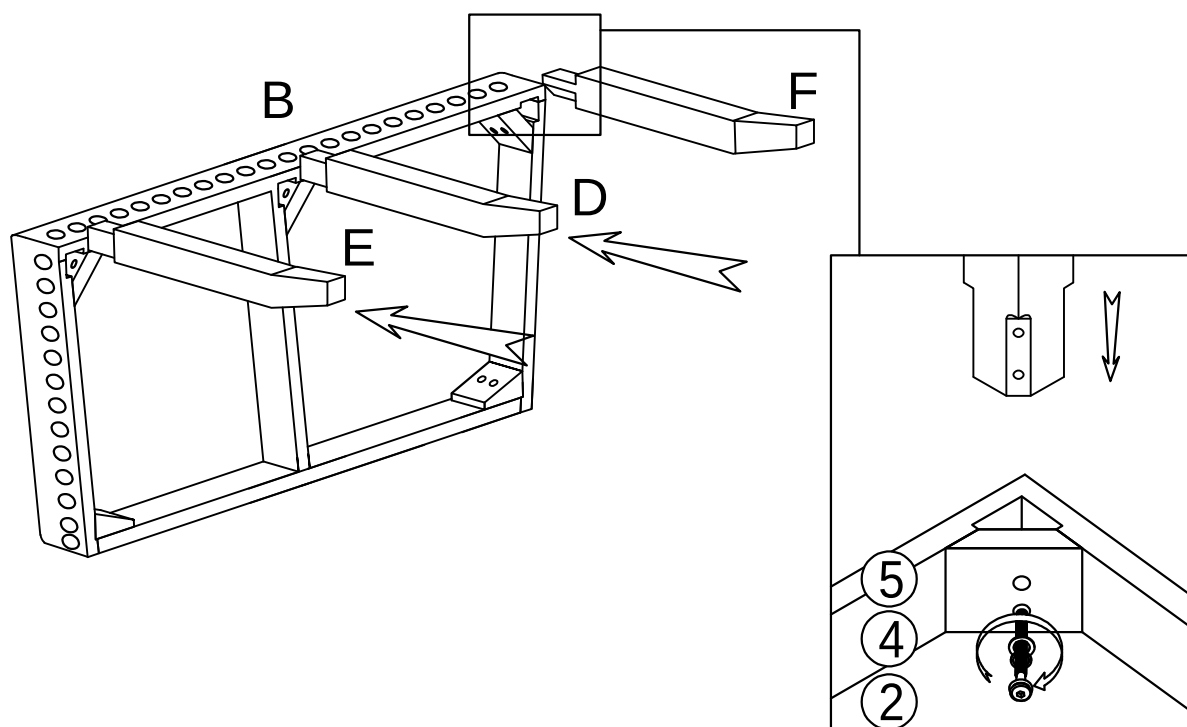


STEP 2:

Attach cross bar (C) to middle stretcher (I) with screw (6).

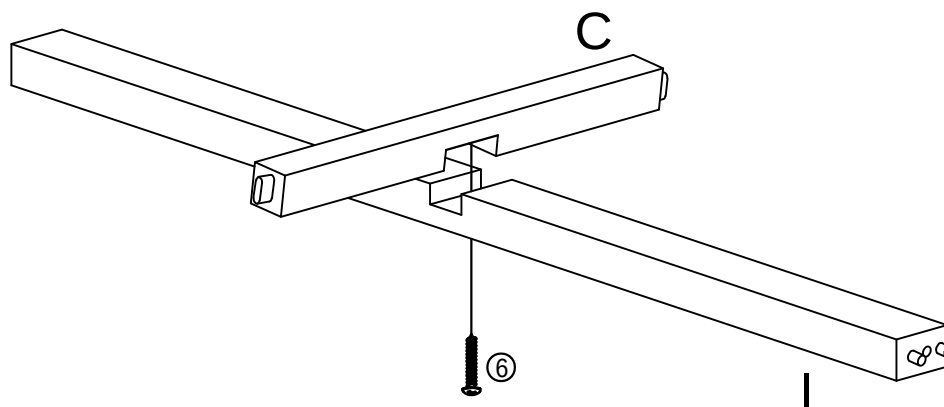


STEP 3:

Connect 2 stretchers (G,H) to middle stretcher (I) with screws (7).

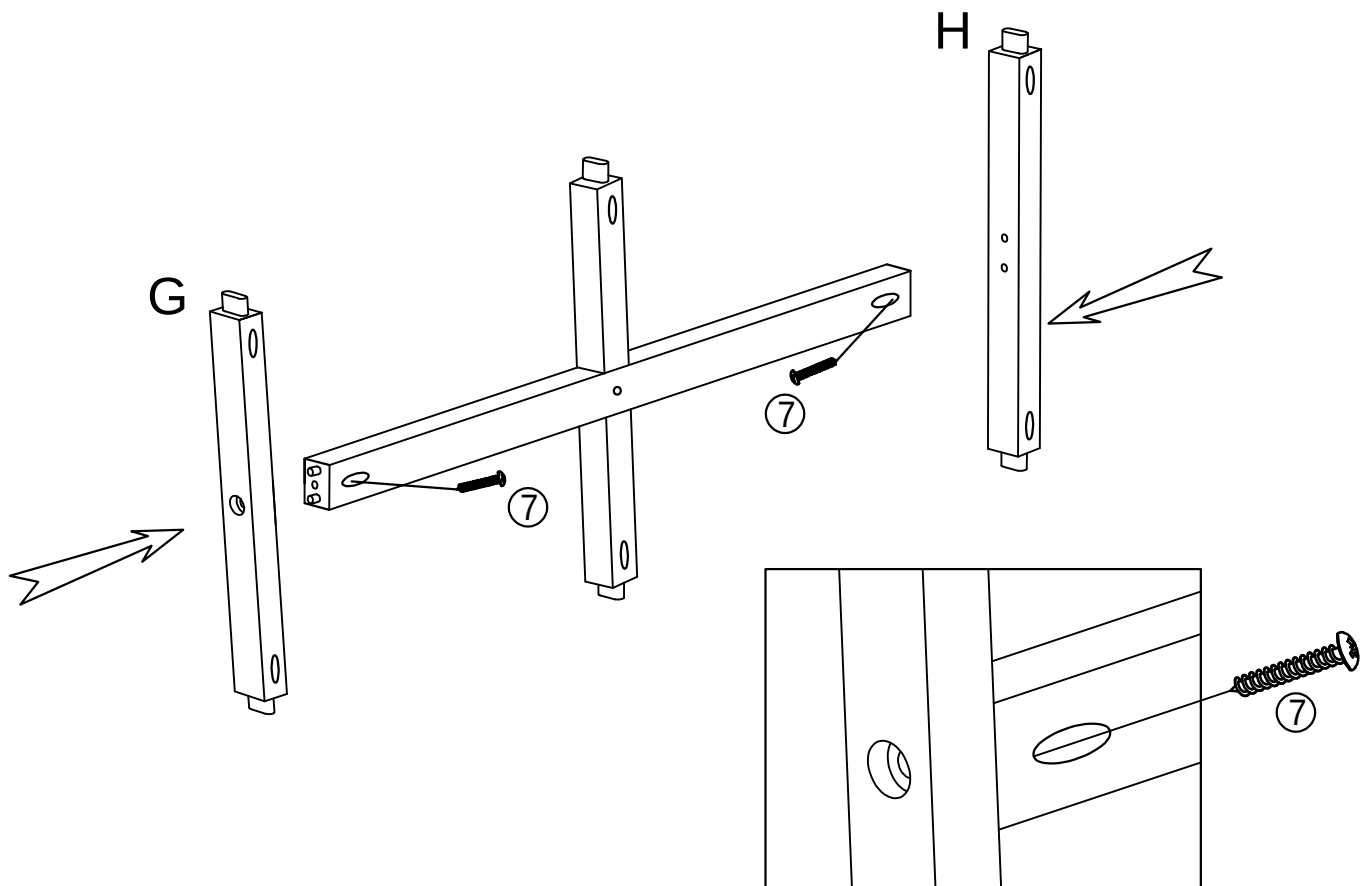


STEP 4:

Attach the stretcher assembly to the back frame .

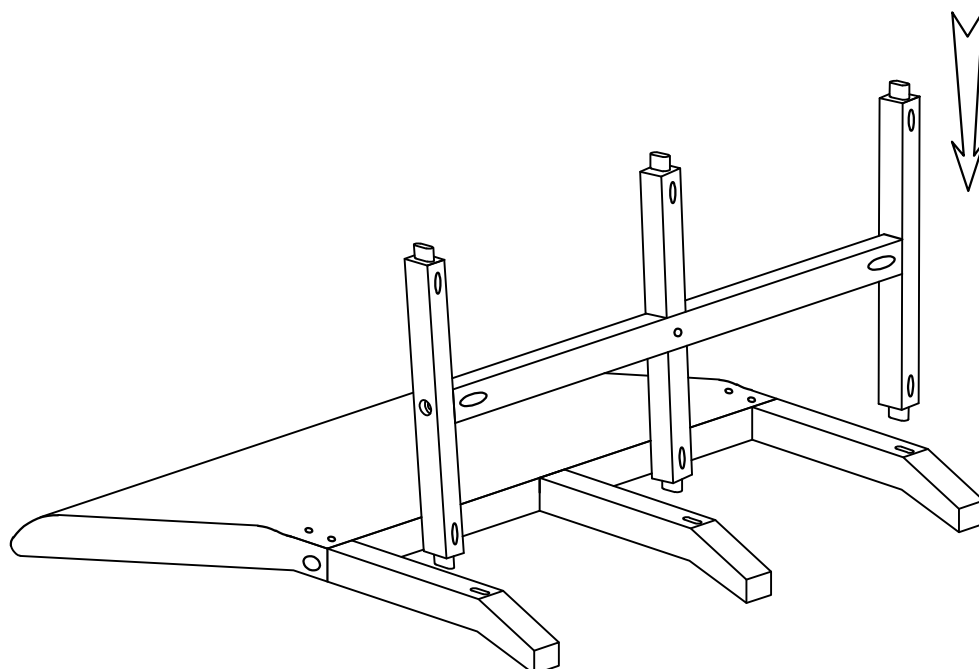

STEP 5:

Connect seat frame to back frame with bolt (1,3), spring washer (4) and flat washer (5).

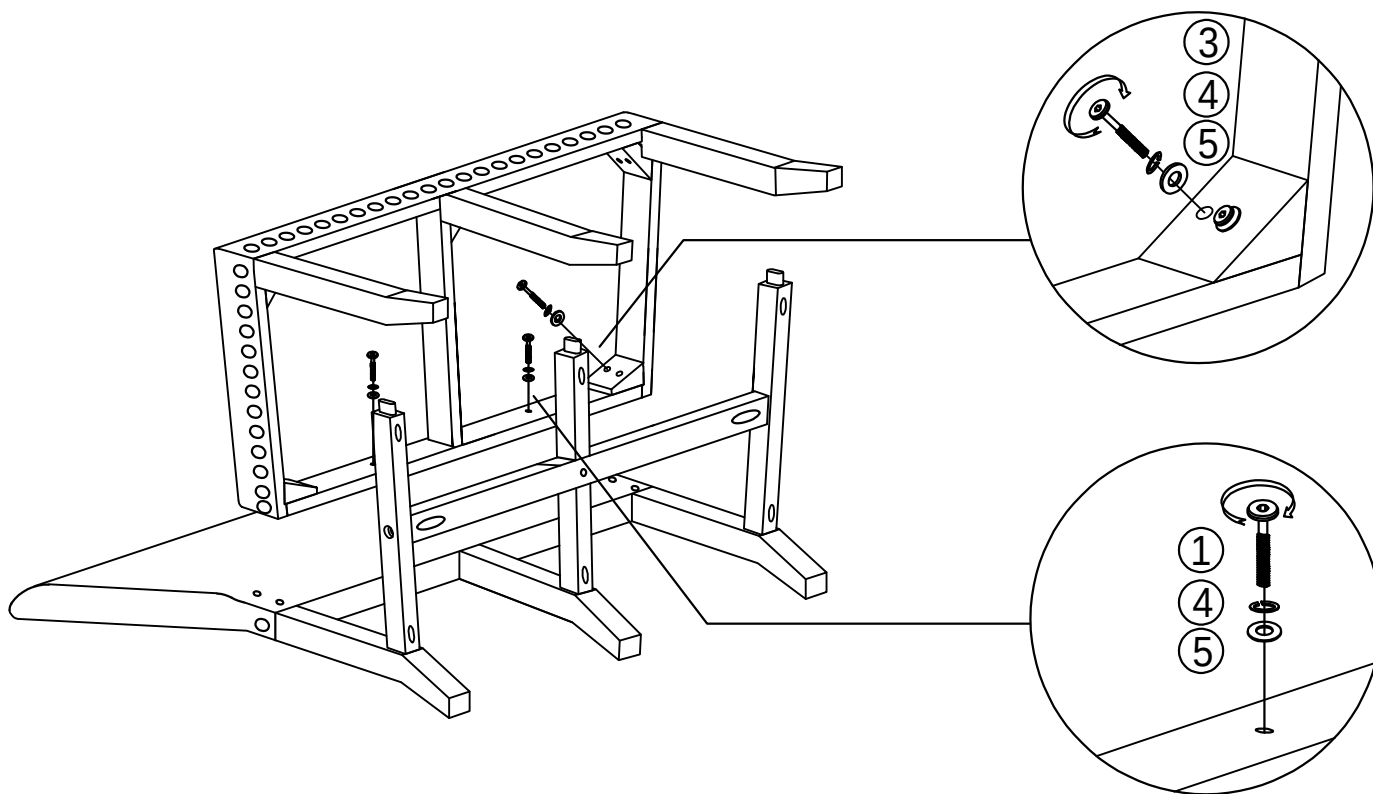

STEP 6:

Connect the stretcher assembly to legs with screws (7).
Assembly complete.

