















ASSEMBLY INSTRUCTIONS


Ori Cane Low Console Cabinet

Parts required



1		Bolt	Φ6*25MM	8pcs	4		Bolt	Φ6*20MM	2pcs
2		Bolt	Φ6*30MM	8pcs	5		Flat washer	Φ6MM	22pcs
3		Bolt	Φ6*50MM	4pcs	6		Allen wrench		1pc

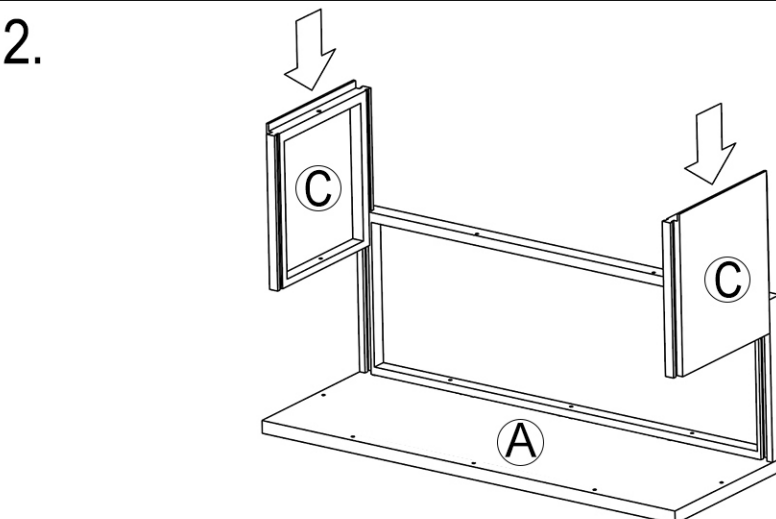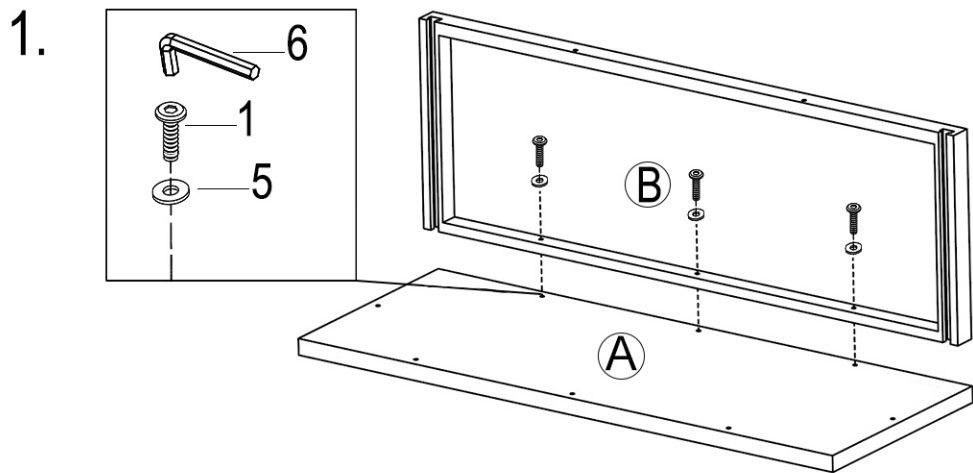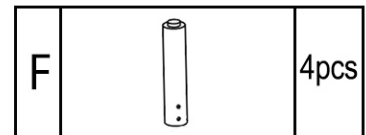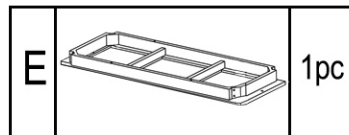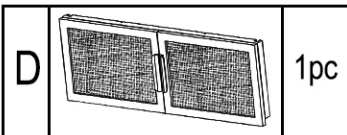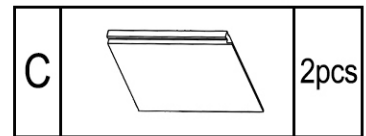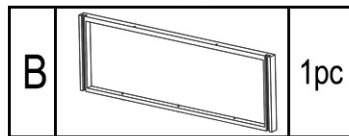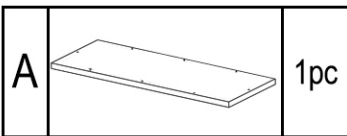


3.

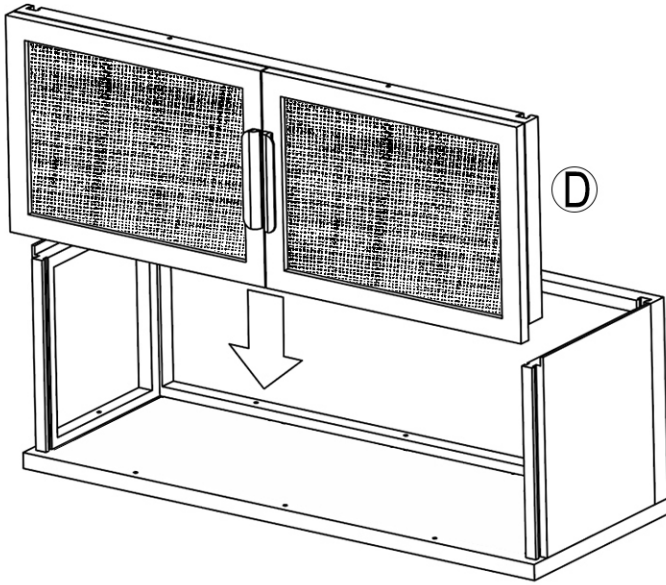


4.

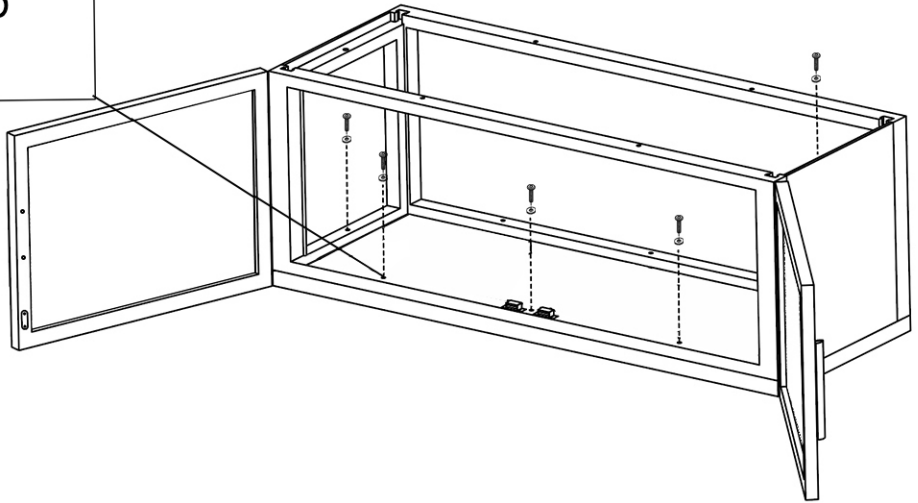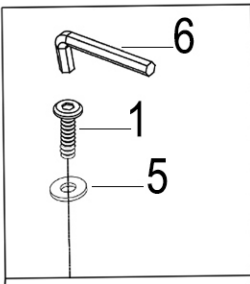


5.

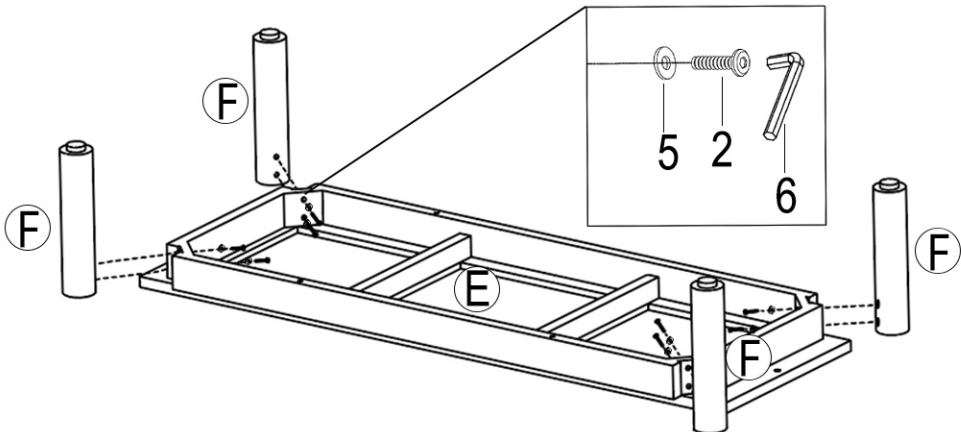

6.

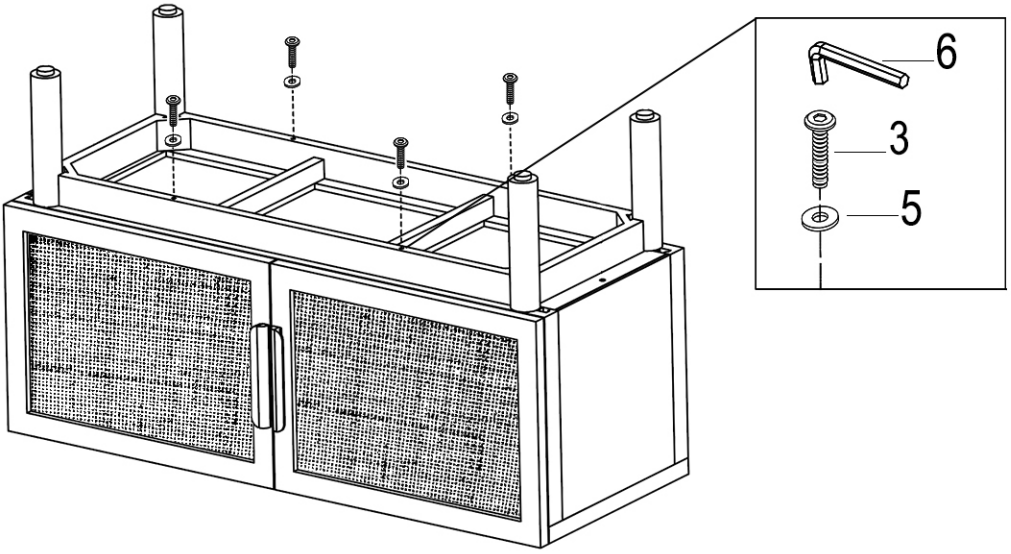

7.

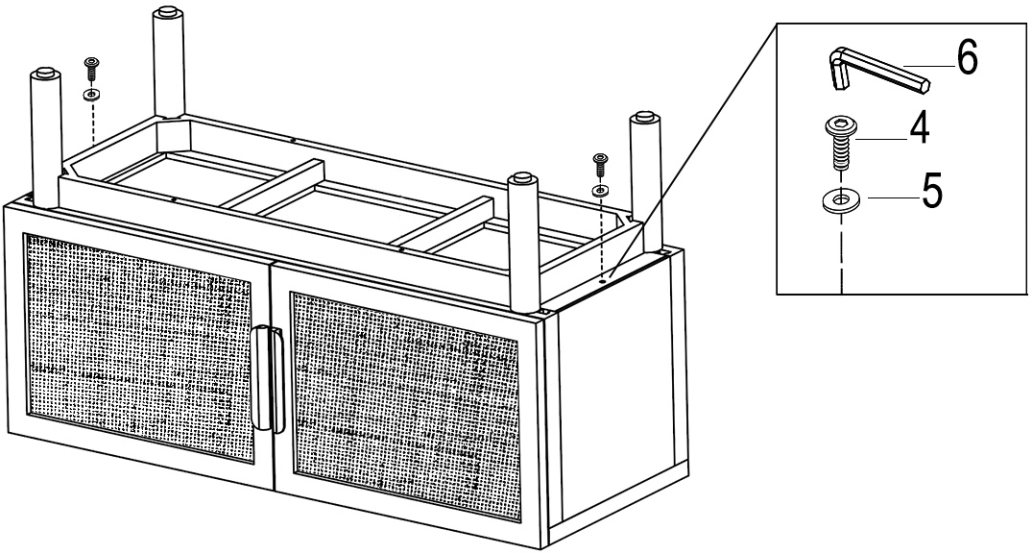

8.

