


WALKER EDISON
TM

Samantha 58" Buffet

SKU# WESAM11584

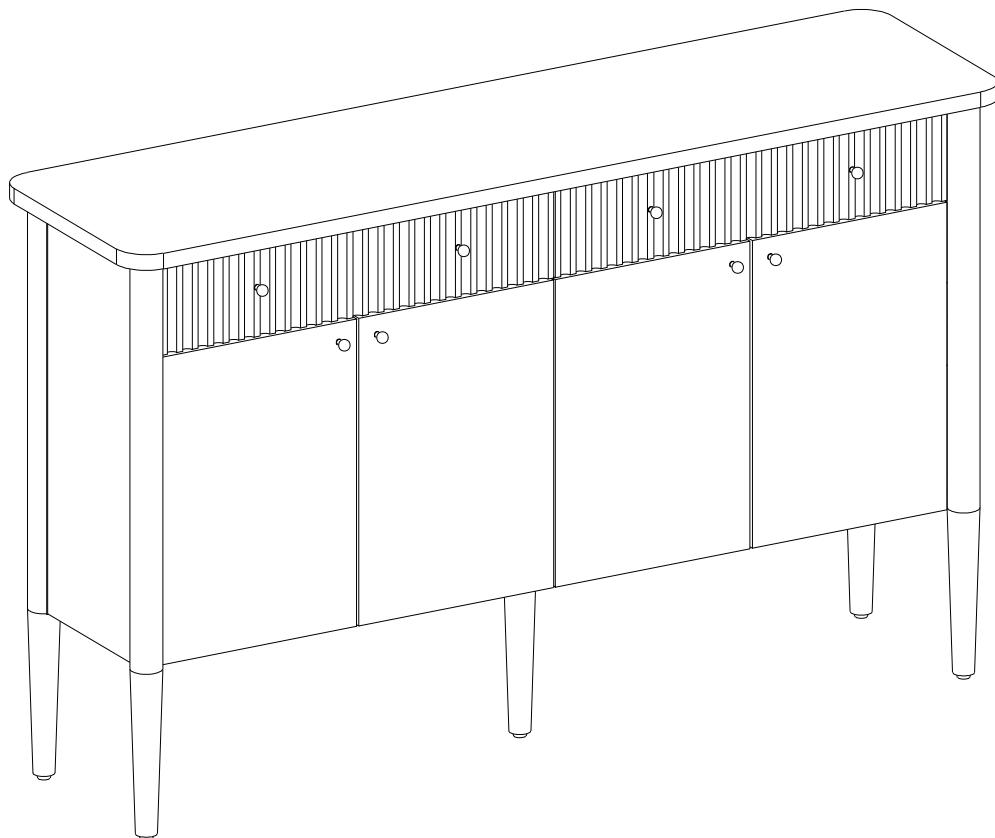


For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

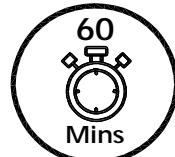

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

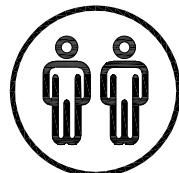

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

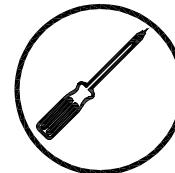

Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

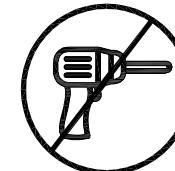

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.



Scan to get assembly tips and help!


WE Parts List

Part Number	Description	Quantity
1	Top Panel	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Middle Divider Panel	1
6	Left Adjustable shelf	1
7	Right Adjustable shelf	1
8	Left Support Bar	1
9	Right Support Bar	1
10	Back Panel	2
11	Center Foot	1
12	Left Door	1
13	Left Center Door	1
14	Right Center Door	1
15	Right Door	1
16	Drawer Left Side Panel	2
17	Drawer Right Side Panel	2
18	Drawer Back Panel	2
19	Drawer Bottom Panel	2
20	Base Cross Bar	2
21	Left Drawer Front Panel	1
22	Right Drawer Front Panel	1

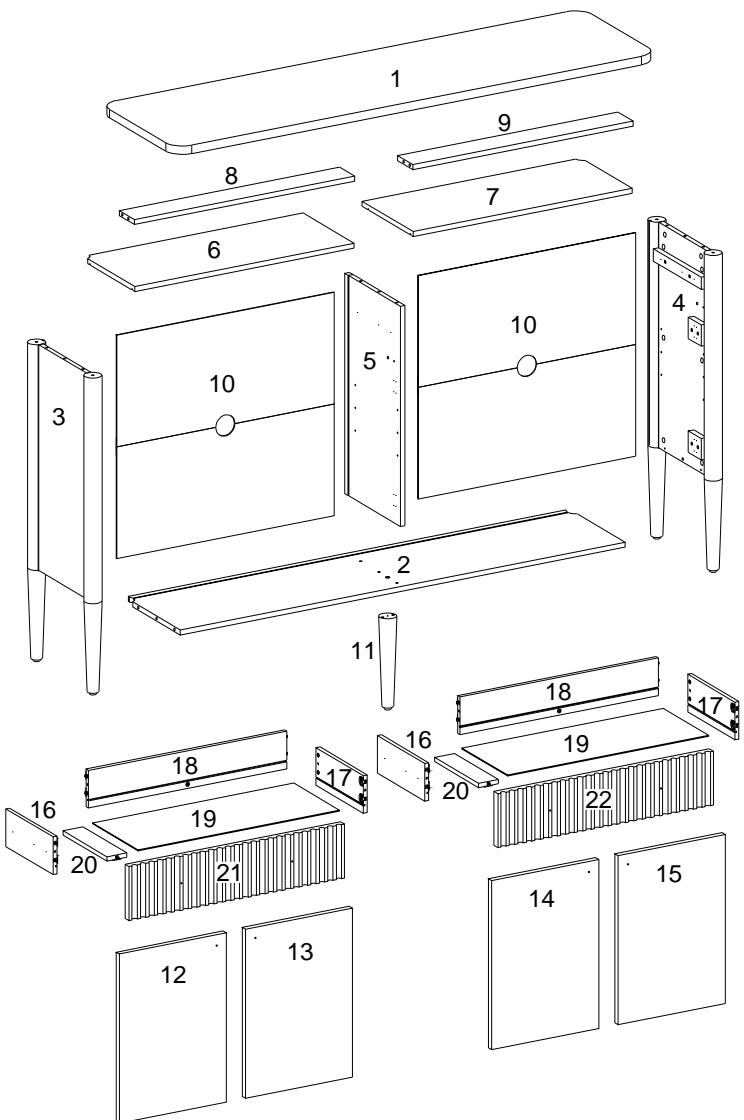



Hardware List

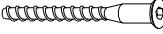Part	Size	Name	Quantity
A		8x30mm Wooden dowel	16
B		6x35mm Cam bolt	14
C		15x11mm Cam lock	14
D		30mm Sticker	26
E		6x50mm Bolt	3
F		M4mm Hex Key	1
G		Plastic wedge	16
H		3x17mm Screw	16
J		8x5x16mm Shelf support pin	8
K		35mm Europe hinge	4
L		35mm Europe hinge	4
M		3.5x14mm Screw	48
N		Handle	8




Hardware List

Part	Size	Name	Quantity	
P		4x22mm	Handle Bolt	8
Q		6x30mm	Wooden dowel	8
R		3x12mm	Screw	24
S		Drawer Glide	2 sets	
		* Note: This piece comes preassembled for shipping purposes and must be disassembled to complete the desk assembly.		
T		4x12mm	Screw	2
U		4x25mm	Screw	2
V		Plastic strap	2	
W		Wall Anchor	2	
X		12x3mm	Rubber pad	8
Y		Glue tube	1	

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*


Step 1

Take the Cam Bolts (B) and screw them into the Top Panel (1). Make sure they're securely tightened.

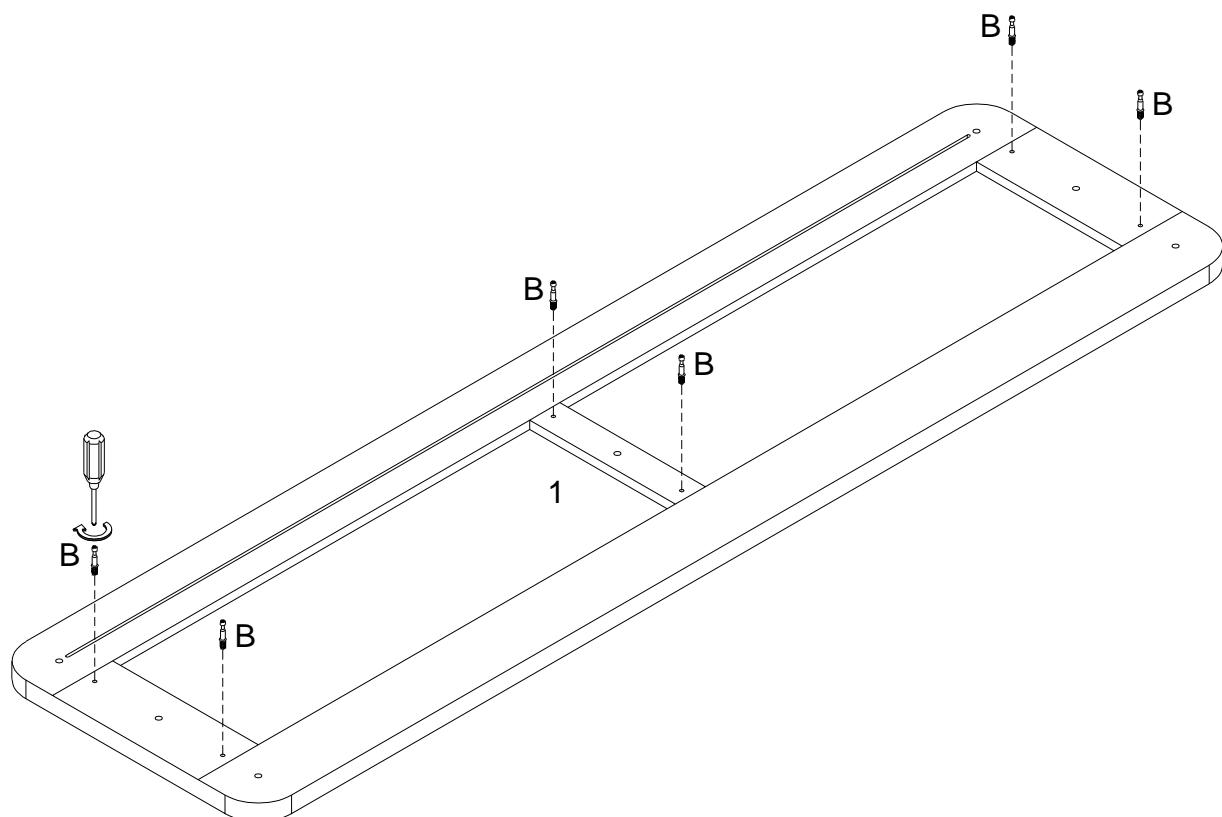

Step 2

Insert the Wooden Dowels (A) into the ends of the Bottom Panel (2), Left Support Bar (8), Right Support Bar (9), and Center Foot (11). These dowels will help align the pieces in the next steps.

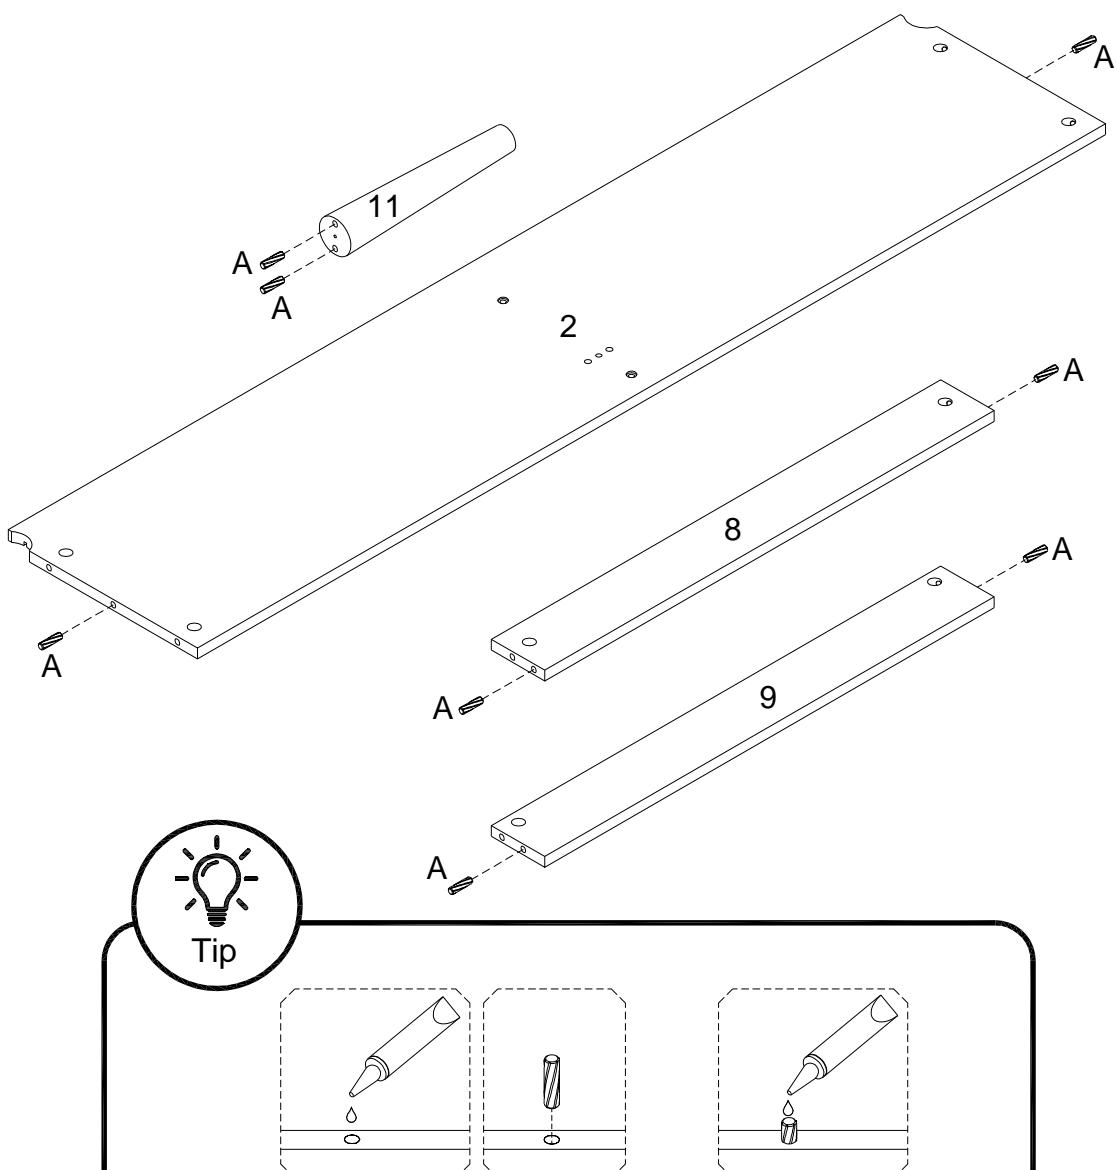


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


Step 3

Remove the Drawer Glide (S) from the hardware pack. This piece is pre-assembled and must be disassembled for the next steps. To do so, separate the Cabinet Arm from the Drawer Arm by pressing the plastic lever located on the Drawer Arm upward and pulling the two components apart.

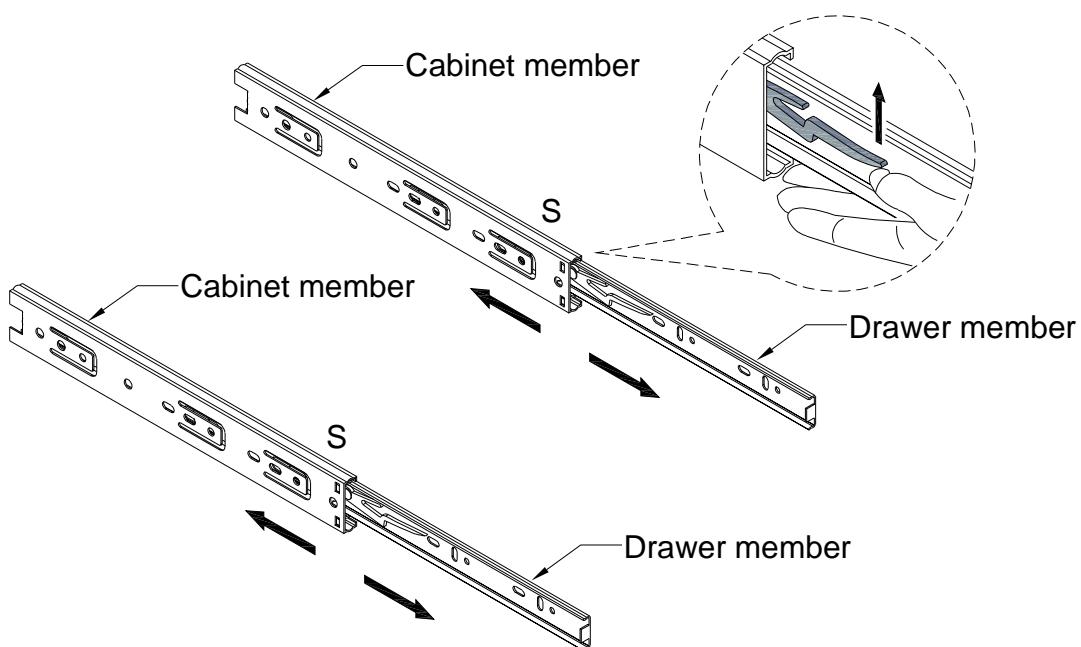


Step 4

Insert the Wooden Dowels (A) into the holes at the top of the Left Side Panel (3) and Right Side Panel (4). Next, align the Cabinet Arms of the Drawer Glide (S) to each panel and secure them with screws (R) using a screwdriver. After securing the Drawer Glide, insert the Cam Bolts (B) into the indicated holes on the Left and Right Side Panels (3 and 4) and tighten them with a screwdriver.

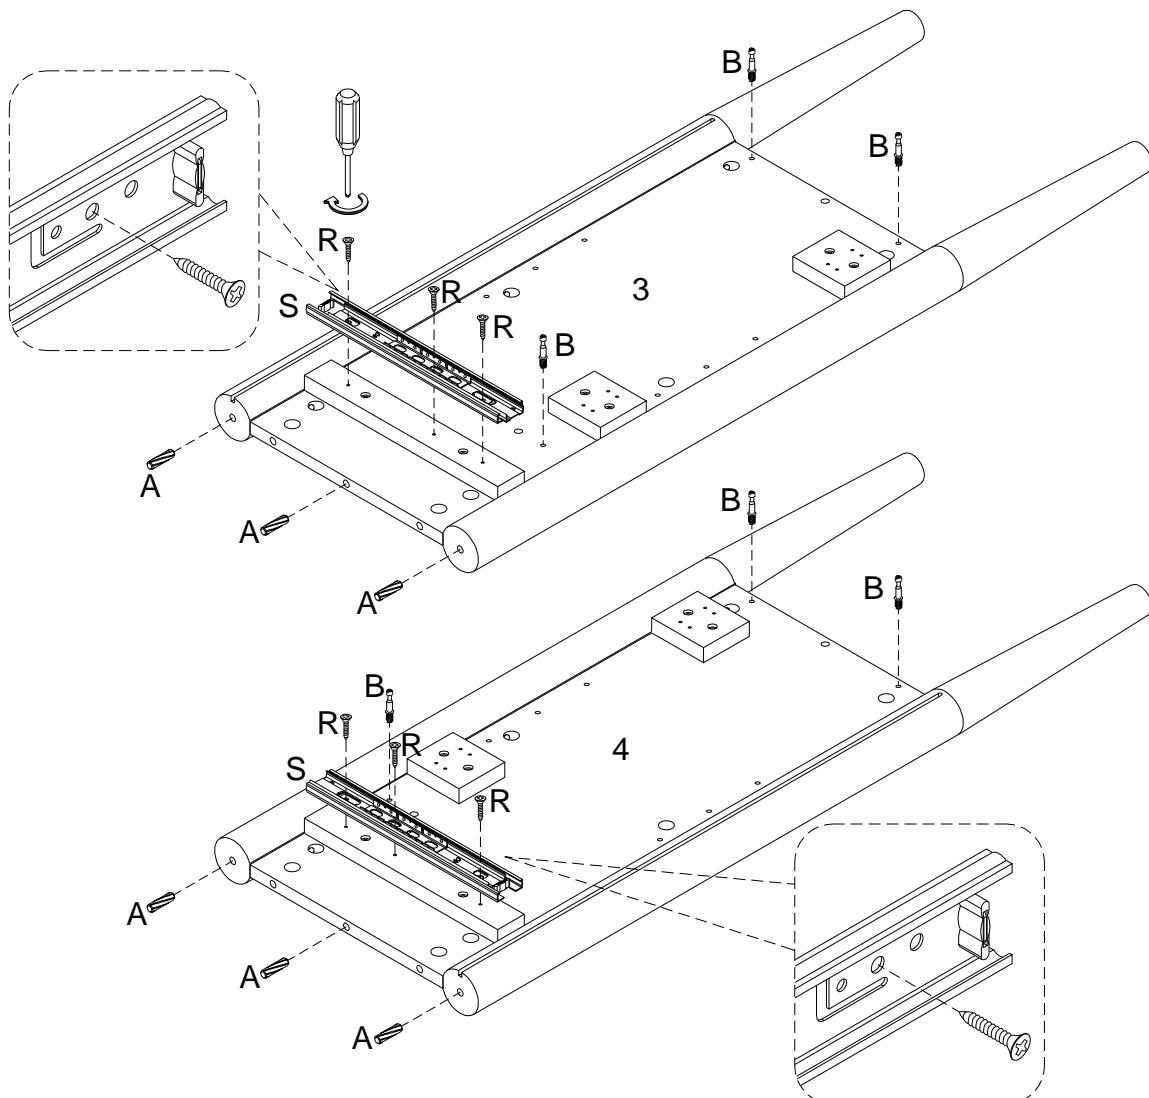


Step 5

Insert the Wooden Dowels (A) into the holes at the top and bottom of the Middle Divider Panel (5). Next, align the Cabinet Arm of the Drawer Glide (S) to the panel and secure it with screws (R) using a screwdriver. After securing the Drawer Glide on one side, flip the Middle Divider Panel (5) to the opposite side and repeat the process for securing the Cabinet Arm. Then, screw Cam bolts (B) into the the Middle Divider Panel (5).

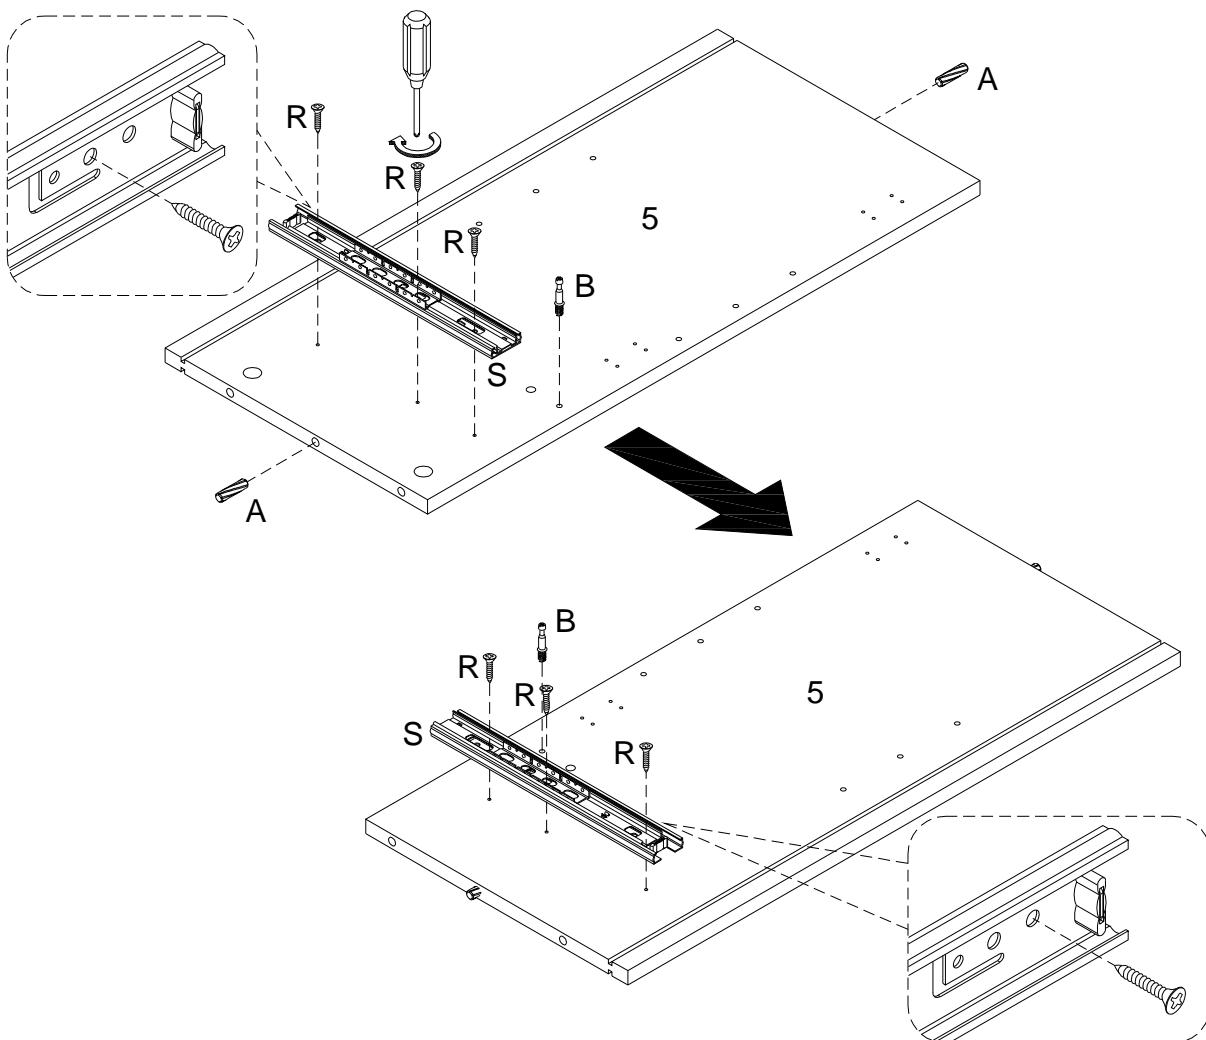


Step 6

Align the dowels on the Left Support Bar (8) and Right Support Bar (9) with the corresponding cam bolts on the Middle Divider Panel (5). Insert the Cam Bolts (B) into each piece. Once the Cam Bolts are in place, use the Cam Locks (C) to secure the support bars in place by tightening them with a screwdriver.

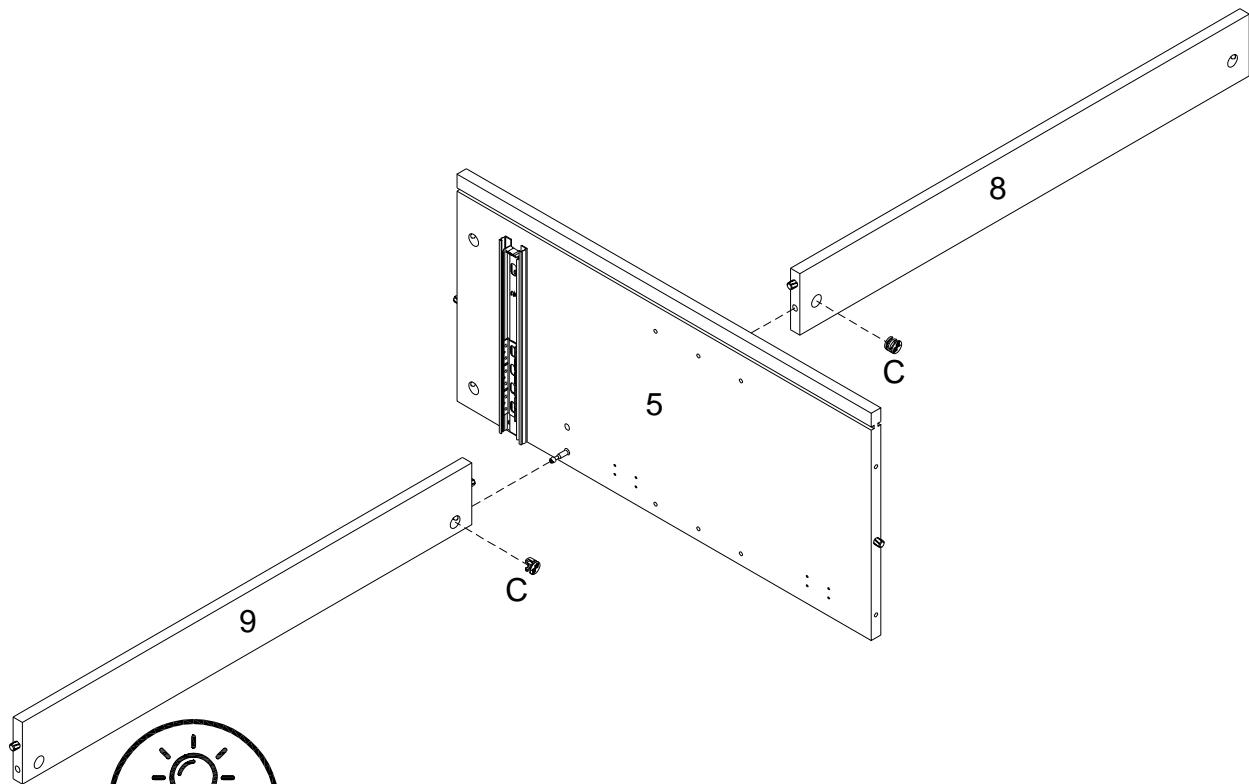


Cam Locks


Cam Locks help securely join two pieces together.
Follow these easy steps.

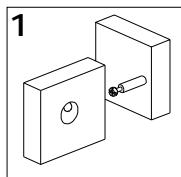

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

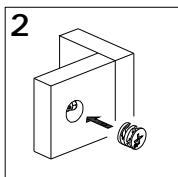


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

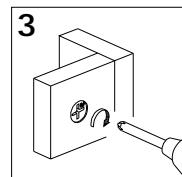

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 7

Align the Center Foot (11) with the Bottom Panel (2). Secure the panels together by inserting Bolt (E) and tightening it with Hex Key (F).

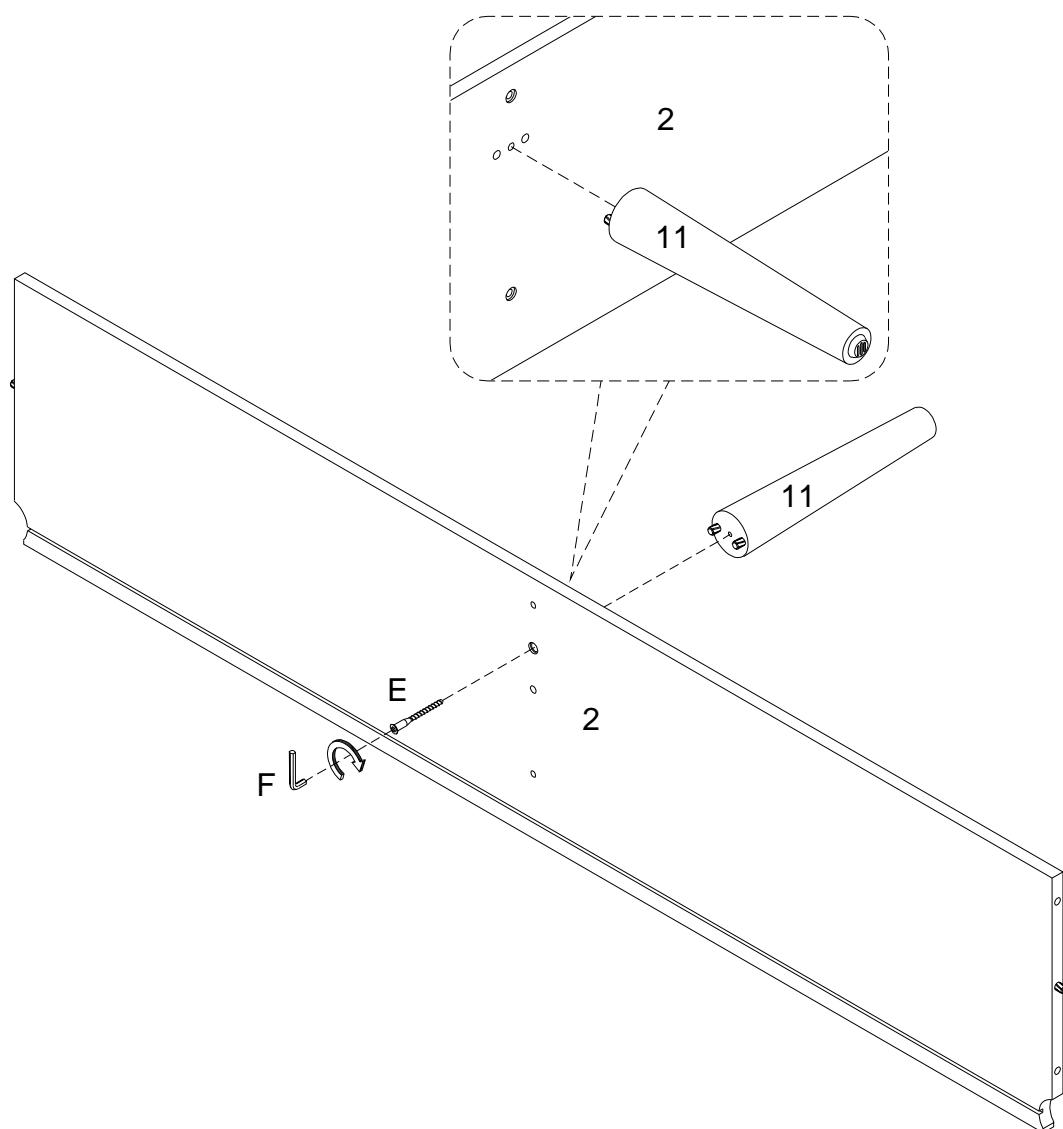


Step 8

Align the Middle Divider Panel (5) with the Bottom Panel (2). Secure the panels together by inserting Bolt (E) and tightening it with Hex Key (F).

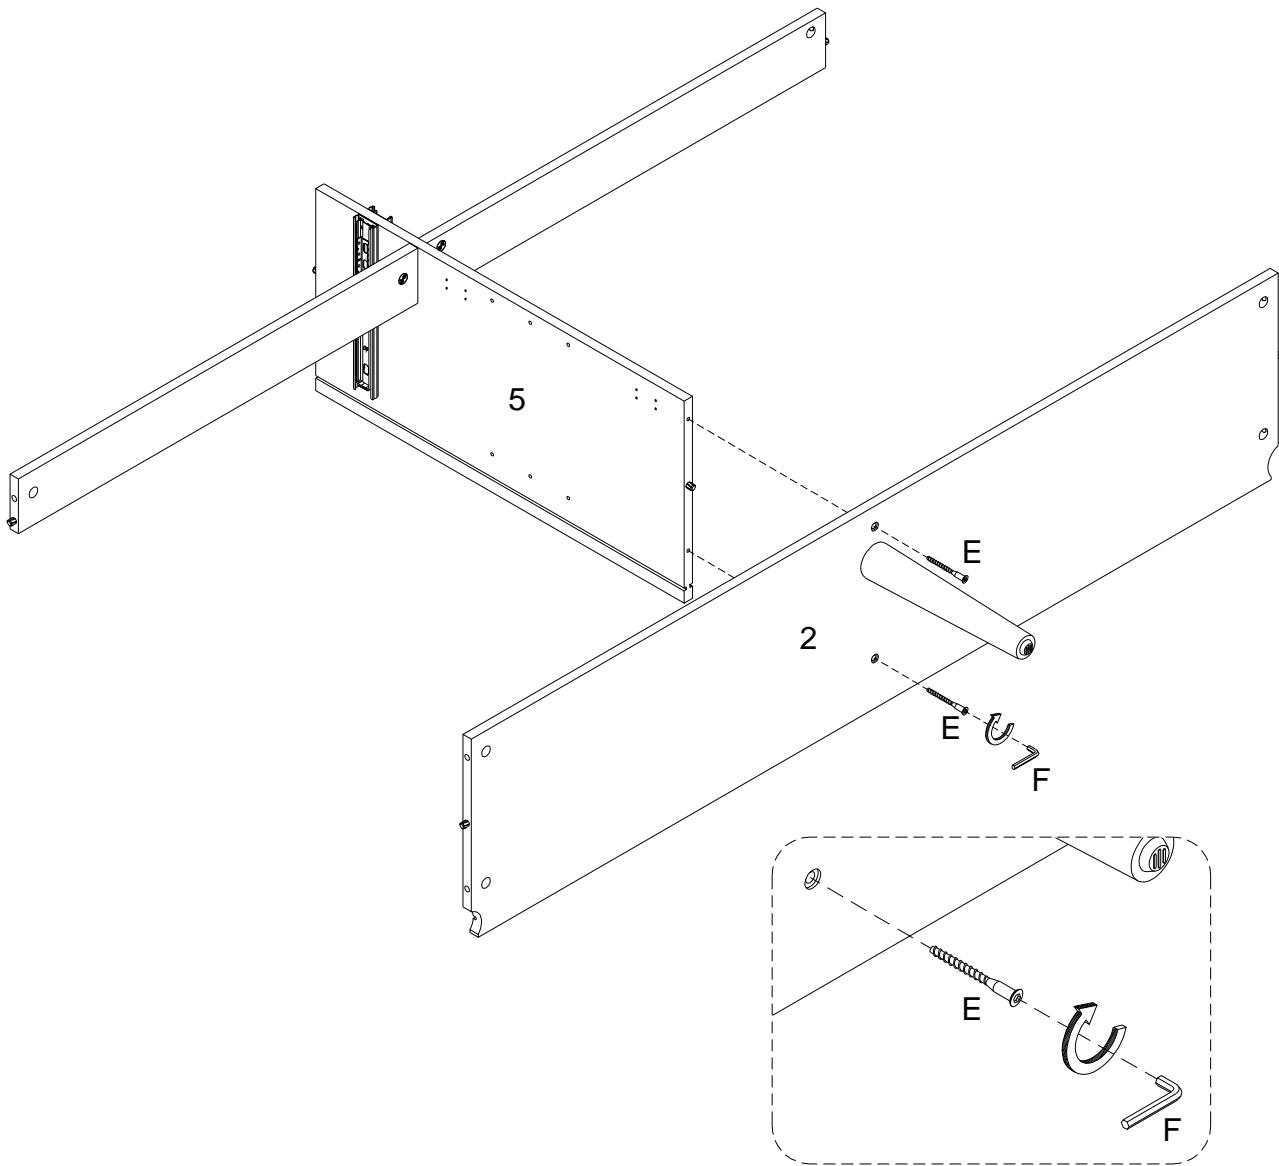


Step 9

Align the Bottom Panel (2) and Left Support Bar (8) with the cam bolts located on the Left Side Panel (3). Secure the pieces by inserting the Cam Lock (C) and tightening it with a screwdriver.

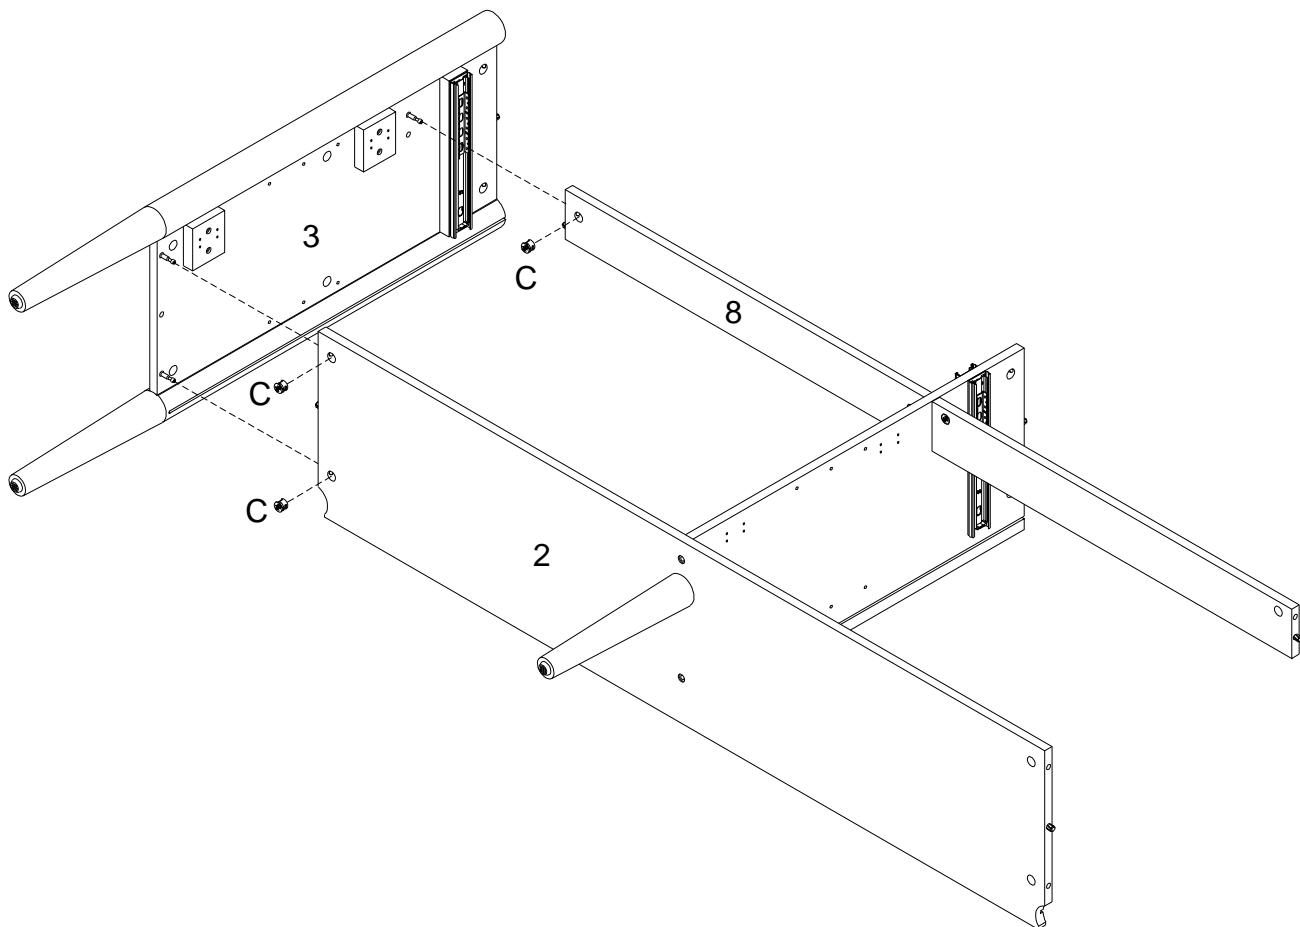



Step 10

Align the Bottom Panel (2) and Right Support Bar (9) with the cam bolts located on the Right Side Panel (4). Secure the pieces by inserting the Cam Lock (C) and tightening it with a screwdriver.

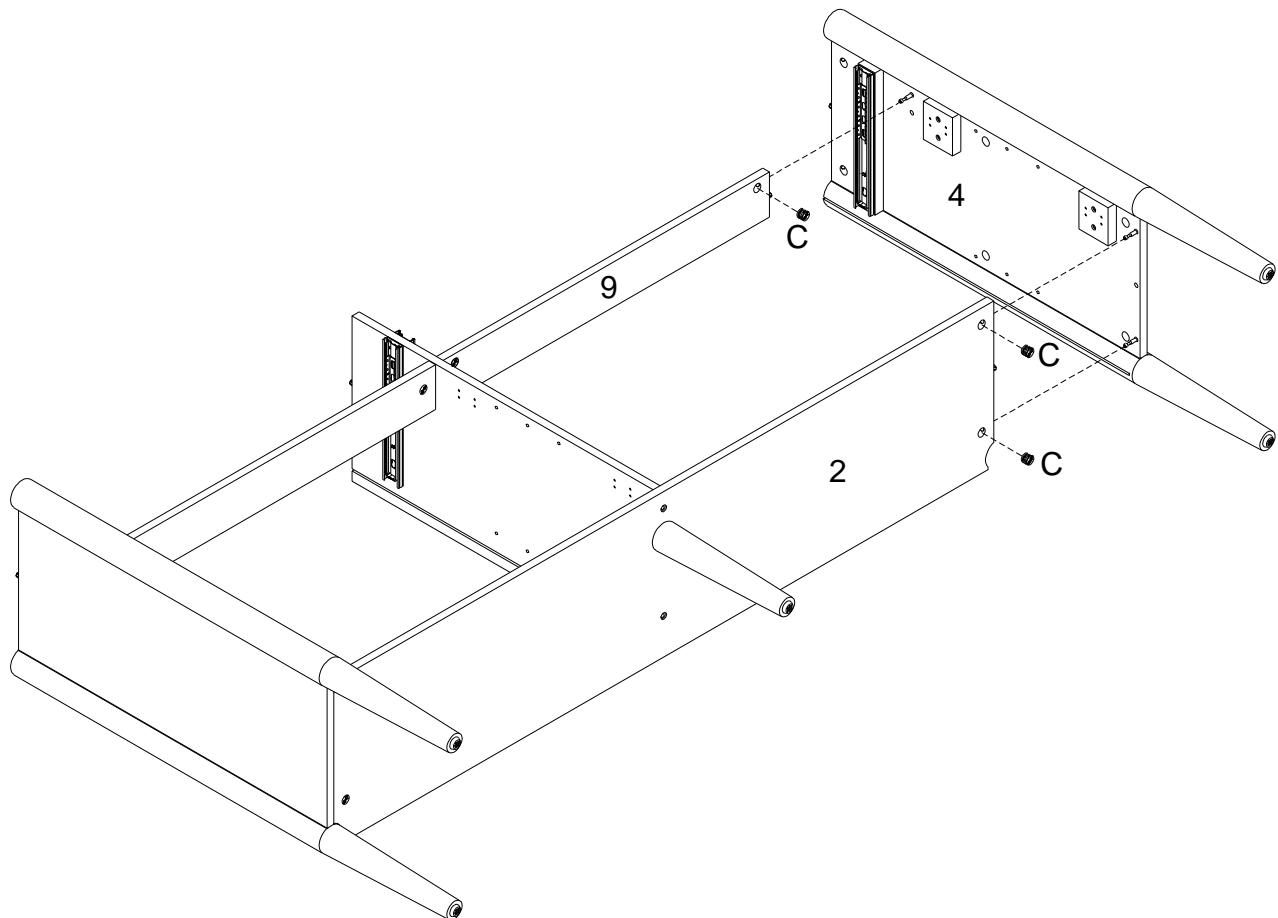


Step 11

Unfold each of the Back Panels (10) and slide them into place by aligning them with the grooves located on the Left and Right Side Panels (3 & 4) as well as the Bottom Panel (2).

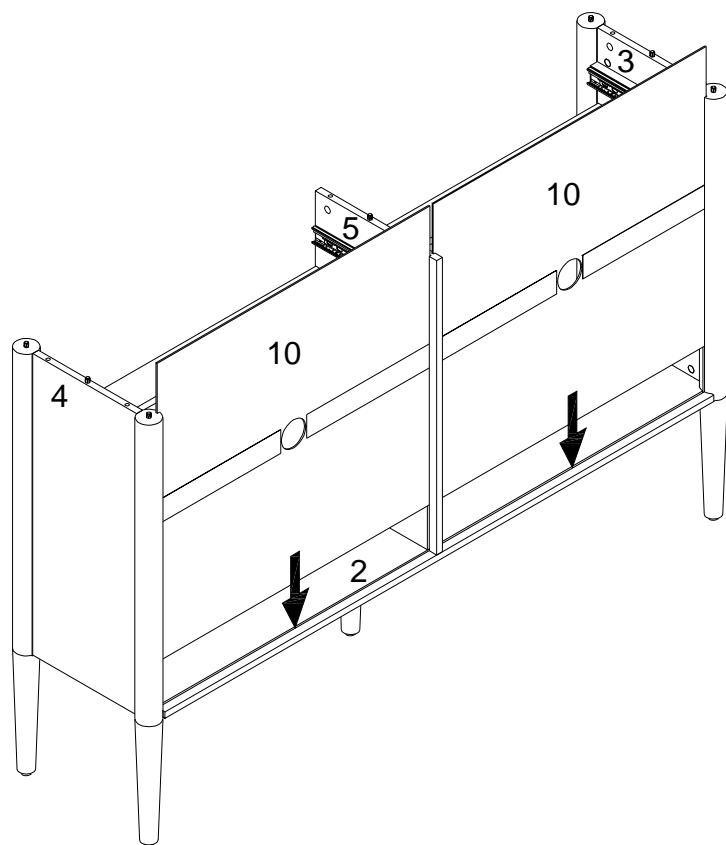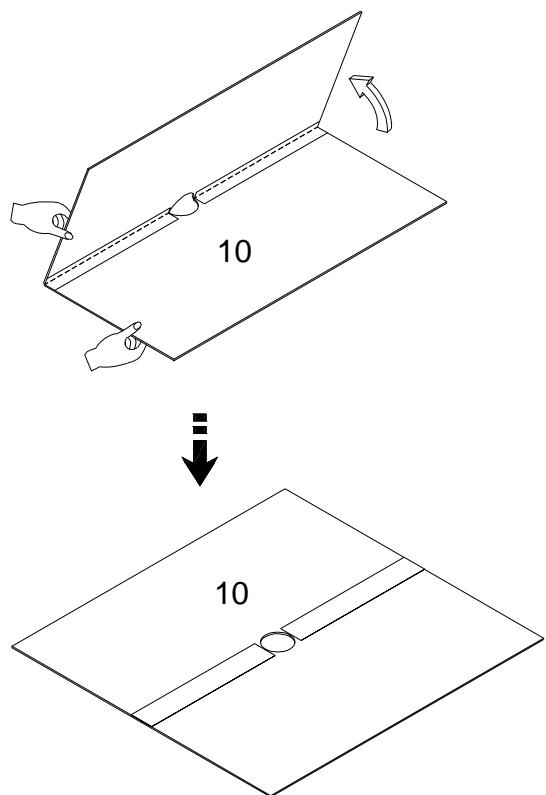


Step 12

Align the cam bolts located on the Top Panel (1) with the corresponding holes on the top of the Left and Right Side Panels (3 & 4) and the Middle Divider Panel (5). Lock everything into place by inserting the Cam Locks (C) and securing them with a screwdriver.

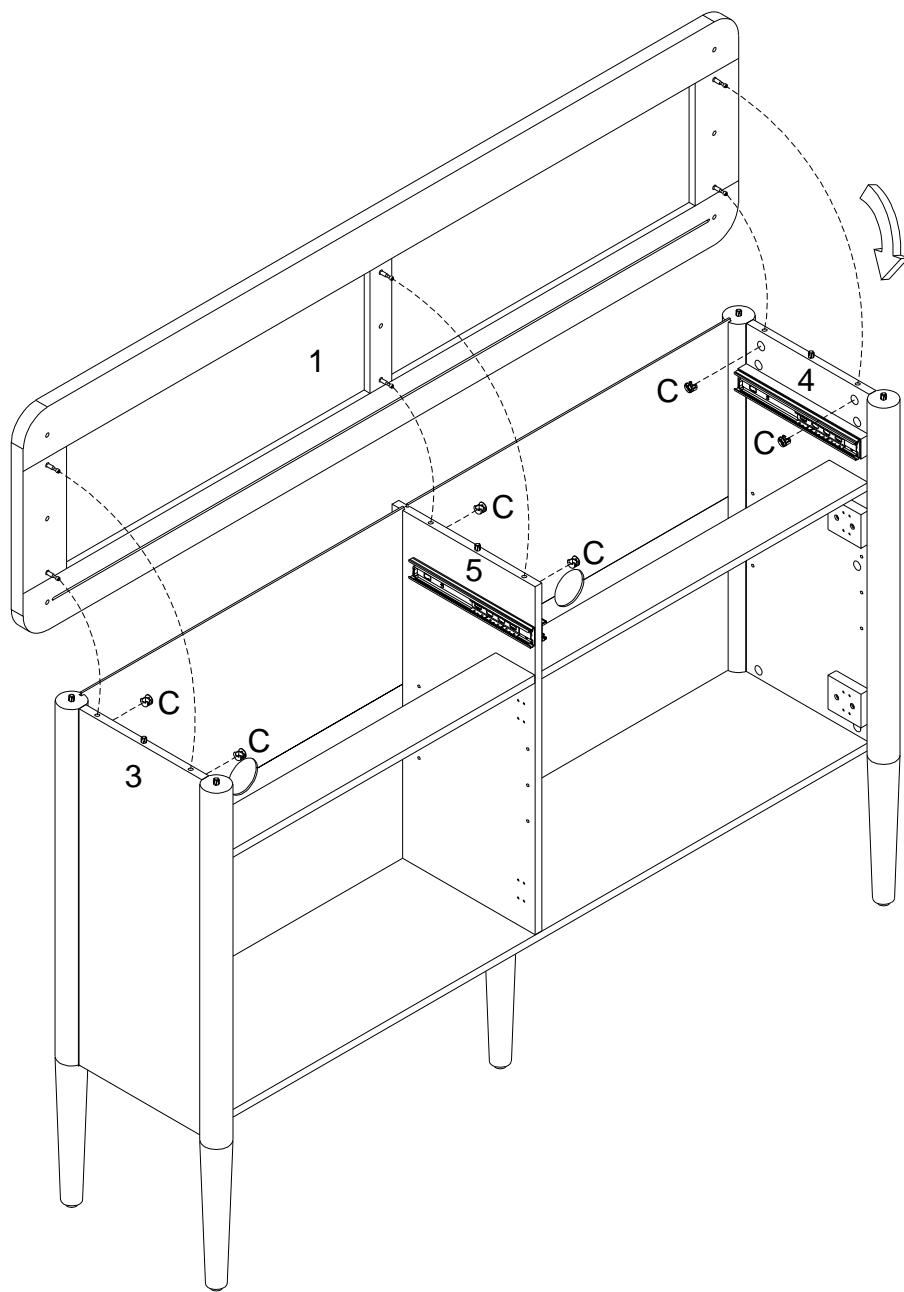


Step 13

Secure the Back Panels (10) with the Plastic Wedge (G) by spacing the wedges evenly around the perimeter of the panels. Once in place, secure the wedges with screws (H).

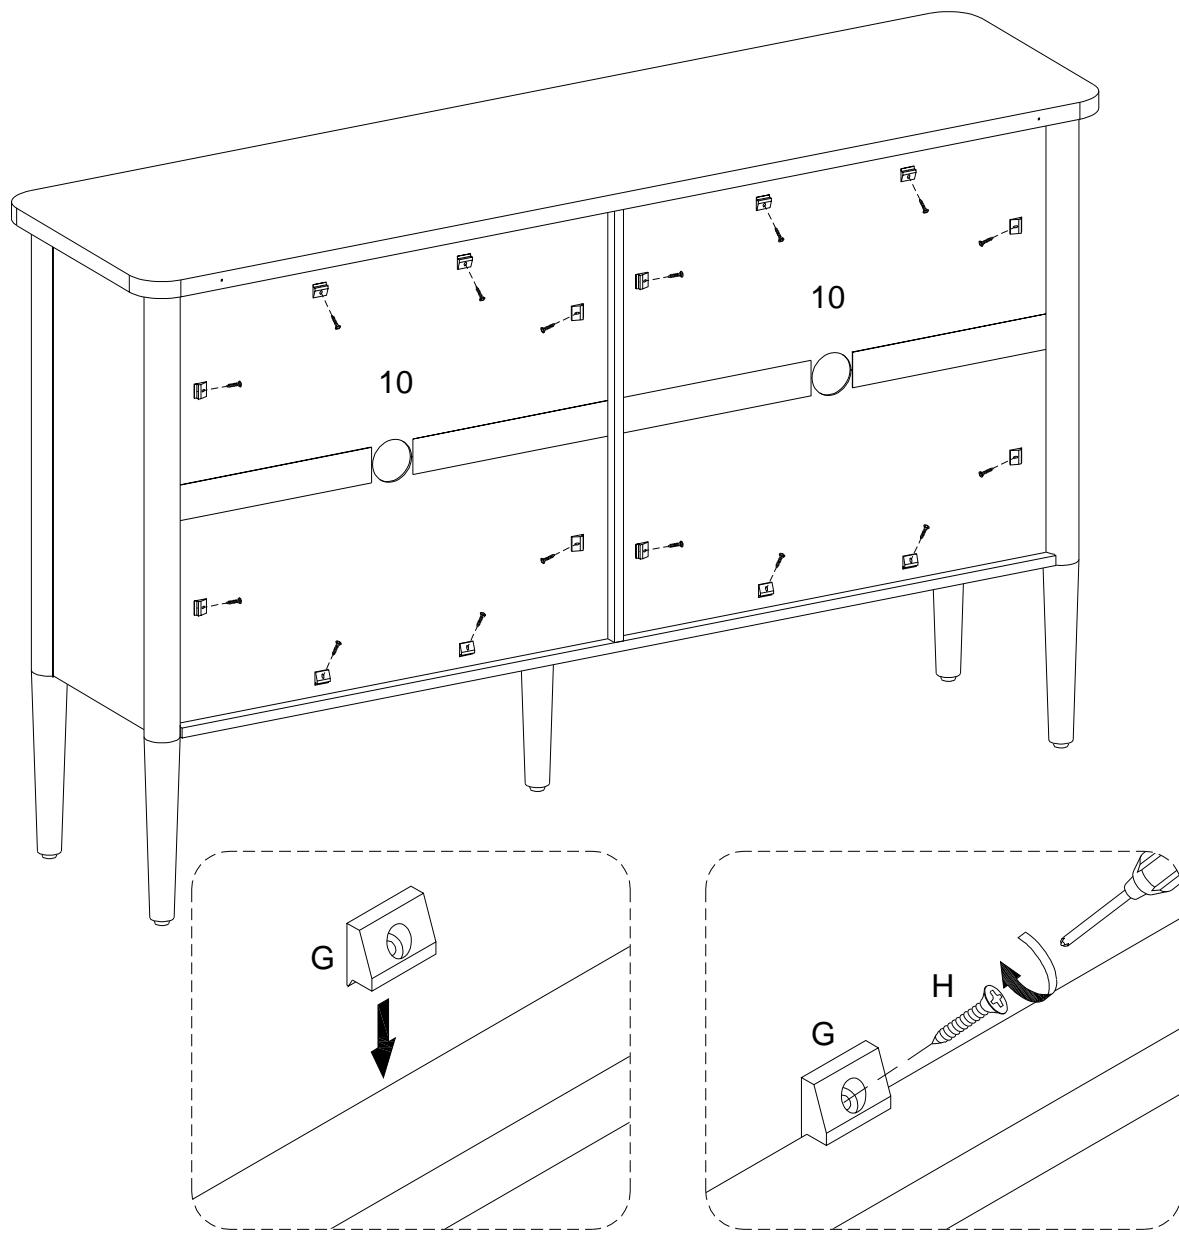


Step 14

Place the Stickers (D) over the exposed Cam Locks to cover them.

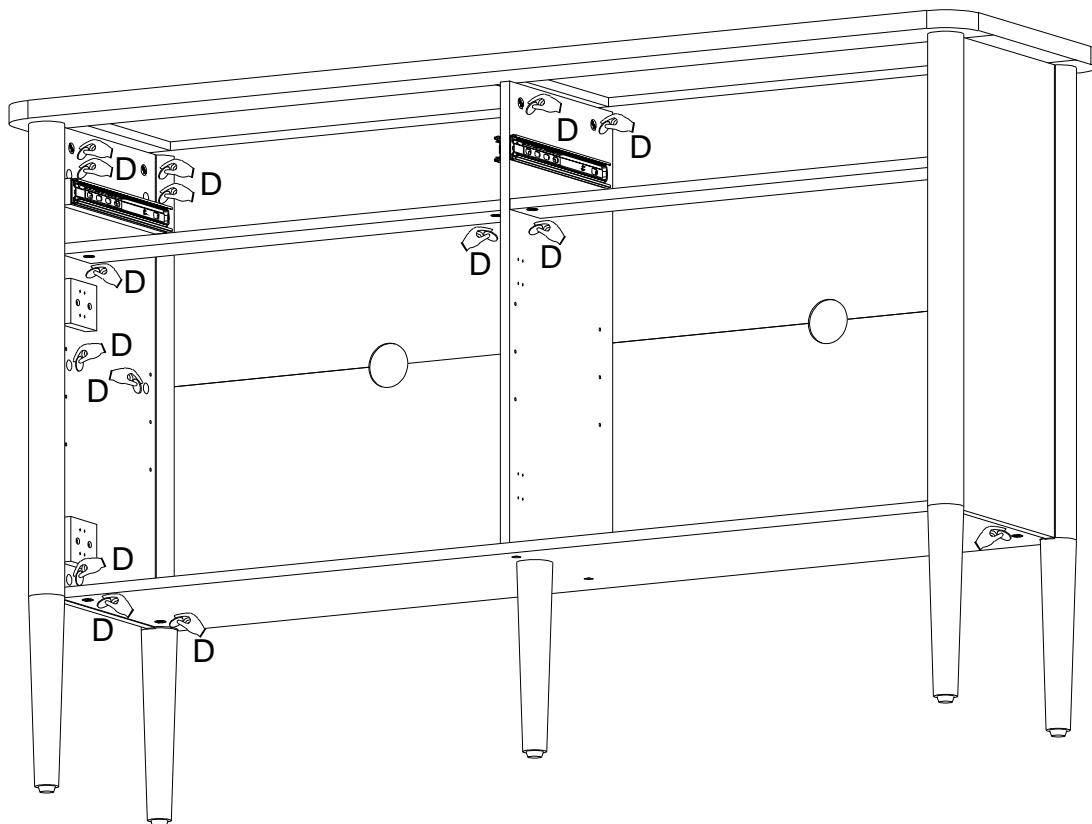


Step 15

Insert the Shelf Support Pins (J) into the side panels (3 and 4) and the Middle Divider Panel (5) at your desired height for the shelves. Then, place the Adjustable Shelves (6 & 7) onto the shelf support pins you just installed.

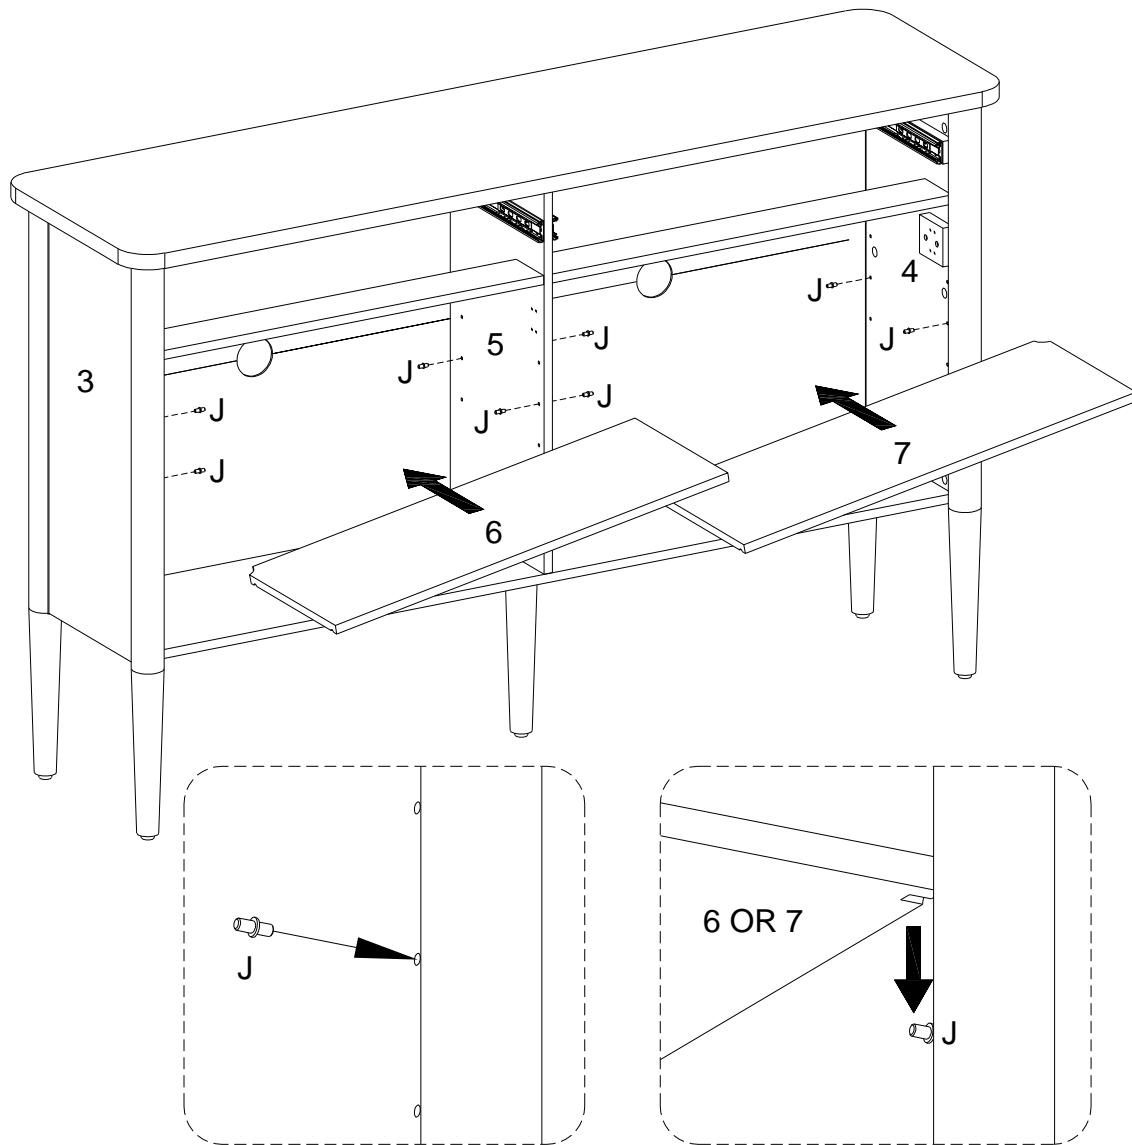


Step 16

Place Rubber Pads (X) on the Left and Right Support Bar (8 & 9) and Bottom Panel (2).

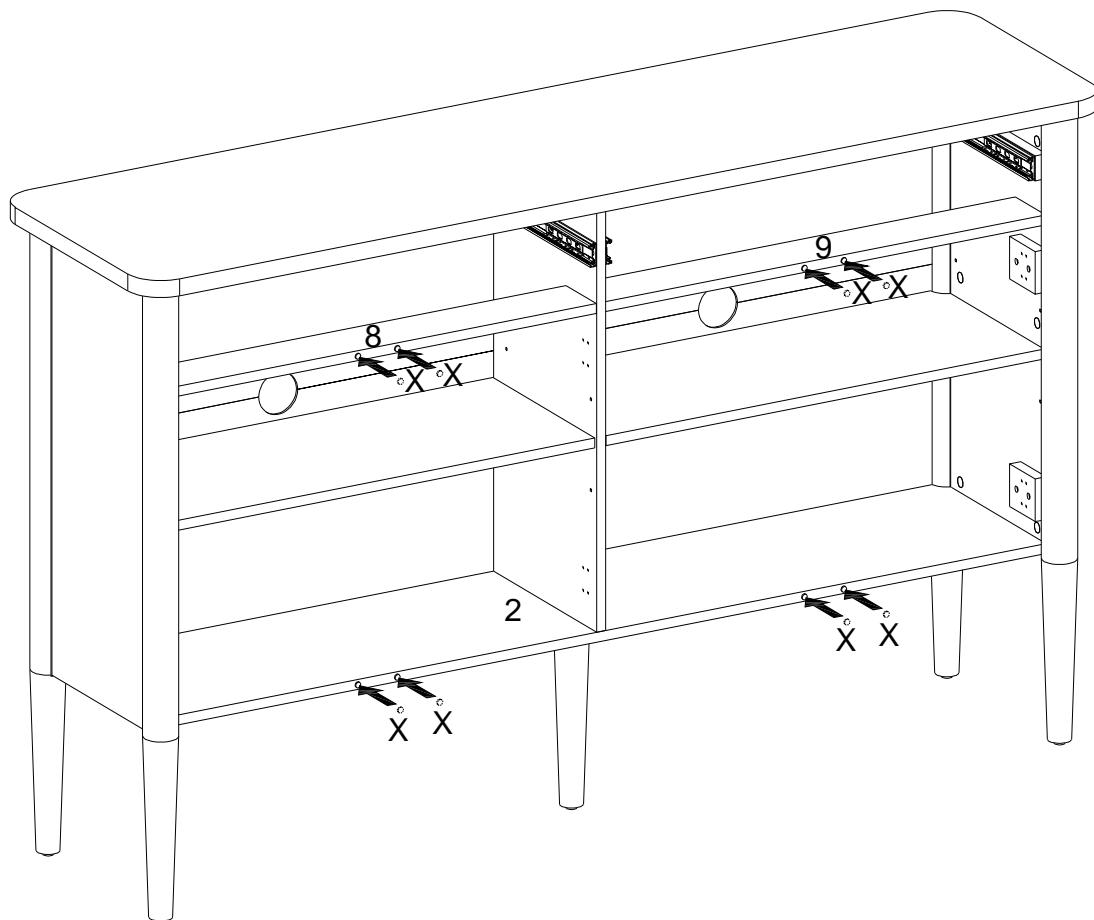


Step 17

Lay the Left Door (12) and Right Door (15) on a flat surface. Place the Hinges (K) in the round grooves on each door and secure them with screws (M) using a screwdriver. Next, align the Handle (N) to the front of each door and secure it with the Handle Bolts (P).

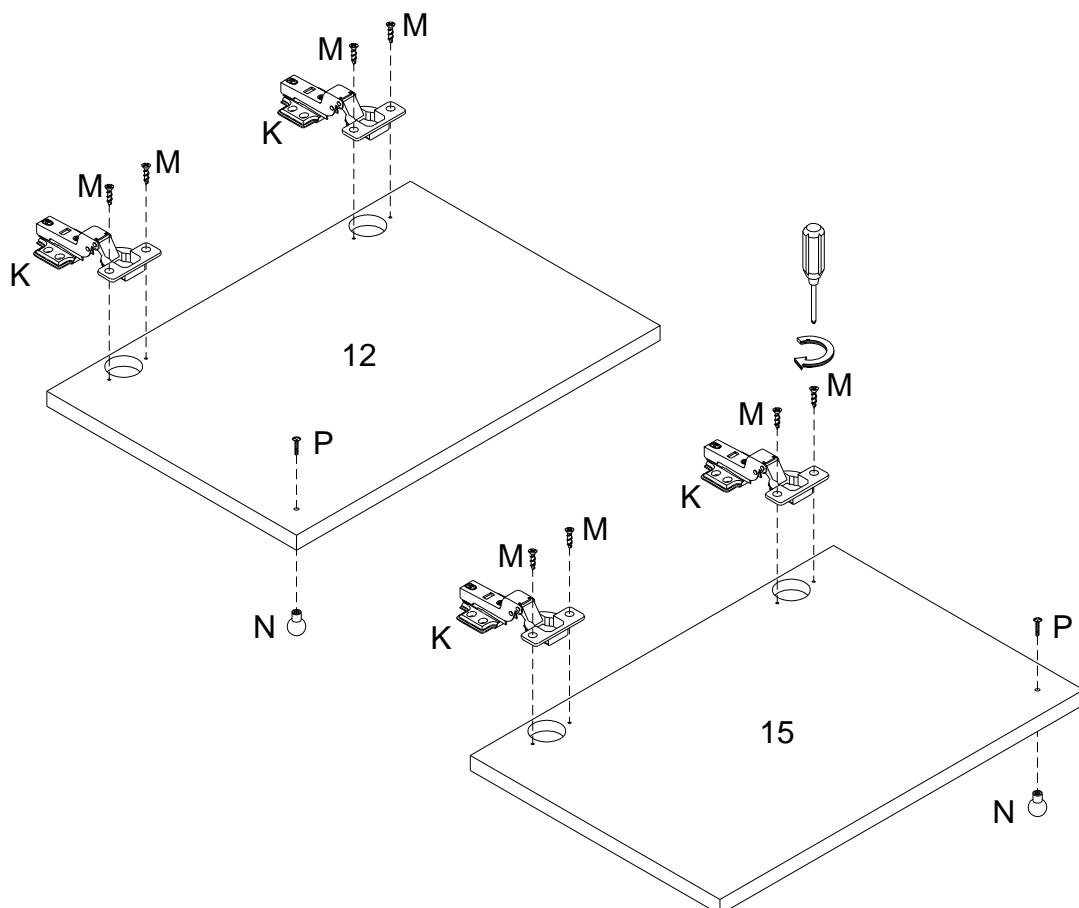


Step 18

Lay the Left Center Door (13) and Right Center Door (14) on a flat surface. Place the Hinges (L) in the round grooves on each door and secure them with screws (M) using a screwdriver. Next, align the Handle (N) to the front of each door and secure it with the Handle Bolts (P).

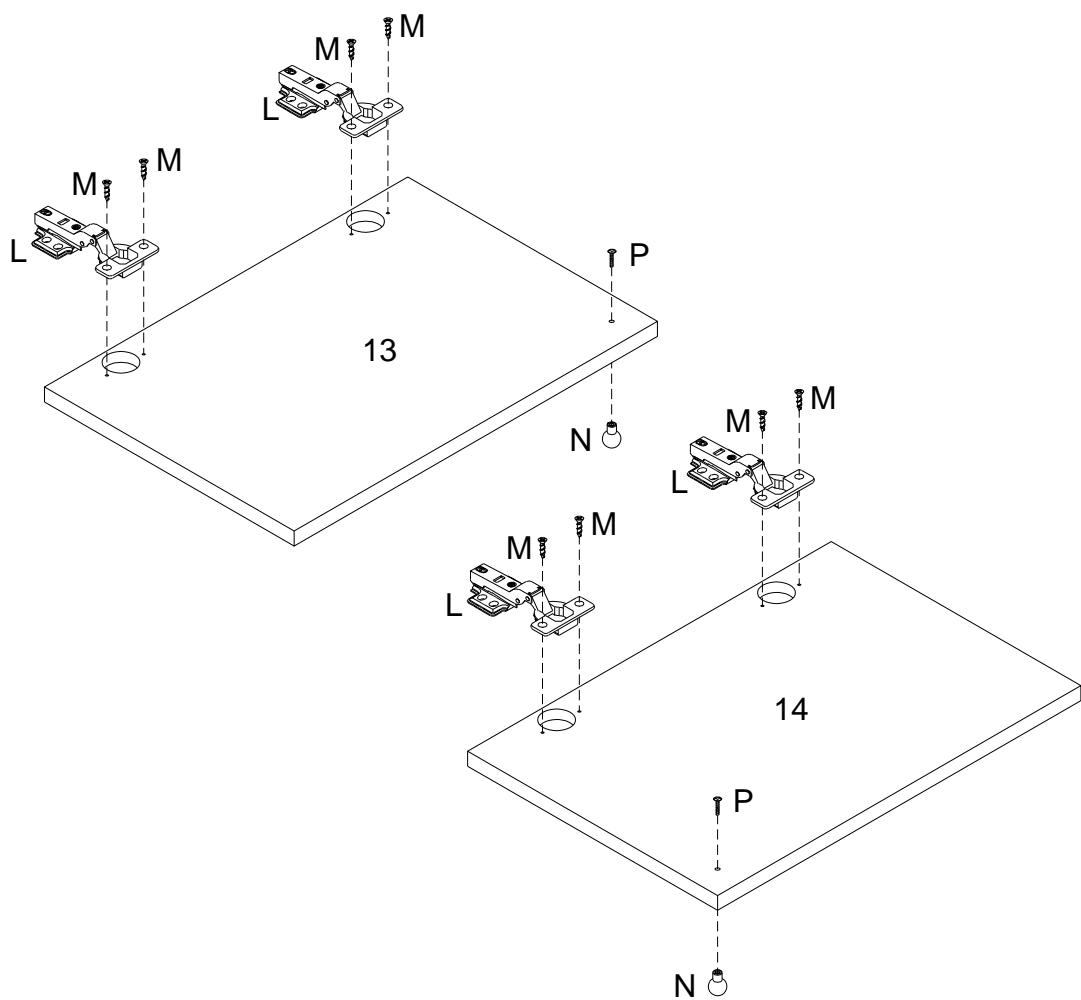


Step 19


Align the Hinges (K) located on the Left Door (12) to the interior holes on the left side of the buffet. Secure them with screws (M). Then, align the Hinges (L) located on the Right Center Door (14) to the interior holes on the Middle Divider Panel and secure with screws (M). Adjust the doors as needed.

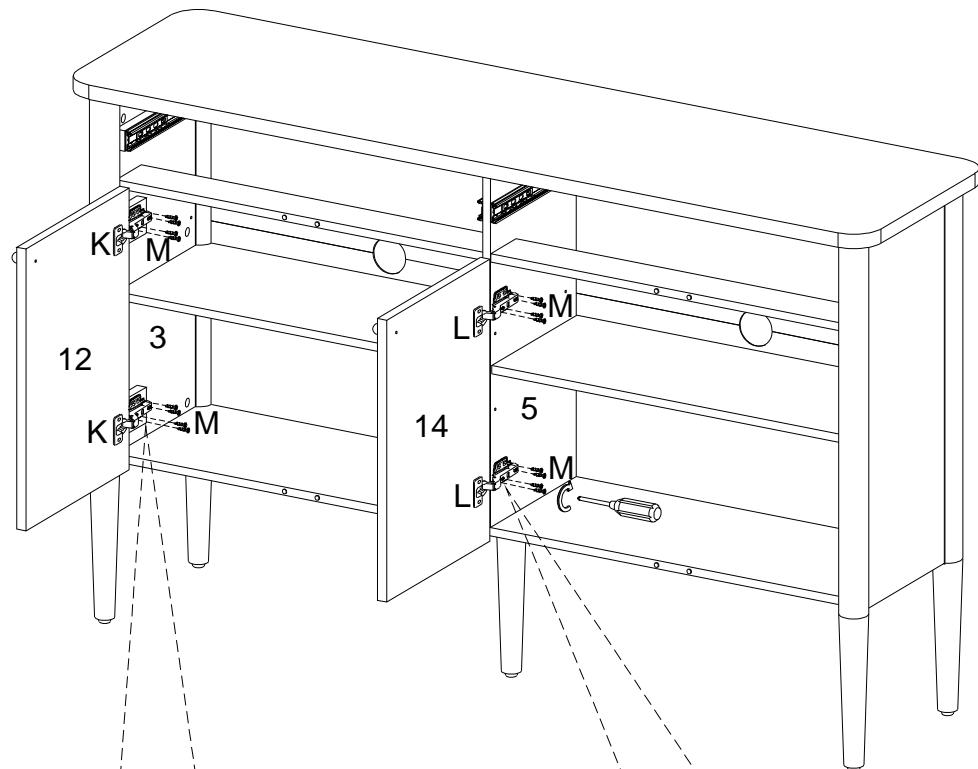


Adjusting The Cabinet Doors

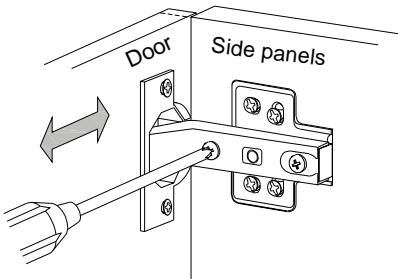

Adjust horizontal width
with this screw.

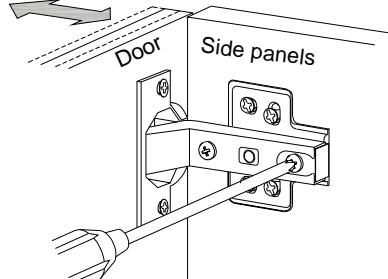


Adjust depth position
by loosening the hinge arm
mounting screw.

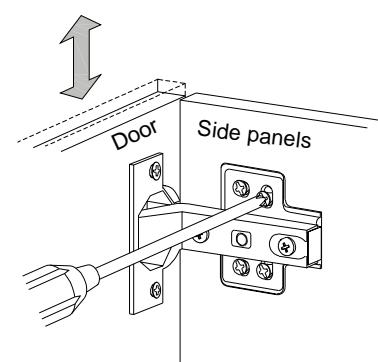

Adjust vertical height
via the screws in the
mounting plate.


Step 20

Align the Hinges (K) located on the Right Door (15) to the interior holes on the right side of the buffet. Secure them with screws (M). Then, align the Hinges (L) located on the Left Center Door (13) to the interior holes on the Middle Divider Panel and secure with screws (M). Adjust the doors as needed to ensure proper alignment.

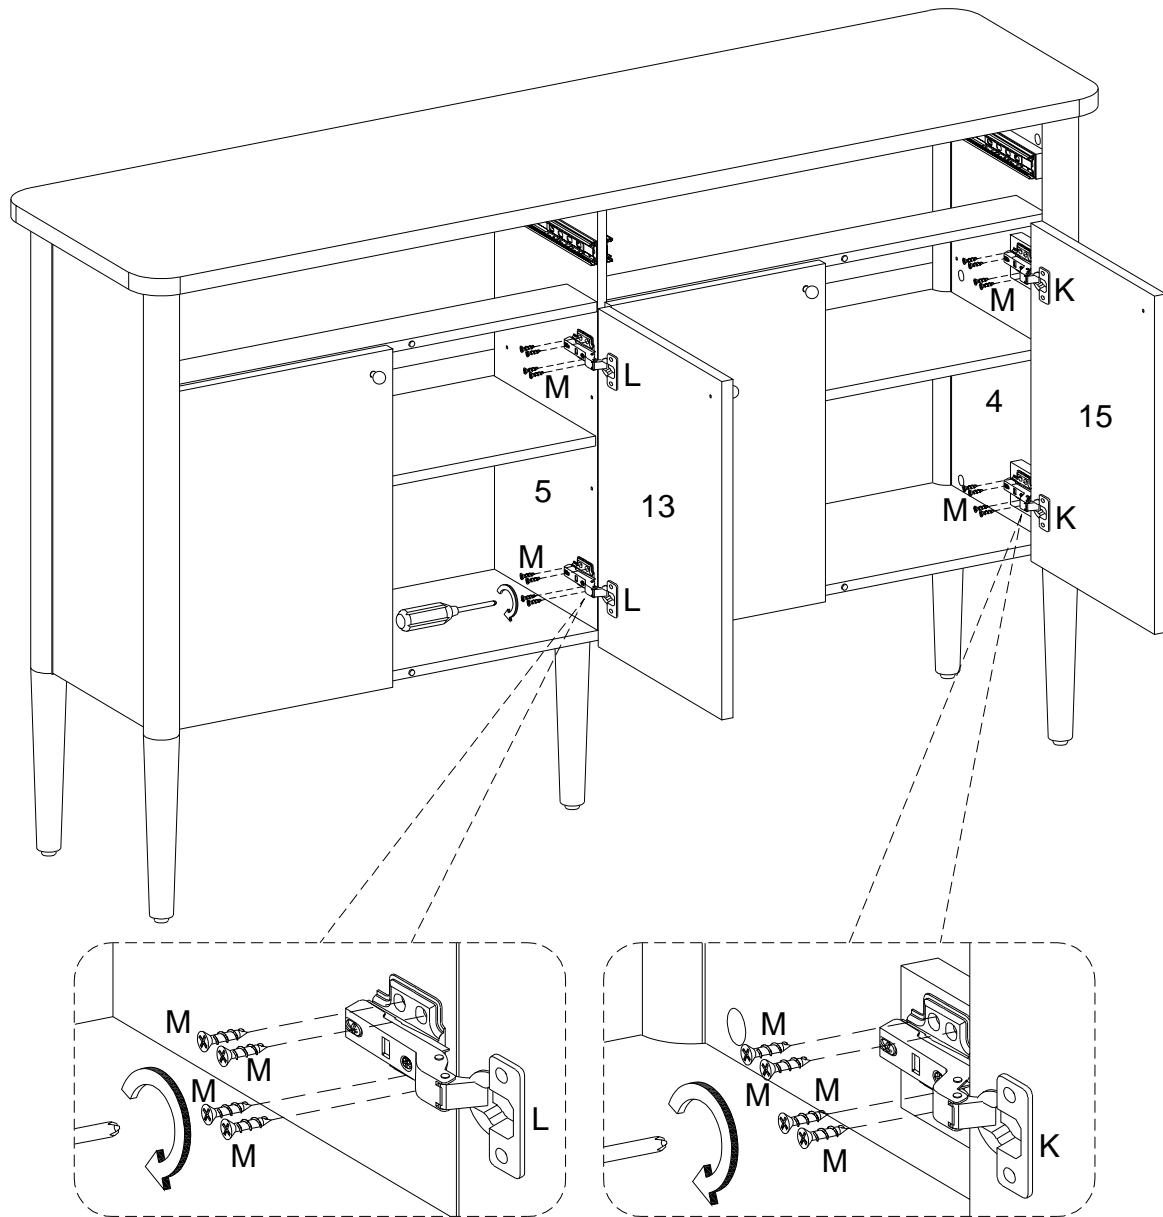


Step 21

Align the Handles (N) with the drill holes located on the outside of the Left Drawer Front Panel (21) and Right Drawer Front Panel (22). Insert the Handle Bolts (P) from the inside of the drawer front panels, aligning them with the handles on the outside. Secure them with a screwdriver.

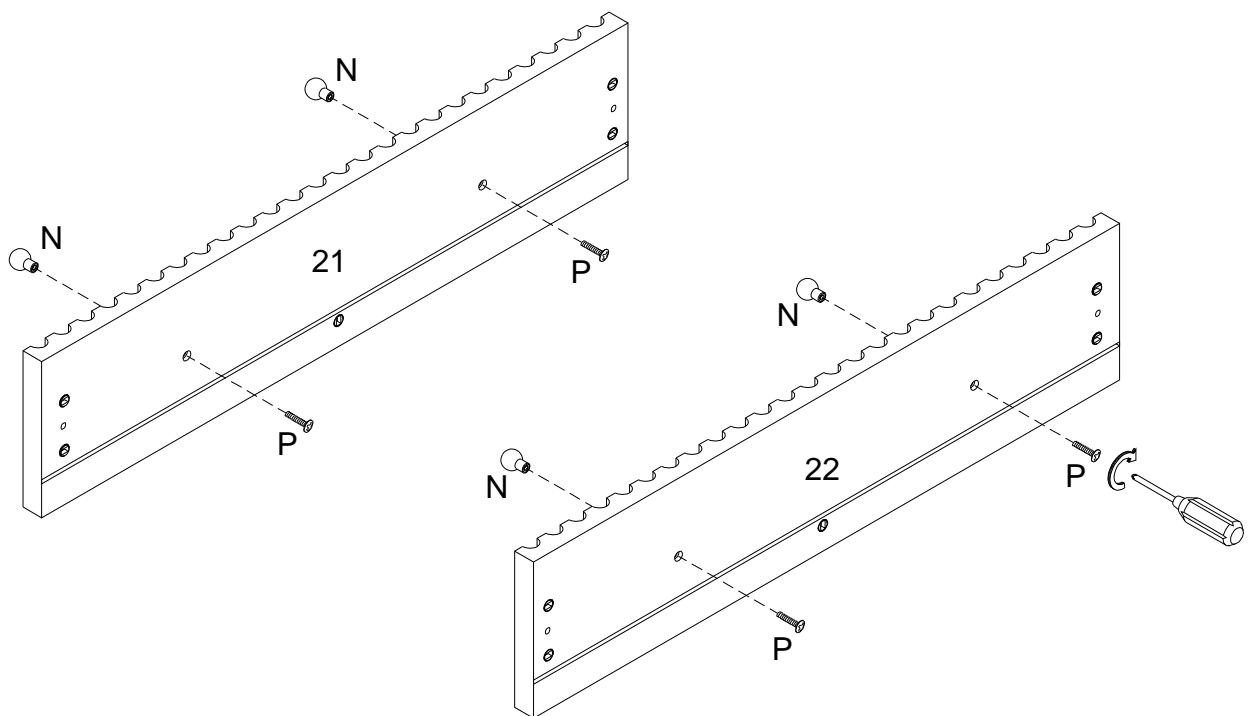

Step 22


Insert the Wooden Dowels (Q) into the ends of the Drawer Left Side Panel (16), Drawer Right Side Panel (17), and both ends of the Drawer Back Panel (18). Next, align the drawer arms of the Drawer Glides (S) to the Drawer Side Panels (16 & 17) and secure with Screws (R).

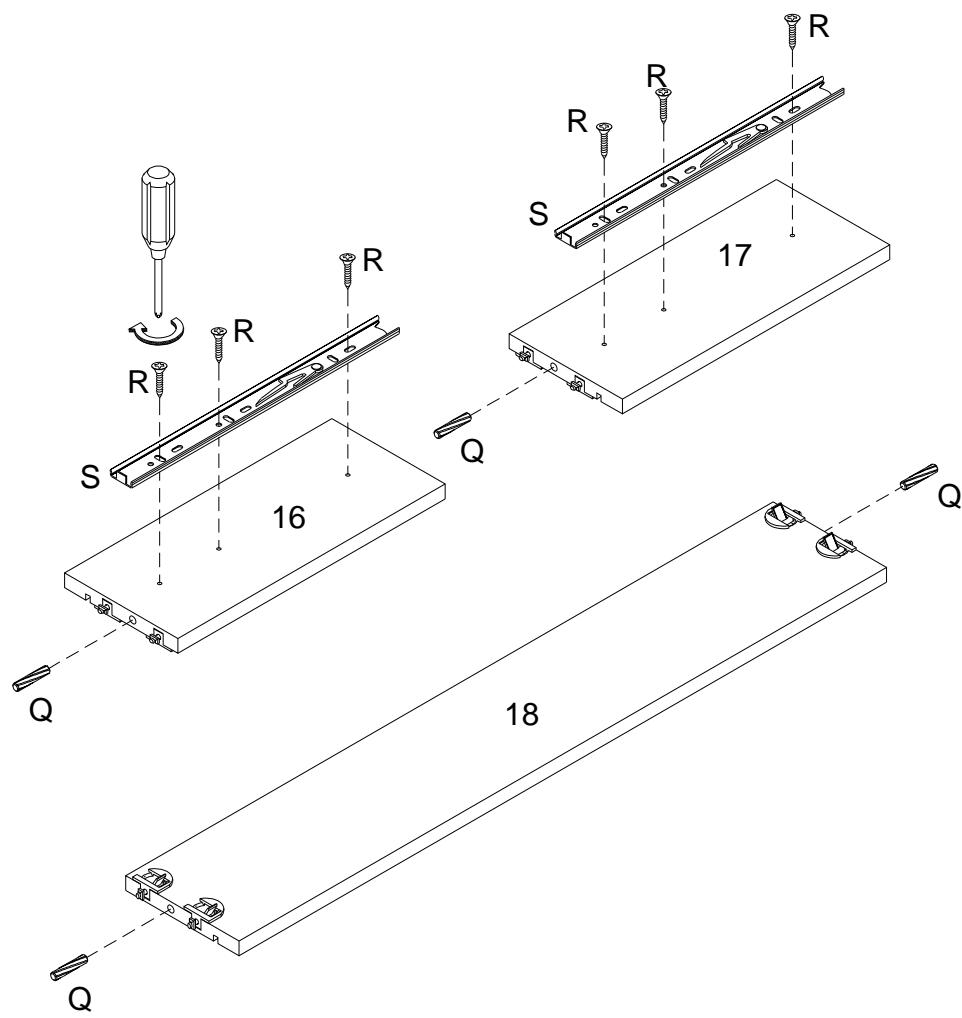


X 2

Step 23


Line up the dowels and pin holes on 16, 17, and 18, then flip the tabs on the back of the Drawer Back Panels (18) to lock them in place.

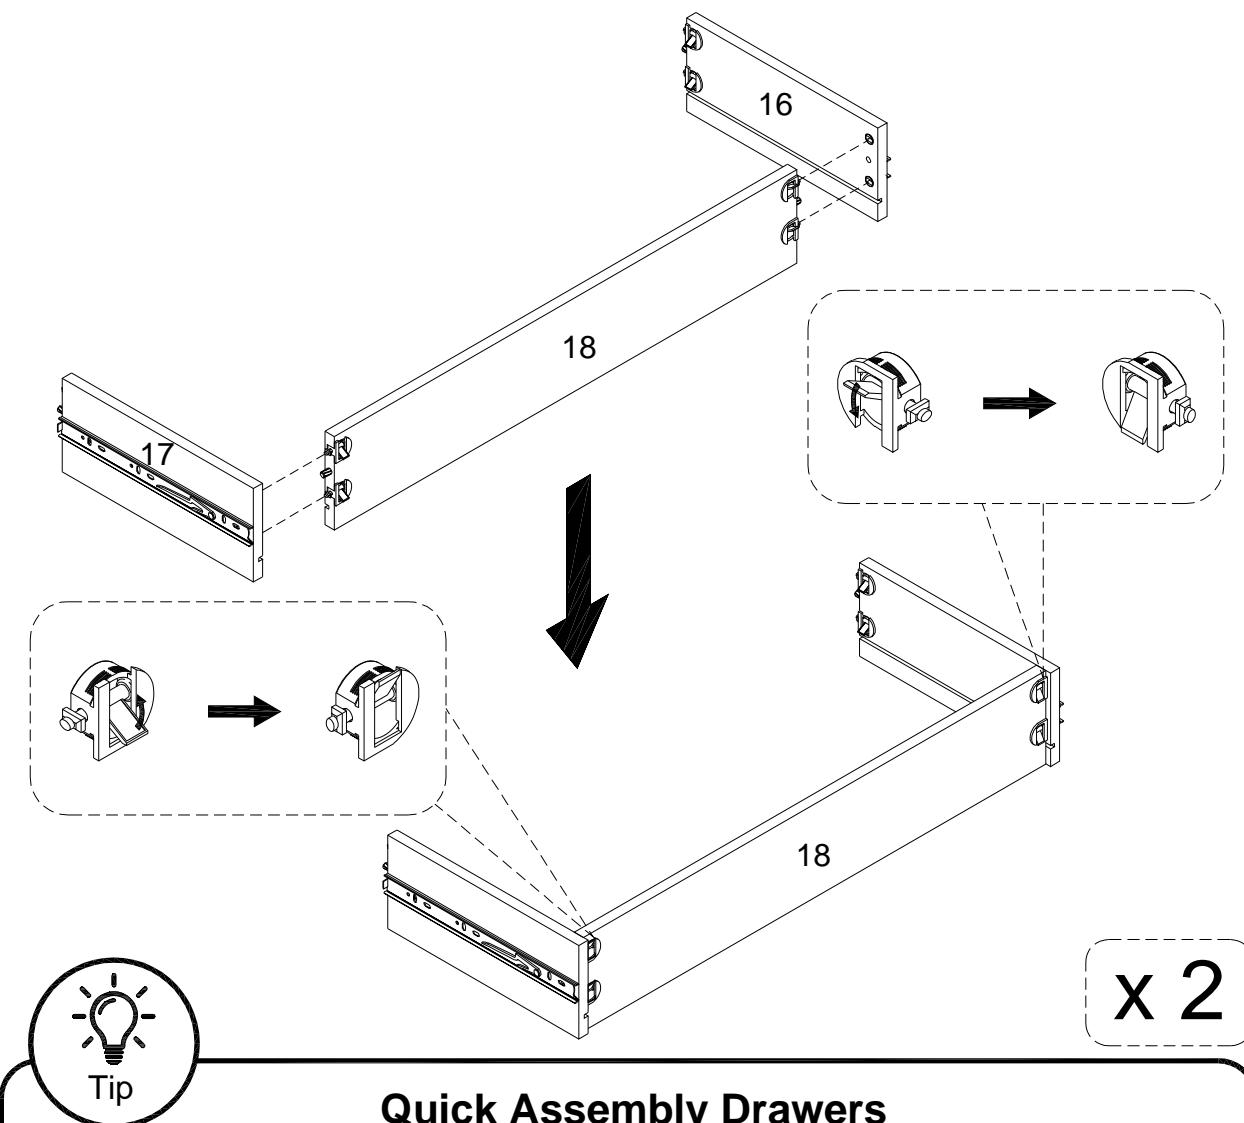

Quick Assembly Drawers

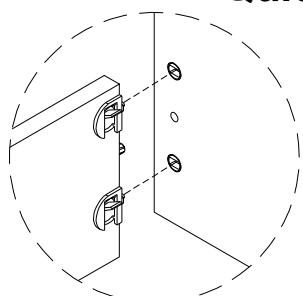


1. Make sure the quick assembly drawer pin is aligned with the corresponding hole.

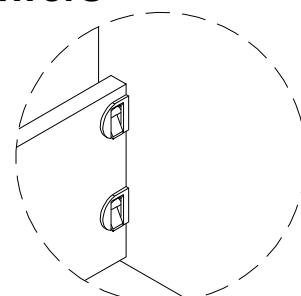

2. Once the pin is inserted correctly, flip the metal lever in the opposite direction to ensure the panels are firmly locked together.

Step 24


Attach Base Cross Bar (20) to Drawer Back Panels (18) flipping toggle to lock.

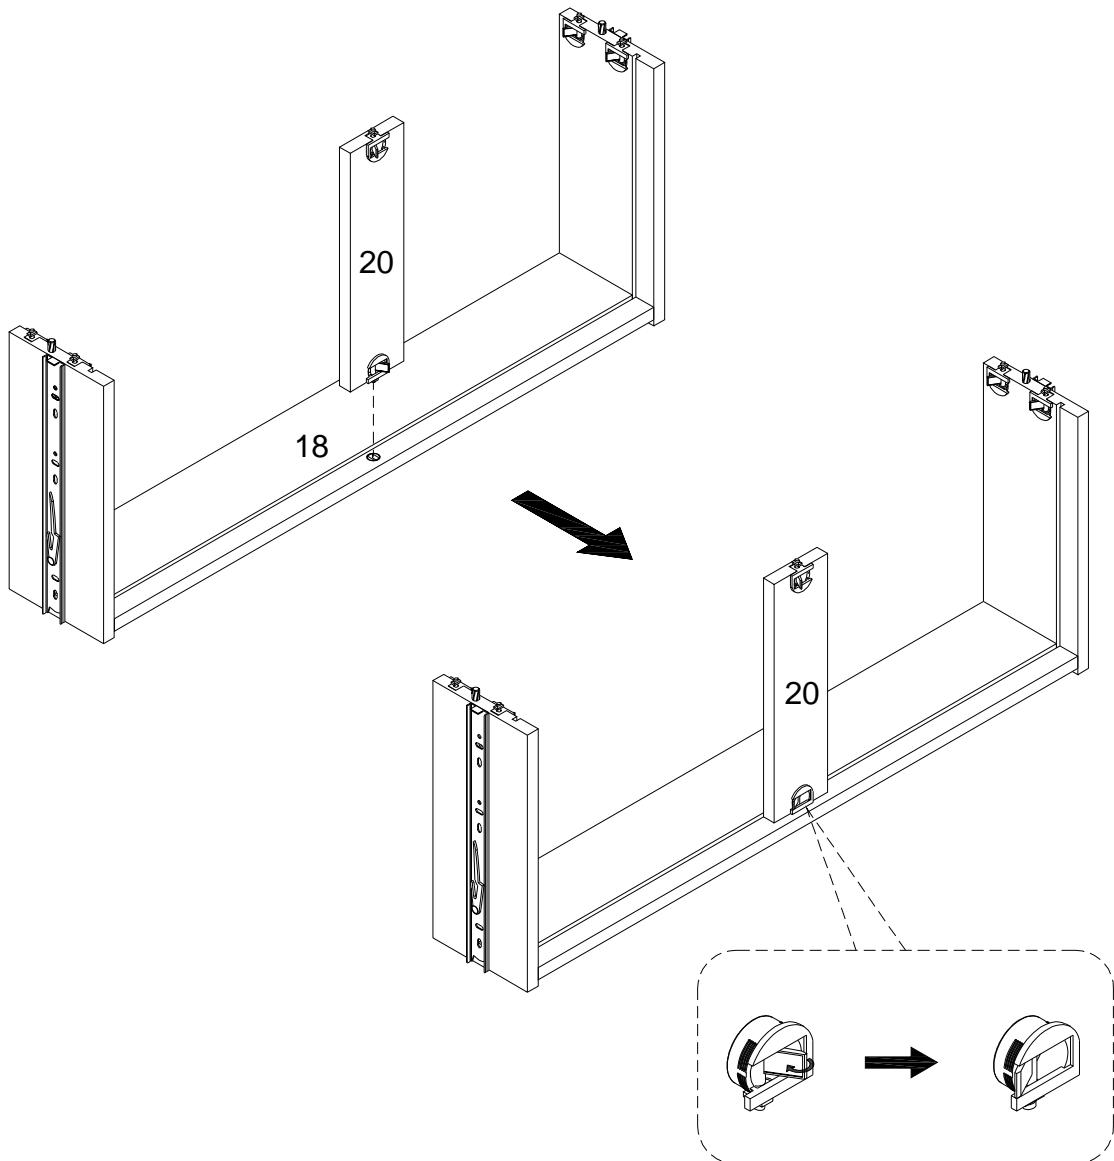

x 2

Step 25


Slide Drawer Bottom Panel (19) into place between grooves on side panels and back panel.

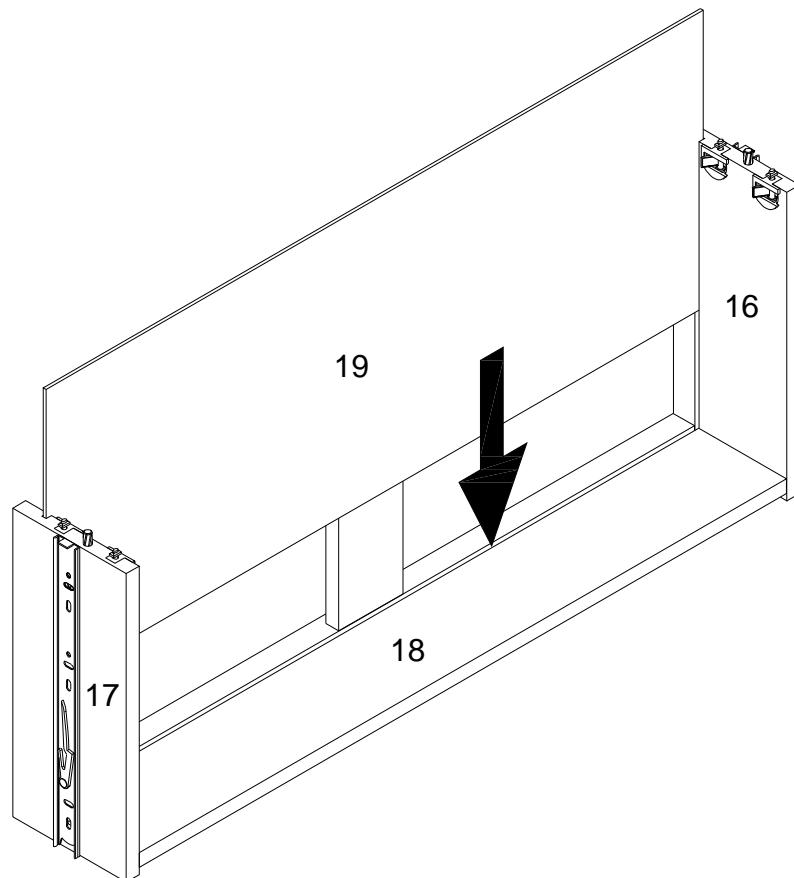

x 2


Step 26

Attach Left Drawer Front Panel (21) to pins located on parts 16,17, and 20. Flip toggle to lock into place.

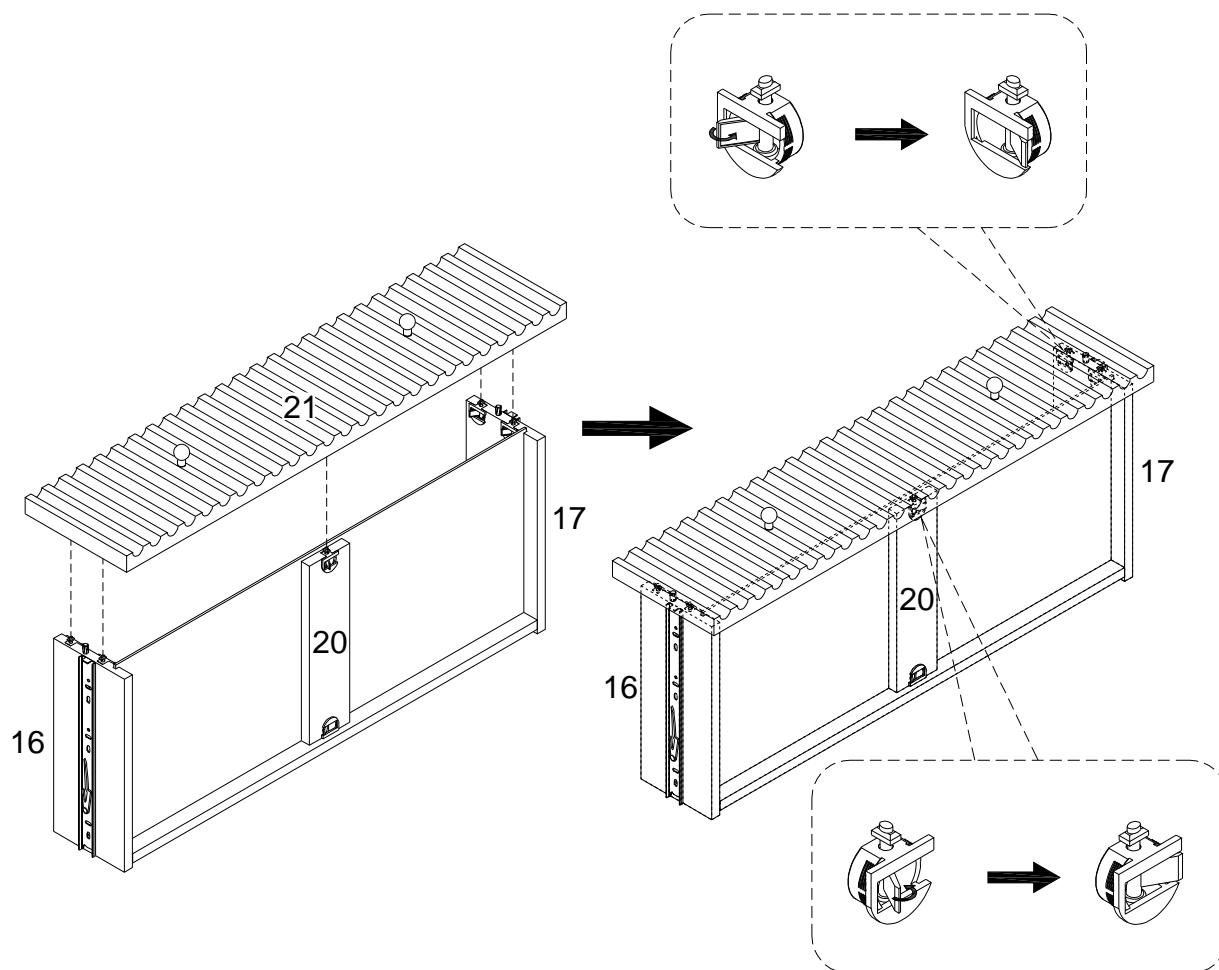


Step 27

Repeat with Right Drawer Front Panel (22).

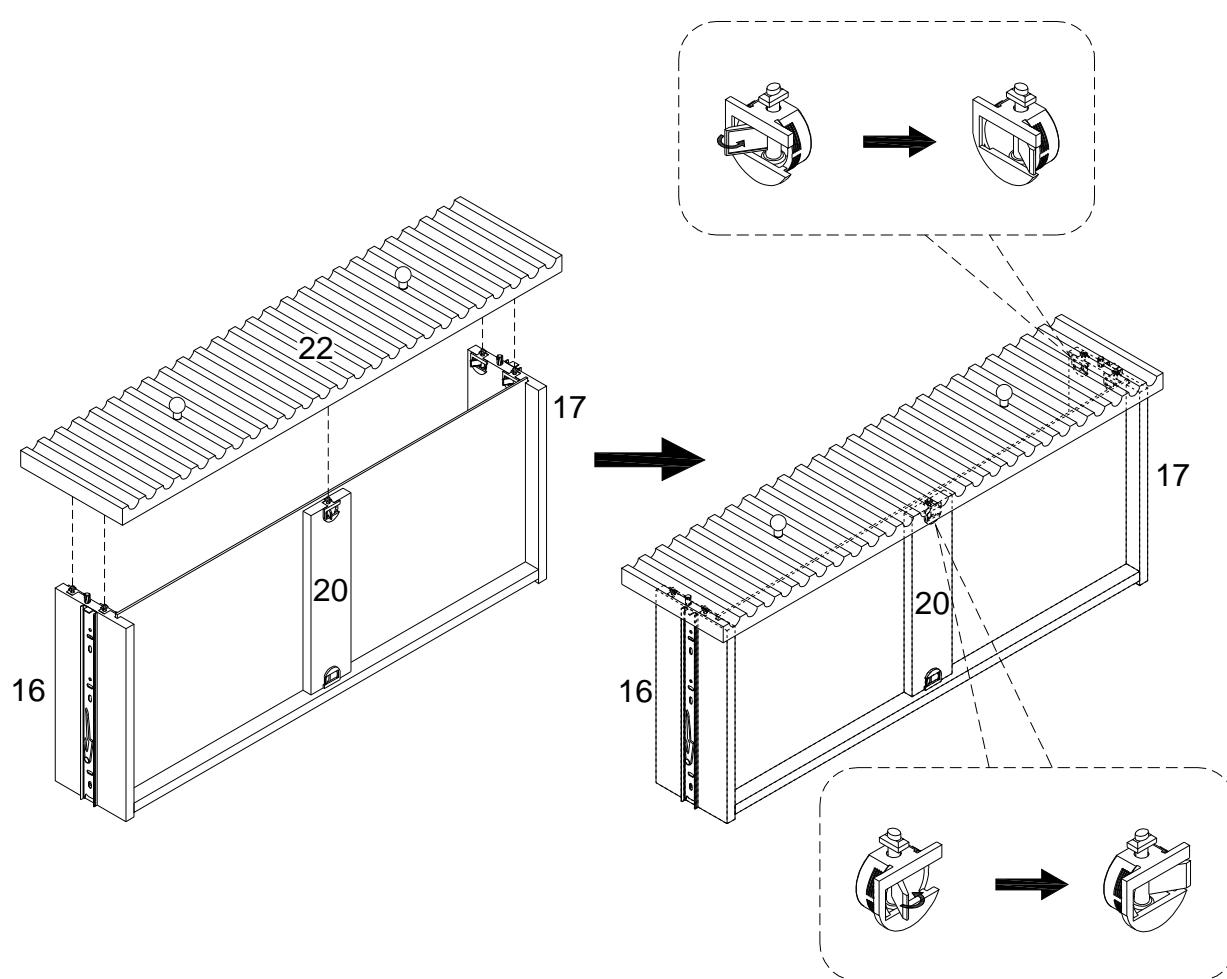

Step 28


Insert drawers into your buffet!

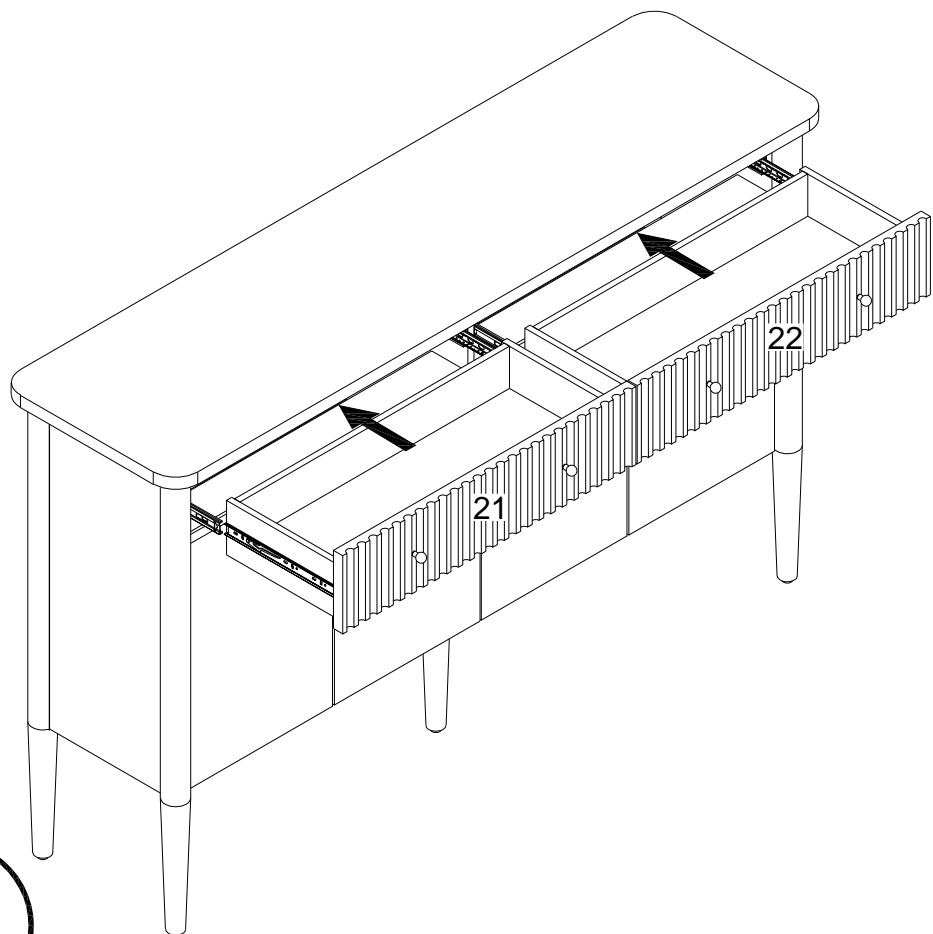

Tip


Reinserting your Cabinet Glides together

Line up the Drawer Member so it is inside the guides of the Cabinet Member. Once the connection is made, push the drawer into place entirely. It may not be a smooth glide on your first try, but will improve after it's fully inserted.

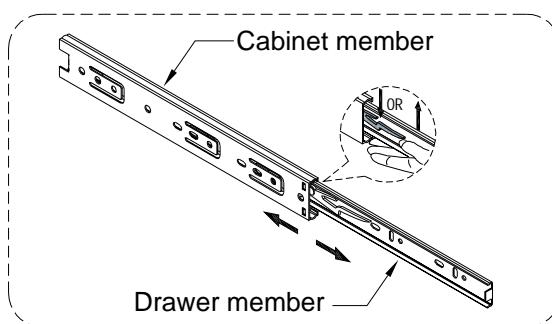


Step 29

Adjust middle foot to keep furniture level with the floor.

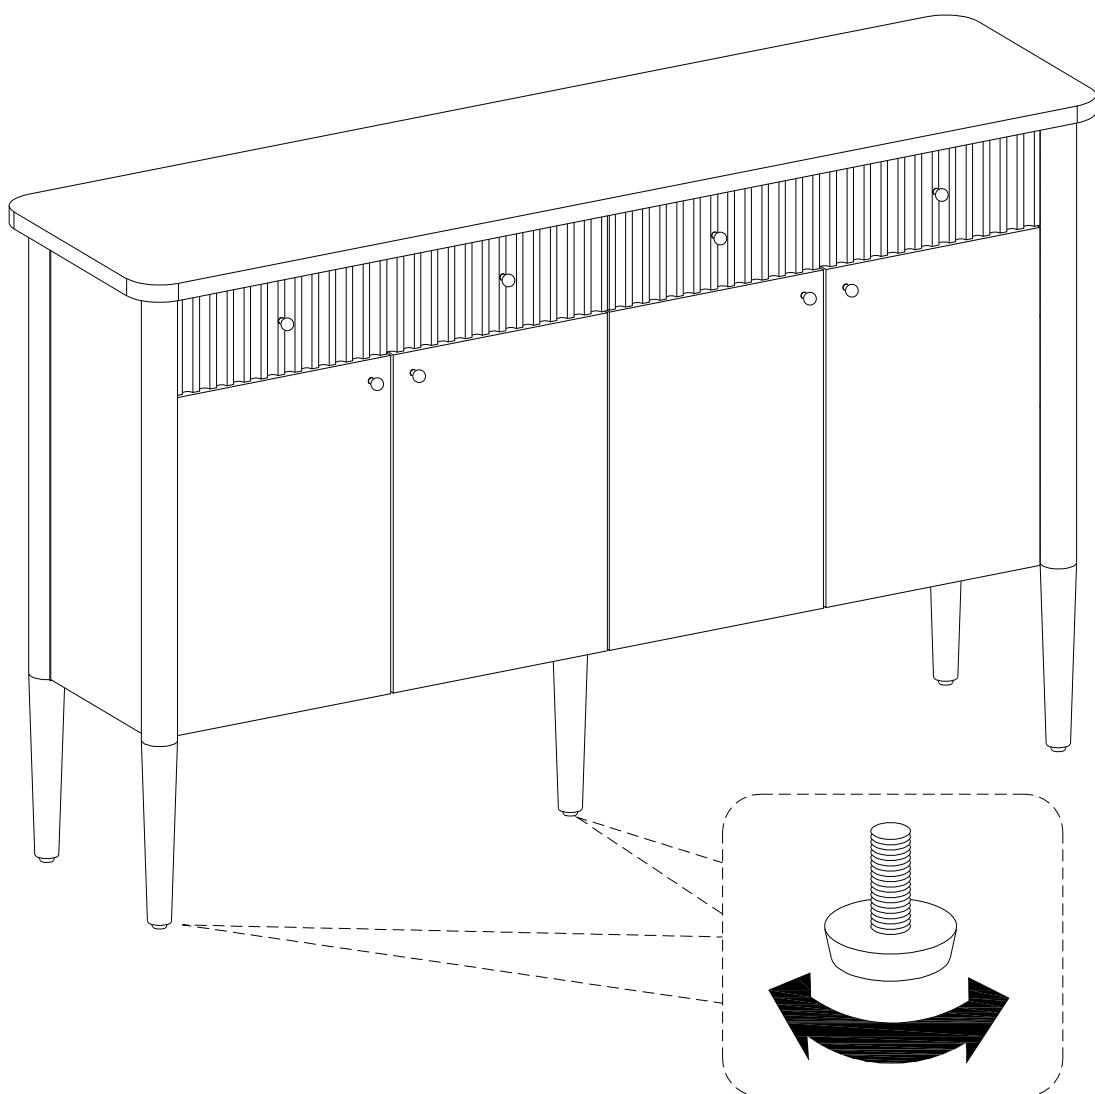


Step 30

Let's install the anti-tip kit! Using the screws (T) to attach the Plastic Stap (V) to the back of the Top Panel (1).

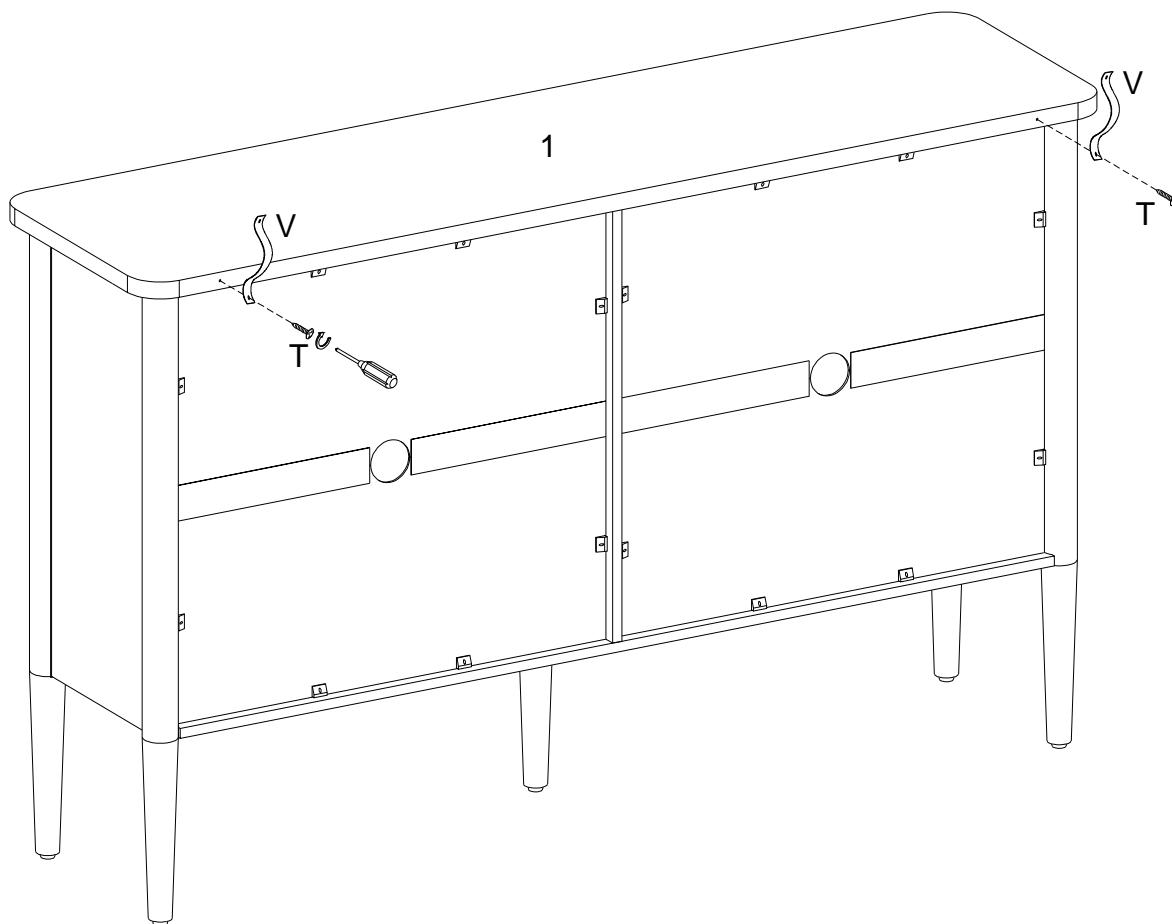

Step 31


Secure the other end of the plastic strap (V) to your wall using the anchor (W) and the screws (U). Now its sturdy and safe!

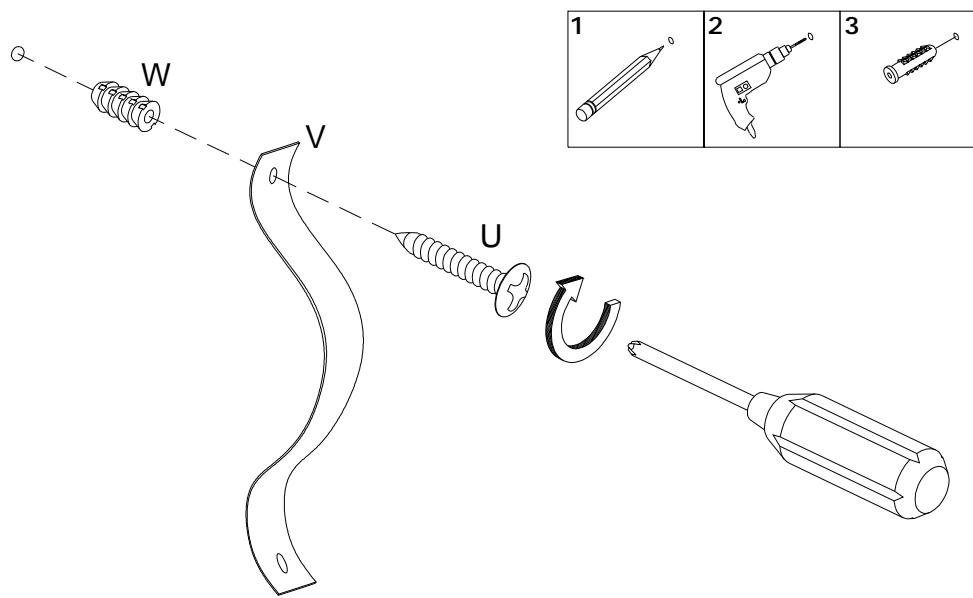

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

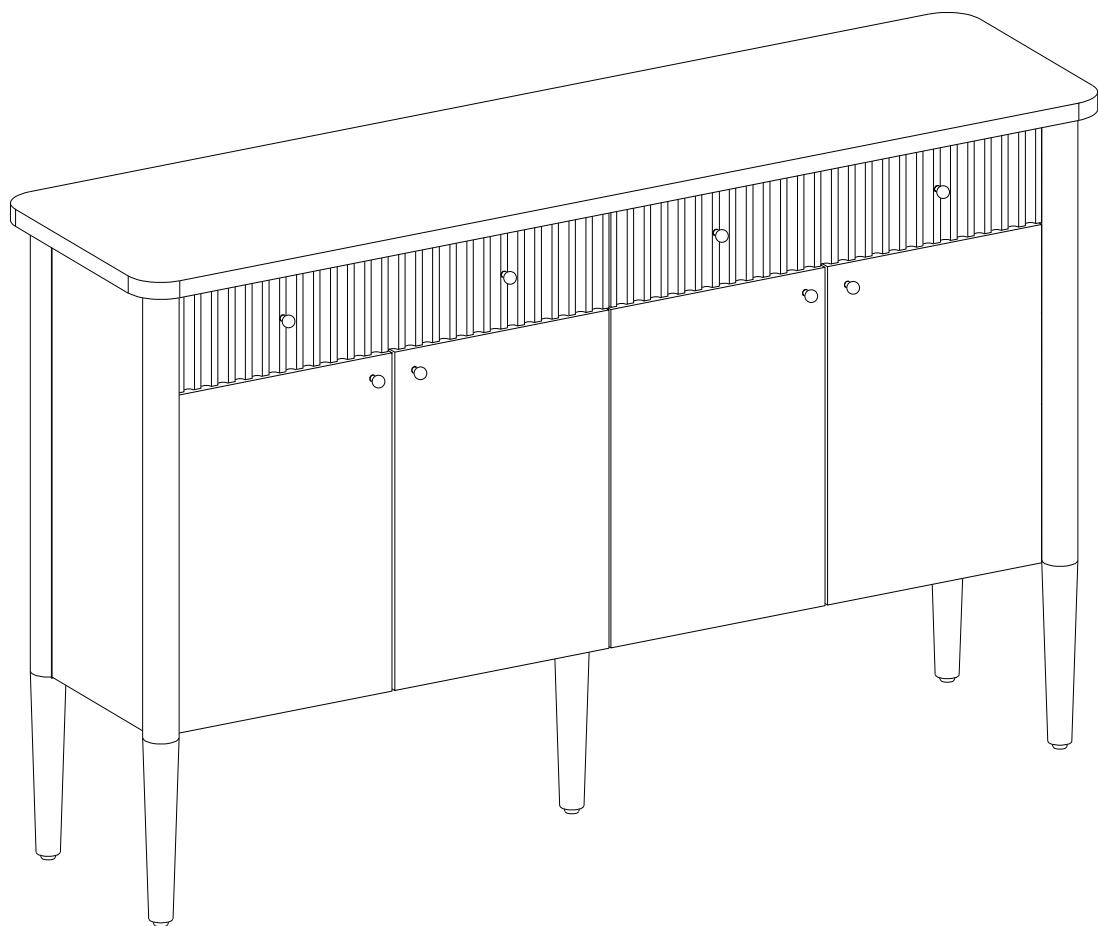

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

