




XO ROTISSERIE - XLT GRILLS

ASSEMBLY AND USE

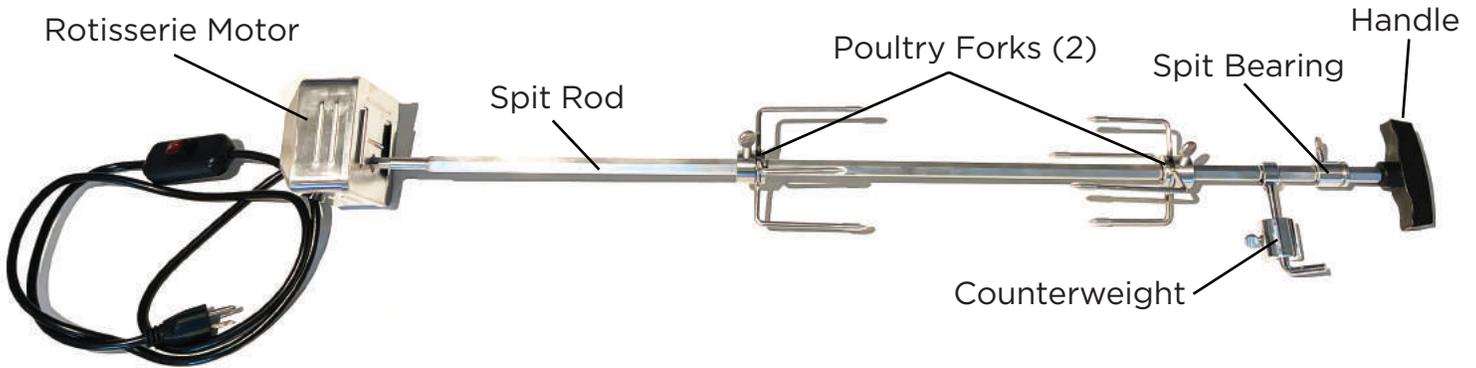

Before beginning, check to make certain all parts are present. If you are missing any parts, contact XO Service.




You will need a phillipshead screw driver to install the motor bracket



and pliers to tighten and loosen the thumbscrews and counterweight. (Do not overtighten.)

The motor bracket attaches to the left hand side of the grill using the screws provided - make certain they are tight - the bracket should not move after installation.

With the hood open, hold the motor bracket against the left side of the grill (as shown) aligning the threaded holes with the screw holes in the side of the grill. Fasten into place by inserting the screws from the inside of the grill.

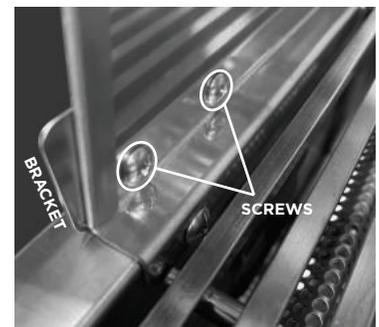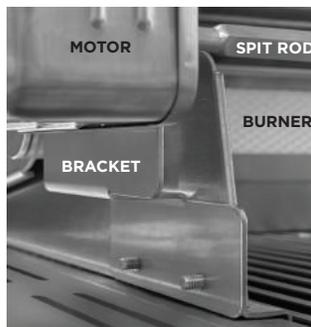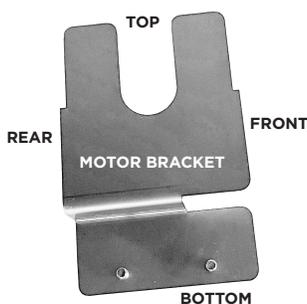

After installing the motor bracket, the motor will slide onto the bracket from the top with the cord pointing out and down and the motor output pointing in toward the center of the grill.

Next assemble the spit rod by screwing the handle onto the threaded end. Slide the spit bearing onto the spit rod and place the rod into its operating position, inserting the square tip into the matching motor output. Insert the rod fully into the motor, position the spit rod bearing so the machined groove rests on the cutout on the right hand side of the grill. Tighten the thumbscrew securely to prevent the spit bearing from moving. Plug the motor in and test it to make certain the rod is turning freely.

