

Assembly Instructions

SKYLINE - QUEEN BED

ITEM NO. B1434-315 SKYLINE 5/0 HEADBOARD, FOOTBOARD & SLAT KIT
B1434-335 SKYLINE 6/6-5/0 EK/Q PANEL SIDE RAILS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

Caution : please read the instruction thoroughly before assembly.


1. We recommended that you assemble this product with the assistance of another person, this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not tighten screws or bolt until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST			
NO.	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1 pc
B	HEADBOARD LEG RIGHT SIDE FACING (RSF) LEG		1 pc
C	HEADBOARD LEG LEFT SIDE FACING (LSF) LEG		1 pc
D	HEADBOARD CROSSBAR		1 pc
E	FOOTBOARD		1 pc
F	RIGHT SIDE FACING (RSF) SIDE RAIL		1 pc
G	LEFT SIDE FACING (LSF) SIDE RAIL		1 pc
H	SLAT		4 pcs
I	SUPPORT LEG		4 pcs
J	CORNER PLATE LEG		2 pcs

HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	QTY
1	JCBB - M8 x 1-9/16"		6 pcs
2	SPRING WASHER - M8		6 pcs
3	FLAT WASHER - M8 x 23/32"		14 pcs
4	JCBB - M8 x 25/32"		8 pcs
5	JCBC - M6 x 1-3/8"		4 pcs
6	SPRING WASHER - M6		8 pcs
7	FLAT WASHER - M6 x 1/2"		8 pcs
8	JCBC - M6 x 20/32"		4 pcs
9	ALLEN KEY - M5		1 pc
10	ALLEN KEY - M4		1 pc
11	PANHEAD SCREW - M4 x 1-3/16"		8 pcs
12	CORNER PLATE		2 pcs

WEIGHT CAPACITY	800 lbs
-----------------	---------

STEP 1 : Assembly the Headboard RSF Leg (B) and Headboard LSF Leg (C) to the Headboard (A) by using Allen Key M5 (9) with hardware 1, 2 and 3.

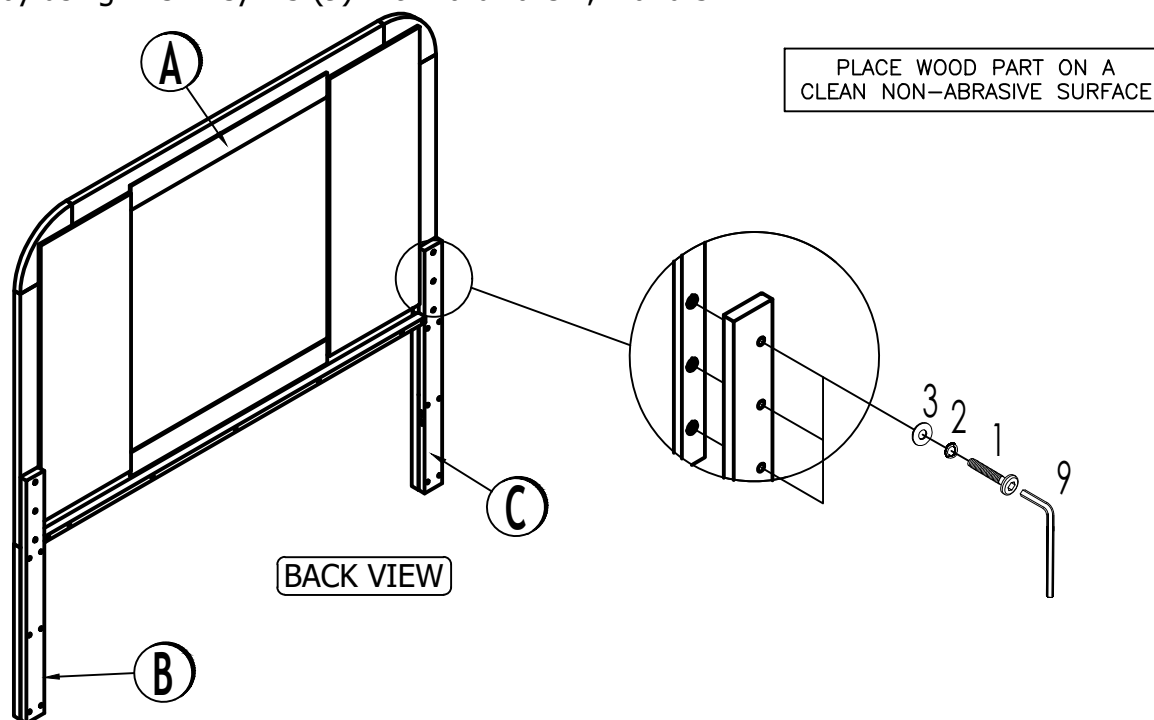

Created date :14/4/2025



Assembly Instructions


SKYLINE - QUEEN BED

ITEM NO. B1434-315 SKYLINE 5/0 HEADBOARD, FOOTBOARD & SLAT KIT
B1434-335 SKYLINE 6/6-5/0 EK/Q PANEL SIDE RAILS


STEP 2 : Assembly the Headboard Crossbar (D) to the Headboard RSF Leg (B) and Headboard LSF Leg (C) by using Allen Key M4 (10) with hardware 5, 6 and 7.

PLACE WOOD PART ON A
CLEAN NON-ABRASIVE SURFACE


BACK VIEW

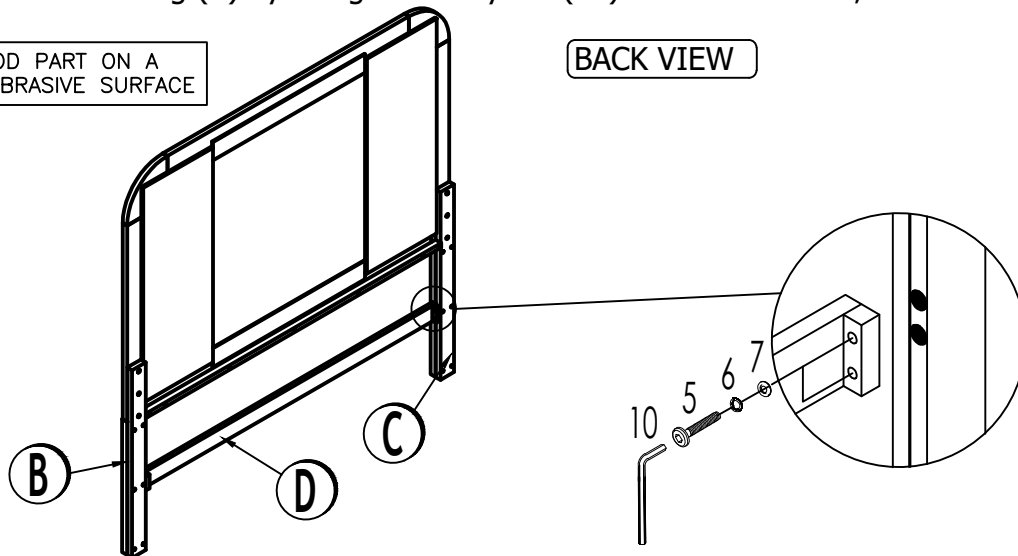

STEP 3 : Assembly the RSF Side Rail (F) and LSF Side Rail (G) to Headboard (A) and Footboard (E) by using Allen Key M5 (9) with hardware 3 and 4.

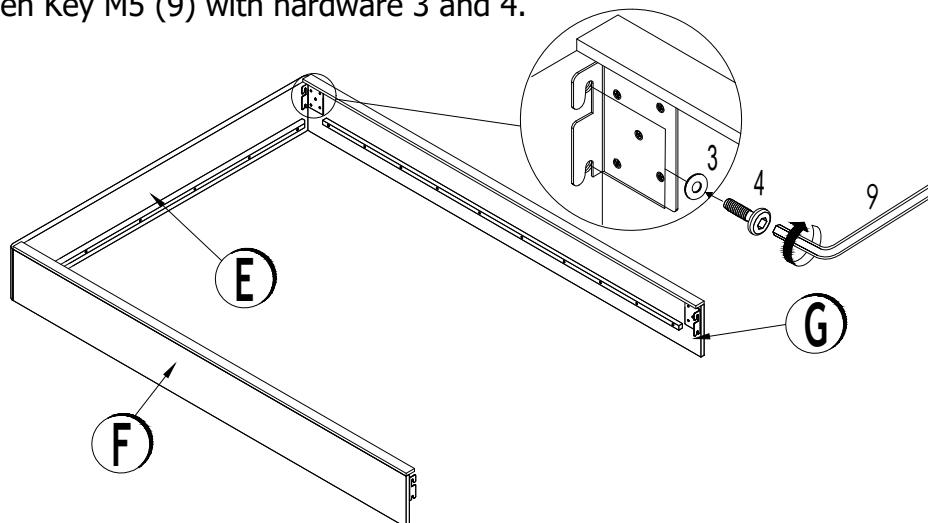

STEP 4 : Attach Corner Plate Leg (J) to Corner Plate (12)

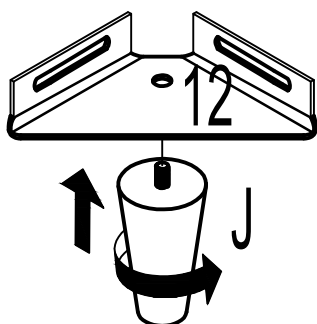


Assembly Instructions


SKYLINE - QUEEN BED

ITEM NO. B1434-315 SKYLINE 5/0 HEADBOARD, FOOTBOARD & SLAT KIT
B1434-335 SKYLINE 6/6-5/0 EK/Q PANEL SIDE RAILS

STEP 5 : Assembly the Corner Plate (12) to the RSF Side Rail (F) and the Footboard (E) by using Allen key M4 (10) with hardware 6,7 and 8. Repeat to assemble the Corner Plate (12) to the LSF Side Rail (G) and the Footboard (E).

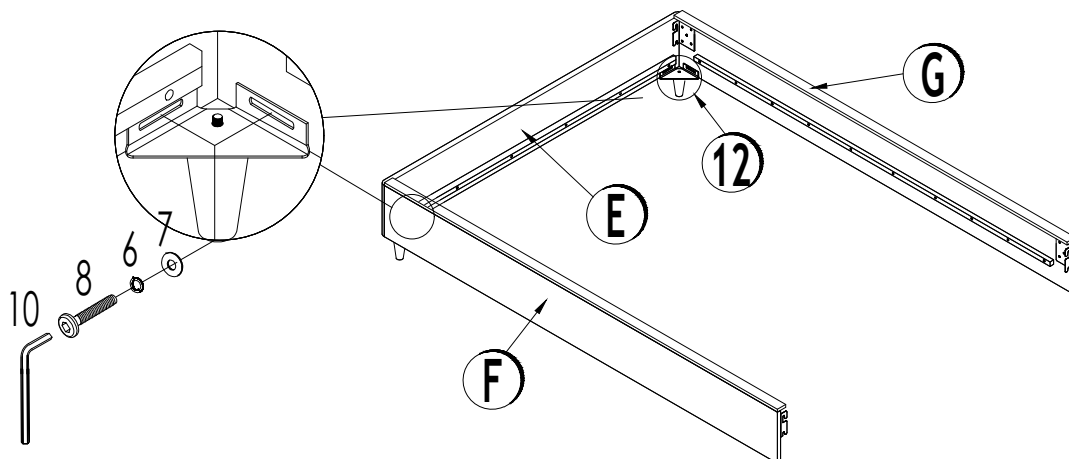

STEP 6 : Assembly the RSF Side Rail (F) and LSF Side Rail (G) to Headboard (A) by using Allen Key M5 (9) with hardware 3 and 4.

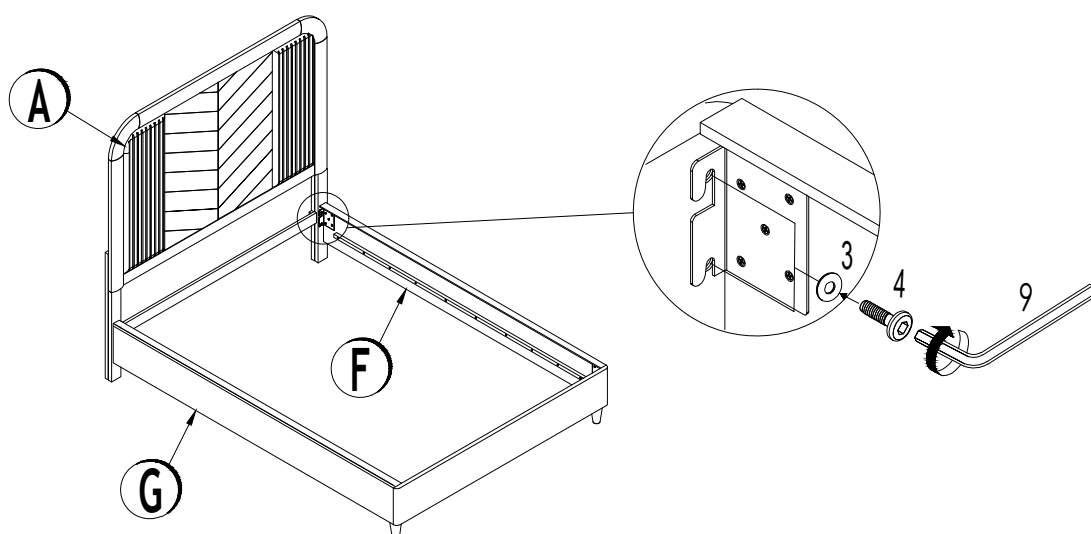


Assembly Instructions

SKYLINE - QUEEN BED

ITEM NO. B1434-315 SKYLINE 5/0 HEADBOARD, FOOTBOARD & SLAT KIT
B1434-335 SKYLINE 6/6-5/0 EK/Q PANEL SIDE RAILS

STEP 7 : Assembly the Support Leg (I) into to the Slat (H).

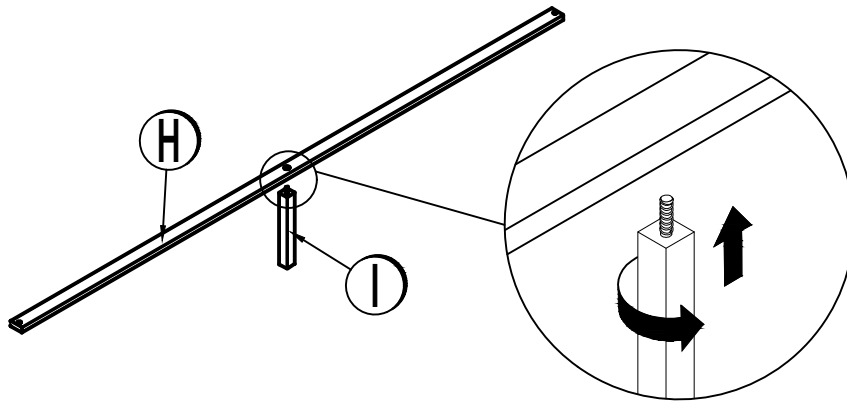

STEP 8 : Assembly the Slat (H) to the RSF Side Rails (F) and LSF Side Rail (G) by using a screwdriver with hardware 11.

