



Installation Guide

Wall-Mount Lavatory Faucet Trim


K-T14412

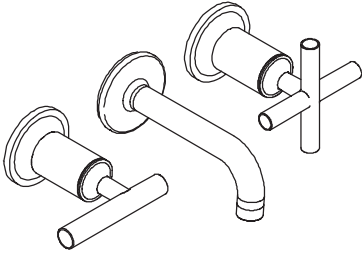


K-T14413

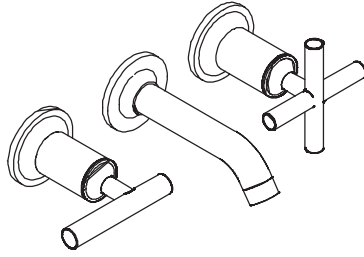


K-T14414

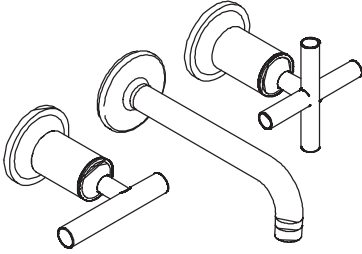


K-T14415

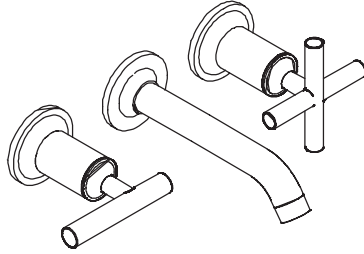

K-T14416

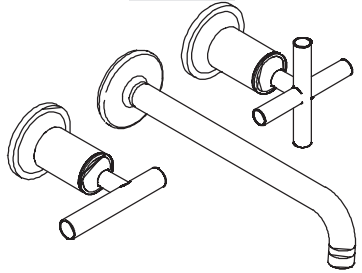

K-T14417

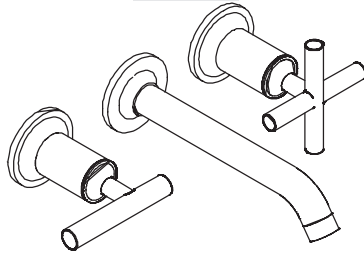

M product numbers are for Mexico (i.e. K-12345**M**)
Los números de productos seguidos de
M corresponden a México (Ej.
K-12345**M**)
Français, page "Français-1"
Español, página "Español-1"


1013994-2-C

THE BOLD LOOK
OF **KOHLER**®

Tools and Materials



Phillips
Screwdriver

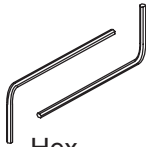

Hex
Wrench




Plumbers
Putty

Thank You For Choosing Kohler Company

We appreciate your commitment to Kohler quality. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us. Our phone numbers and website are listed on the back cover. Thanks again for choosing Kohler Company.

Before You Begin


- Shut off the main water supply.
- Observe all local plumbing and building codes.
- If needed, complete the finished wall before beginning this installation.
- Kohler Co. reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

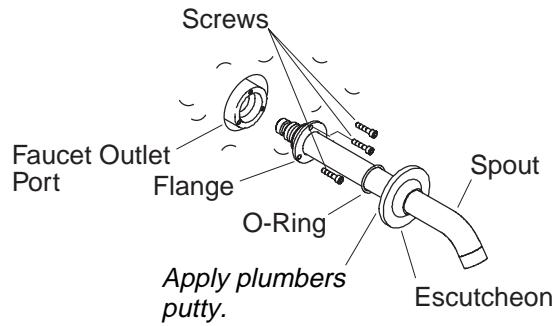

1. Install the Spout

IMPORTANT! Use care when installing the spout to avoid scratching the finish.

- Thread the spout into the spout shank until it is snug. If needed, adjust the spout slightly to position it so it points straight down.
- Secure the spout in place by tightening the flange with the screws provided.
- Confirm that the O-ring is inside the escutcheon.
- Apply plumbers putty or other sealant to the back surface of the spout escutcheon according to the putty manufacturer's instructions.
- Carefully slide the spout escutcheon over the spout and press firmly against the finished wall.
- Remove any excess putty or sealant.

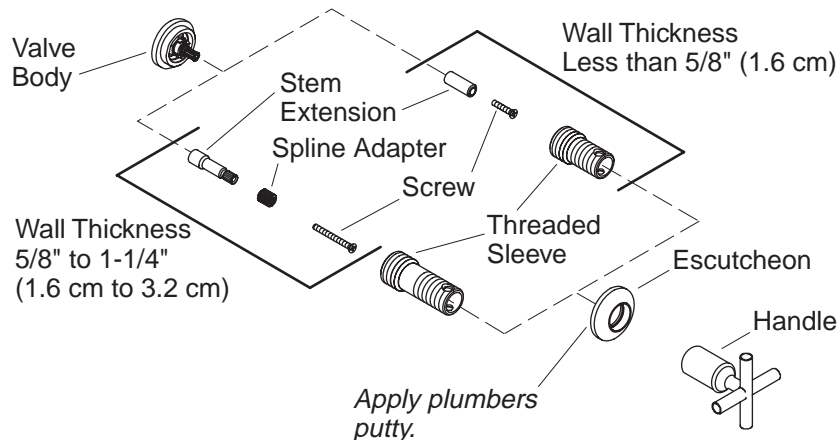


2. Install the Handles

NOTE: If the finished wall is less than 5/8" (1.6 cm) thick, no spline adapter will be used with the installation.

- Determine the thickness of the finished wall.
- If the finished wall is less than 5/8" (1.6 cm) thick, use the 1" (2.5 cm) long stem extension, 7/8" (2.2 cm) long screw, and the 2" (5.1 cm) long threaded sleeve.
- If the finished wall is 5/8" (1.6 cm) to 1-1/4" (3.2 cm) thick, use the 1038270 hardware kit supplied.
- If applicable, slide a spline adapter onto the stem extension.
- Place a stem extension on the valve stem. Secure with the screw provided.
- Thread a threaded sleeve onto the valve body.
- Apply plumbers putty or other sealant to the back of the escutcheon according to the putty manufacturer's instructions.
- Thread an escutcheon onto the threaded sleeve. Remove any excess putty or sealant.
- Press a handle over the stem extension and move the handle to the closed position (Hot = Counterclockwise, Cold = Clockwise). Lever handles should be horizontal when closed.

Install the Handles (cont.)

- If adjustment is needed to achieve the desired handle alignment, remove the handle, screw and spline adapter or stem extension. Turn the spline adapter 1/4 turn. Check the handle position. Repeat the procedure until the proper handle position is achieved. Secure with the screw.
- Thread the handle assembly onto the escutcheon. To maintain the proper handle alignment, hold the handle in place with one hand and turn the base of the handle with the other hand.
- Repeat the procedures with the second handle.

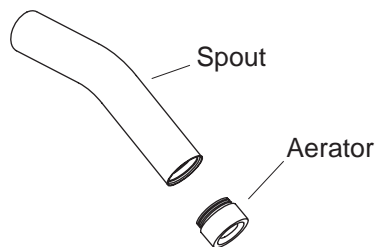

3. Complete the Installation

- Ensure that both faucet handles are turned off (hot = counterclockwise to close, cold = clockwise to close).
- Turn on the water supplies and check the installation for leaks.
- Repair as needed.
- Remove the aerator.
- Open the valves and run water through the spout for about a minute to remove any debris. Check for leaks.
- Remove all debris from the aerator.
- Turn the valves off, and reinstall the aerator.