


BRENTWOOD UPH QUEEN/KING PANEL BED ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS


BOX #1

- A. HEADBOARD 1 PC
- B. LEFT HEADBOARD LEG 1 PC
- C. RIGHT HEADBOARD LEG 1 PC
- D. STRETCHER 1 PC

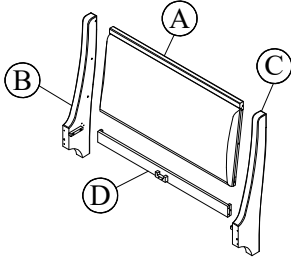


BOX #2

- E. FOOTBOARD 1 PC
- F. SLAT ROLL 1 SET

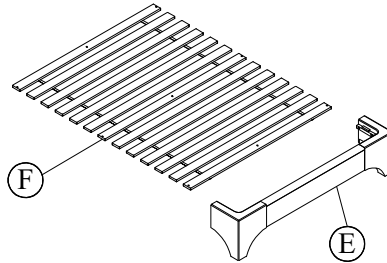


BOX #3

- G. LEFT SIDE RAIL 1 PC
- H. RIGHT SIDE RAIL 1 PC
- I. LOWER CENTER SLAT SUPPORT 1 PC
- J. UPPER CENTER SLAT SUPPORT 1 PC
- K. SUPPORT LEG 3 PCS

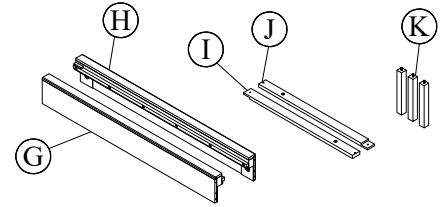

FULLY ASSEMBLED



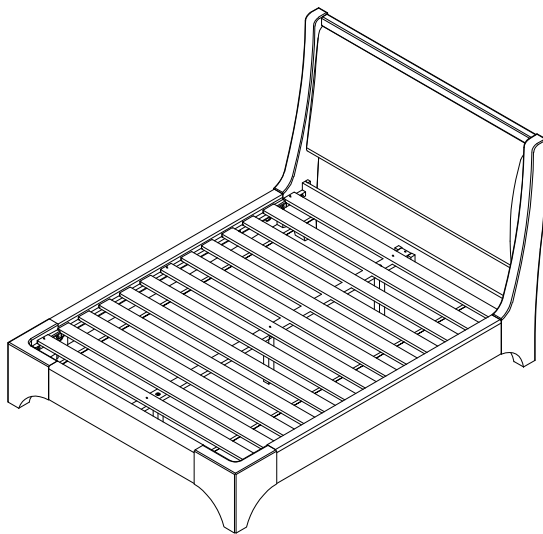


HARDWARE KIT PACKED IN BOX #1

NO.	DESCRIPTION	IMAGE	QTY
1	THREADED BOLT (5/16"x80mm)		4 PCS
2	THREADED HALF MOON WASHER NUT (5/16")		4 PCS
3	ALLEN BOLT (5/16"x40mm)		4 PCS
4	SPRING WASHER (5/16")		4 PCS
5	FLAT WASHER (5/16")		4 PCS
6	METAL DOWEL (8x40mm)		4 PCS
7	ALLEN KEY		1 PC
8	WRENCH		1 PC


HARDWARE KIT PACKED IN BOX #2

NO.	DESCRIPTION	IMAGE	QTY
9	THREADED BOLT (5/16"x80mm)		4 PCS
10	THREADED HALF MOON WASHER NUT (5/16")		4 PCS
11	WRENCH		1 PC
12	METAL DOWEL (8x40mm)		8 PCS
13	WOOD SCREW (4x30mm)		11 PCS
14	ALLEN KEY		1 PC




BRENTWOOD UPH QUEEN/KING PANEL BED ASSEMBLY INSTRUCTIONS


STEP 1

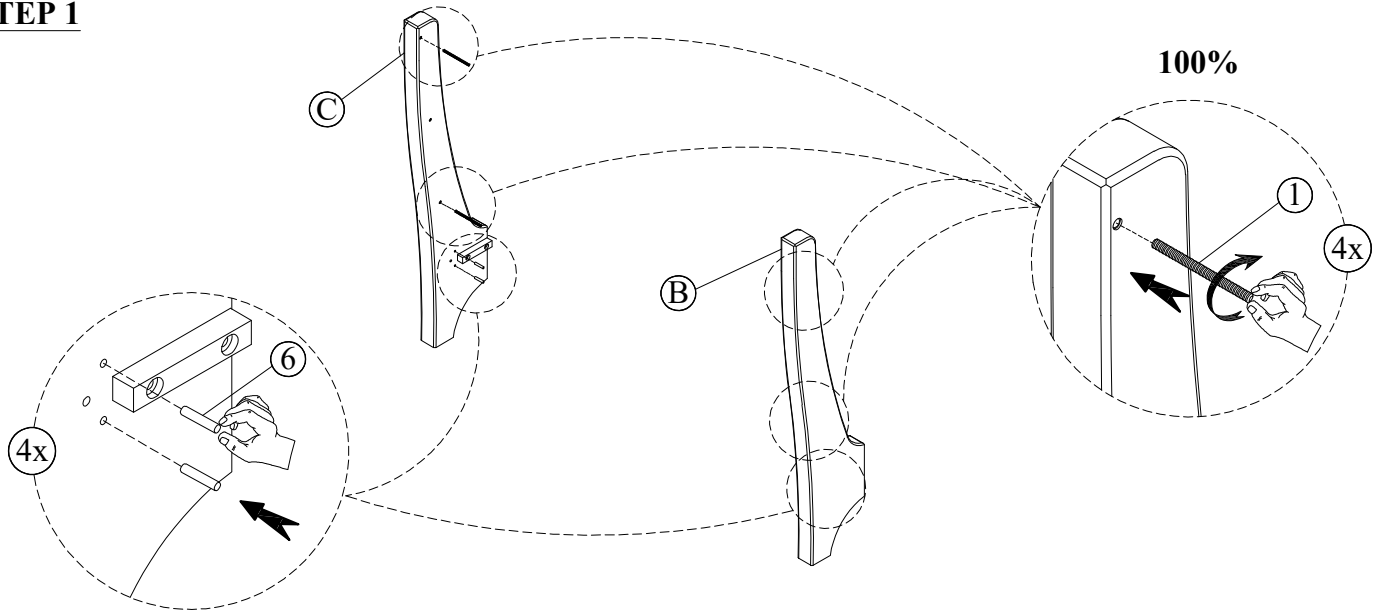

STEP 2

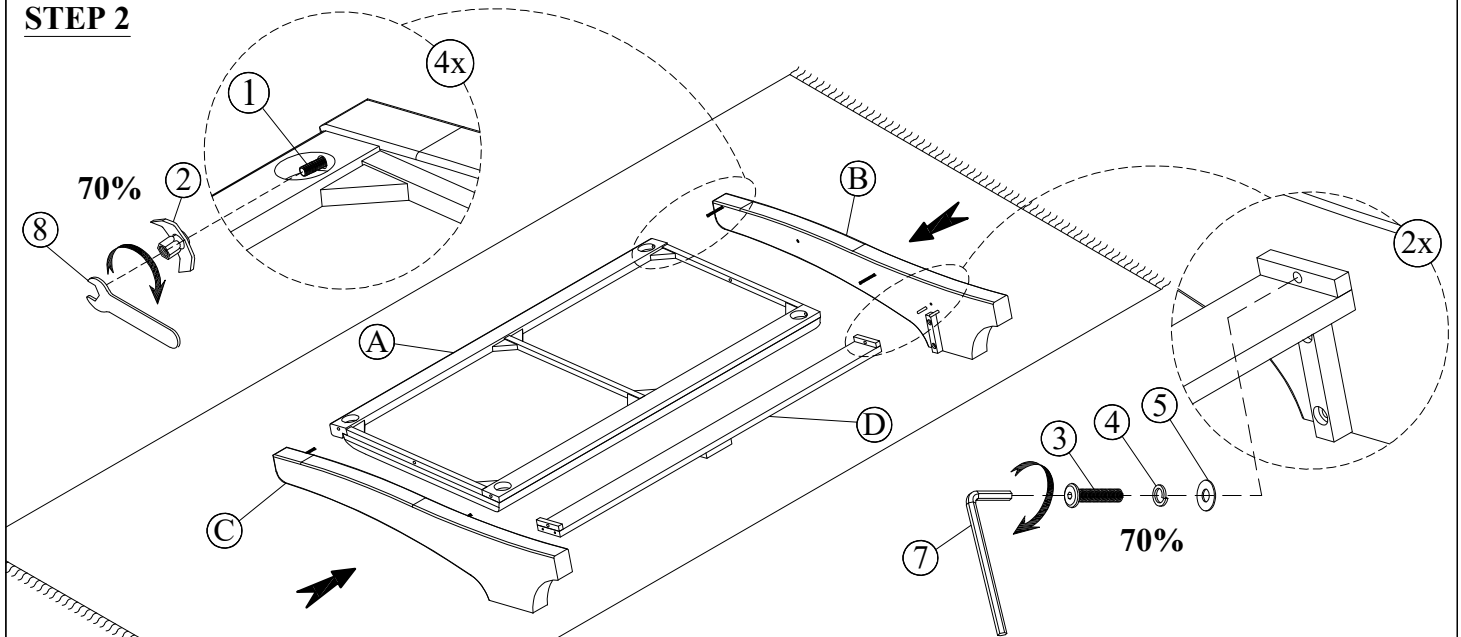


STEP 3

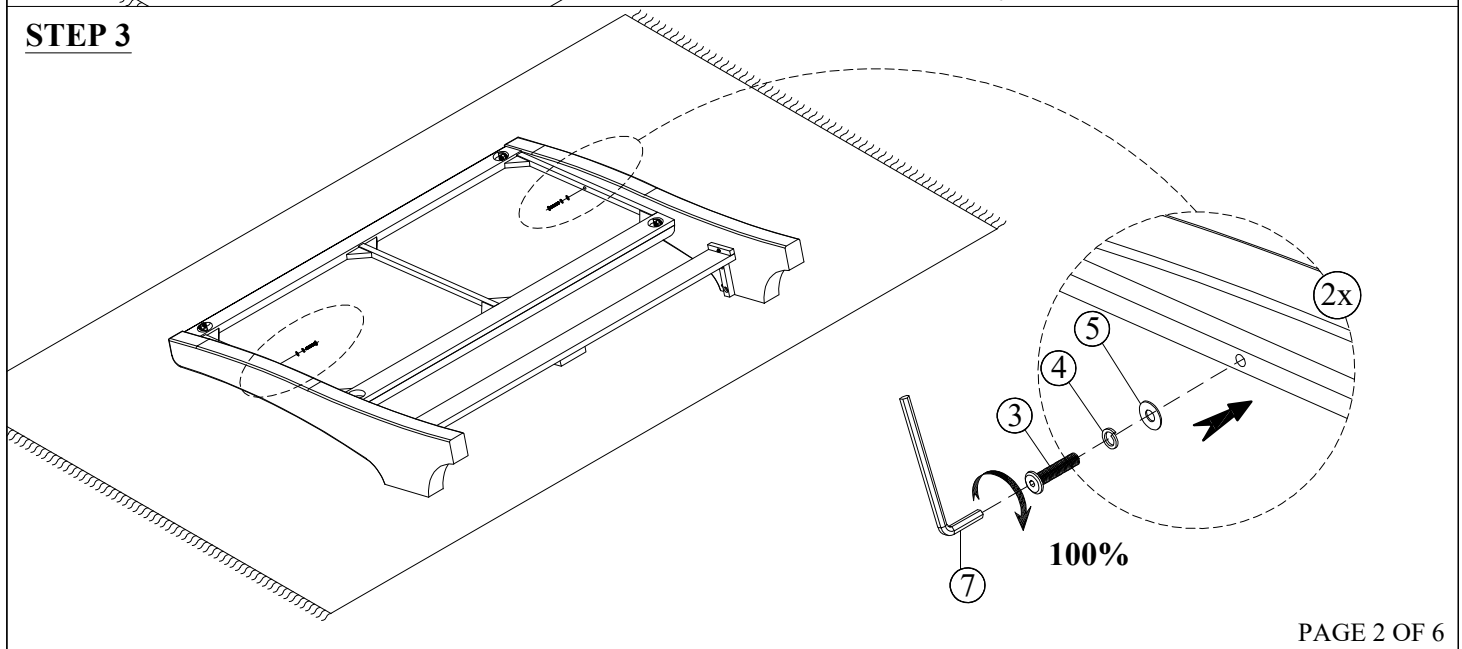


BRENTWOOD UPH QUEEN/KING PANEL BED ASSEMBLY INSTRUCTIONS


STEP 4

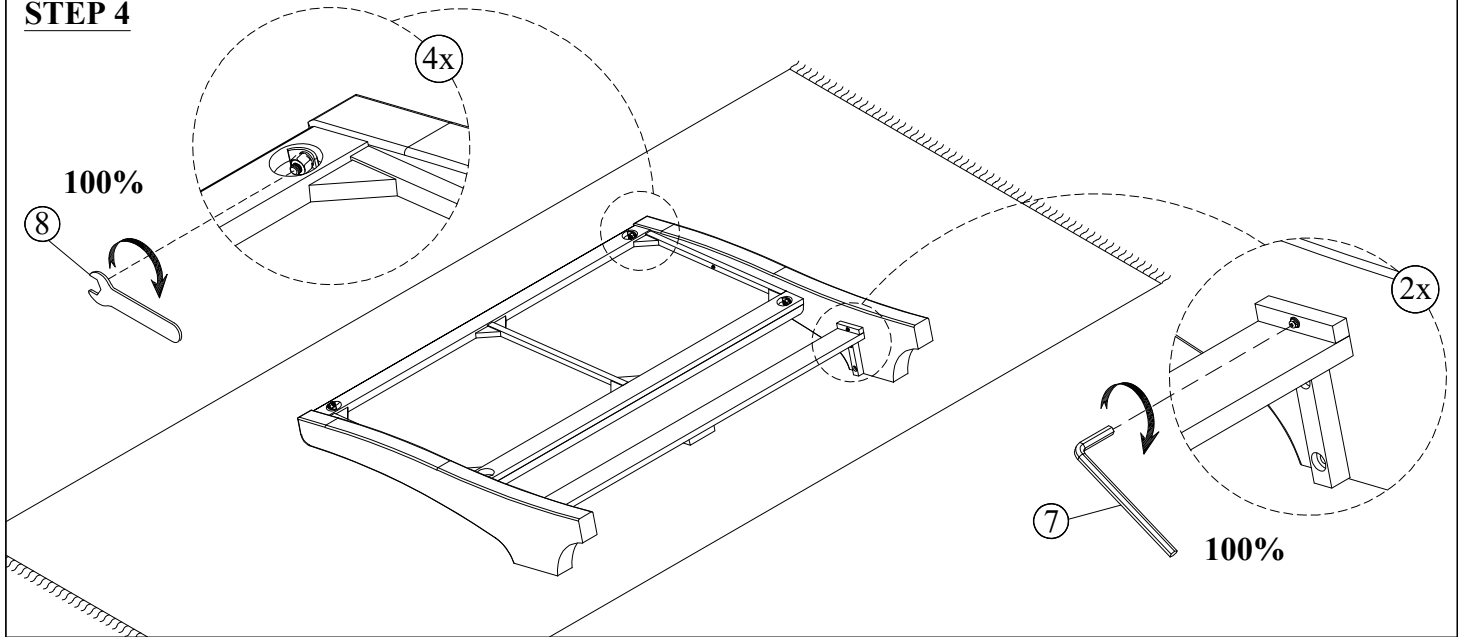

STEP 5

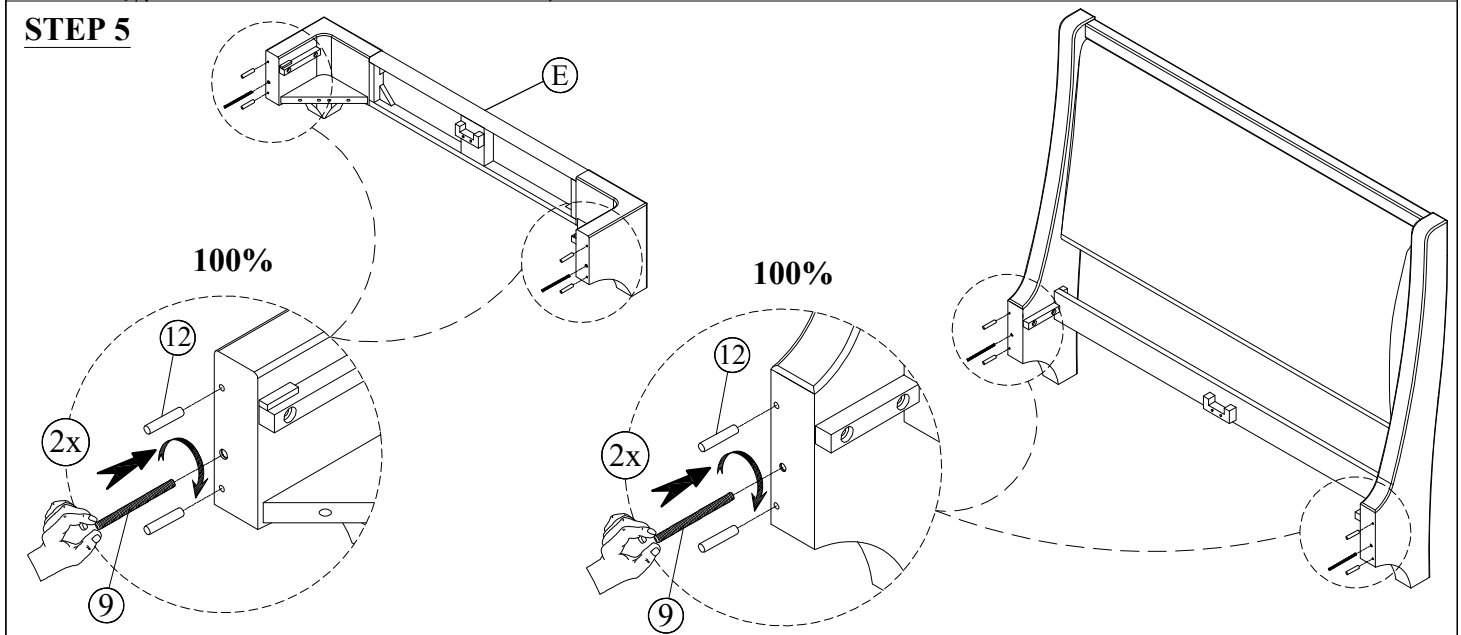

STEP 6

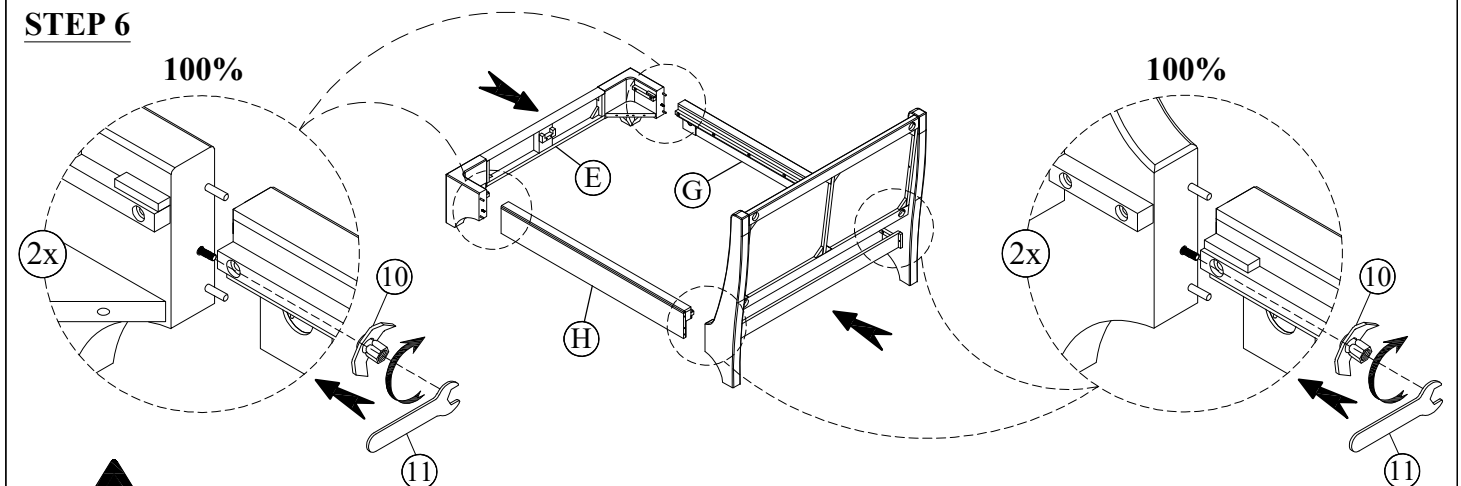


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 7, 8 & 9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 7


BRENTWOOD UPH QUEEN/KING PANEL BED ASSEMBLY INSTRUCTIONS




STEP 7

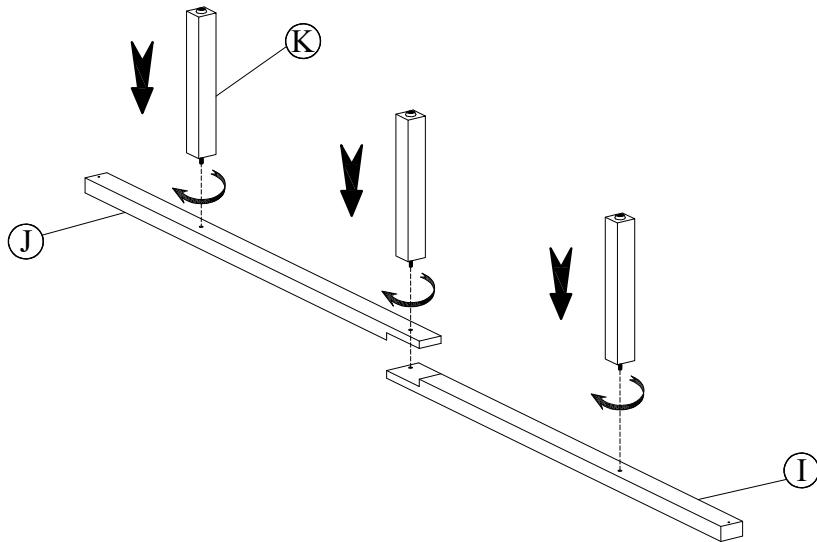

STEP 8

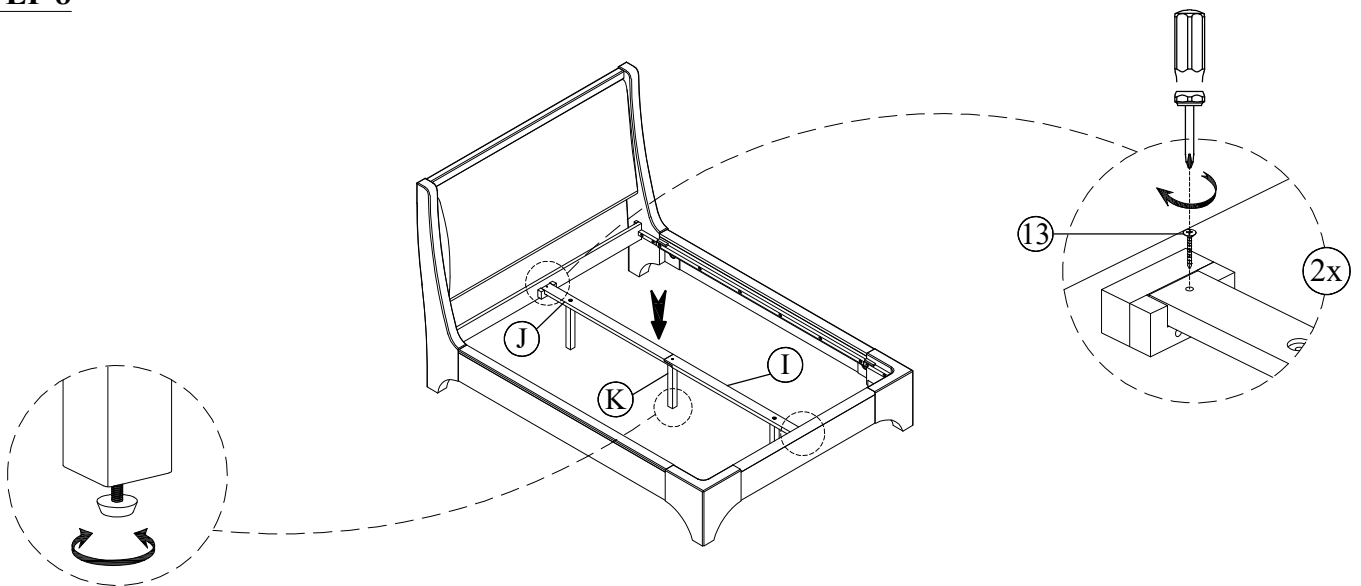

STEP 9

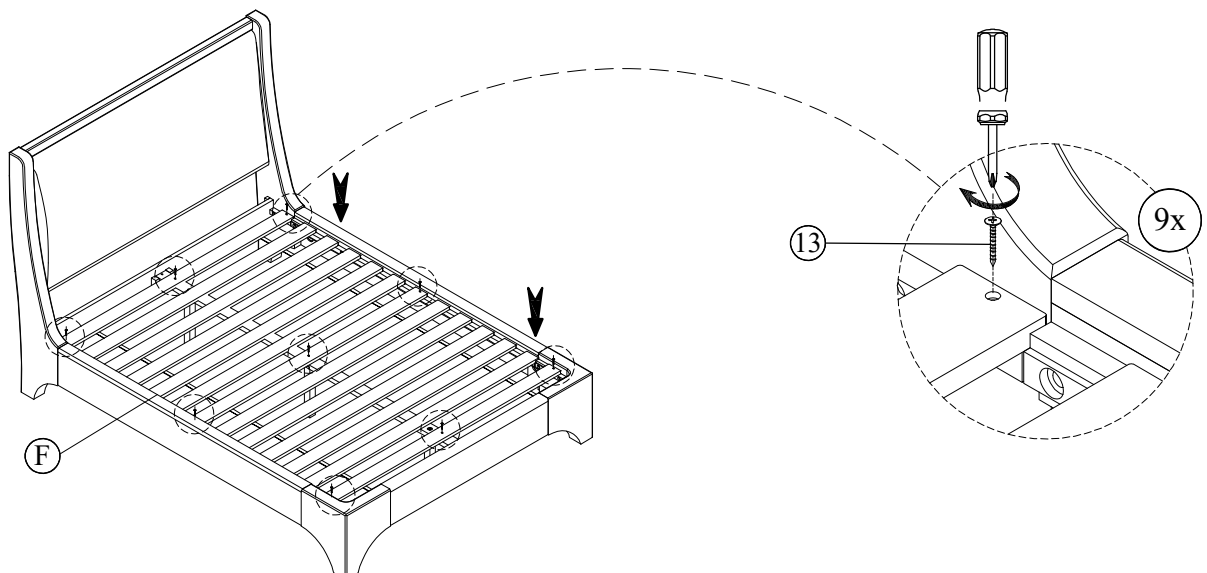

BRENTWOOD UPH QUEEN/KING PANEL BED ASSEMBLY INSTRUCTIONS



ASSEMBLY COMPLETE


PAGE 5 OF 6

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support.

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

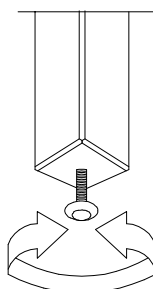

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BRENTWOOD UPH QUEEN/KING PANEL BED



ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	: 1 SET	*WOOD SCREW (4x30mm)	:11 PCS
I. LOWER CENTER SLAT SUPPORT	: 1 PC		
J. UPPER CENTER SLAT SUPPORT	: 1 PC		
K. SUPPORT LEG	: 3 PCS		

STEP #1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

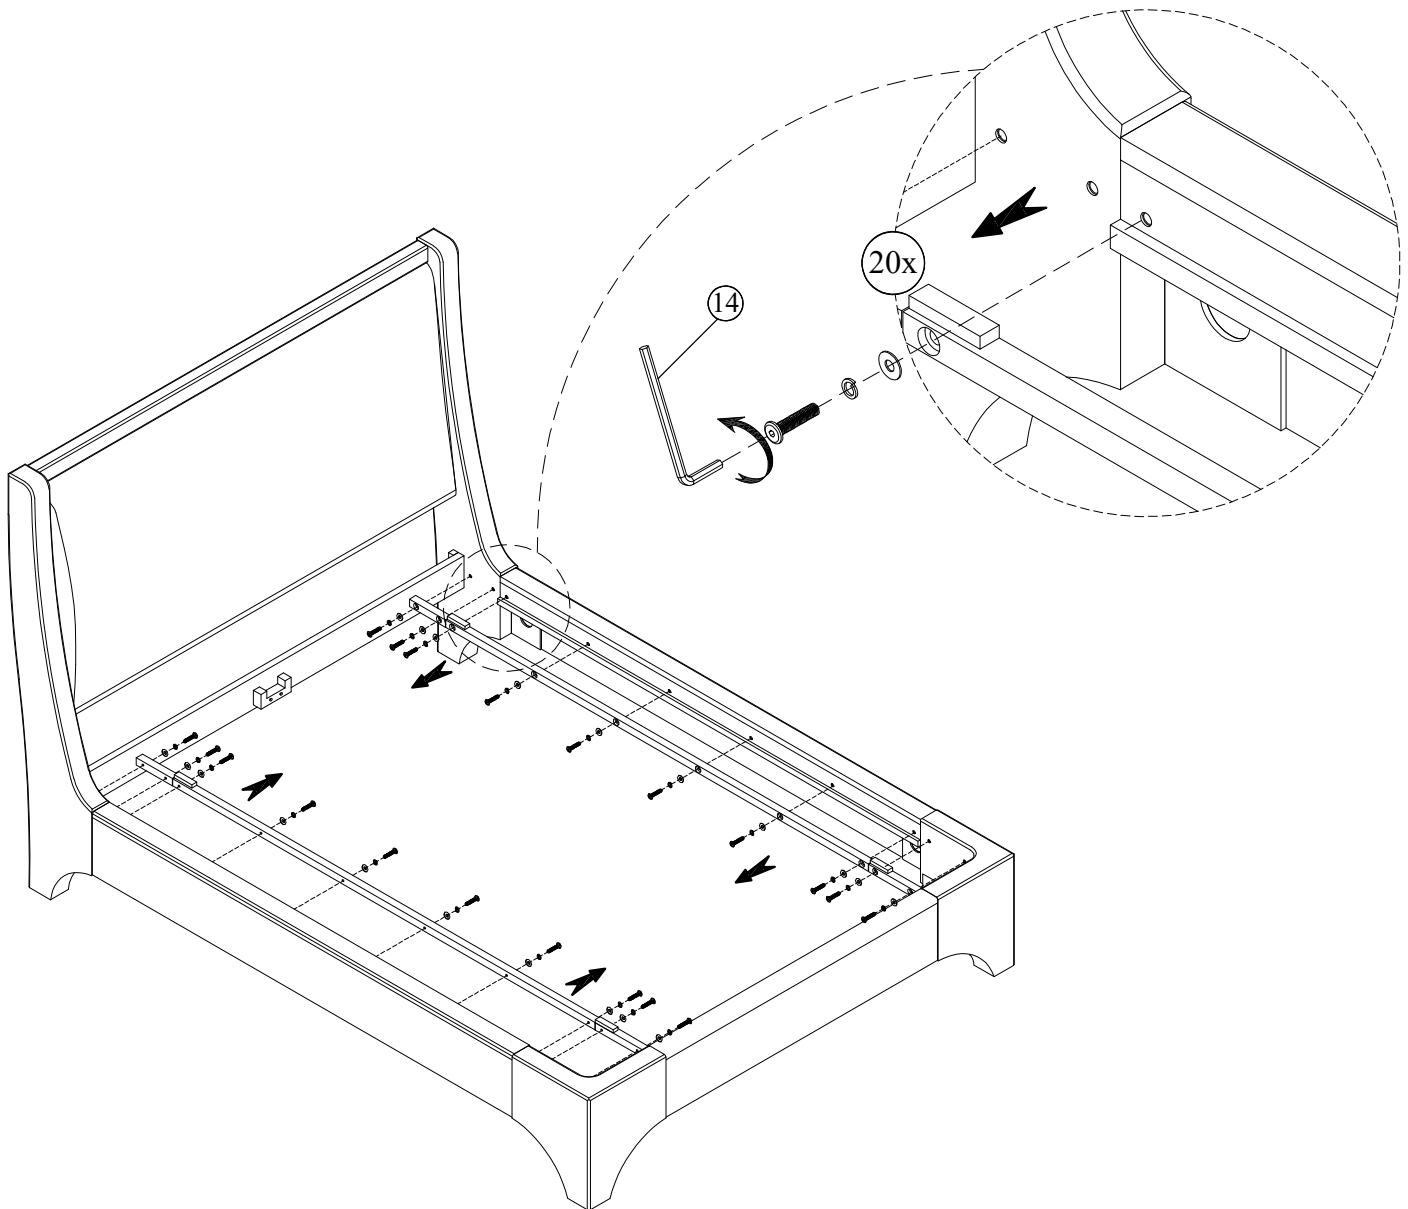

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

BRENTWOOD UPH CAL KING PANEL BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS


BOX #1

- A. HEADBOARD 1 PC
- B. LEFT HEADBOARD LEG 1 PC
- C. RIGHT HEADBOARD LEG 1 PC
- D. STRETCHER 1 PC

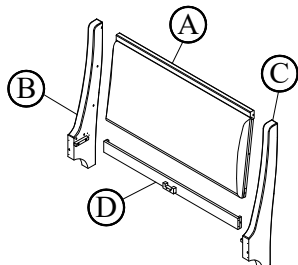


BOX #2

- E. FOOTBOARD 1 PC
- F. SLAT ROLL 1 SET

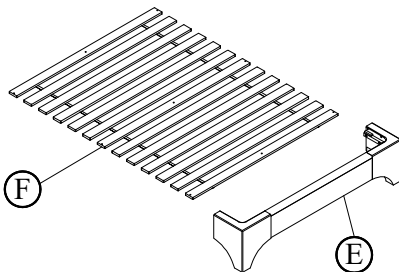


BOX #3

- G. LEFT SIDE RAIL 1 PC
- H. RIGHT SIDE RAIL 1 PC
- I. LOWER CENTER SLAT SUPPORT 1 PC
- J. UPPER CENTER SLAT SUPPORT 1 PC
- K. SUPPORT LEG 3 PCS
- L. MATTRESS SPACER 2 PCS
- M. HEADBOARD MATTRESS SPACER 2 PCS
- N. FOOTBOARD MATTRESS SPACER 2 PCS

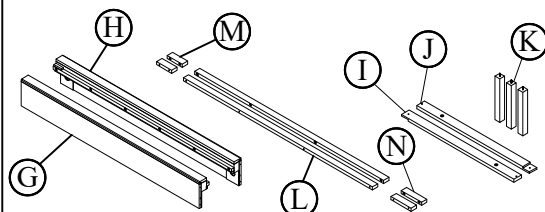

FULLY ASSEMBLED

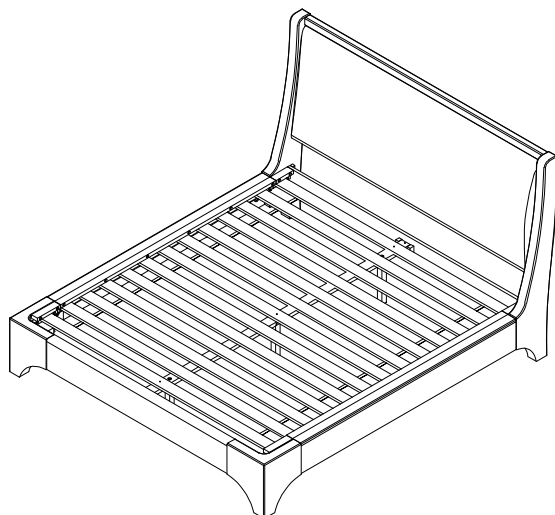

HARDWARE KIT PACKED IN BOX #1


NO.	DESCRIPTION	IMAGE	QTY
1	THREADED BOLT (5/16"x80mm)		4 PCS
2	THREADED HALF MOON WASHER NUT (5/16")		4 PCS
3	ALLEN BOLT (5/16"x40mm)		4 PCS
4	SPRING WASHER (5/16")		4 PCS
5	FLAT WASHER (5/16")		4 PCS
6	METAL DOWEL (8x40mm)		4 PCS
7	ALLEN KEY		1 PC
8	WRENCH		1 PC

HARDWARE KIT PACKED IN BOX #2

NO.	DESCRIPTION	IMAGE	QTY
9	THREADED BOLT (5/16"x80mm)		4 PCS
10	THREADED HALF MOON WASHER NUT (5/16")		4 PCS
11	WRENCH		1 PC
12	METAL DOWEL (8x40mm)		8 PCS
13	WOOD SCREW (4x30mm)		11 PCS
14	ALLEN KEY		1 PC

HARDWARE KIT PACKED IN BOX #3


NO.	DESCRIPTION	IMAGE	QTY
15	ALLEN BOLT (1/4"x50mm)		16 PCS
16	SPRING WASHER (5/16")		16 PCS
17	FLAT WASHER (5/16")		16 PCS
18	ALLEN KEY		1 PC




BRENTWOOD UPH CAL KING PANEL BED ASSEMBLY INSTRUCTIONS




STEP 1

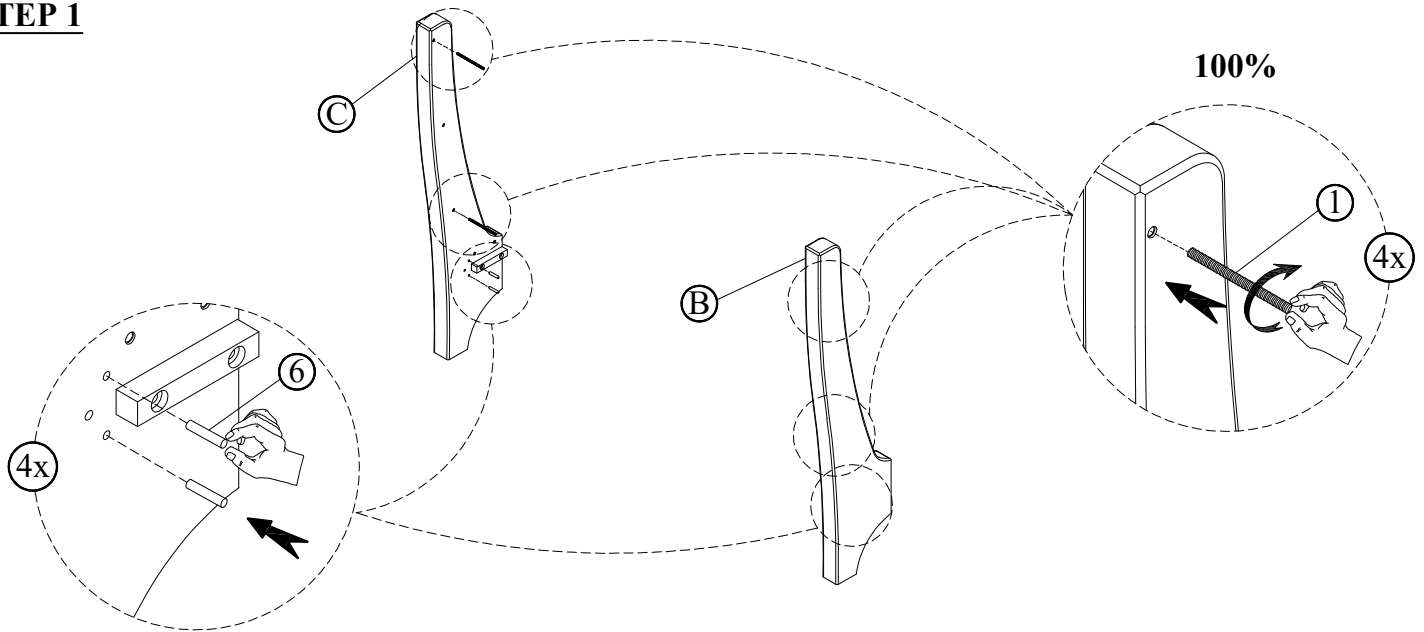

STEP 2

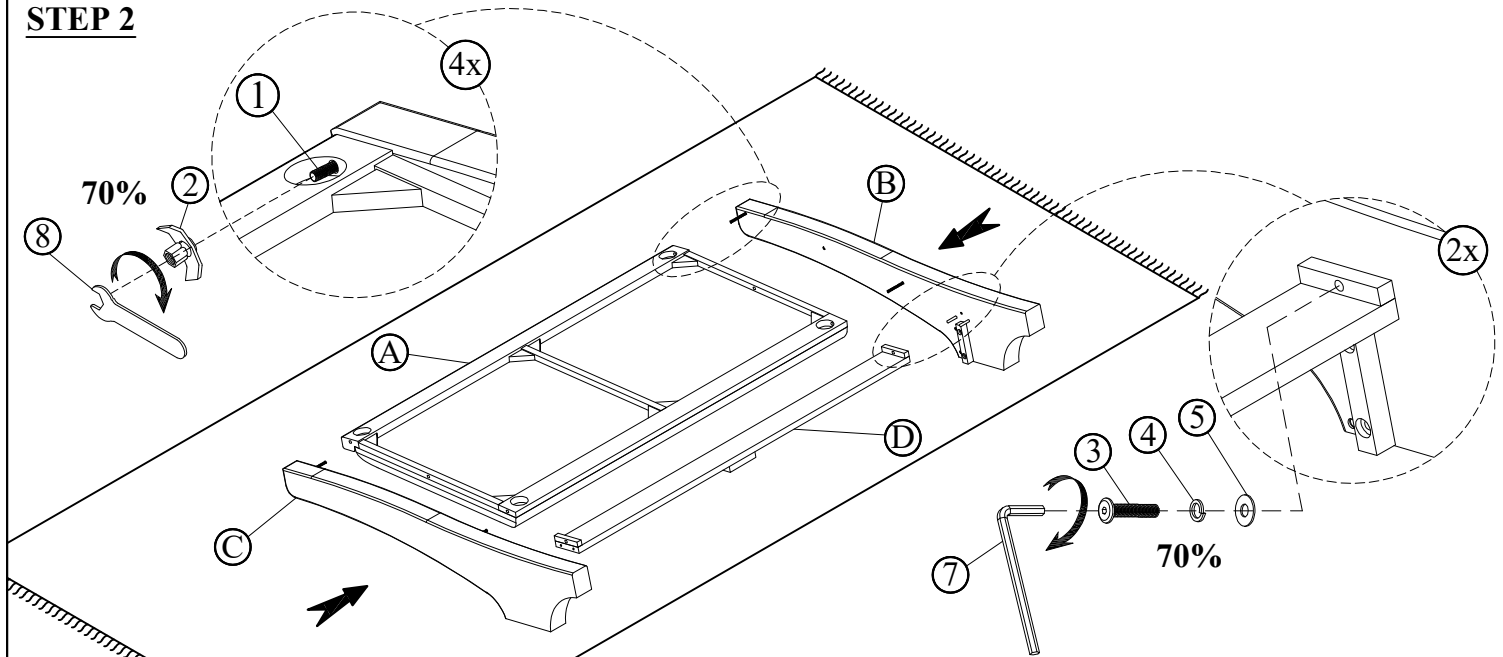


STEP 3

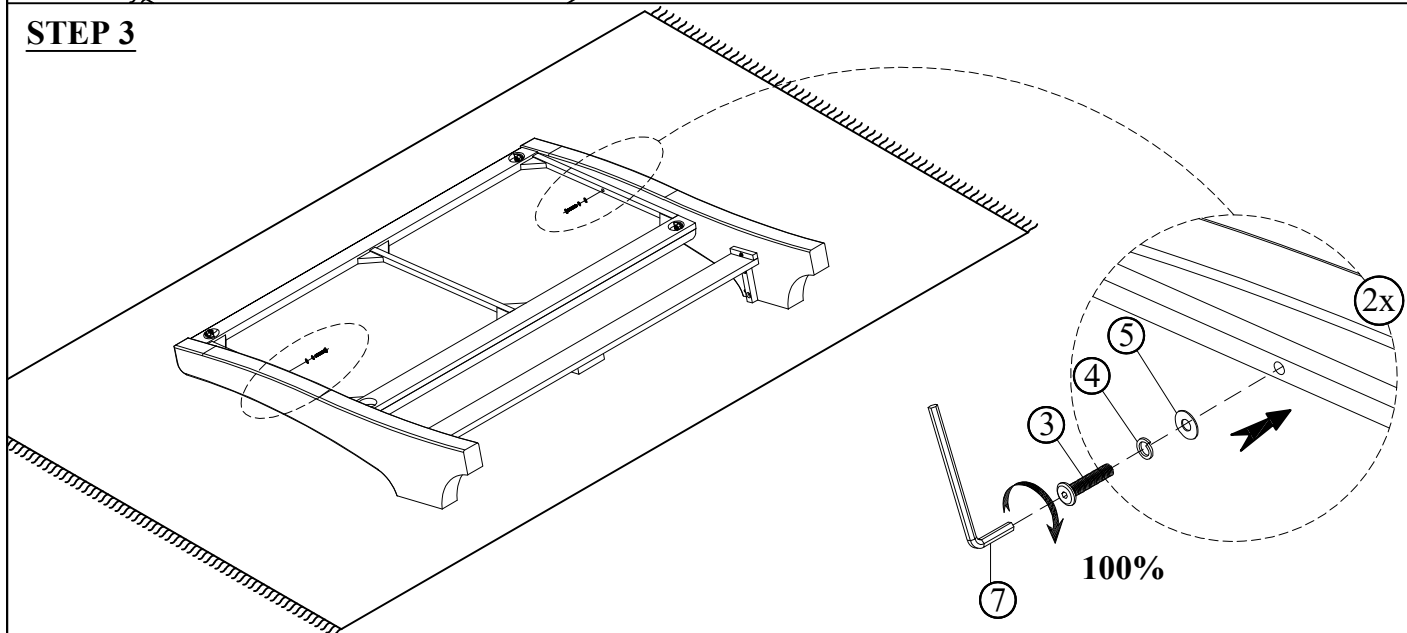


BRENTWOOD UPH CAL KING PANEL BED ASSEMBLY INSTRUCTIONS




STEP 4

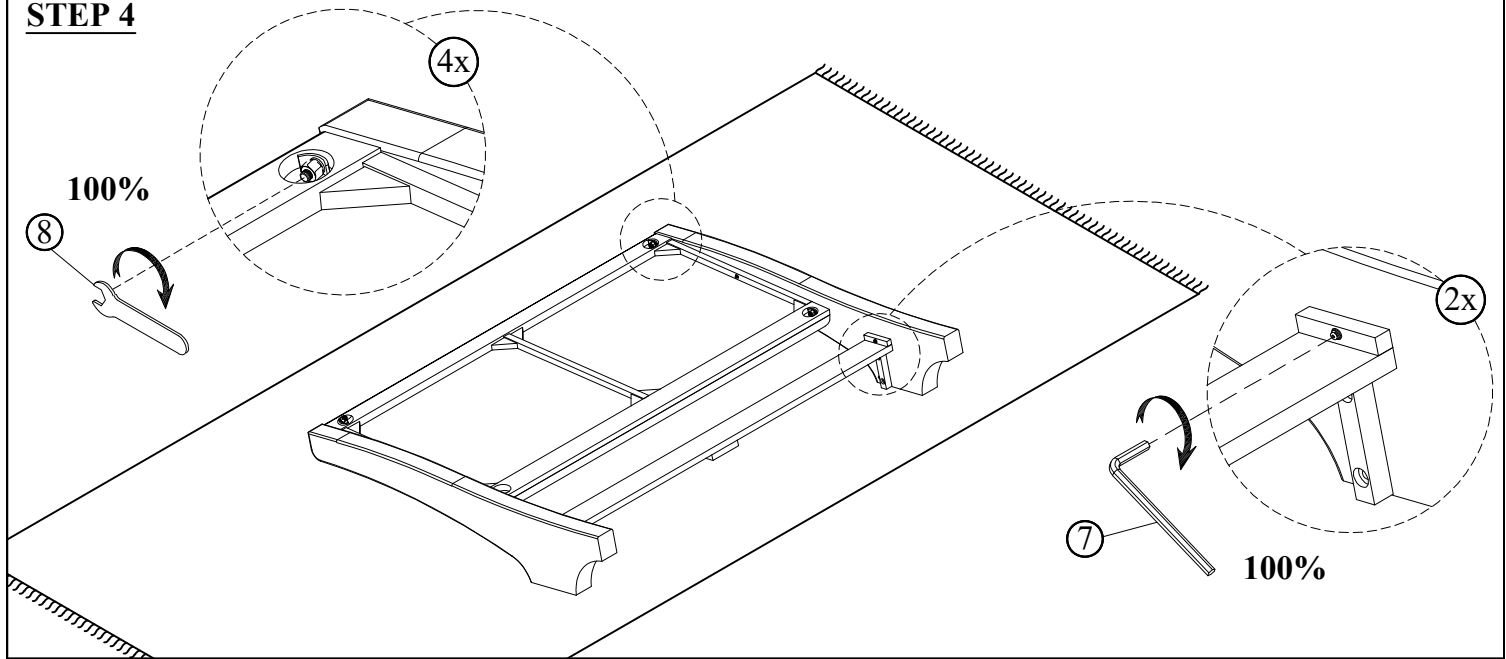

STEP 5

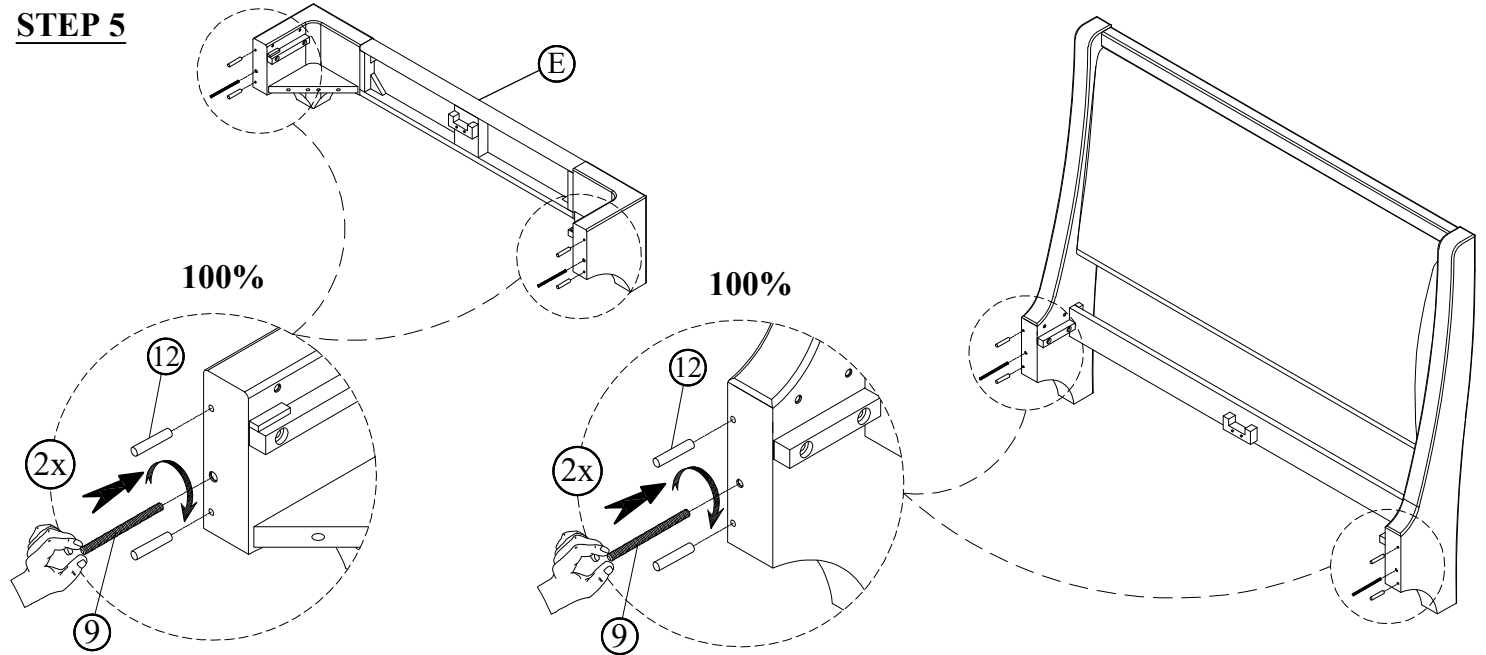

STEP 6

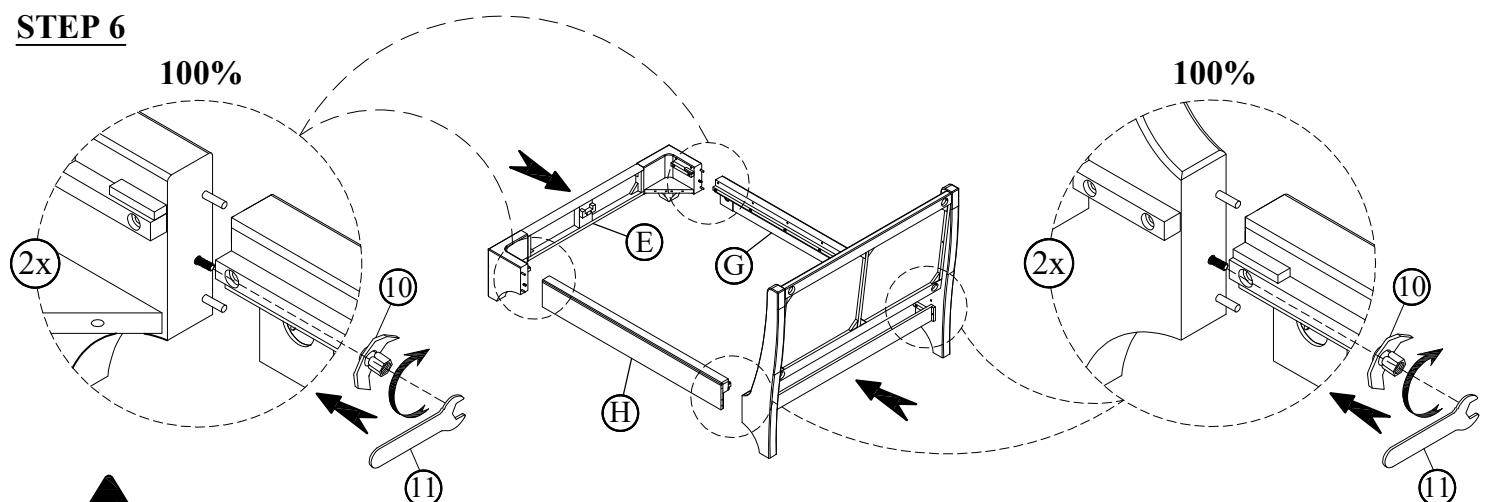


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 7, 8, 9 & 10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 7


BRENTWOOD UPH CAL KING PANEL BED ASSEMBLY INSTRUCTIONS




STEP 7

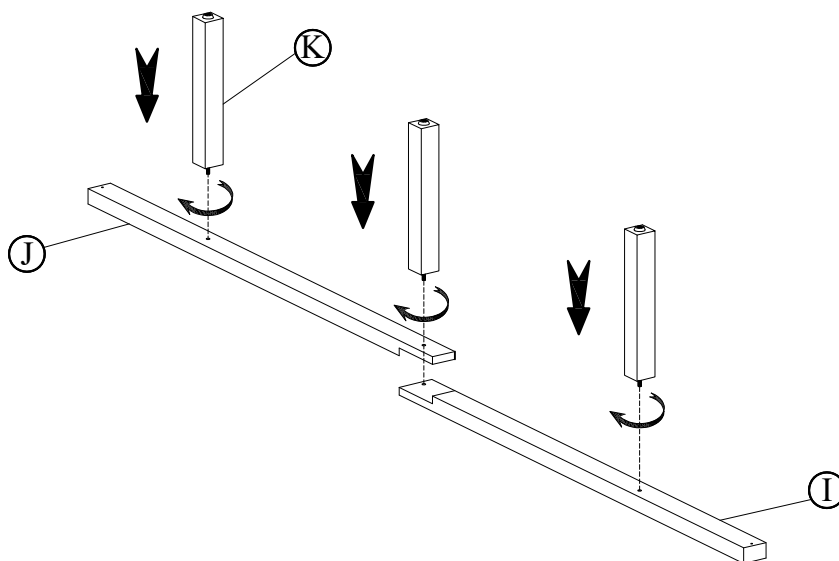

STEP 8

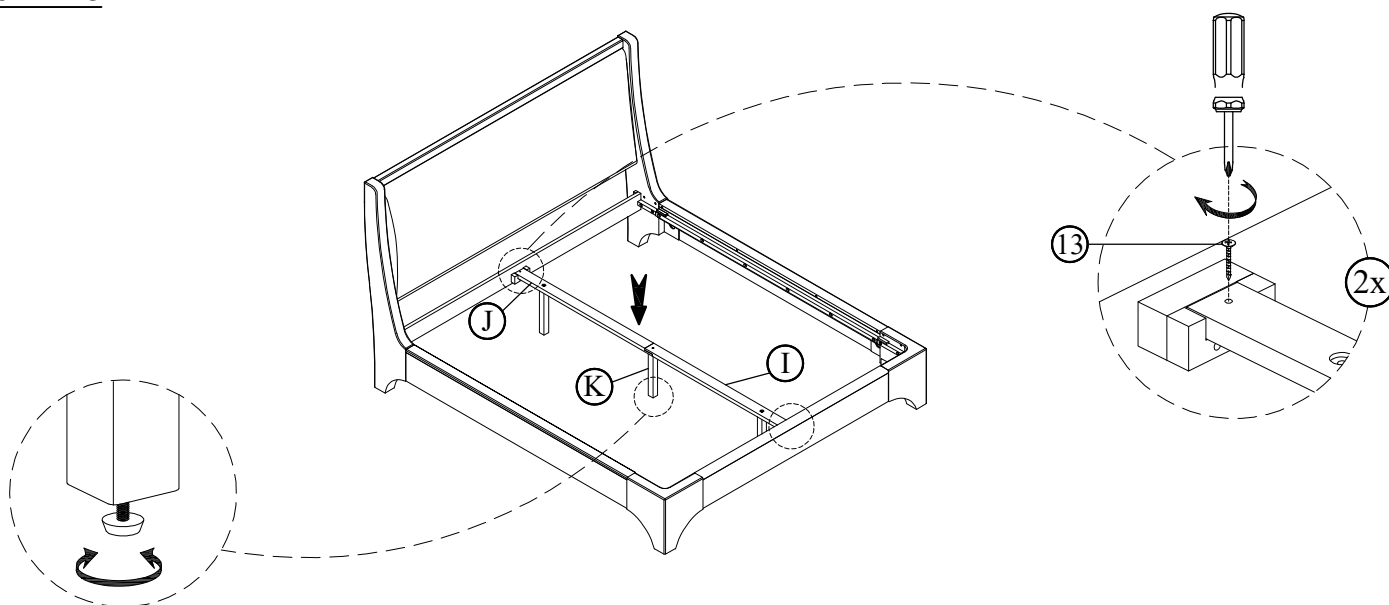



STEP 9

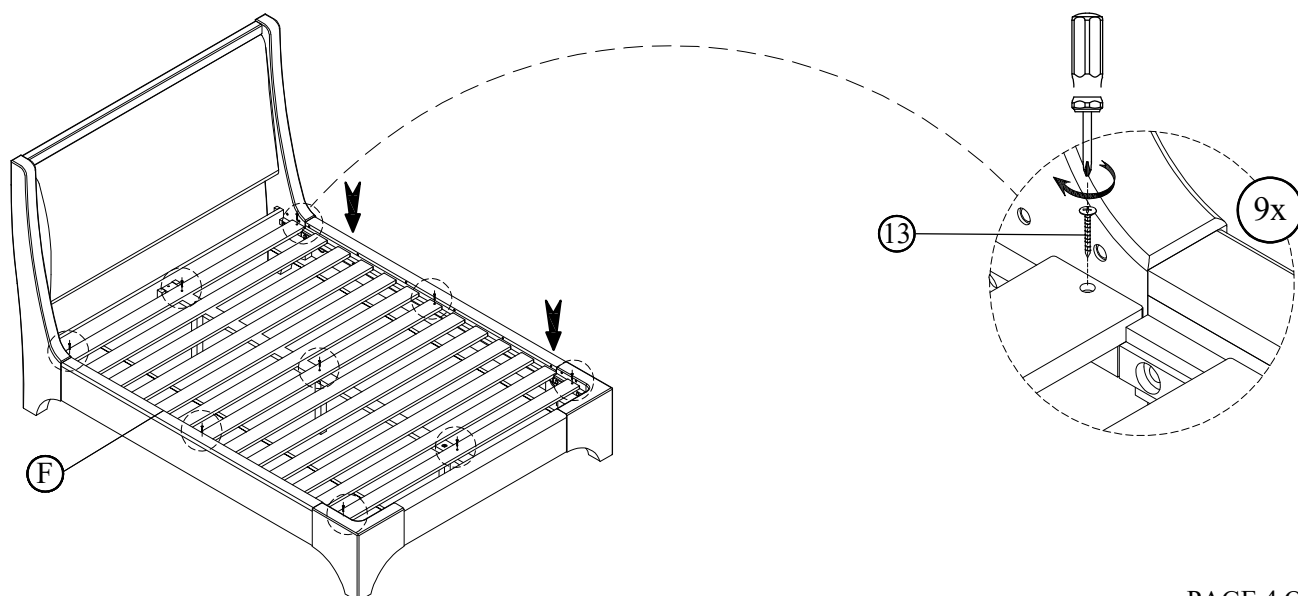

BRENTWOOD UPH CAL KING PANEL BED ASSEMBLY INSTRUCTIONS



STEP 10

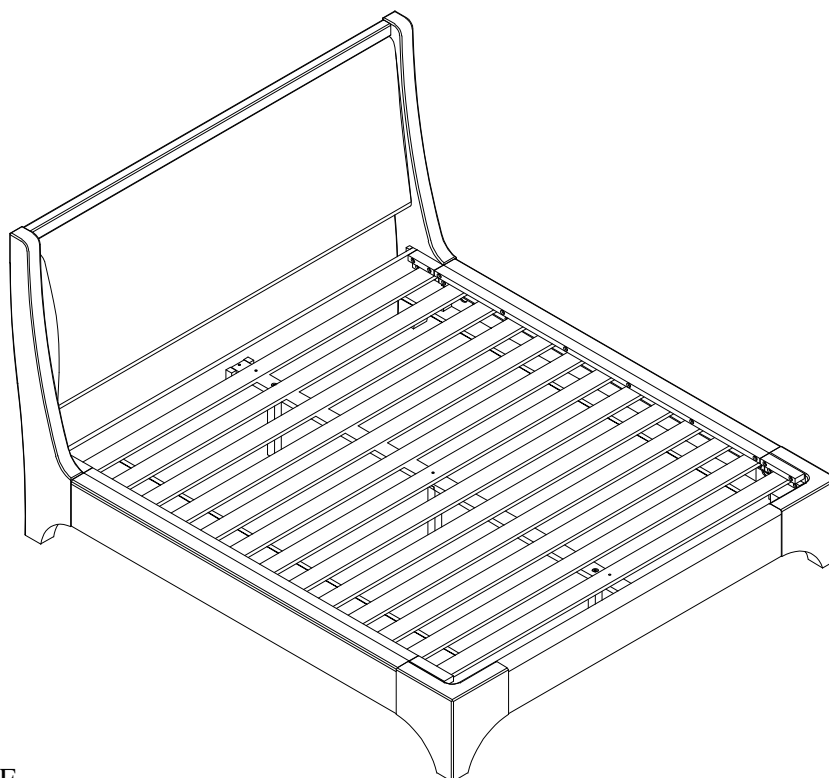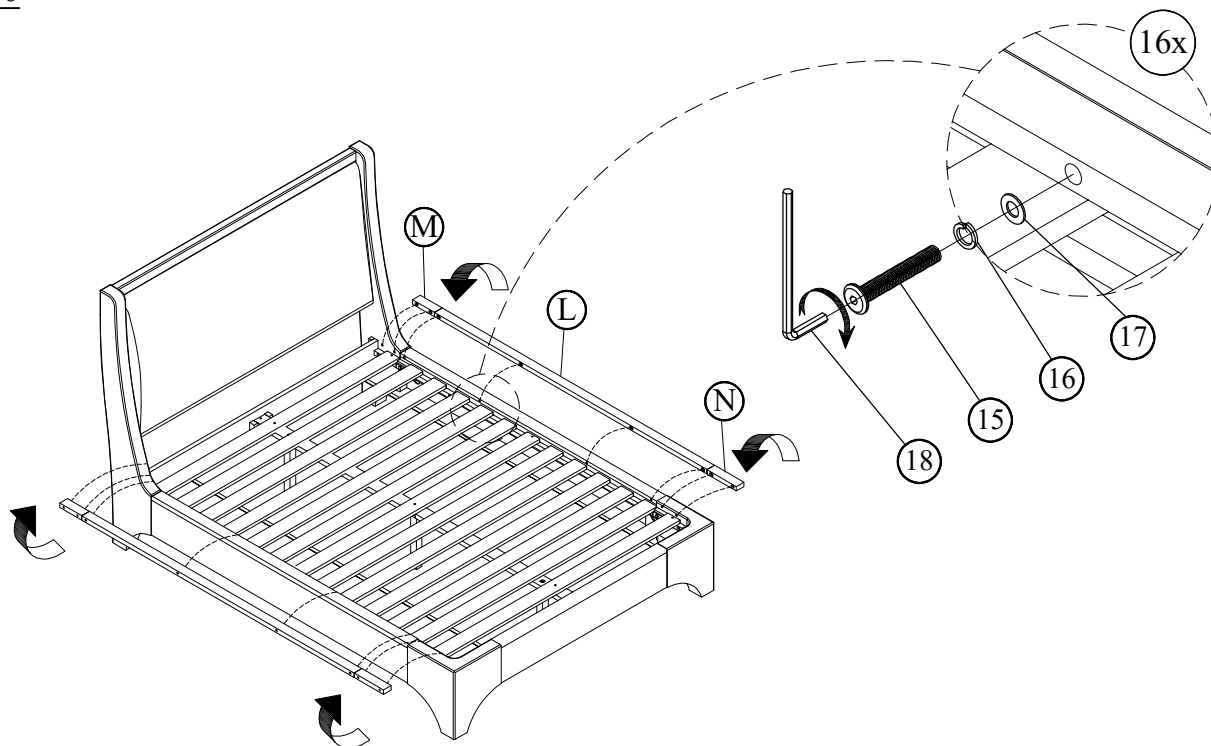

ASSEMBLY COMPLETE


PAGE 5 OF 6

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support.

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

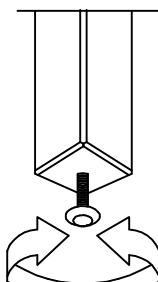

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BRENTWOOD UPH CAL KING PANEL BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	: 1 SET	13. WOOD SCREW (4x30mm)	: 11 PCS
I. LOWER CENTER SLAT SUPPORT	: 1 PC	15.ALLEN BOLT (1/4"x50mm)	: 16 PCS
J. UPPER CENTER SLAT SUPPORT	: 1 PC	16. SPRING WASHER (5/16")	: 16 PCS
K. SUPPORT LEG	: 3 PCS	17. FLAT WASHER (5/16")	: 16 PCS
L. MATTRESS SPACER	: 2 PCS		
M. HEADBOARD MATTRESS SPACER	: 2 PCS		
N. FOOTBOARD MATTRESS SPACER	: 2PCS		

STEP #1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

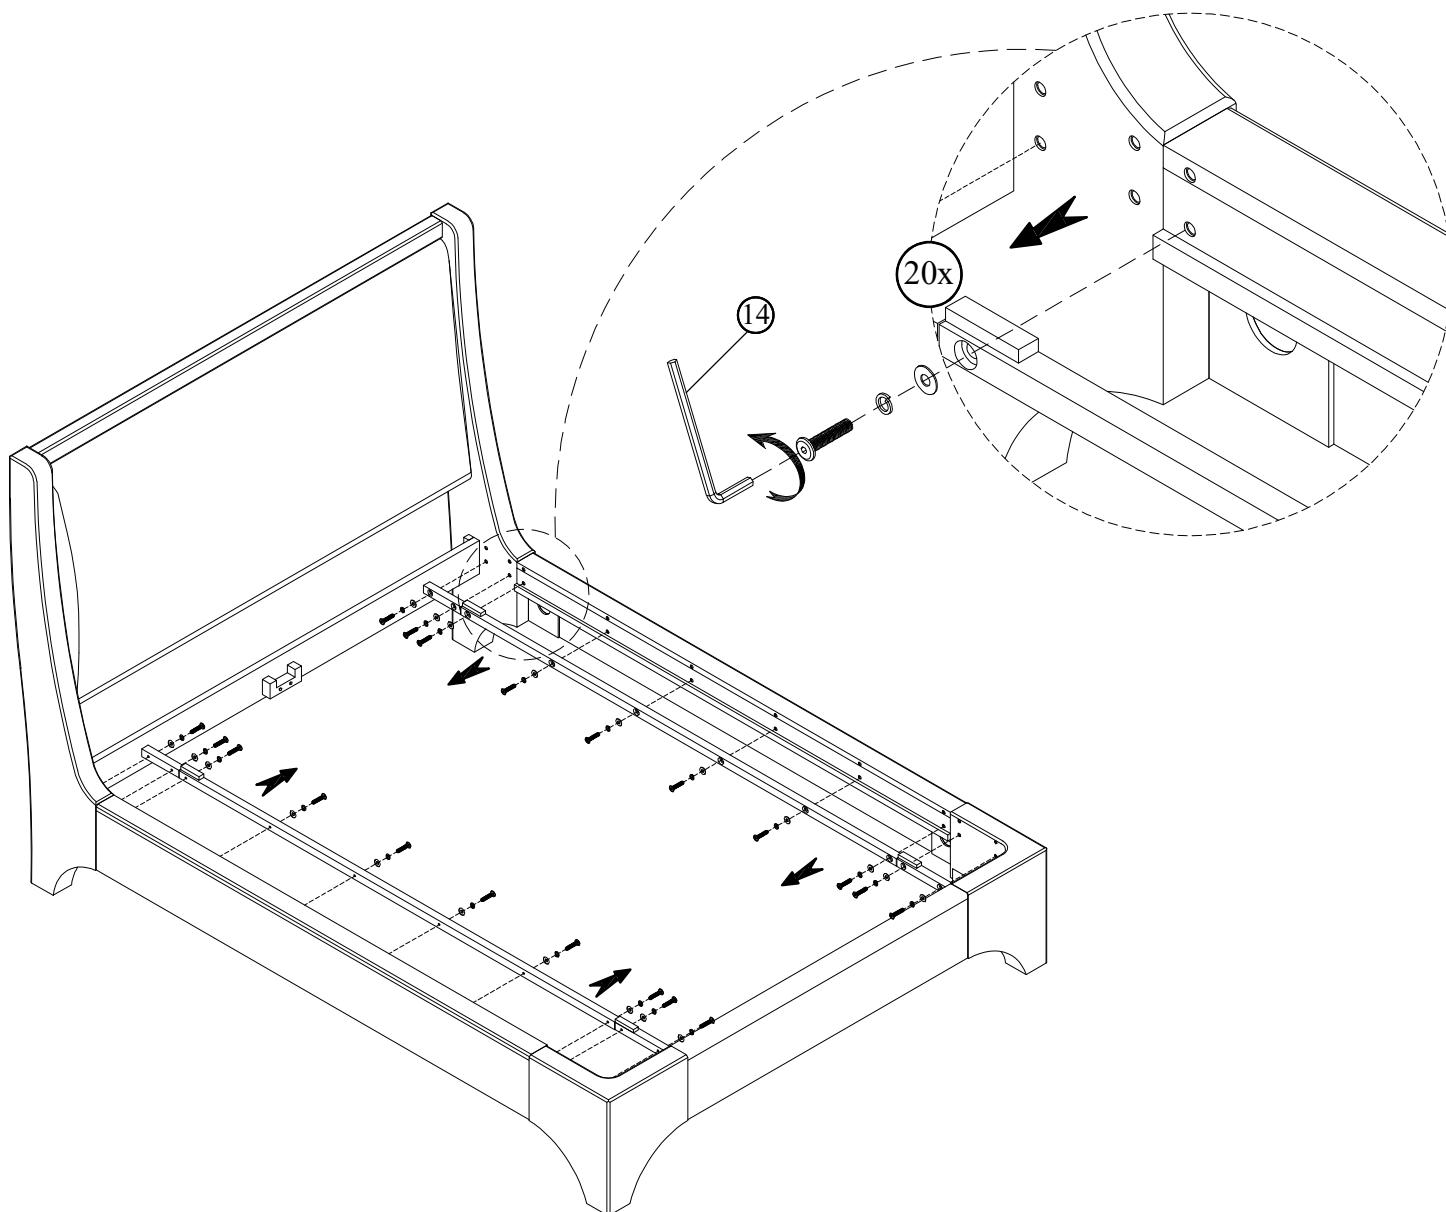

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.