


ADVENTURE SIDE MIRRORS

W9500

CONTENTS:

(A) Mirror	2 pcs.	(E) Flat Washer	2 pcs.
(B) Support Arm	2 pcs.	(F) Lock Washer, Large	4 pcs.
(C) Lock Washer, Small	2 pcs.	(G) Nut, Large	2 pcs.
(D) Nut, Small	2 pcs.	(H) Lock Nut	2 pcs.
		(I) Rubber Washer	4 pcs.

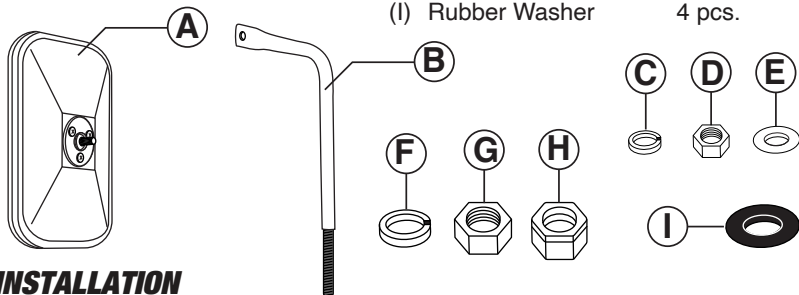

INSTALLATION

1. Remove Small Nut (D), and Small Lock Washer (C), from back of Mirror (A). Connect the Support Arm (B) to the Mirror (A) and fasten with the Small Lock Washer (C), and Small Nut (D). See Fig. 1.
2. Slide a Large Lock Washer (F) and screw a Large Nut (G) onto the other end of the Support Bar (B). Slide a Rubber Washer (I) onto the Support Bar (B). See Fig. 2.
3. Insert the Support Bar (B) into the empty hinge of the Jeep. Put another Rubber Washer (I) and Large Lock Washer (F) onto the Support Bar (B) and fasten with Lock Nut (H).
4. To adjust mirror loosen the three screws on the back of the mirror and re-tighten when the mirror is in the desired position.

