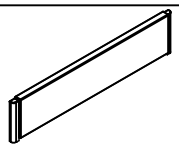
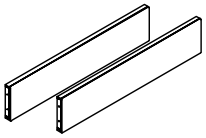
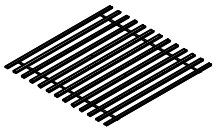


ASSEMBLY INSTRUCTIONS

B2123-120 - ANIKA 6/6 K UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-220 - ANIKA 6/0 WK UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-320 - ANIKA 5/0 Q UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-230 - ANIKA 6/0 WK UPHOLSTERED SIDE RAILS
B2123-330 - ANIKA 6/6-5/0 EK/Q UPHOLSTERED SIDE RAILS


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

PARTS LIST			
ITEM	DRAWING	DESCRIPTION	QTY
A		FOOTBOARD	1PC
B		SIDE RAIL	2PCS
C		ROLL-OUT SLATS	1PC
D		CENTER SLAT	1PC
E		SLAT SUPPORT LEG	4PCS

HARDWARE LIST			
ITEM	DRAWING	DESCRIPTION	QTY
1		CSK SCREW (M4) 4 x 1 2/8"	26PCS
2		JCBB(M8) 8 x 1 6/8"	8PCS
3		SPRING WASHER M8 x 5/8"	8PCS
4		FLAT WASHER M8 x 7/8"	8PCS
5		ALLEY KEY 5 x 6/8" x 2 1/2"	1PC


WEIGHT CAPACITY	800 lbs


HARDWARE DIMENSIONS VERIFICATION TOOL

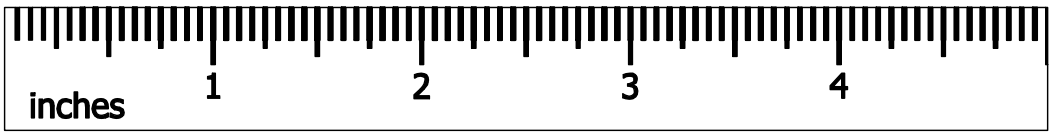

STEP 1

Assemble the Side Rail (B) to the Headboard legs and Footboard (A) by using the Allen Key (5) with hardware 2, 3, and 4.

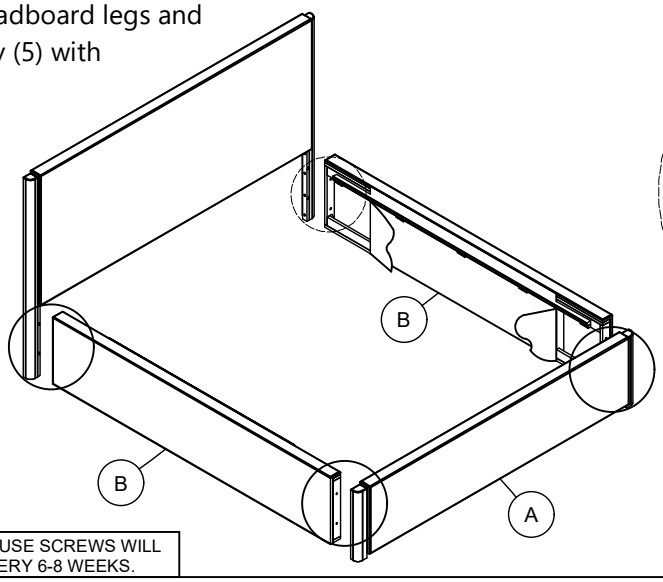

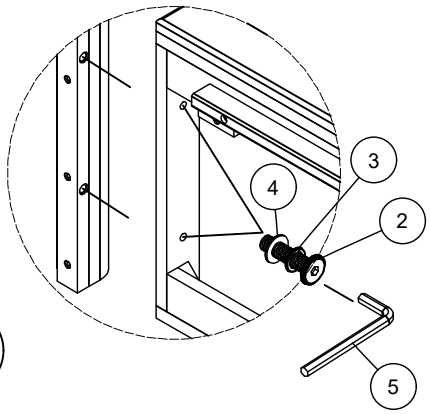

NOTE:MUST TIGHTEN SCREW PERIODICALLY.WITH USE SCREWS WILL BECOME LOOSE CHECK THIGHT OF ALL SREWS EVERY 6-8 WEEKS.

MADE IN MALAYSIA


ASSEMBLY INSTRUCTIONS

B2123-120 - ANIKA 6/6 K UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-220 - ANIKA 6/0 WK UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-320 - ANIKA 5/0 Q UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-230 - ANIKA 6/0 WK UPHOLSTERED SIDE RAILS
B2123-330 - ANIKA 6/6-5/0 EK/Q UPHOLSTERED SIDE RAILS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.


STEP 2

Place the Roll-Out Slat (C) face down. Position the Center Slat (D) directly in the middle and align the pre-drilled holes with the holes on the Roll-Out Slat (C).

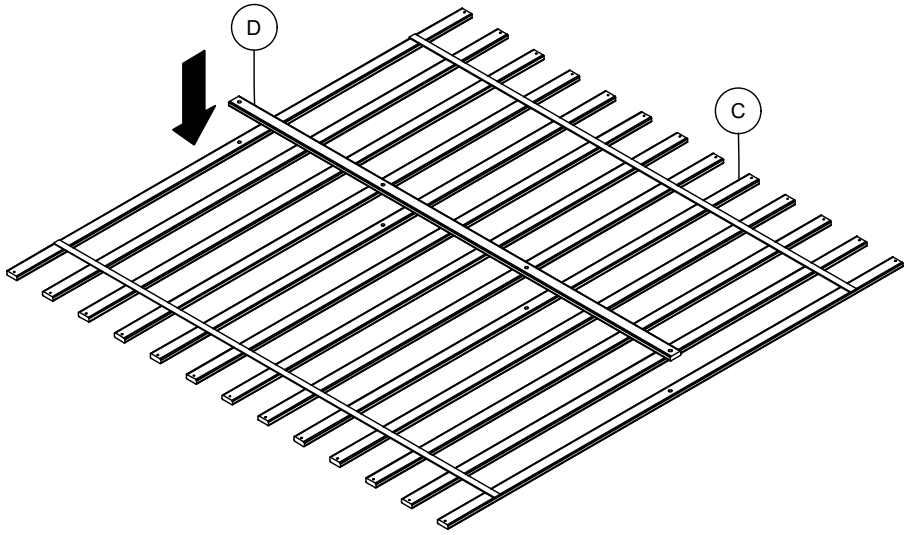

STEP 3

Assemble the Slat Support Legs (E) through the Center Slat (D) to the Roll-Out Slat (C).

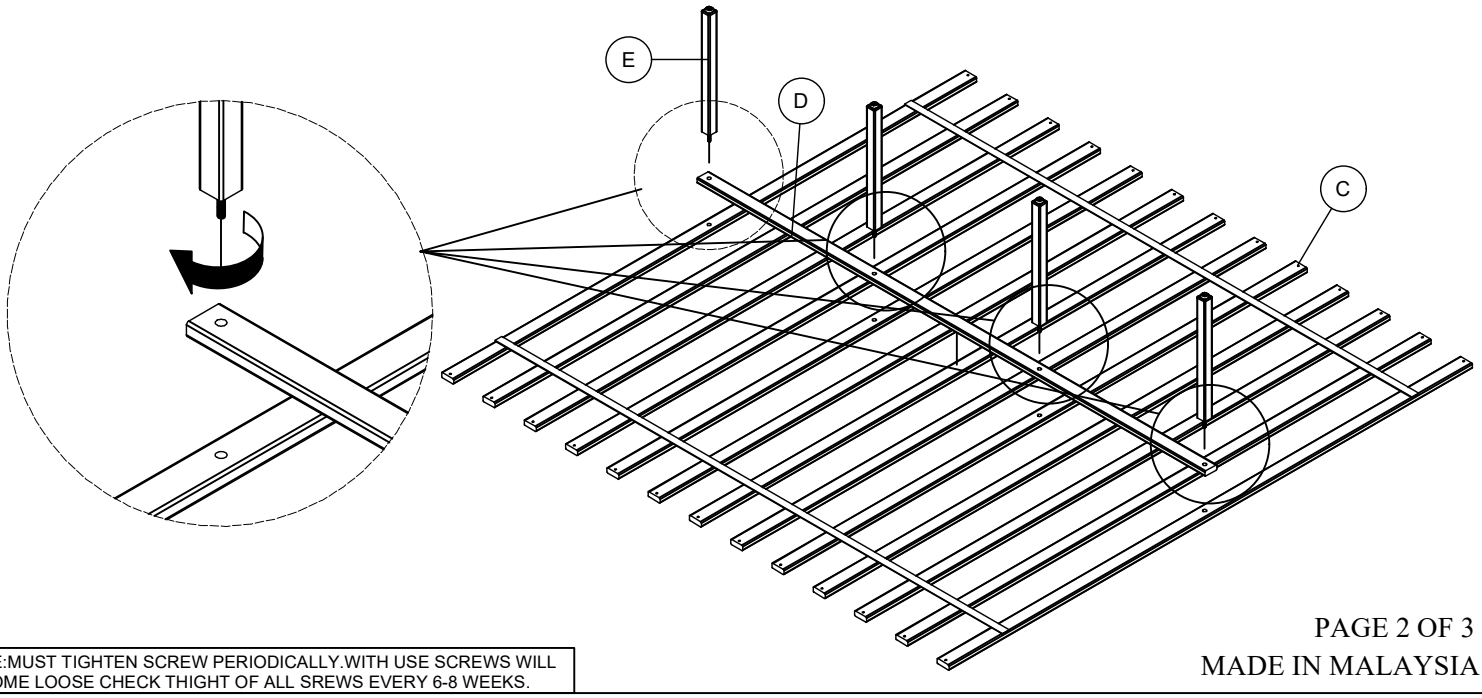

NOTE:MUST TIGHTEN SCREW PERIODICALLY.WITH USE SCREWS WILL BECOME LOOSE CHECK THIGHT OF ALL SREWS EVERY 6-8 WEEKS.

MADE IN MALAYSIA


ASSEMBLY INSTRUCTIONS

B2123-120 - ANIKA 6/6 K UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-220 - ANIKA 6/0 WK UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-320 - ANIKA 5/0 Q UPHOLSTERED FOOTBOARD & ROLL OUT SLAT KIT
B2123-230 - ANIKA 6/0 WK UPHOLSTERED SIDE RAILS
B2123-330 - ANIKA 6/6-5/0 EK/Q UPHOLSTERED SIDE RAILS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.


STEP 4

To level the bed, adjust the lever on the Slat Support Legs (E) to the floor.

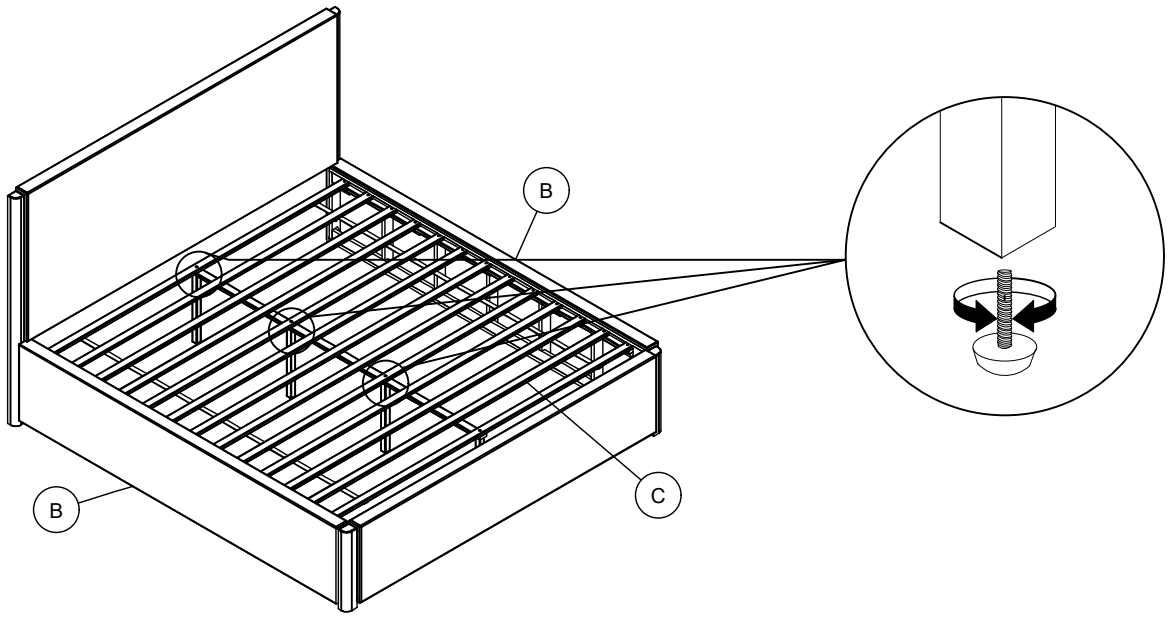

STEP 5

Assemble the Roll-Out Slat (C) to the Rails (B) by using a screwdriver with hardware 1.

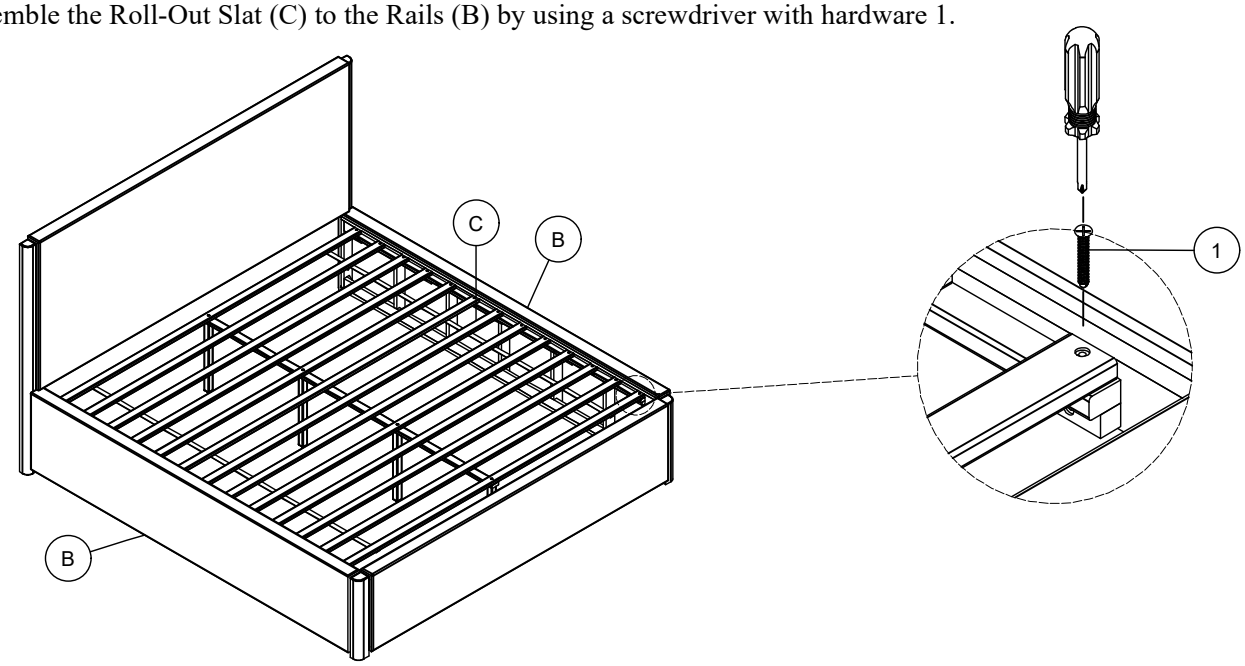

NOTE:MUST TIGHTEN SCREW PERIODICALLY.WITH USE SCREWS WILL BECOME LOOSE CHECK THIGHT OF ALL SREWS EVERY 6-8 WEEKS.

MADE IN MALAYSIA