

WINGITS® GRAB BAR Fasteners

Stainless Steel Fastener

Model:
GBW

World's Strongest Fastener®



Part Numbers:

GBW40

18/8 (304) Stainless Steel

GBW50

18/8 (304) Stainless Steel

SRGBW40

18/8 (304) Stainless Steel



Features / Benefits

- Exceeds ADA Guidelines and ALL Building Codes
- Eliminates the need for Blocking
- Water-proof and Fire-proof
- Rated up to 800 lbs. in Drywall with Tile
- Used to Install WINGITS® Grab Bars
- Patented Worldwide



Install WINGITS® GBW40 Fastener Quickly and Easily with the APACHE200™ Carbide Drill Bit



Industrial Grade Carbide Drill Bit

- Rated at 200 holes in ceramic wall tile
- Drills holes through ceramic wall tiles in seconds
- No hammer drill required - this precision cutting drill does all the work
- Industrial grade carbide cutting tool
- Engineered for standard and cordless drills
- Designed for ceramic, marble and plaster

MECHANICAL DATA

Height: 2.75" (7cm)

Length: 2.75" (7cm)

Projection: 4" (10.16cm)

PRODUCT COMPOSITION

Entire product is solid 18/8 (304) welded stainless steel with plastic caps on end of wings.

MODALITY

Use: Must be used in vertical position.

INSTALLATION

WINGITS® GBW40 Standard WINGITS® is used in walls framed with 2 x 4's (3-1/2" hollow or larger).

WINGITS® SRGBW40 Reverse WINGITS® is used in walls framed with 2 x 3's (2-1/2" hollow or larger).

WINGITS® come standard with a stainless steel 4" screw for walls up to 1 1/4" thick.
Larger screws available for thicker walls.

RECOMMENDED INTEGRATION

It is recommended that **WINGITS®** GBW40/GBW50/SRGBW40 be used with **WINGITS®** Grab Bars.

(SR)GBW(40)(50)_SpecSheet_2015_12_21



Installation Instructions GBW40/GBW50/SRGBW40

Commercial Grab Bar Fastening System Installation Guide. WINGITS® Grab Bar Fastening Systems

Exceed Building Codes For Grab Bars In The Following Wall Substrates:

- 5/8" Drywall - Painted or Wallpapered
- 1/2" or 5/8" Drywall with Tub Surrounds
- 1/2" or 5/8" Drywall with Tile, Marble or Stone
- 1/2" or 5/8" Drywall with any Panel Types including Fiberglass, Faux Marble, Acrylic and Plastics
- Multiple Layers of Drywall, Plaster and Lathe
- 1/4" Acrylic/Fiberglass Tub Surrounds
- Most Wall Panels, All Masonry Type Boards, with or without Decorative Panels

NEVER INSTALL ANY FASTENER INTO WET OR DETERIORATING WALLS Structural Blocking Must Be Used In PLAIN 1/2" DRYWALL When Attempting To Meet Commercial Building Codes.


Specifications

- **GBW40** Standard WINGITS® is used in walls framed with 2 x 4's (3-1/2" hollow or larger).
- **SRGBW40** Reverse WINGITS® is used in walls framed with 2 x 3's (2-1/2" hollow or larger).
- WINGITS® come standard with a stainless steel 4" screw for walls up to 1 1/4" thick. Larger screws available for thicker walls.

NOTE: For Maximum Safety and to meet ADA Requirements, Grab Bars should be Installed Horizontally 33-36" from the floor.

Before You Install:

- Verify the length of the grab bar by measuring from the inside of one flange to the outside of the other.
- To ensure adequate clearance, a stud finder should be used to verify there are no studs within the area where the WINGITS® will be installed. **Make sure that there is at least 1.5" away from the edge of the stud. If concerned, drill a pilot hole and insert a piece of wire in the shape of an "L" - twirl the wire to make sure there is nothing in the way. Once inserted, each wing assembly will spring open almost 3" in diameter**
- **Tools Required:** Screwdriver, 1.25" Drill (our APACHE 200 rated at 200 holes in ceramic wall tile)
- Drill a 1-1/4" hole in the wall precisely at the center point where each grab bar flange will align.
- Clean wall surface

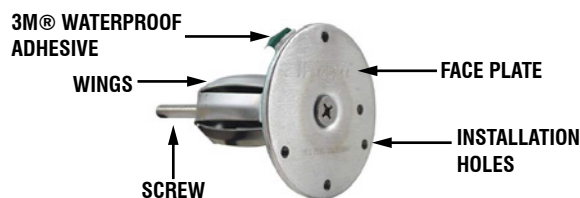


WINGITS® 18/8 Stainless Steel Grab Bar



Installing Grab Bars from WINGITS® :

1. Drill 1.25" Hole in Wall (see above Before You Install)
2. Attach the Grab Bar with the supplied 10-32 X 3/16" screws
3. Remove the liner from the **3M® WATERPROOF ADHESIVE** on the WINGITS®
4. Back-out the center **SCREW** about the same distance as the wall thickness
5. Insert the Grab Bar WINGITS® into the wall with the holes aligned vertically (12 and 6 o'clock)
6. Hold down firmly, allowing the adhesive to stick
7. Push the screw head while applying pressure to the **FACEPLATE** to "POP" the wings behind the wall
8. Pull on the screw head and tighten the screw
9. WINGITS® Grab Bar Flanges have 3 holes and TWO SLOTS in each flange. Use the TWO Slots to attach the grab bar to **FACEPLATE**.

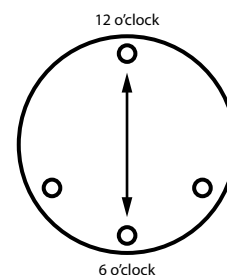

Installing Non-Grab Bars from WINGITS® :

Confirm the Grab Bar compatibility with WINGITS® Toll Free: 877-894-6448

The WINGITS® must be assembled to the Grab Bar PRIOR to inserting into the wall as the installation must be more precise.

The **FACEPLATE** hole alignment to the grab bar flange hole MUST be exact.

- Temporary attach the WINGITS® to the Grab Bar
- Remove the liner from the **3M® WATERPROOF ADHESIVE** on the WINGITS®
- Insert the WINGITS® using the Grab Bar as a template
- Push on Grab Bar for 1/2 a minute to adhere WINGITS® to the wall
- Remove Grab Bar
- Activate and tighten the WINGITS® as stated in Steps 2-9 above

View Installation Videos at:
www.wingits.com