
DESIGNHOUSE

www.todaysdesignhouse.com

ASSEMBLY INSTRUCTIONS

Soft-Close Drawer Glides

915686

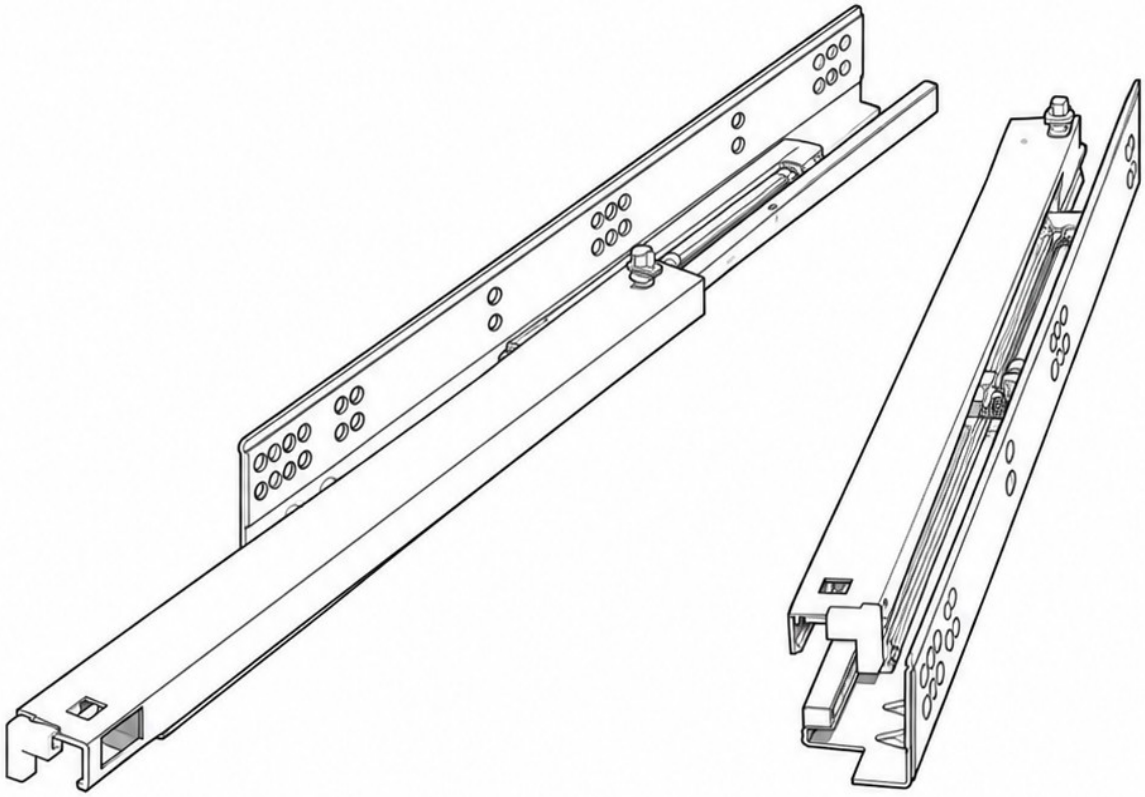


Assembly Instructions

Step 1 - Install Rear Glide Brackets


For **Design House Brookings Cabinets**, insert the rear glide brackets into the two pre-drilled holes in the cabinet back panel.

For **other cabinet brands**, position the rear glide brackets against the back panel. Use the drawer glides and a level to ensure both brackets are properly aligned and level before securing them.

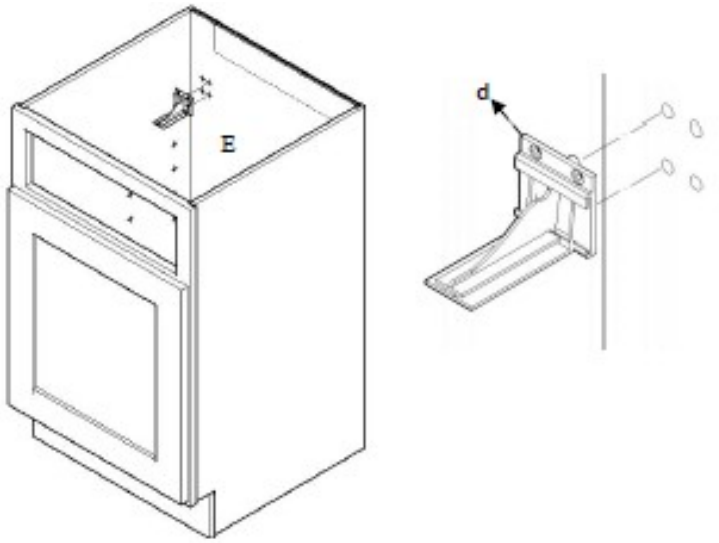


Step 2 - Attach Cabinet-Side Glides

Using 1 small screw to attach both left and right drawer glides to the interior edge of the frame left & right for each drawer.

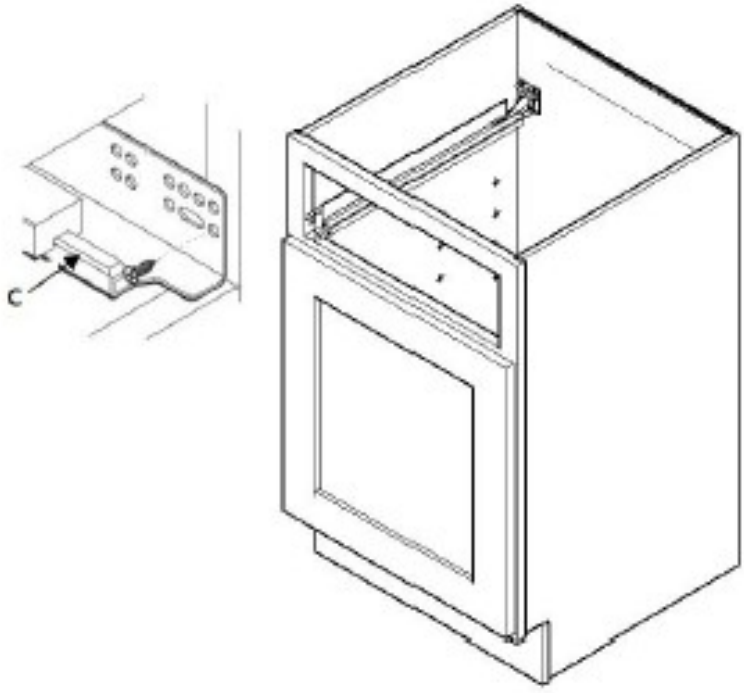

Step 3 - Attach Bottom Drawer Glides

Turn the assembled drawer box over. Attach the bottom drawer glides using three small flat-head screws on each side.

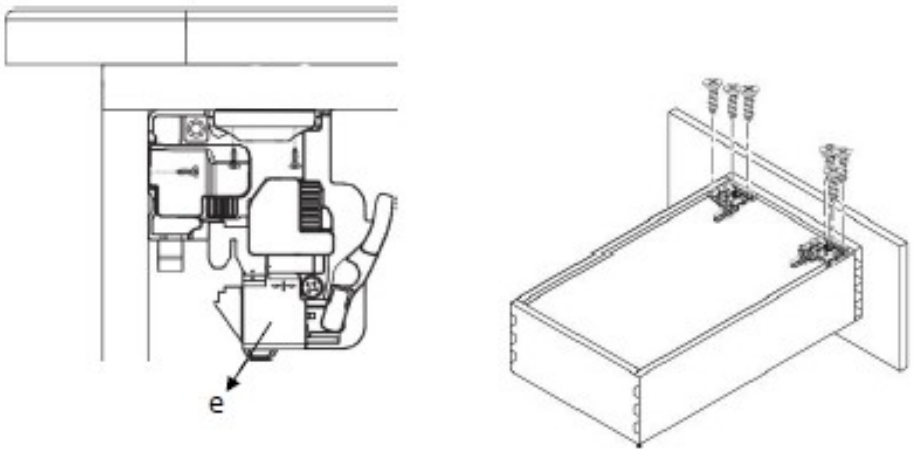

Step 4 - Install Drawer into Cabinet

Install the drawer into the cabinet by aligning the bottom drawer with the rails already installed inside the cabinet. Additionally, the holes in the back of the drawers need to align with the metal prong, as shown.

