
HOWARD MILLER®

680598/680599 INSTRUCTIONS FOR GLASS DOOR ASSEMBLY

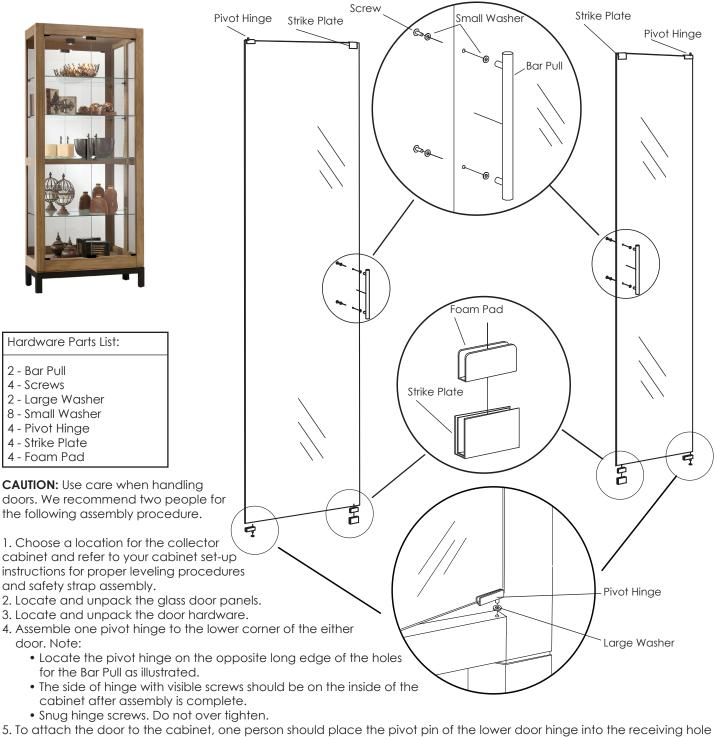

- 5. To attach the abort to the cabinet, one person should place the pivot pin of the lower abort hinge into the receiving i of the cabinet. Use one large washer as illustrated.
- 6. The second person inserts a separate pivot hinge into the upper receiving hole and holds in place while the first person pivots the door within the upper hinge and snugs the set screw. Do not over tighten.
- 7. Align and adjust the door so it can pivot without interference.
- 8. Repeat steps 4-7 to install the second glass door.
- 9. Assemble the Bar Pull on each glass door. Snug each screw. Do not over tighten.
- 10. Insert a foam pad within the metal Strike Plate and install onto the glass door. Align the (4) Strike Plates so they make contact with the magnet catch as illustrated.