

## **ASSEMBLY INSTRUCTION**

### QUEEN PANEL BED - HEADBOARD KING PANEL BED - HEADBOARD

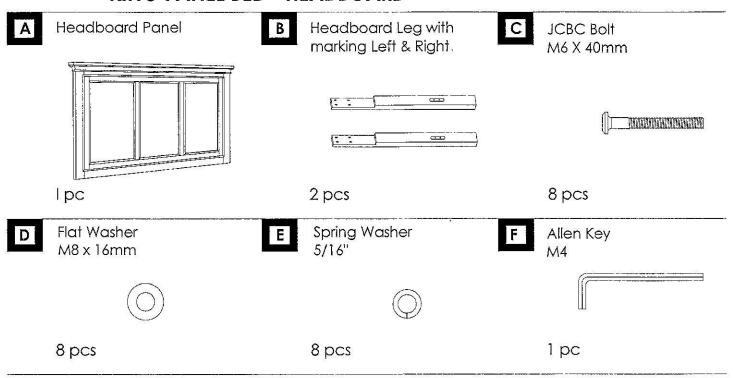

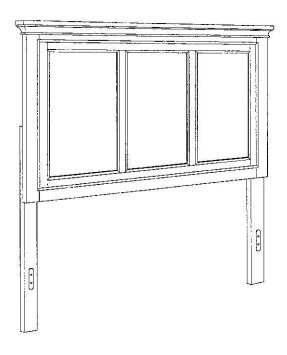


This page lists all the contants included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

### **IMPORTANT NOTE:**

- Do not tighten all screws / bolts until all completely assemble.
- 2. Keep all hardware parts out of reach of children.

1

Turn the Headboard Panel (A) upside down and place it on a piece of cloth to prevent from scratching. Attached Headboard Leg (B) to the Headboard panel (A). Insert JCBC Bolt (C), Spring Washer (E) and Flat Washer (D) to the holes and tighten using Allen Key (F).

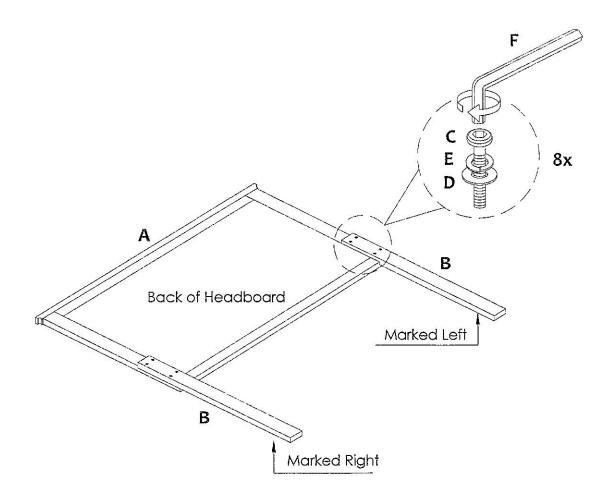


### **CLEANING & CARE**


Treat surface with care. Surface is resistant to scratches but is not scratches resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

2

## **ASSEMBLY INSTRUCTION**

# QUEEN PANEL BED - ONE SIDE SIDE RAIL & PLATFORM SLATS KING PANEL BED - ONE SIDE SIDE RAIL & PLATFORM SLATS

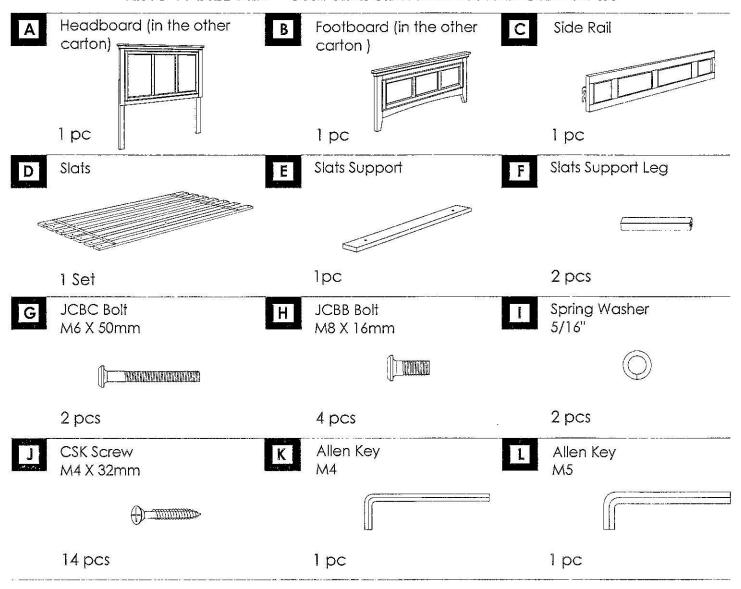

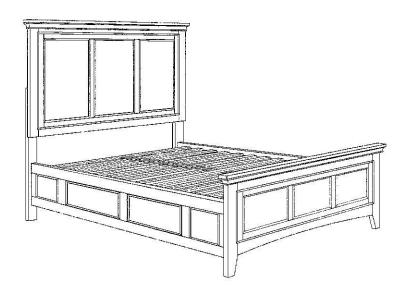

This page lists all the contants included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


### **IMPORTANT NOTE:**

- Do not tighten all screws / bolts until all completely assemble.
- 2. Keep all hardware parts out of reach of children.


### Remark:

### The other side of Side Rail Parts & Hardware in the other carton. (Match either -3PL / -3SR )


Attached Side Rail (C) to Headboard (A) and Footboard (B) by inserting JCBB Bolts (H) loosely into provided holes, then hooking Side Rail brackets on as shown. Tighten all bolts using Allen Key (L).

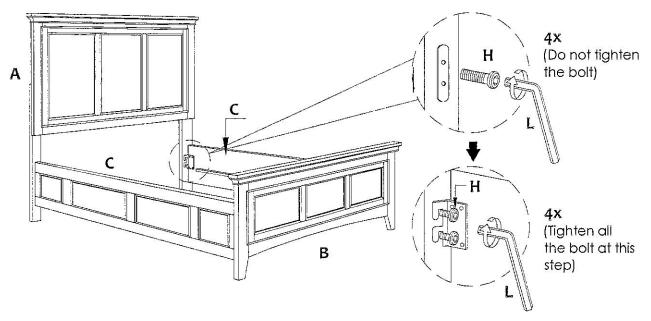

Open the Slats (D) with bottom facing up. Place Slats Support (E) and Slats Support Leg (F) on top of Slats (D). From bottom of Slats (D) insert JCBC Bolt (G) and Spring Washer (I) to the holes and tighten using Allen Key (K).

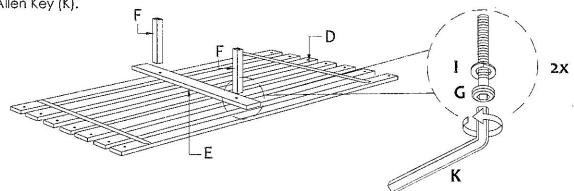

Turn the Slats (D) and place it to the Side Rail (C). Tighten the Slats (D) with CSK Screw(J) using Phillip Head Screwdriver (Not provided).

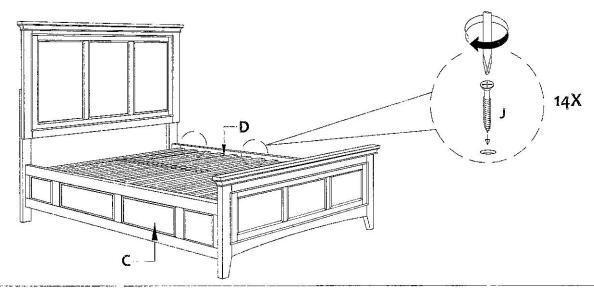

### **CLEANING & CARE**

Treat surface with care. Surface is resistant to scratches but is not scratches resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

2