


Installation Instructions for Choice Series Dummy Leversets

Step 1. Door Preparation

- Fold template where indicated
- Position template on door edge at desired height. Firmly hold template and mark handle fixing holes as per the template below.
- Drill 2 x 10mm holes at 60mm backset as marked.

Step 2. Install Lever Assembly to Door

- Remove rosette cover (1) from lever assembly.
- Secure the Threaded Post (2) to the under rose (3) using the fully threaded short screw (4).
- Using 1 of the partially threaded long screws (5), pass the screw through the backplate (6) and secure to the under rose.
- Note: Use the long screw (40 or 48mm) suitable for your door thickness.
- Using the second short screw (7), pass through the backplate and secure to the Threaded Post.
- Re-apply rosette cover (1) to under rose by pushing cover over the rubber ring till flush with the door.
- For Square rosette cover (8), tighten grub screw (9) using Allen Key (10), found on the bottom of the rosette cover.

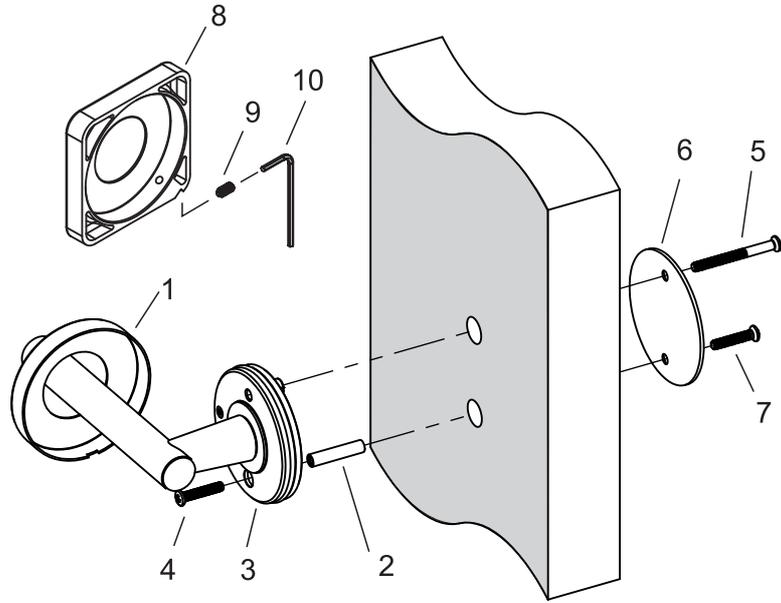

NOTE: Carefully follow these instructions when installing. Screws to be tightened to a recommended 2.5Nm torque.



FOLD HERE

FOLD HERE

Fit here on door edge

Fit here on door edge

BACKSET 60mm

2 x 10mm hole



Suits doors 32mm to 45mm thick.

Note: Drilling of pilot holes and drilling from both sides of the door is recommended.



ALLEGION

1800 098 094

info.au@allegion.com
gainsboroughhardware.com.au

⚠️ PRINT TO SCALE ⚠️