

FLEX UPHOLSTERED FULL / QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

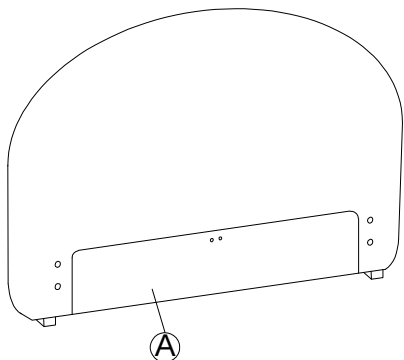

HARDWARE KIT PACKED IN BOX #2

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT(5/16"x1-1/4")		20 PCS
2	FLAT WASHER (5/16")		16 PCS
3	LOCK WASHER (5/16")		16 PCS
4	ALLEN KEY (5/16")		1 PC
5	ALLEN BOLT(1/4"x1-1/2")		5 PCS
6	FLAT WASHER (1/4")		5 PCS
7	LOCK WASHER (1/4")		5 PCS
8	PHILLIPS SCREW (M4 x 32mm)		6 PCS

BOX#2

B. CENTER SLAT SUPPORT CLEAT 2 PCS

C. FOOTBOARD 1PC








D. SIDE RAIL 2PCS

E. SLAT ROLL 1SET




F. CENTER SLAT SUPPORT 1 PC

G. SLAT SUPPORT LEG 4PCS

H. SIDE RAIL BRACKET 4PCS

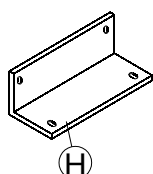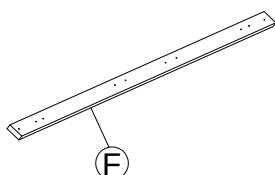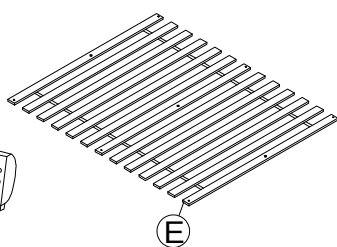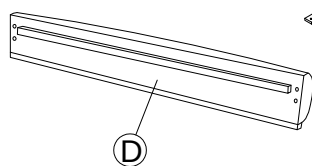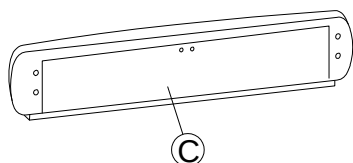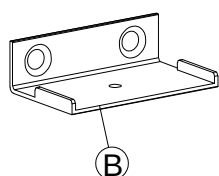

FULLY ASSEMBLED

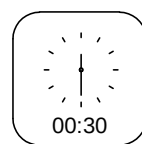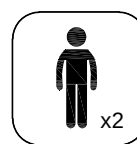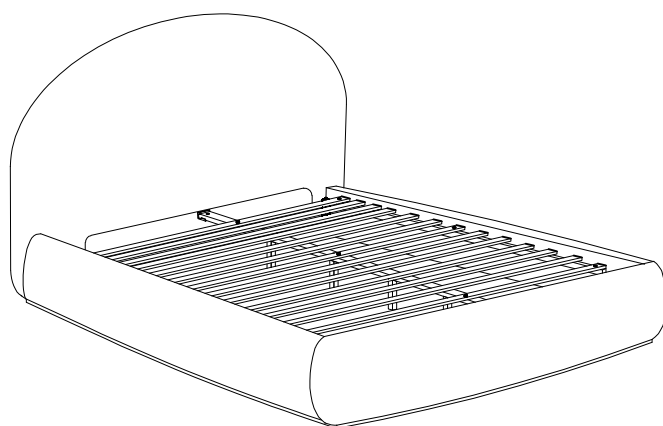


FLEX UPHOLSTERED FULL / QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 1

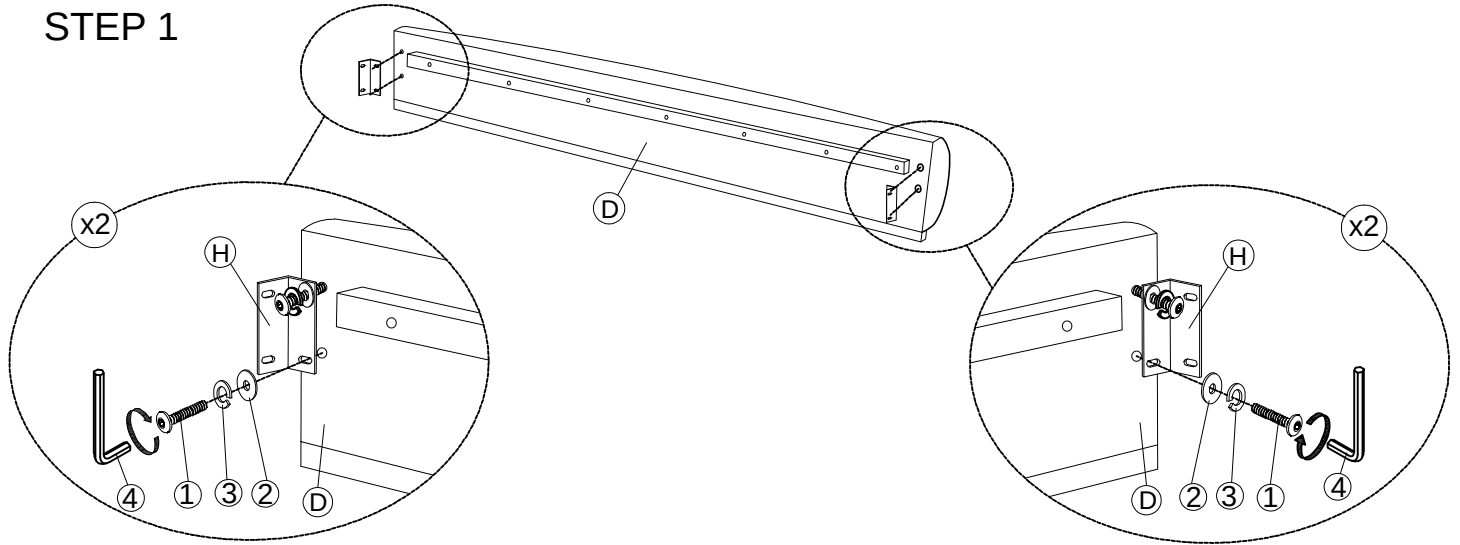

STEP 2

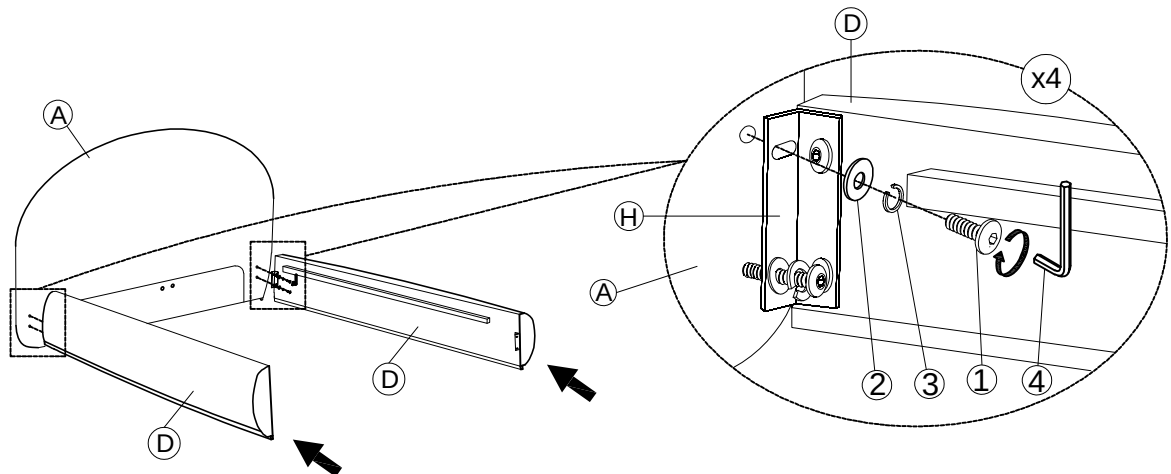

STEP 3

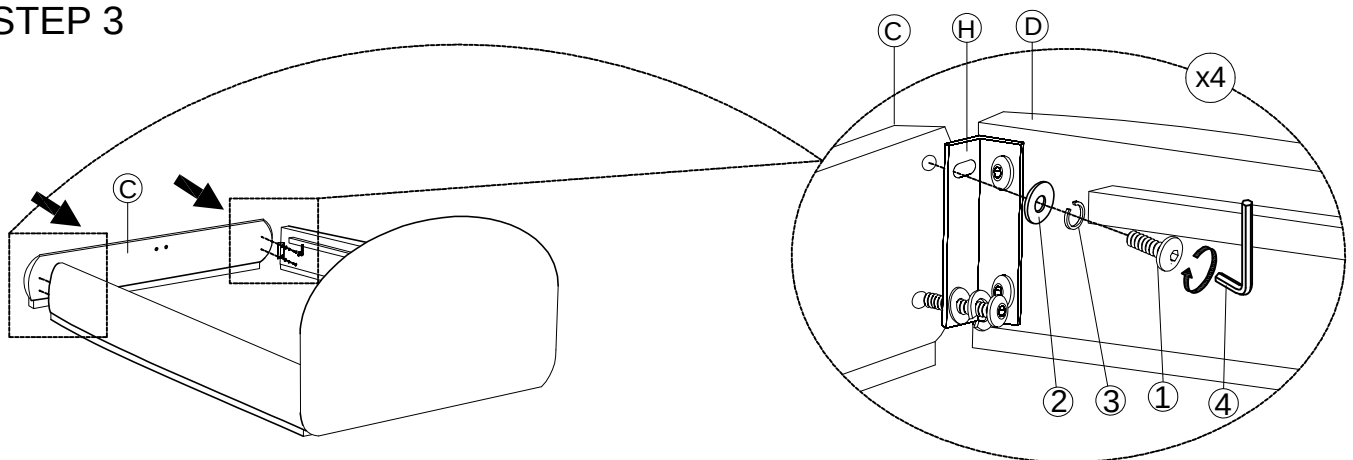

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4-8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

FLEX UPHOLSTERED FULL / QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 4

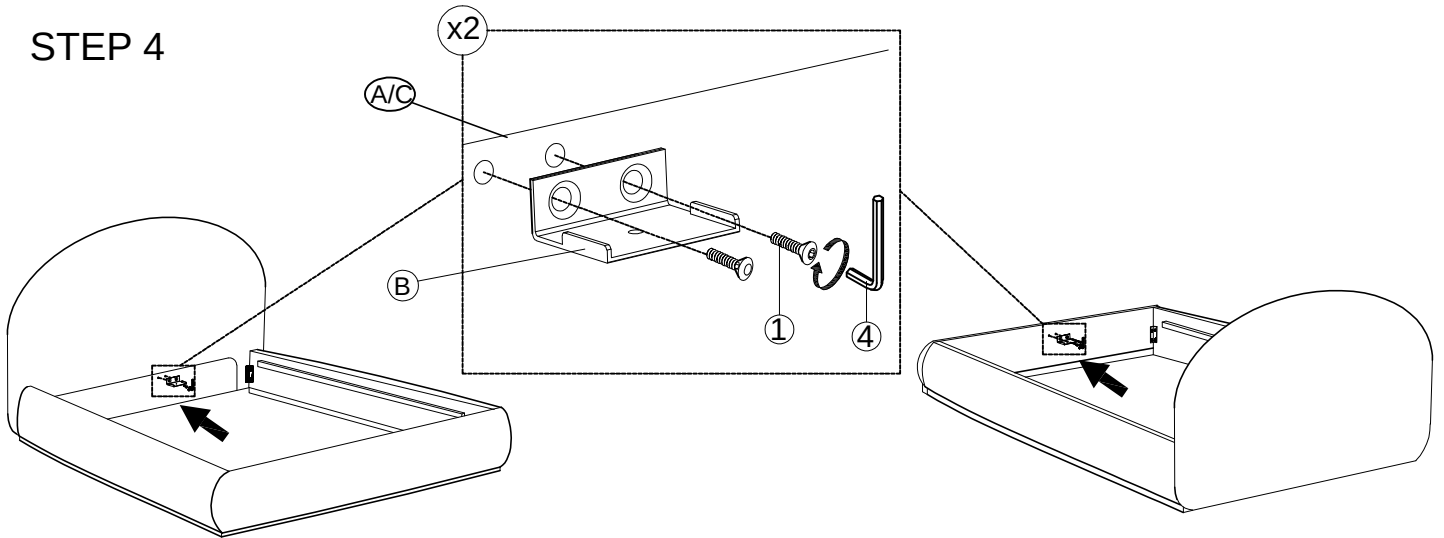

STEP 5

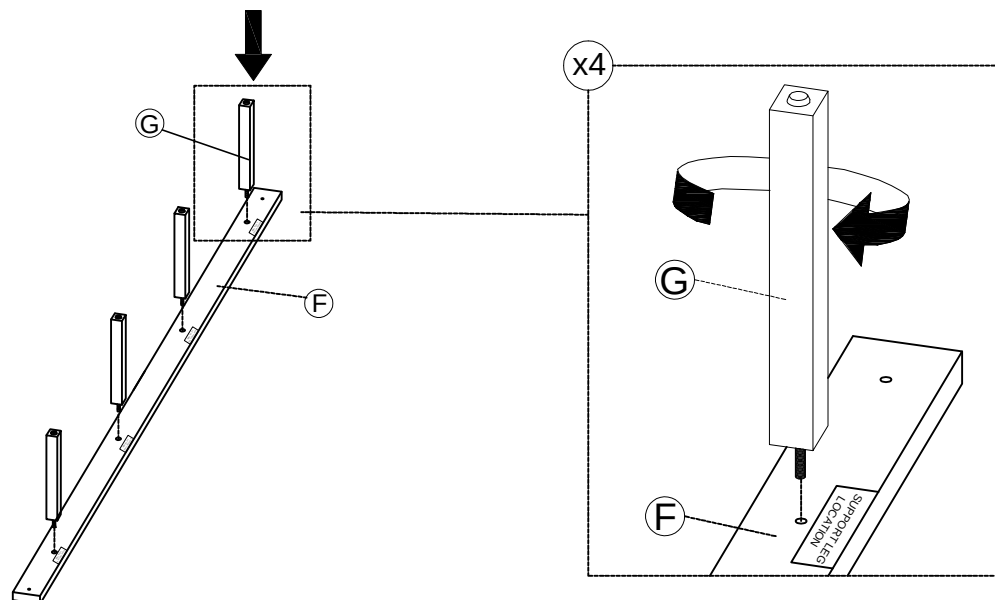

STEP 6

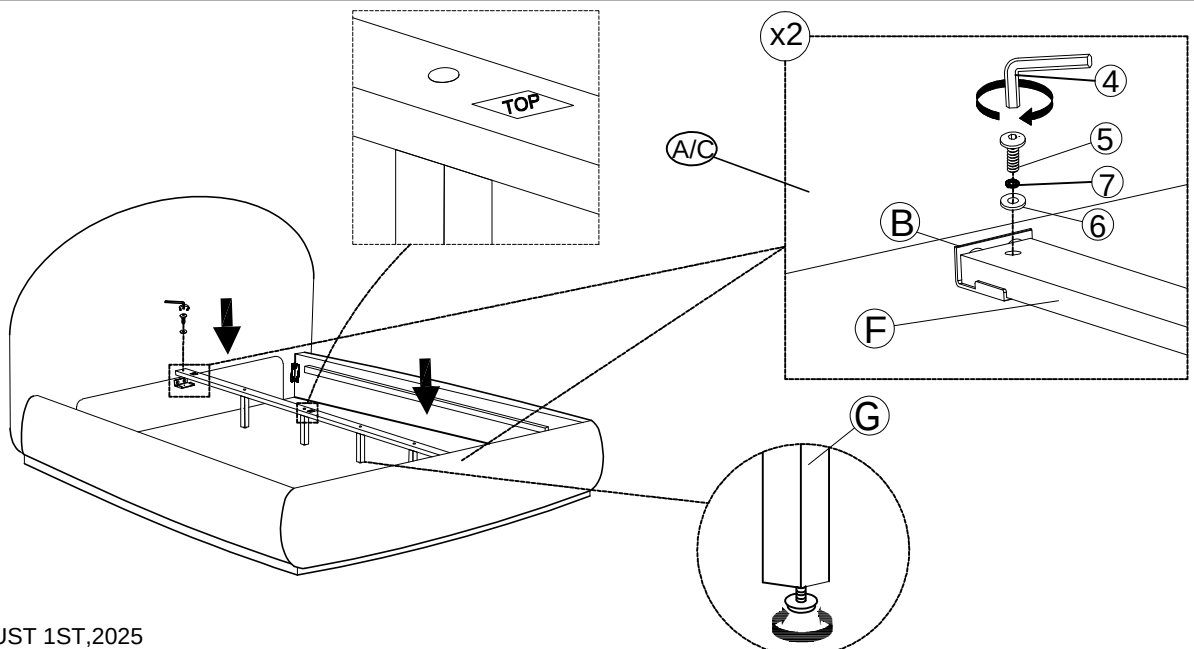


FLEX UPHOLSTERED FULL / QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 7

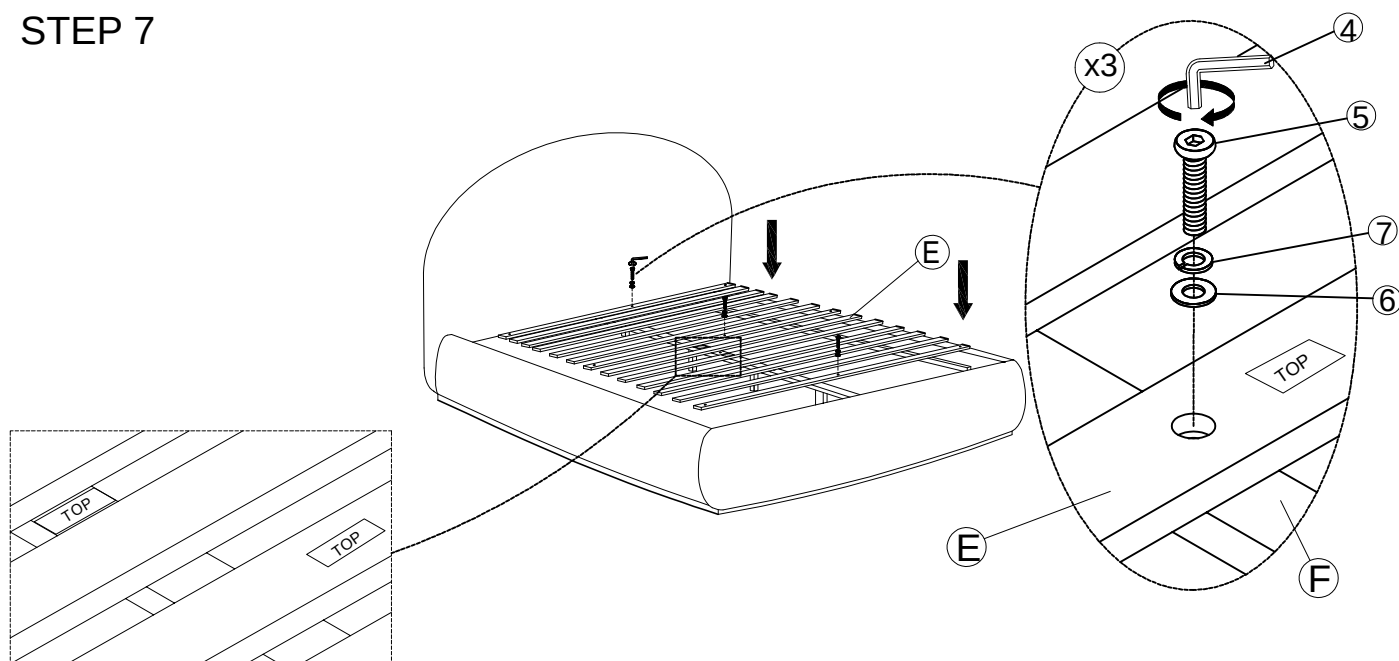


STEP 8

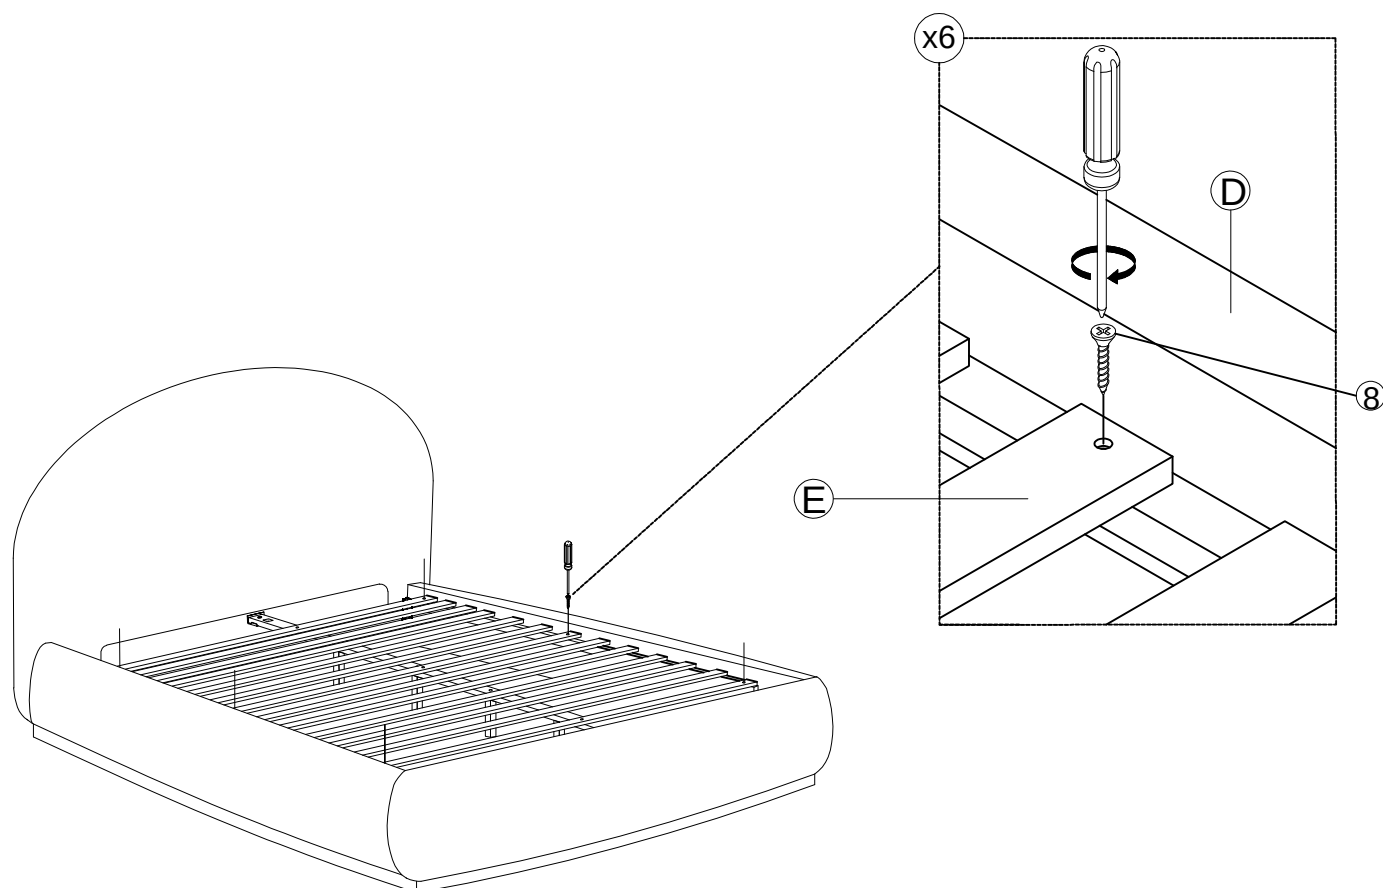

FLEX UPHOLSTERED FULL / QUEEN BED

ASSEMBLY INSTRUCTIONS

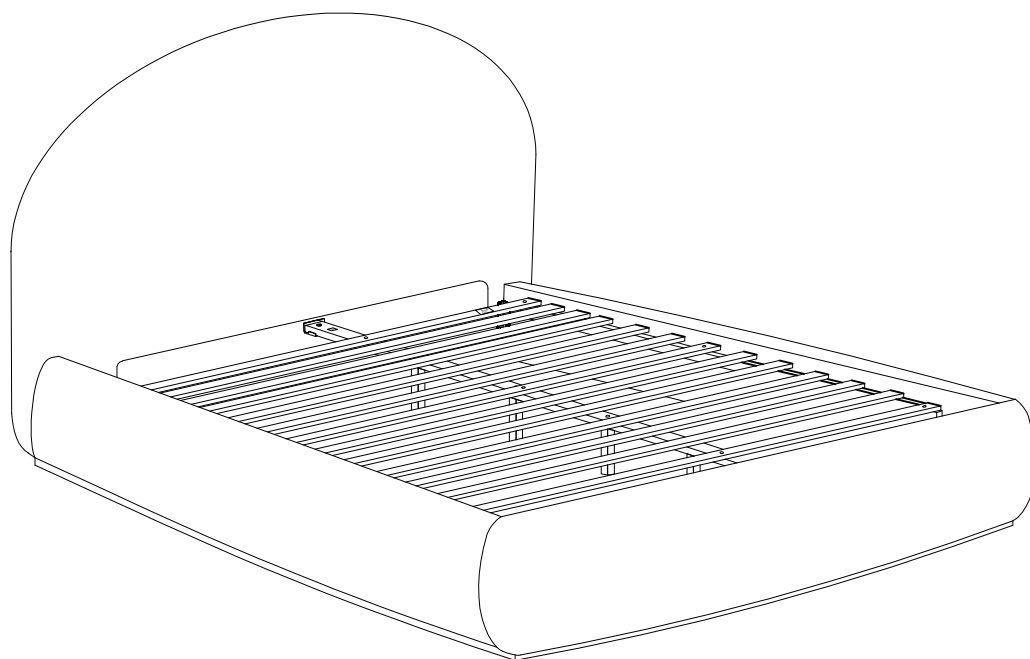


ASSEMBLY COMPLETE.

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

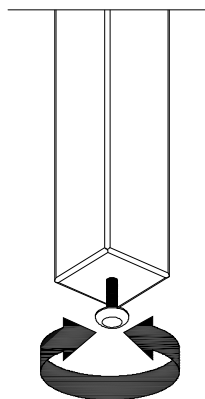

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

FLEX UPHOLSTERED FULL / QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION.
FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

B.	CENTER SLAT SUPPORT CLEAT	2PCS
E.	SLAT ROLL	1SET
F.	CENTER SLAT SUPPORT	1PC
G.	SLAT SUPPORT LEG	4PCS

STEP 1 :

USE ALLEN KEY (4) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

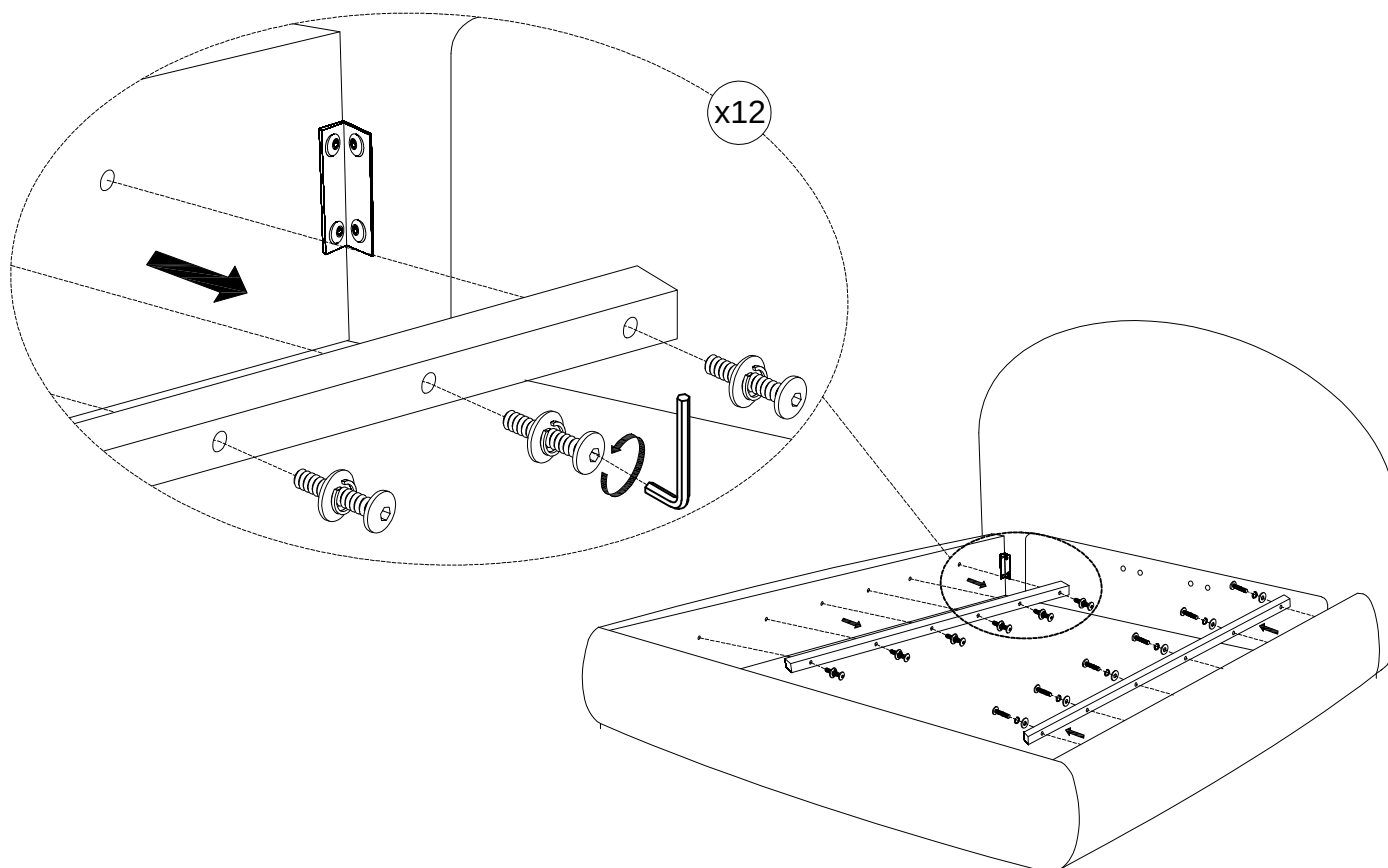

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

UPDATED: AUGUST 1ST, 2025

FLEX UPHOLSTERED C.KING / KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

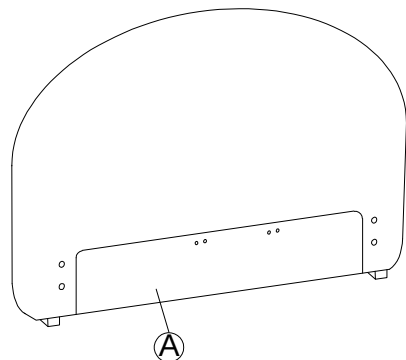

HARDWARE KIT PACKED IN BOX #2

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT(5/16"x1-1/4")		24 PCS
2	FLAT WASHER (5/16")		16 PCS
3	LOCK WASHER (5/16")		16 PCS
4	ALLEN KEY (5/16")		1 PC
5	ALLEN BOLT(1/4"x1-1/2")		10 PCS
6	FLAT WASHER (1/4")		10 PCS
7	LOCK WASHER (1/4")		10 PCS
8	PHILLIPS SCREW (M4 x 32mm)		6 PCS

BOX#2

B. CENTER SLAT SUPPORT CLEAT 4PCS

C. FOOTBOARD 1PC


D. SIDE RAIL 2 PCS

E. SLAT ROLL 1SET




F. CENTER SLAT SUPPORT 2PCS

G. SLAT SUPPORT LEG 8 PCS

H. SIDE RAIL BRACKET 4PCS

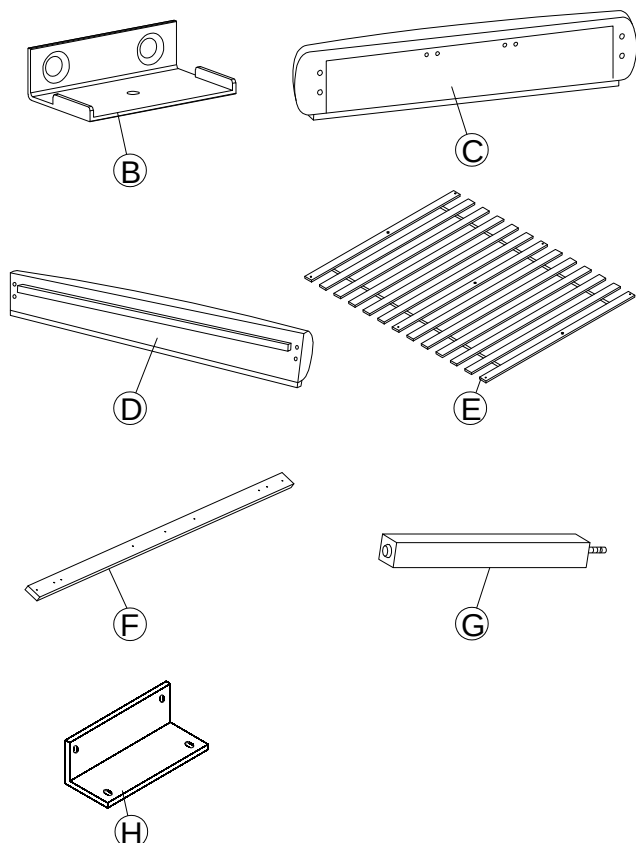

FULLY ASSEMBLED

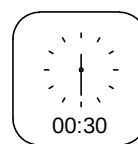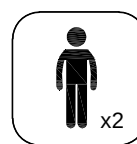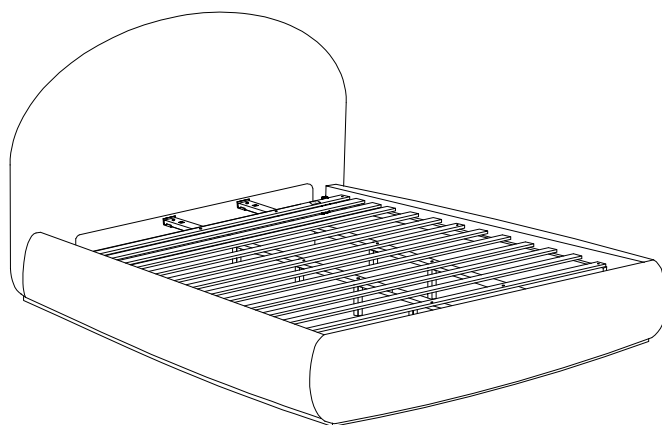


FLEX UPHOLSTERED C.KING / KING BED


ASSEMBLY INSTRUCTIONS




STEP 1

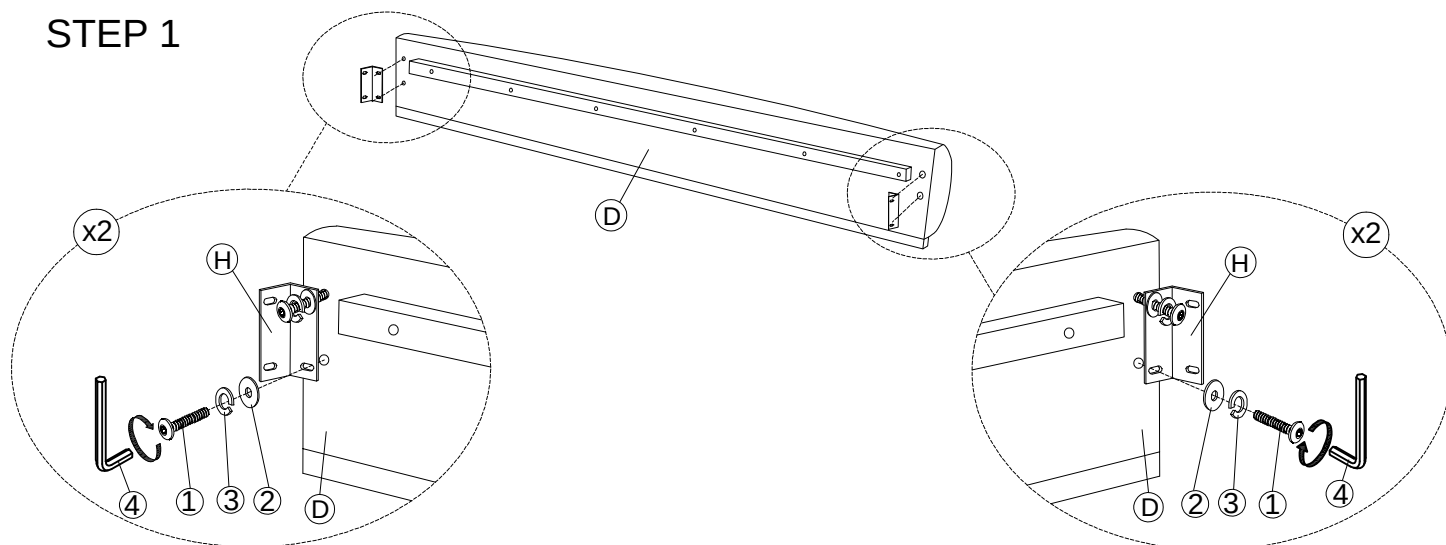

STEP 2

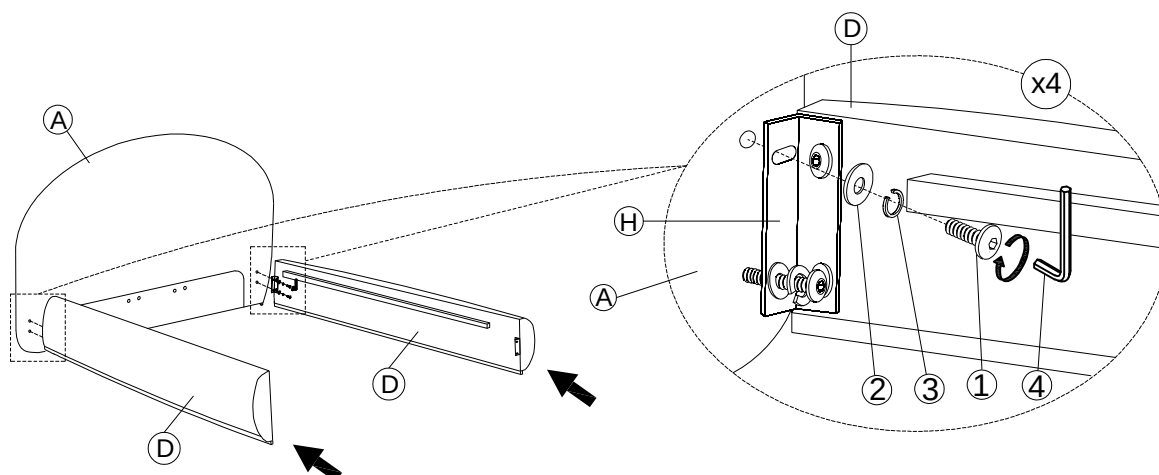

STEP 3

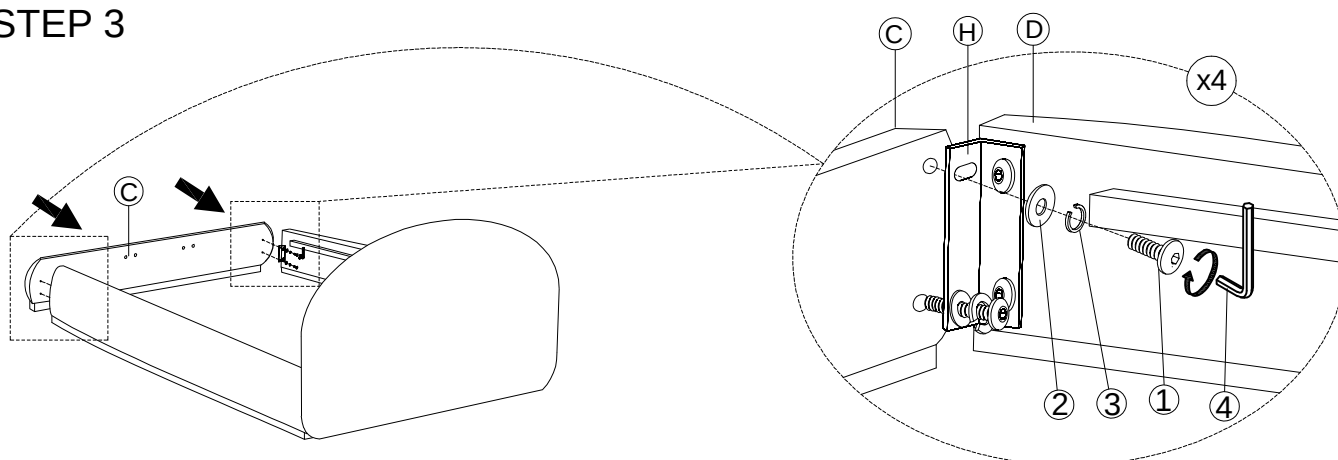

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4-8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

FLEX UPHOLSTERED C.KING / KING BED


ASSEMBLY INSTRUCTIONS




STEP 4

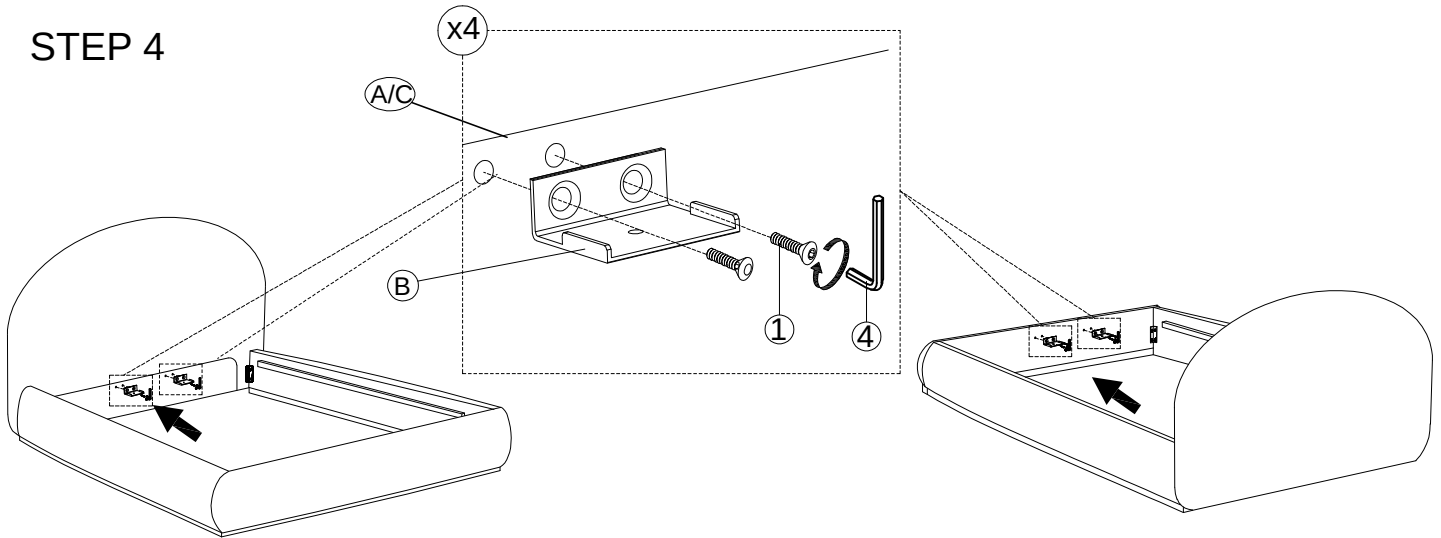

STEP 5

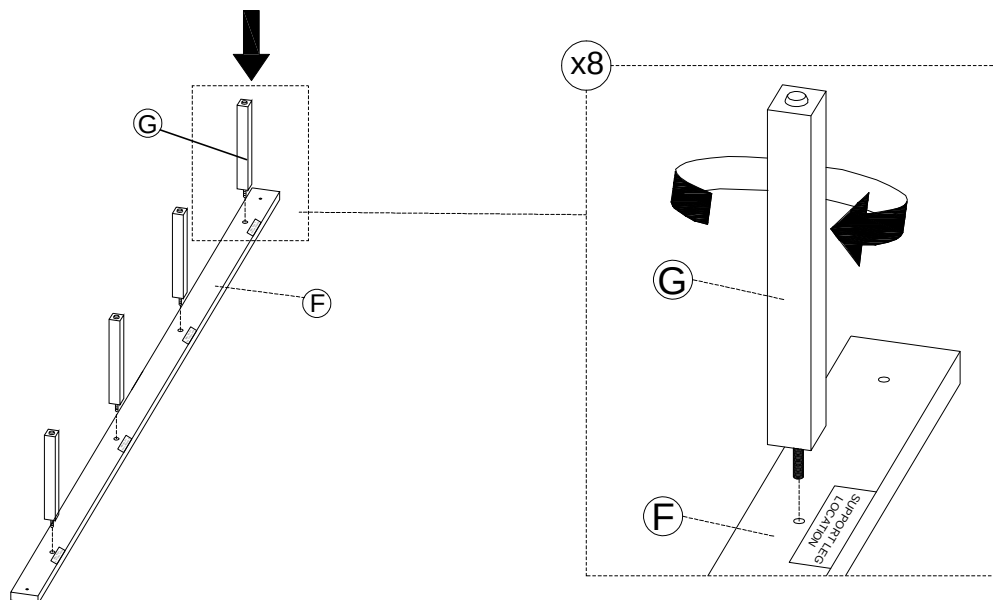

STEP 6

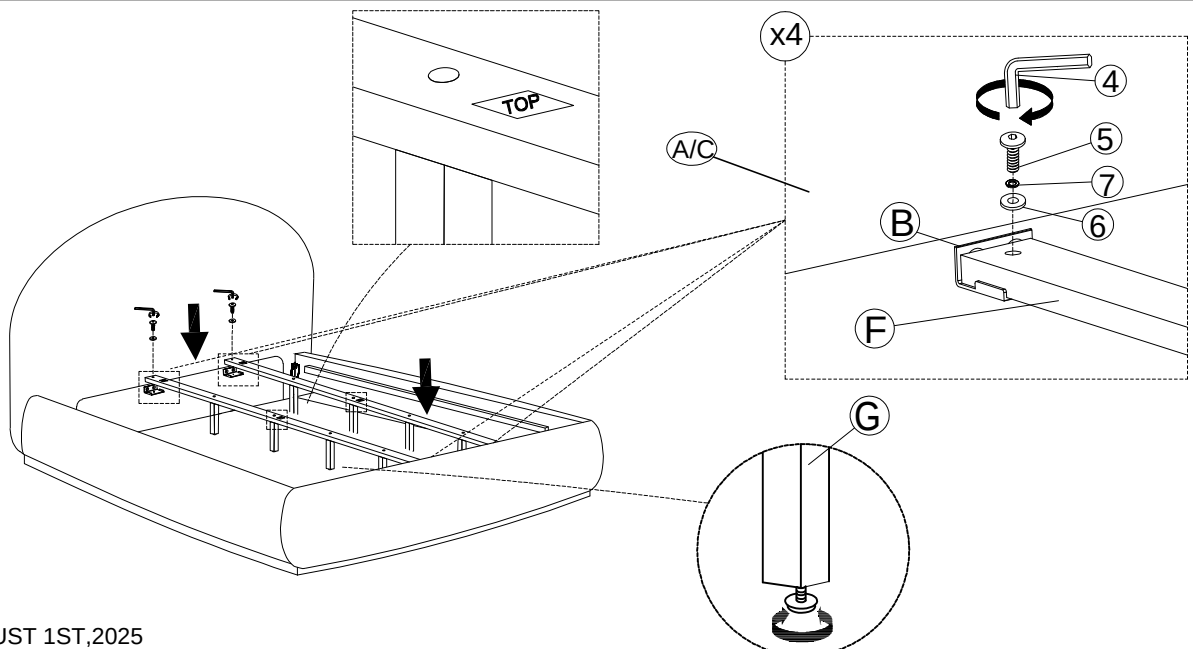


FLEX UPHOLSTERED C.KING / KING BED


ASSEMBLY INSTRUCTIONS



STEP 7

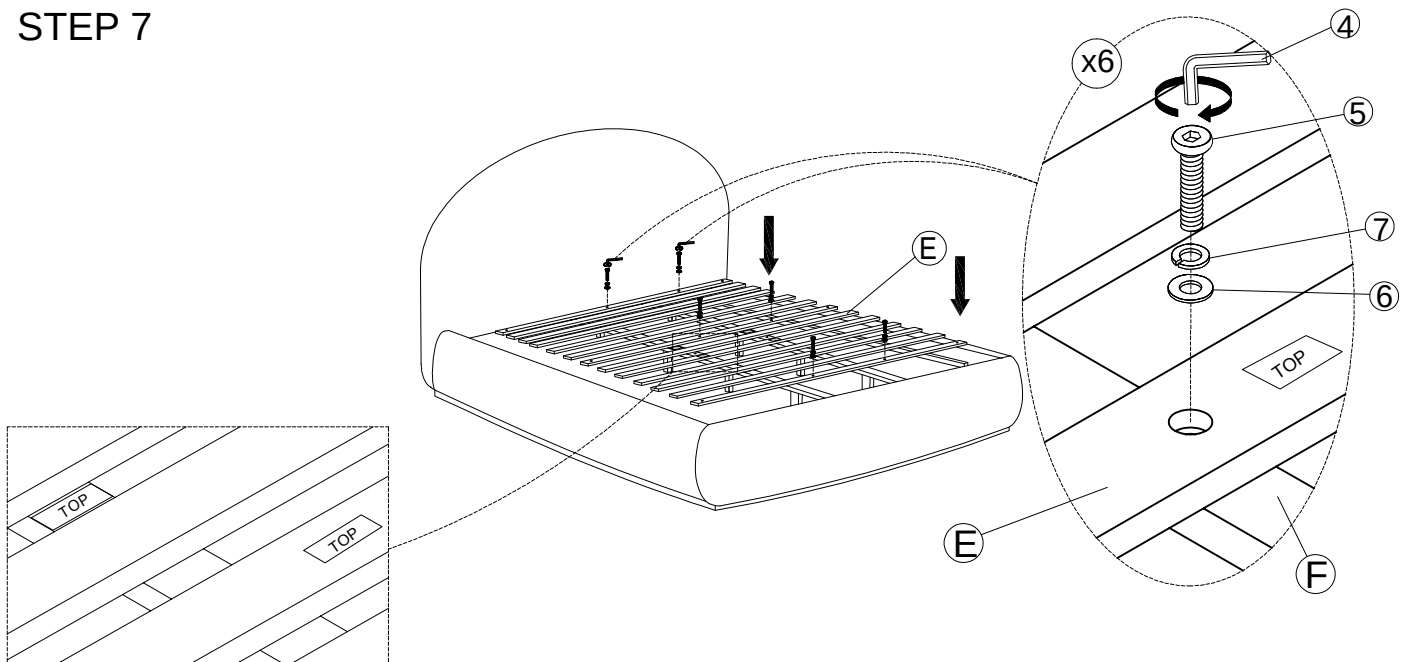


STEP 8

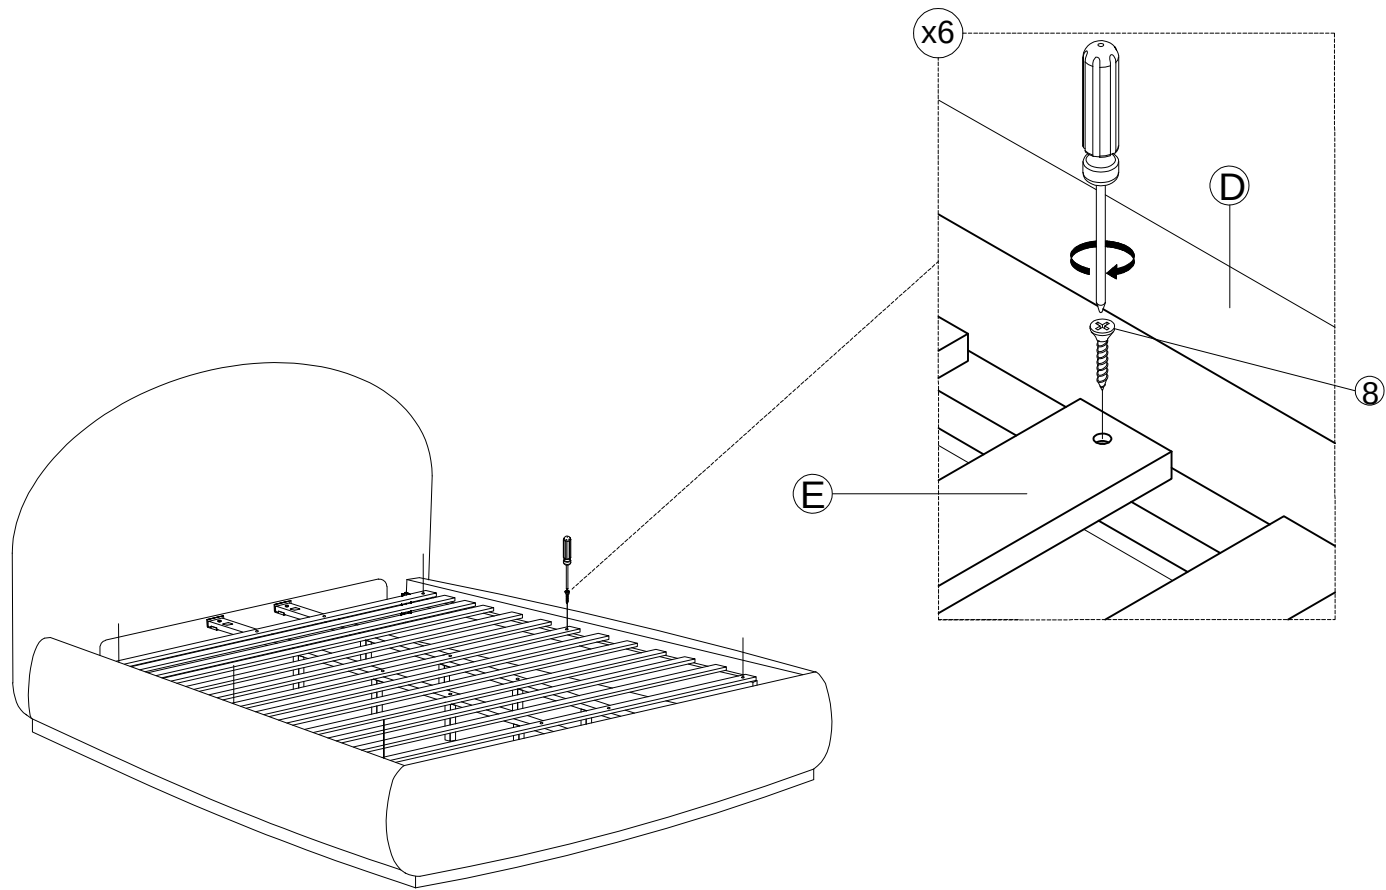

FLEX UPHOLSTERED C.KING / KING BED

ASSEMBLY INSTRUCTIONS

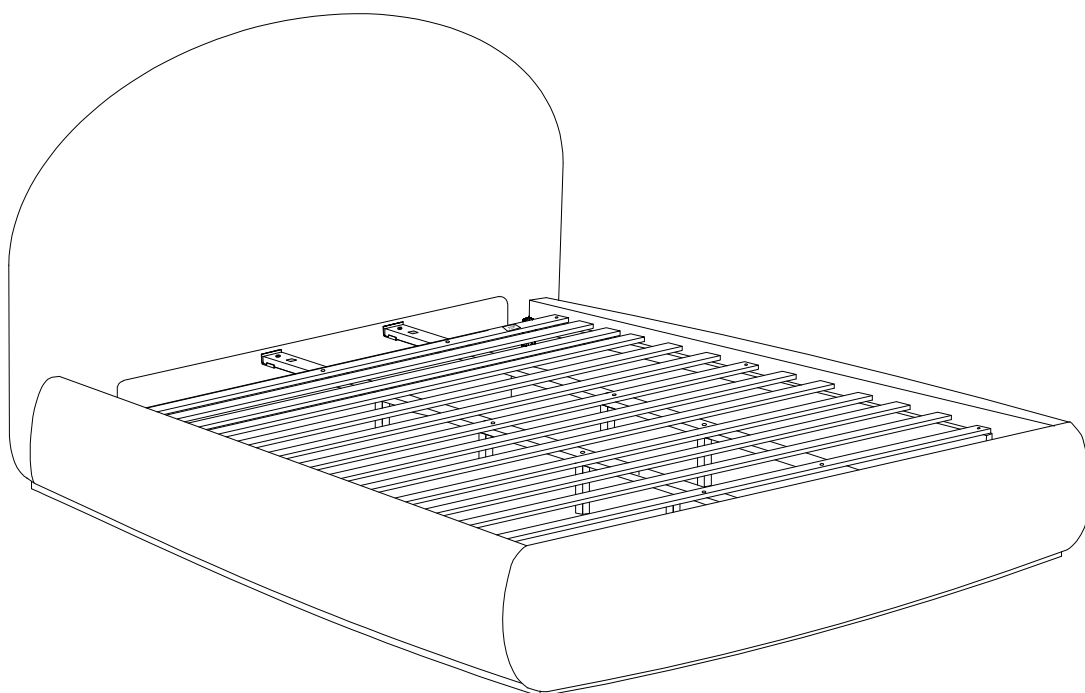


ASSEMBLY COMPLETE.

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

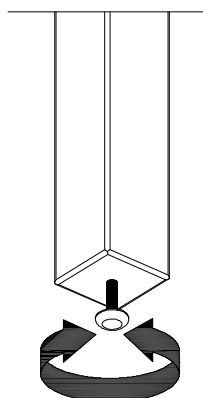

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

FLEX UPHOLSTERED C.KING / KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION.
FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

B.	CENTER SLAT SUPPORT CLEAT	4PCS
E.	SLAT ROLL	1SET
F.	CENTER SLAT SUPPORT	2PCS
G.	SLAT SUPPORT LEG	8PCS

STEP 1 :

USE ALLEN KEY (4) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

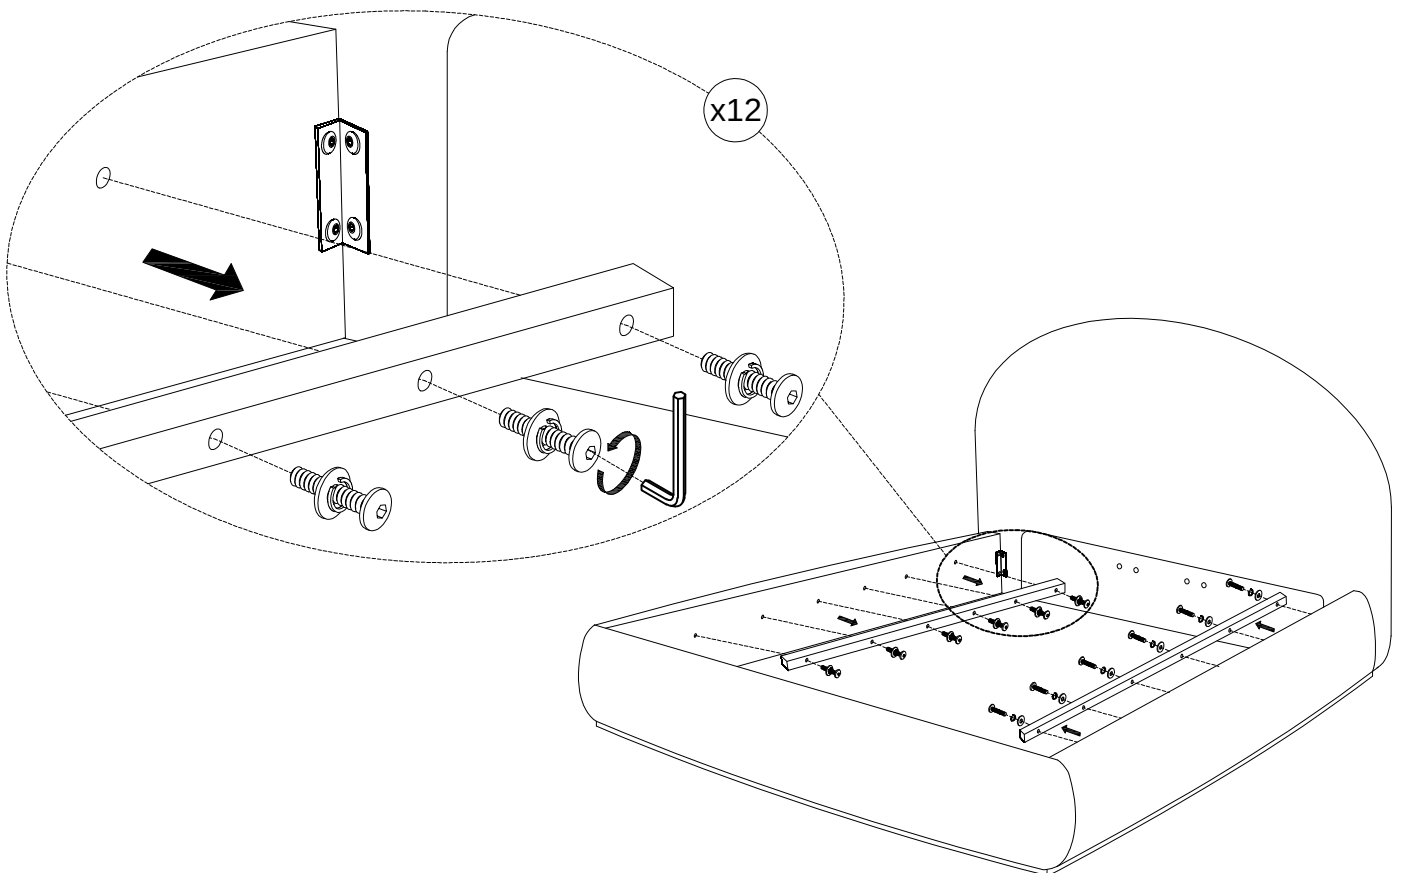

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

UPDATED: AUGUST 1ST, 2025