

CDM-WBM

Wood Bottom-Mount Soft-Close Trash Can
Pullout Door Mounting Kit

Installation Instructions

Scan QR or visit link to
view installation video:
<https://delivr.com/2vgv8>




IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

CUSTOMER SERVICE:

Toll-free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

TOOLS NECESSARY:

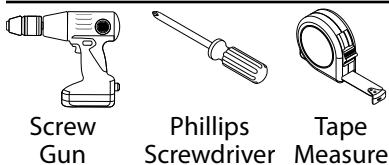

Screw
Gun

Phillips
Screwdriver

Tape
Measure

NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

PARTS IDENTIFICATION:

Pre-Assembled Organizer and
Base Unit

4 - #8 x 1" Coarse-Thread Wood
Screws

4 - #6 x 1/2" Coarse-Thread Screws

4 - 3M[™] Double-Sided Foam Tape
Squares

8 - #8 x 5/8" Coarse-Thread Screws
(21" units only)

2 - Door Joining Brackets
(21" units only)

1



If the cabinet door is attached to the cabinet with hinges, remove the door and hinges to prepare for organizer installation.

2




Place the base unit inside the cabinet. Position it left to right, ensuring proper clearance for hinge or door protrusion.

1. Face Frame Applications: Pull the wooden runner to the front of the cabinet until it is tight against the back of the face frame.*
2. Frameless Applications: Position the wooden runner with a 3/4" setback from the front of the cabinet.

* For narrow door applications, unit may have to be placed inside and positioned with slides directly behind face frame.

3

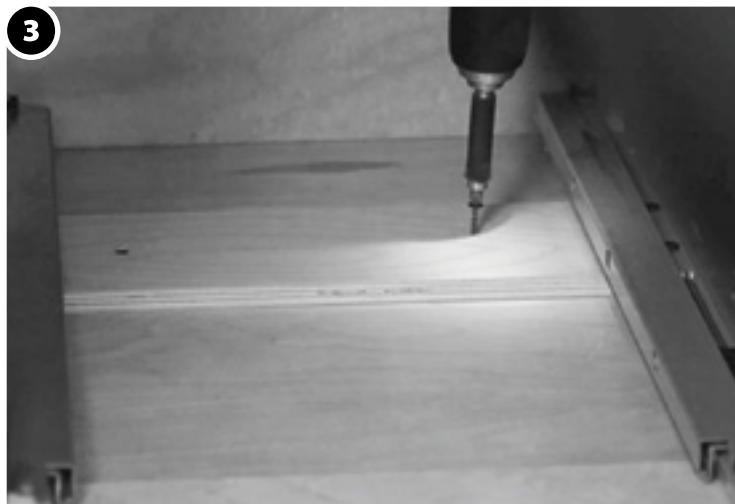

Secure the base unit by screwing through the plywood runners (front & back) with the (4) #8 x 1" coarse-thread wood screws provided.

4



Place the trash organizer onto the undermount slides. Push the unit into the cabinet until you hear the clips lock into place. Move the unit in and out of the cabinet to ensure proper clearances.

5

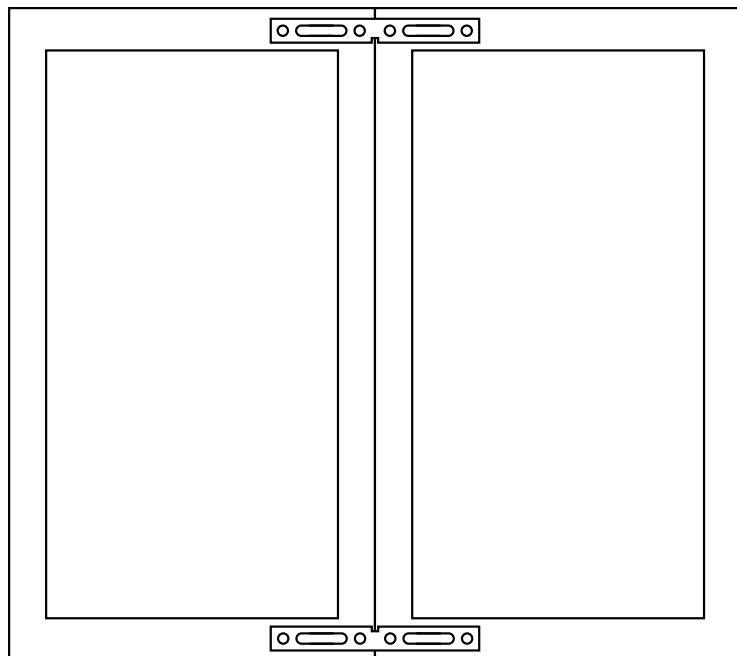


Figure 1

For 21" Trash can Units: If your cabinet has a single door, skip to step 6. If the cabinet has double doors, proceed with steps a–c.

- Lay doors face down on flat surface. If desired, to hide any hinge bore holes, rotate doors 180 degrees so the hinge bore holes are facing inward.
- Align doors side by side. Based on preference, either align with door edges touching or gapped to match adjacent doors/drawers. Use the center notch to center door joining brackets between both doors (see Figure 1).
- Attach door joining brackets near top and bottom of door frame with provided #8 x 5/8" screws (4 screws per bracket).


Note: Bracket may be shifted up or down to clear face frame and decorative hardware screws (decorative hardware screws may be recessed underneath joining brackets if needed).

6



Adjust door-mounting brackets out to the desired location. Attach 1 square of double-sided foam tape to each door bracket. Close the organizer, visually line up the door and press door firmly against the organizer so that door sticks to tape on brackets. Open organizer and secure brackets with provided #6 x 1/2" screws.

7

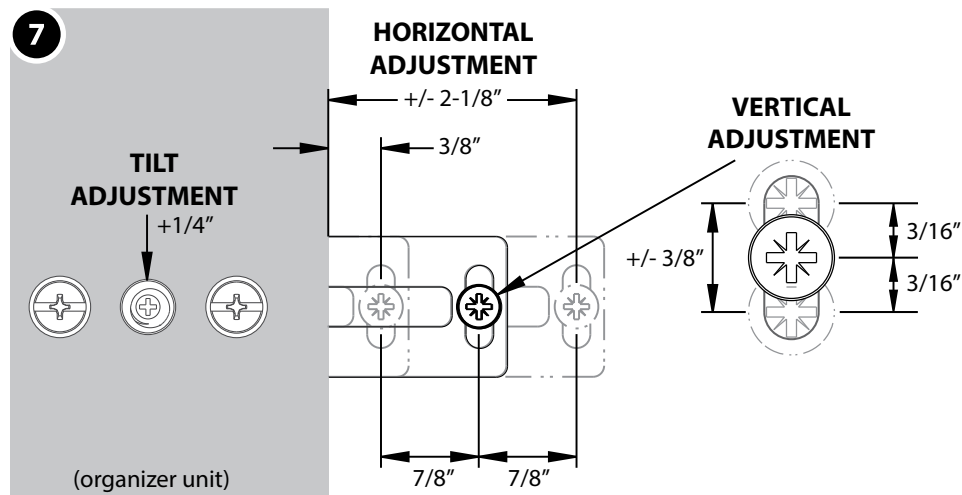

Adjust the position of the cabinet door for proper leveling and spacing. After adjustments are made, firmly tighten all door and bracket screws.

- Left/Right: Loosen bracket screws then adjust door.
- Up/Down: Loosen door screws then adjust door.
- Tilt: Loosen bracket screw and screw the tilt screw outward to achieve the desired angle.