





ITEM: SB-AZ507RL-*
SB-AZ508RL-*
SB-AZ408C-*
SB-AZ409C-*
SB-AZ608RL-*
SB-AZ609RL-*


ANNZI SHOWER BASE
INSTALLATION & OPERATION MANUAL
V1.0
02/25/2026

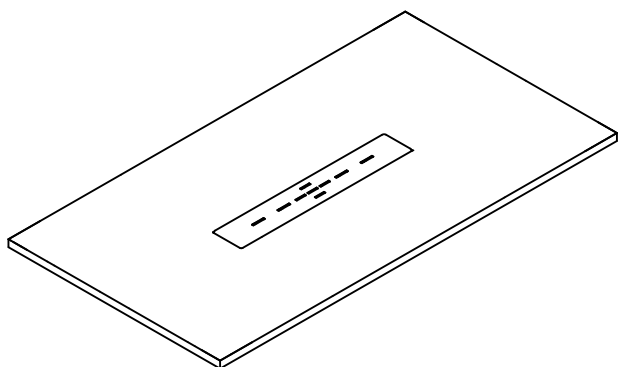

SB-AZ408C-*
SB-AZ409C-*

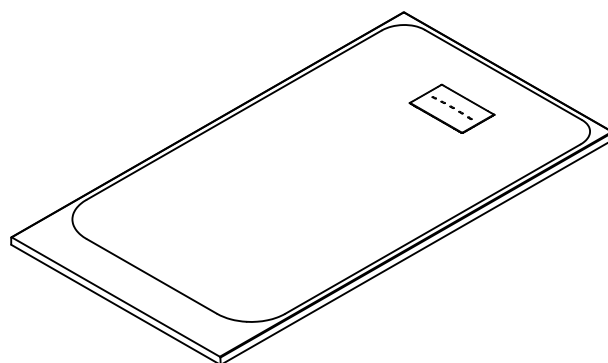

SB-AZ507RL-*
SB-AZ508RL-*

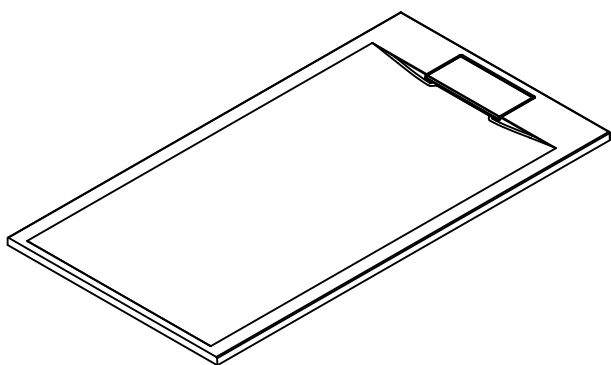

SB-AZ608RL-*
SB-AZ609RL-*

DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure it is recognized as a purchase and covered under warranty.

Register online at <https://anzzi.com/pages/register> or scan the QR code on PG. 2.



PRODUCT REGISTRATION*

IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at <https://anzzi.com/pages/register> or Scan the QR code below.

Registering your product maximizes your warranty benefits and ensures prompt service and support.

1

USE YOUR PHONE CAMERA
TO SCAN THE QR CODE



2

FILL IN A QUICK
REGISTRATION FORM

Thank you for your purchase!

Registering your products ensures you maximize your warranty benefits and receive prompt service and support.

Name*

Email*

City*

Order #*

Installer Name

...

Model Purchased*


Installer Phone Number

Customer Age Range

Submit

3

CLICK SUBMIT AND
ENJOY PEACE OF MIND

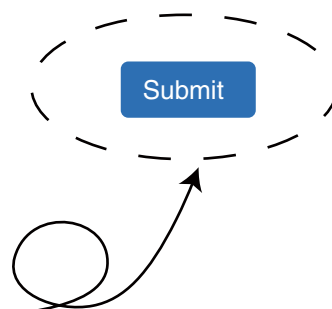

Need help? For technical support call **305-614-4070** or visit us at www.ANZZI.com












INSTALLATION GUIDE

BEFORE YOU BEGIN


- Prior to installation, examine all boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or has missing parts, please contact our customer support department within 5 business days of the delivery date. Please note that we will not replace any damaged products or missing parts free of charge after 10 business days or if the product has been installed.
- These instructions include suggestions for rough construction and plumbing installation. Local building codes vary and could supersede those suggestions. If you are not confident in your ability to perform these tasks, contract out those tasks you need help with or use a professional installer.
- Failure to read these instructions prior to installation may result in personal injury, property damage, or product failure. Manufacturer assumes no responsibility for product failure due to improper installation.
- Confirm that your model will fit in intended location and plumbing fixtures are located where required before beginning installation.
- Walls and sub-floor must be solid, plumb, and square.
- Use drop cloth to protect shower base from damage during installation.
- Make sure the drain hole in the subfloor or slab is large enough (6" diameter recommended).
- IF INSTALLING MATCHING ENCLOSURE, refer to Enclosure Installation Manual for specific lumber sizes and placement. Additional studs will be required and need to be installed at this point.
- Check the corresponding specification drawings for the detail dimensions.
- Do not use plumber's putty. May result in product failure. Use latex/acrylic sealant or a gasket.
- This shower base is heavy. We recommend that the installation be under taken by 2 people, as a security precaution. Also, make sure to adopt the proper posture when lifting the shower base.

IMPORTANT: Dimensions provided are for reference only. You must measure the actual shower tray sizes before installation, this includes overall dimensions and drain location.

TOOLS AND MATERIALS REQUIRED

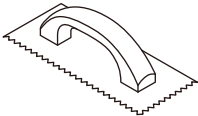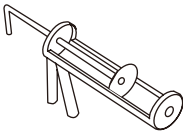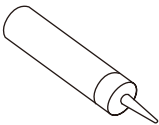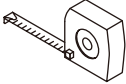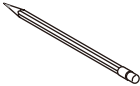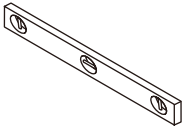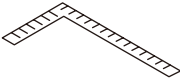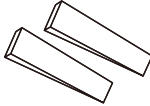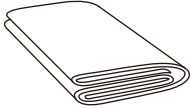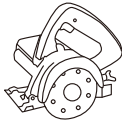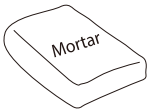					
2" Shower Drain	Gloves	1/4" Square Notched Trowel	Safety Glasses	Caulk Gun	Sealant
					
Tape Measure	Pencil	Level	Square	Shims	Drop Cloth
					
Hole Saw (sized to accomodate plumbing)	Drill	Rubber Mallet	Tile Saw	Mortar	1/8" Drill Bit

SHOWER BASE CROSS SECTION DRAWING

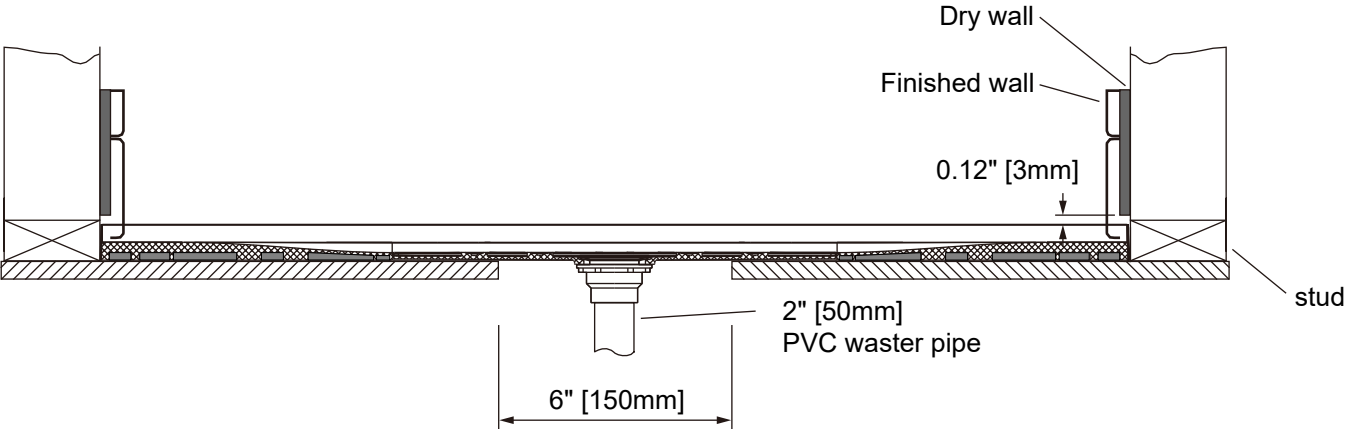


PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
01	Shower Base	1
02	Drain Cover	1
03	Center Flange	1
04	Side Flange	2
05	Screw #8 x 0.8"	13



ATTENTION


- Each shower base includes 3 aluminum flanges which are not attached to the base.

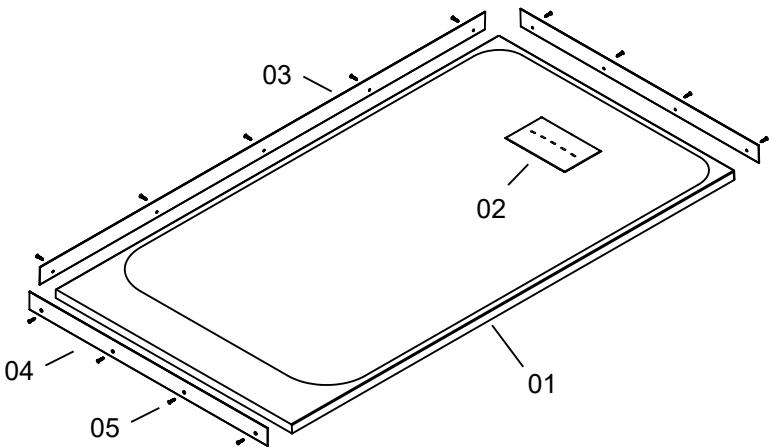

SHOWER FLOOR & DRAIN OPENING CONSTRUCTION DIMENSIONS

Dimensions for shower base with flanges

ITEM:	Nominal Sz.	Dim. A	Dim. B	Dim. C	Dim. D	Dim. E
SB-AZ408C-*	60" X 32"	59.17"	31.56"	29.58"	15.8"	2.05"
SB-AZ409C-*	60" X 36"	59.17"	35.49"	29.58"	17.78"	2.05"
SB-AZ507RL-*	60" X 32"	59.17"	31.56"	8.56"	15.8"	2.05"
SB-AZ508RL-*	60" X 36"	59.17"	35.49"	8.56"	17.78"	2.05"
SB-AZ608RL-*	60" X 32"	59.17"	31.56"	4"	15.8"	2.05"
SB-AZ609RL-*	60" X 36"	59.17"	35.49"	4"	17.78"	2.05"

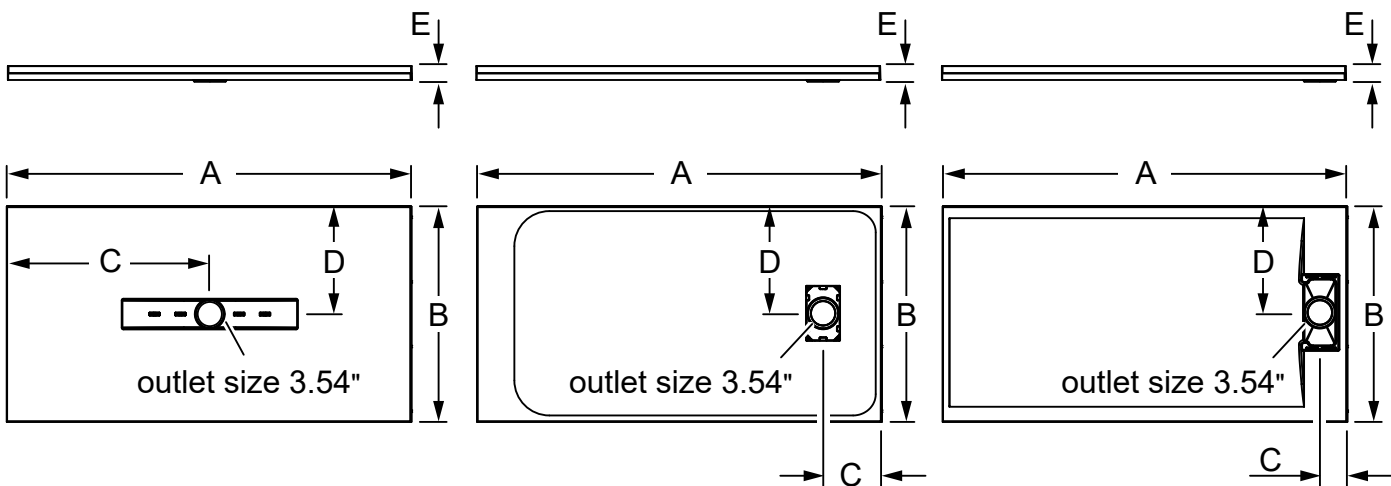

SB-AZ408C-
SB-AZ409C-*


SB-AZ507RL-
SB-AZ508RL-*

SB-AZ608RL-
SB-AZ609RL-*

SHOWER FLOOR & DRAIN OPENING CONSTRUCTION DIMENSIONS

Dimensions for shower base **without** flanges

ITEM:	Nominal Sz.	Dim. A	Dim. B	Dim. C	Dim. D	Dim. E
SB-AZ408C-*	60" X 32"	59.06"	31.5"	29.53"	15.75"	1.02"
SB-AZ409C-*	60" X 36"	59.06"	35.43"	29.53"	17.72"	1.02"
SB-AZ507RL-*	60" X 32"	59.06"	31.5"	8.5"	15.75"	1.02"
SB-AZ508RL-*	60" X 36"	59.06"	35.43"	8.5"	17.72"	1.02"
SB-AZ608RL-*	60" X 32"	59.06"	31.5"	3.94"	15.75"	1.02"
SB-AZ609RL-*	60" X 36"	59.06"	35.43"	3.94"	17.72"	1.02"

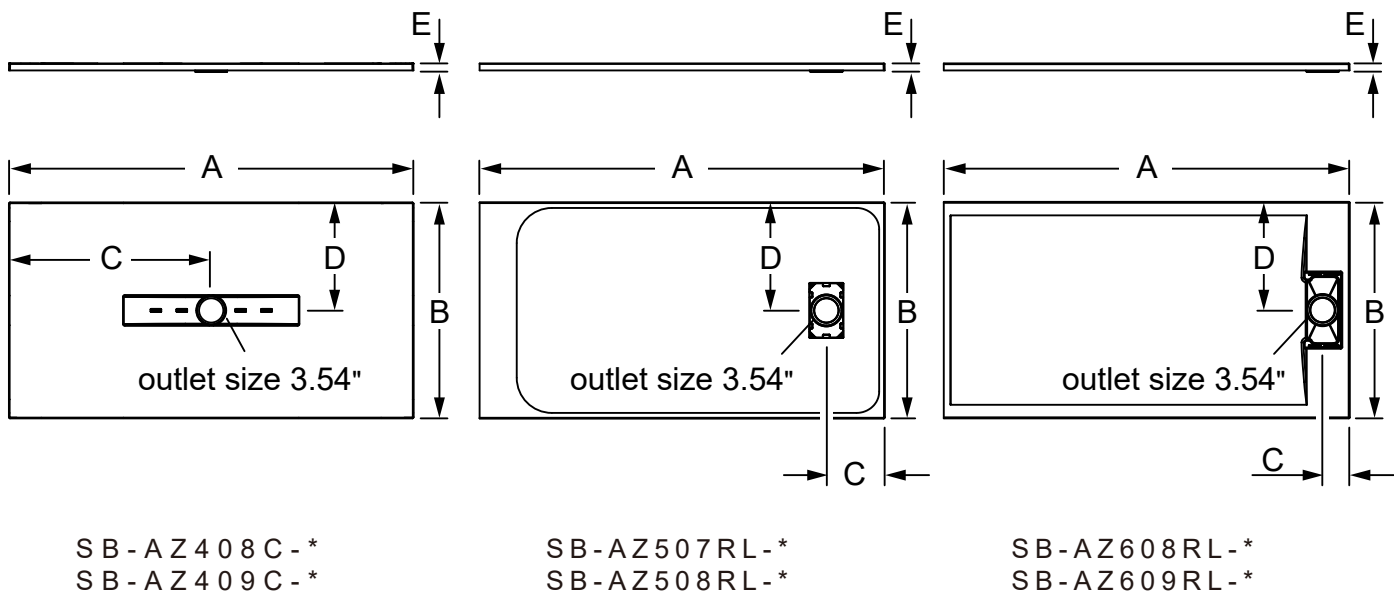



ATTENTION

- We can not anticipate every possible installation situation or condition. The variety of installations possible for this shower floor may require procedures other than those shown. Plan ahead to ensure that wall framework construction is corectly sized, plumb, and square.
- Measurements are $\pm 5/64$ " and subject to change without notice.
- Make sure the drain hole in the subfloor or slab is large enough (6" diameter recommended) and aligns with the hole in the shower floor.

INSTALLATION INSTRUCTIONS

STEP 1

- a. Choose the front side for shower base.
- b. Attach the **Side Flanges [04]** to the side of **Shower Base [01]** and mark on the shower base through the screw holes. (Refer to Fig. 1.1)
- c. Remove the **Side Flanges [04]** and drill 1/8" holes at the marked locations. (Refer to Fig. 1.2)
- d. Secure the **Side Flanges [04]** with the **Screws [05]**. (Refer to Fig. 1)

Note: 1. The side flange should be aligned with the front of shower base.

2. The tapered holes face outside and the edge which is closed to the holes aligned with the bottom of shower base.


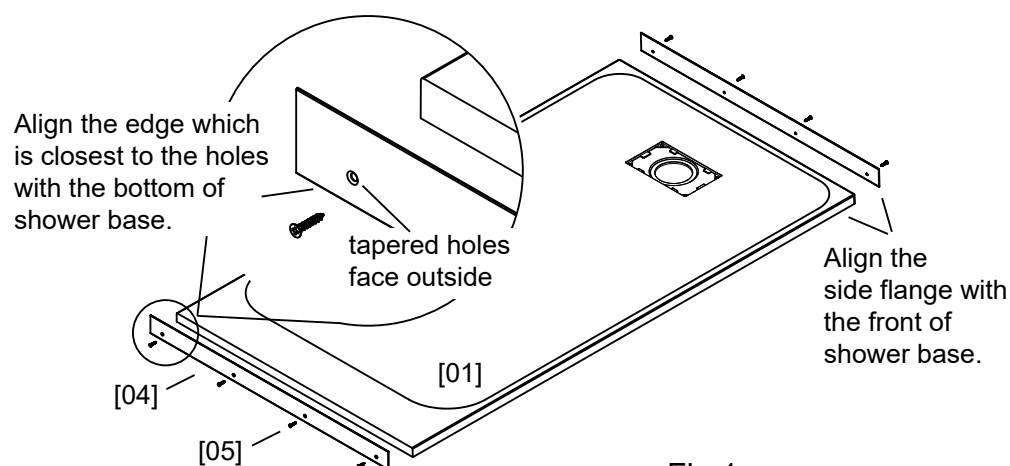


Fig 1

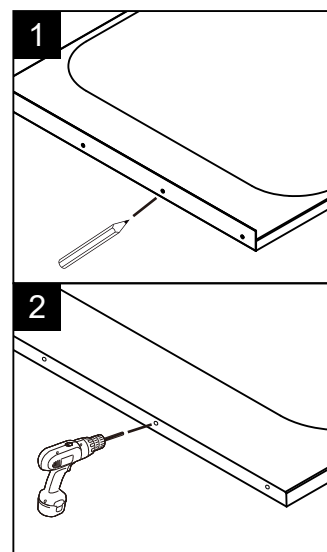

STEP 2

- a. Attach the **Center Flange [03]** to the back of **Shower Base [01]** and mark on the shower base through the screw holes. (Refer to Fig. 2.1)
- b. Remove the **Center Flange [03]** and drill 1/8" holes at the marked locations. (Refer to Fig. 2.2)
- c. Secure the **Center Flange [03]** with the **Screws [05]**. (Refer to Fig. 2)

Note: 1. If the **Center Flange [03]** is too long, cut it shorter.

2. The tapered holes face outside and the edge which is closed to the holes aligned with the bottom of shower base.


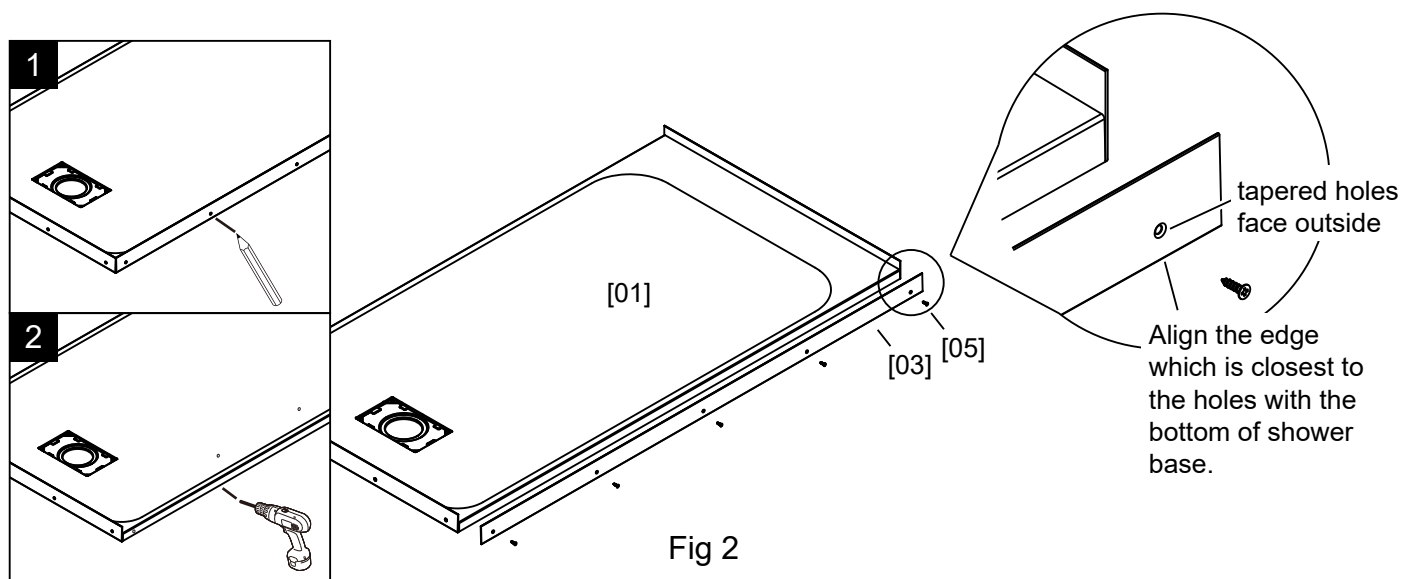


Fig 2

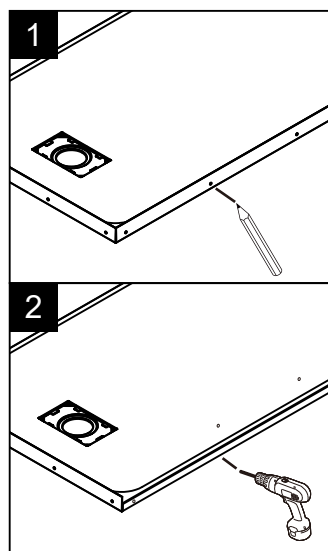

INSTALLATION INSTRUCTIONS

STEP 3

- a. Ensure that the subfloor and the studs are at right angles.
- b. Place the shower base at the intended position and verify the drain location. (Refer to Fig 3.1, Fig 3.2)

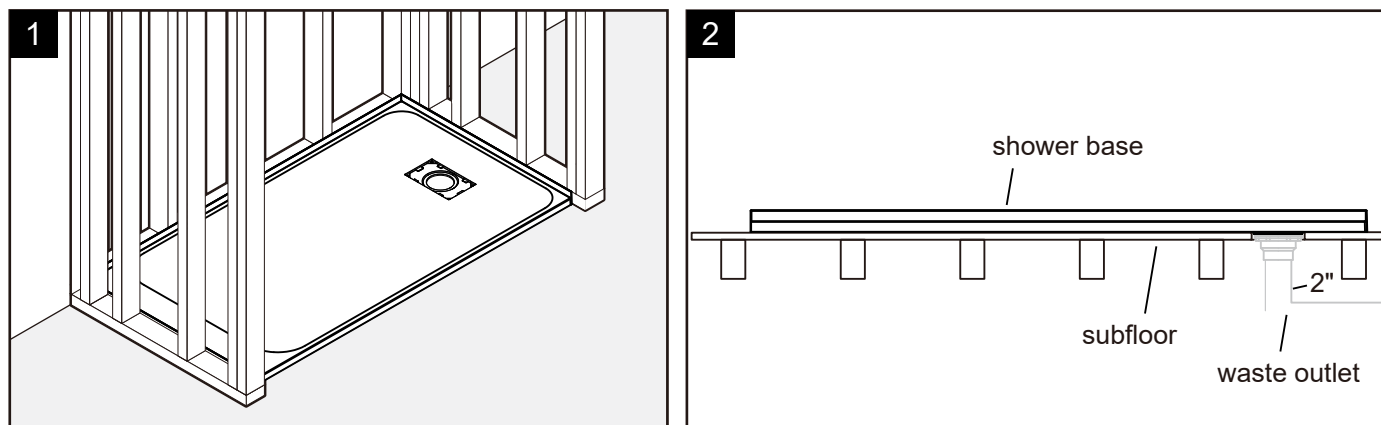


Fig 3

STEP 4

- a. Cut a 6" diameter or 6" x 6" recommended opening in the subfloor for the drain. (Refer to Fig 4.1)
- b. Install the drain body(not provided) to the waste pipe by following the instruction of the drain. (Refer to Fig 4.2)

Note: 1. Make sure the drain body is level.

2. Make sure the drain body is 0.24" lower than the subfloor.

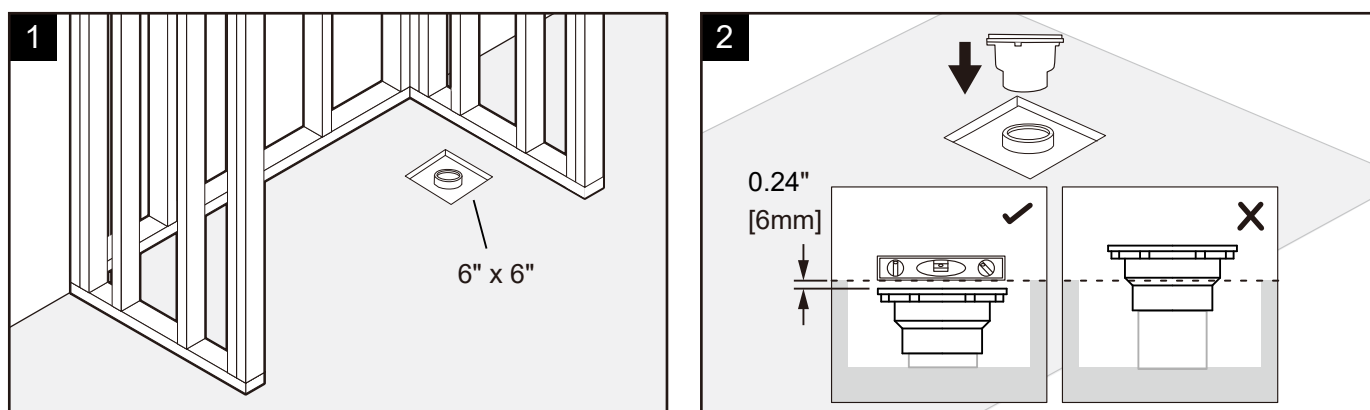


Fig 4

INSTALLATION INSTRUCTIONS

STEP 5

- a. Apply a generous amount of mortar that has been mixed to a thick consistency. Lower the shower base into position. After setting the shower base, use rubber mallet to adjust level as needed. Make certain the apron is contacting the subfloor along the entire length of the shower base. (Refer to Fig 5.1)
- b. Ensure that the base is level in two directions. (Refer to Fig 5.2)
- c. Install the drain by following instructions in step 6 before the mortar dries.

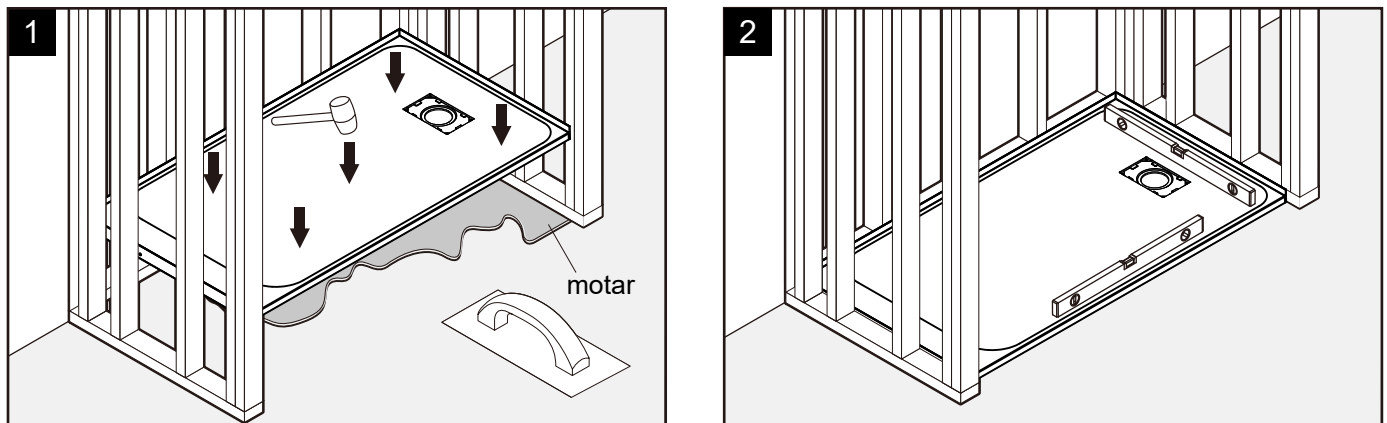


Fig 5

STEP 6

- a. Install the drain(not provided) to the drain body through the shower base by following the instruction of the drain. (Refer to Fig 6.1)
- b. Allow 24 hours for the mortar to secured.
- c. Add waterproof silicone bead to seam between the flanges and the pan base, and each corner seam between flange joints. (Refer to Fig 6.2)

Note: 1. Make sure the drain is secured.

2. Apply good quality silicone sealant between the drain and the shower base if needed.



ATTENTION! - Do NOT use plumber's putty

Plumber's putty will degrade shower base material, causing cracks and potential property damage. DO NOT use plumber's putty to seal between drain and base. Use sealant or gasket.

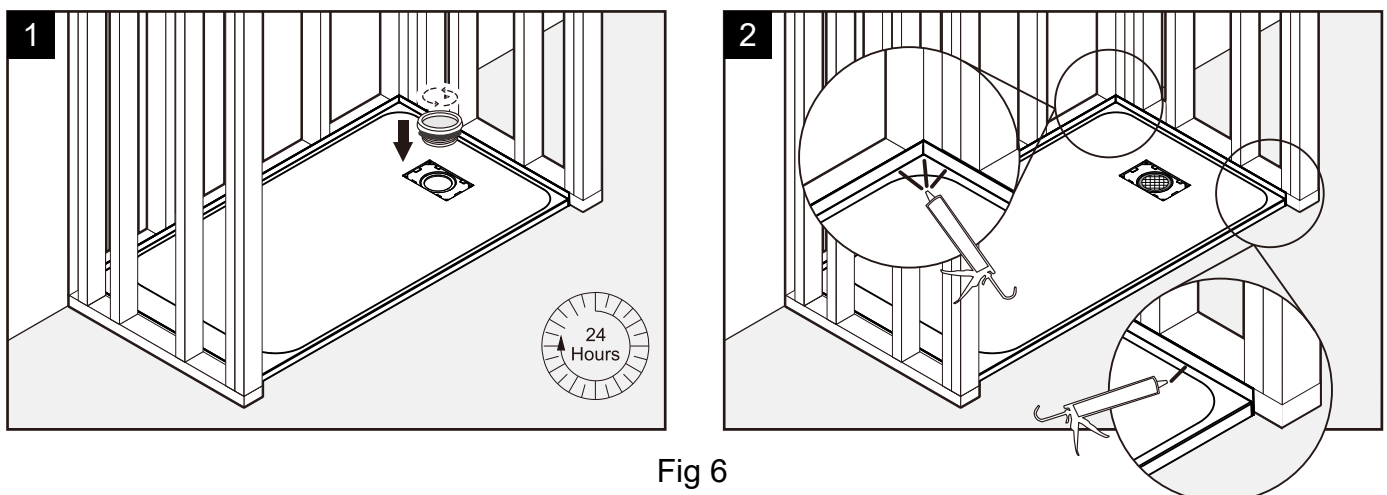


Fig 6

INSTALLATION INSTRUCTIONS

STEP 7

Use box lid to protect shower base before continuing with wall panel or tile installation. (Refer to Fig 7.1, Fig 7.2)

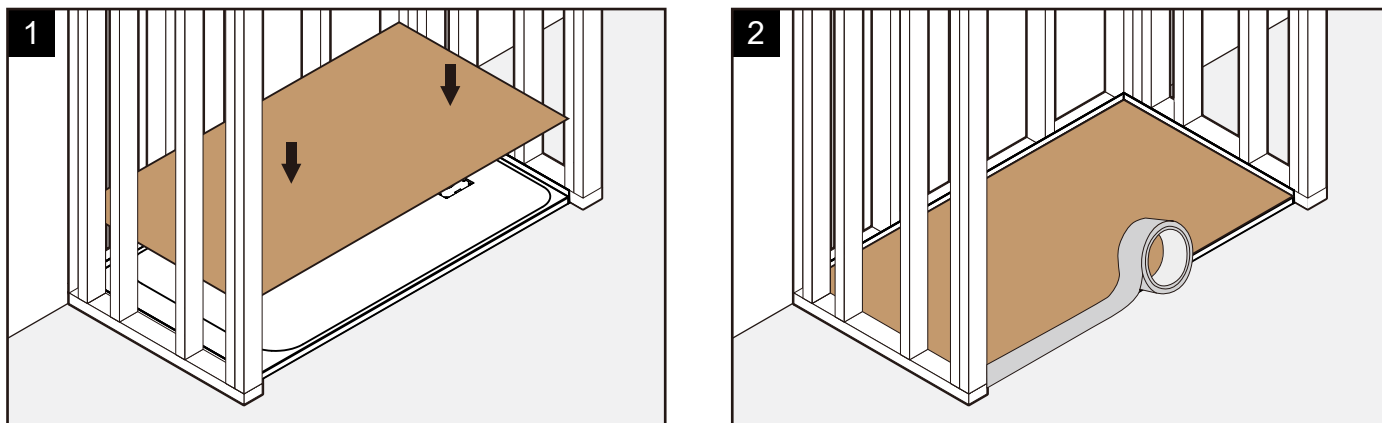


Fig 7

STEP 8

- Install the dry wall on the top of the flange and secure it to the stud. (Refer to Fig 8.1, Fig 8.2)
- Install the finished wall to the dry wall leaving 1/8" gap between the shower base and the finished wall. (Refer to Fig 8.3, Fig 8.4)
- Remove the box lid and apply good quality silicone sealant at the corners formed by the finished walls and the shower base, the shower base and the floor. (Refer to Fig 8.5)
- Allow 24 hours for the silicone to secured.

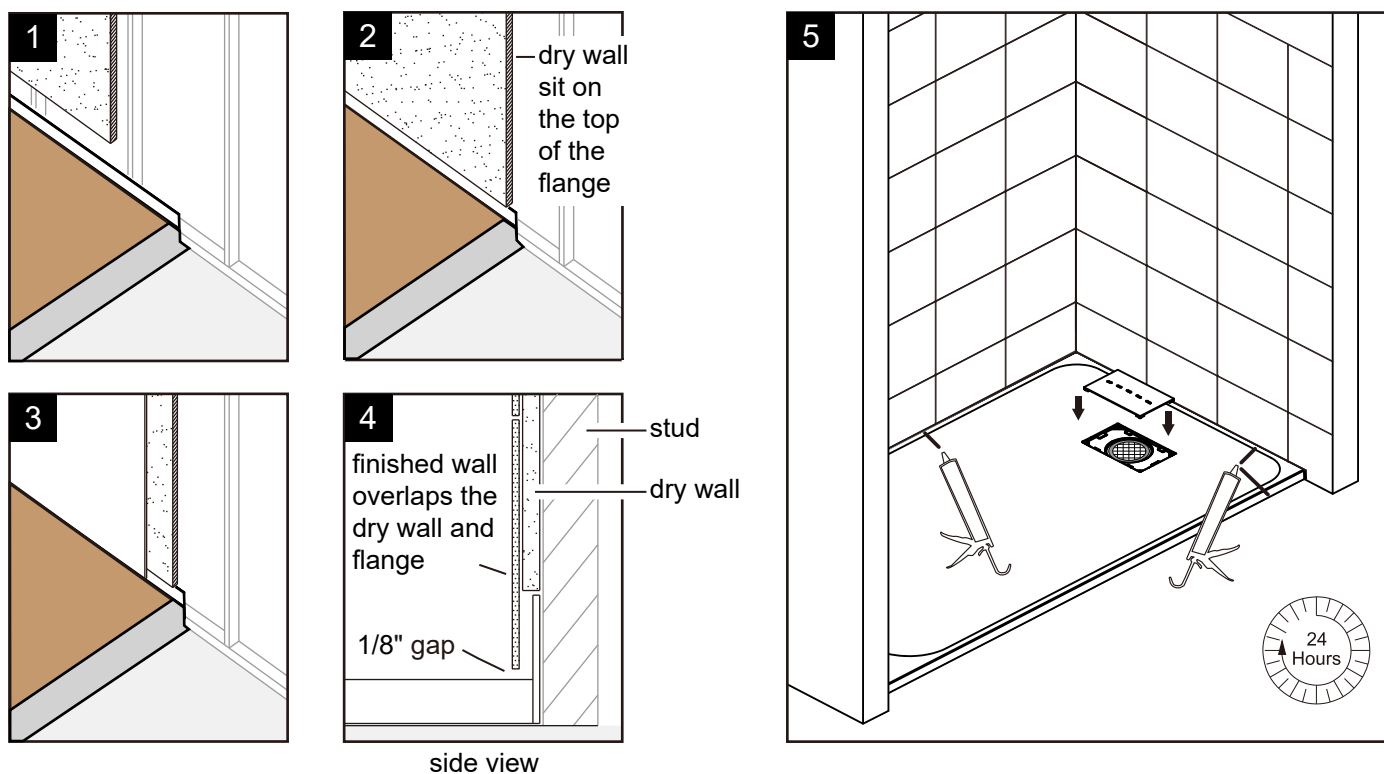


Fig 8

Care & Maintenance

WARNING

- Stone effect shower bases cannot be cleaned with any type of common cleaning products as some of these products contain agents that can irreversibly damage the surface.
- **It is recommended to use a non-abrasive sponge or microfiber with soapy water to clean the tray and then clean the surface with tape water. Never use an abrasive sponge. Ventilate the bathroom thoroughly after cleaning.**
- The recipient should not be in contact with acetone or with nail varnish removers, hair coloring products, vinegar, or any type of products containing alcohol, acid or solvents. Anti-limescale maintenance products are also prohibited. Always test products on small area before use.

CAUTION

- To get rid of deeper marks on surface, always test the cleaning product you intend to use on a non-visible area before applying it over the entire surface. We recommend to use the removable cover of the drain because in case of damage it can easily be replaced by a stainless steel cover.

IMPORTANT

- If you need to unclog the drain or drain hose, it is very important to be careful not to pour products containing acid or soda onto the receiver. It is recommended to use a funnel to pour this type of product directly into the drain, while protecting the tray well. These products could irreversibly damage the surface of the tray.
- **DO NOT** use solvents, abrasive products, direct household bleach or scouring tools, as cleaners.

