

ASSEMBLY INSTRUCTION

TWIN METAL BED


PART LIST:




A: HEADBOARD LEGS
1PC




B: HEADBOARD LEGS
1PC

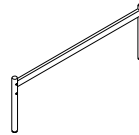


C: FOOTBOARD
1PC




D: SIDE RAIL
2PCS




E: SIDE RAIL
2PCS



F: CENTER CROSS BAR
1PC



G: CENTER SLAT
SUPPORT LEG
2PCS



H: SLAT
16PCS



I: SLAT CONNECTOR
32PCS



J: HEADBOARD
1PC

HARDWARE SET:



1: Bolt
1/4*17.5mm
X 6pcs




2: Bolt
5/16*19mm
X 8pcs



3: Bolt
5/16*48mm
X 4pcs




4: Bolt
1/4*35mm
X 2pcs




5: Allen Key
X 1pc

Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 1

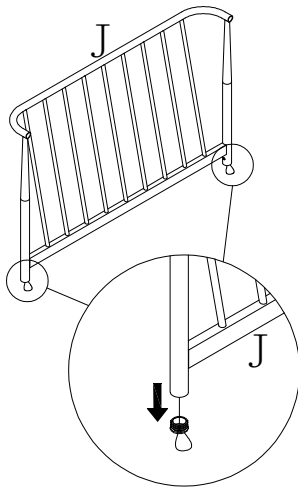


STEP 2

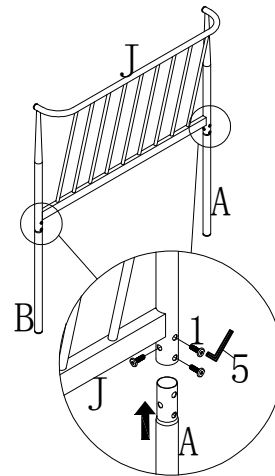


Hardware 1: 6 pcs

STEP 3

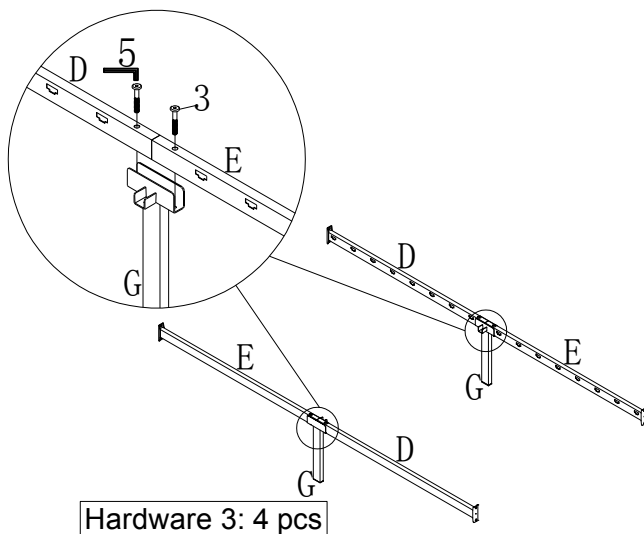


Hardware 3: 4 pcs

STEP 4

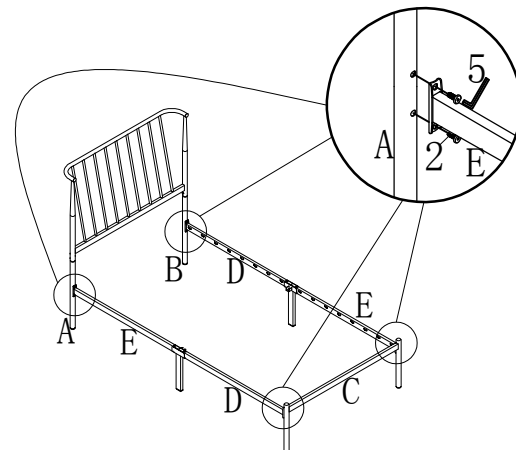

Hardware 2: 8 pcs


STEP 5

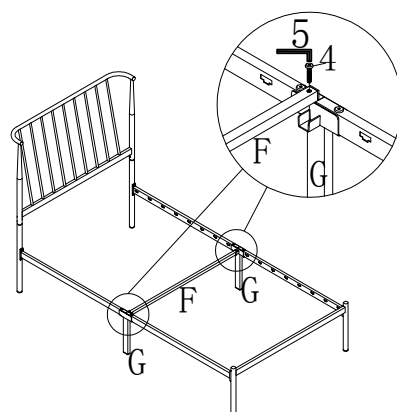

Hardware 4: 2 pcs

Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 6

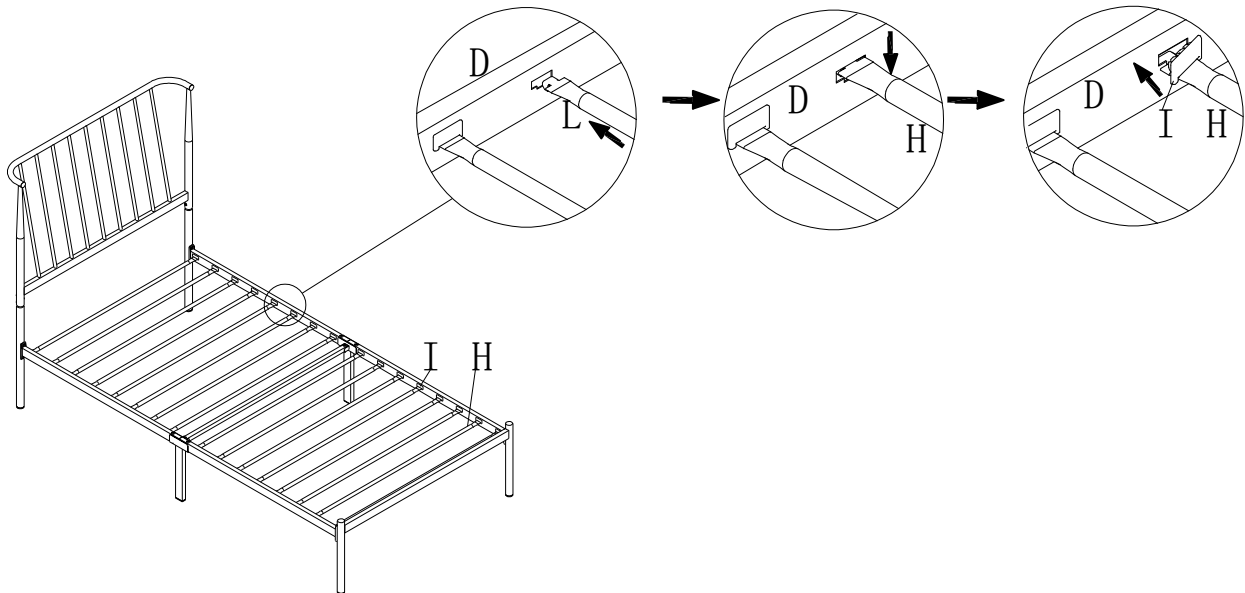

COMPLETED



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.