

# Mitte Foyer

5141501, 5241504, 5341504 | 1.0

## VISUAL COMFORT & CO.

GENERATION LIGHTING

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.



This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

**CAUTION - RISK OF FIRE**  
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.  
**Use minimum 90°C supply conductors.**

**SAVE THESE INSTRUCTIONS!**

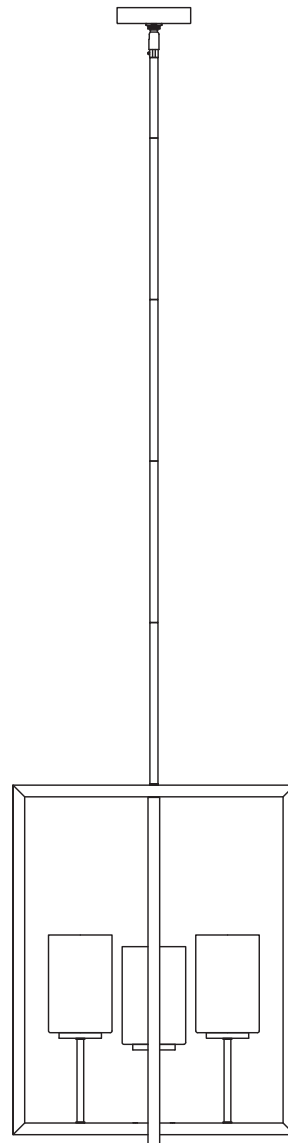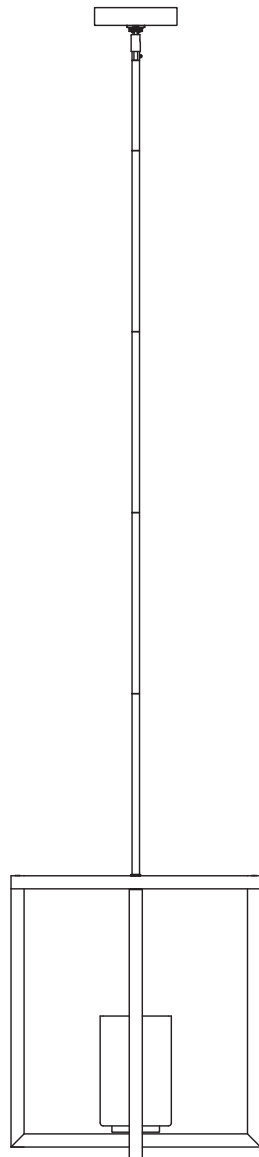

# Install the Fixture

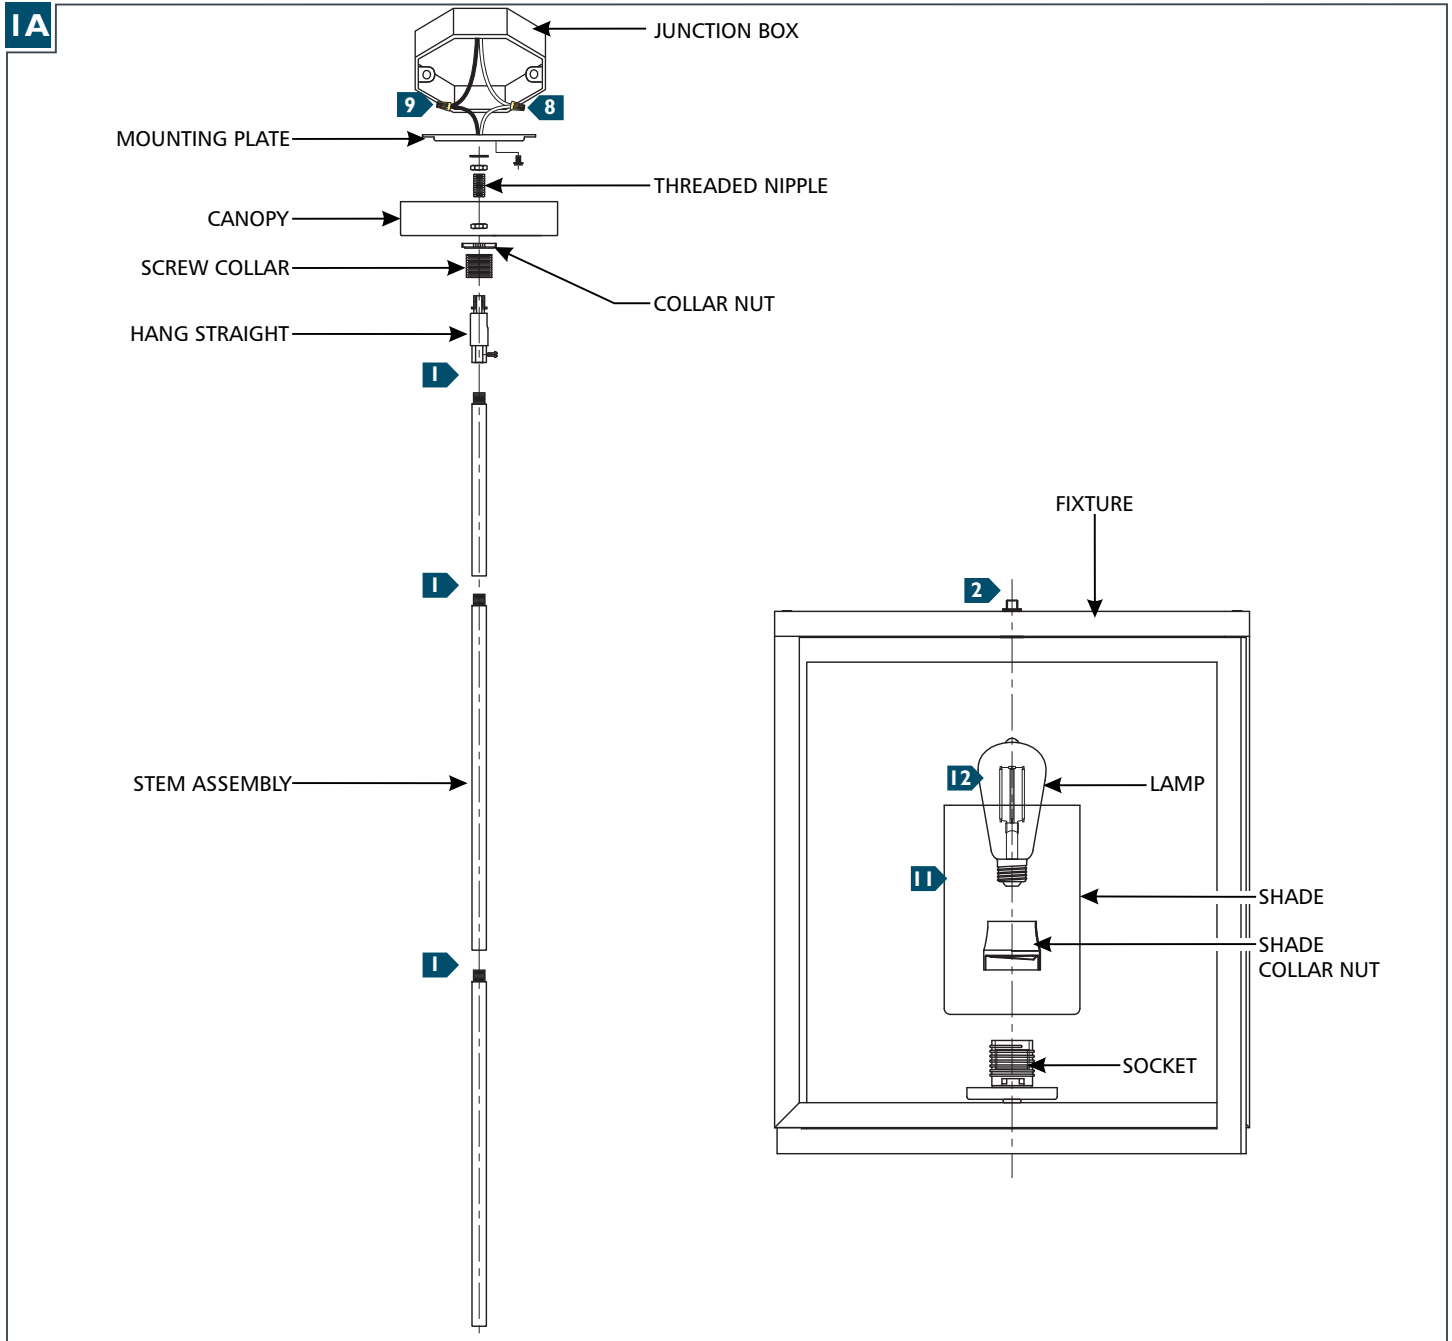

- 1** Determine the wanted height or look of the fixture with the provided hang straight and stems and assemble them by screwing them together. All the parts may be used alone or used in combination.
- 2** Feed the fixture wires through the stem assembly and screw the assembly onto the top of the fixture.
- 3** Unscrew the collar nut off the screw collar and place it onto the stem followed by the canopy.
- 4** If necessary, screw the threaded nipple tightly onto the mounting plate.
- 5** Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem assembly.
- 6** Align and secure the mounting plate to the junction box.
- 7** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 8** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 9** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 10** Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly into the screw collar.
- 11** Place the shade over the socket and secure it in place by screwing the shade collar nut onto the socket. Repeat for remaining shades.
- 12** Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information.