

TRUFIG

BY SONANCE

TRUFIG 195X95 Gypsum Installation

INSTALLATION MANUAL

INTRODUCTION

This installation guide will provide instructions to install a TRUFIG 195x95 Gypsum Mounting Platform installed in Drywall, Plaster, wiring and Device installation

ASSEMBLY CONTENTS:

1 195x95 Gypsum Mounting Platform

2 5/8" or 1/2 drywall clips



GYPSUM MOUNTING PLATFORM

To install and finish the 195x95 Mounting Platform follow the standard TRUFIG Procedure for Gypsum.

GYPSUM INSTALLATION:

WIRING:

1. The Enclosure has two 1/2" KO's, remove either one and feed enough wire into it so once the Mp is installed there is enough slack to wire the device.
2. If there is need to access the inside of the Enclosure, remove the six screws holding the Sanding Shield and remove both Sanding and Paint Shields. Care must be taken when removing the Paint Shield as it has adhesive on the back.

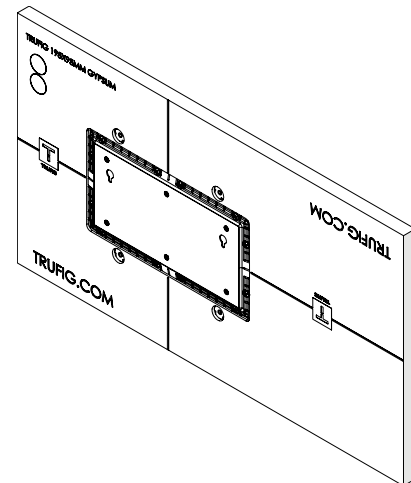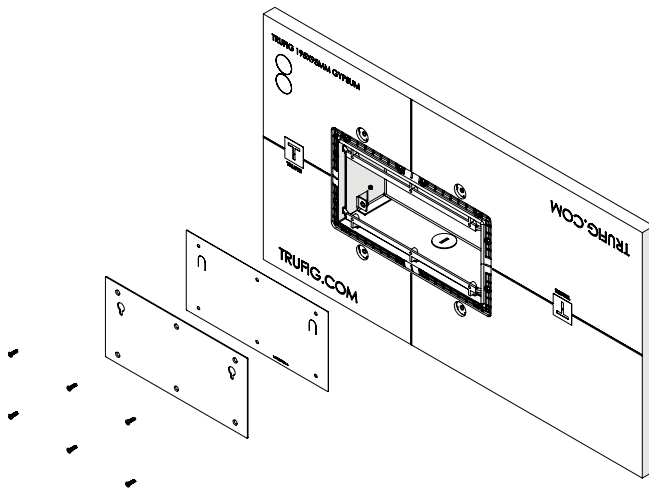

INSTALLING THE MOUNTING PLATFORM:

1. See Mounting Platform manual for full instructions.

FINISHING THE WALL

Follow the standard TRUFIG method for finishing.


INSTALLING THE DEVICE:

This procedure is to be done once the wall is finished.


1. Remove the Paint Shield exposing the two struts of the Mudring.

3. Once the wiring is done replace the Paint and Sanding Shields and secure them with the six screws.

NOTE: the Sanding Shield will be slightly below the edge of the Mudring when installed properly.

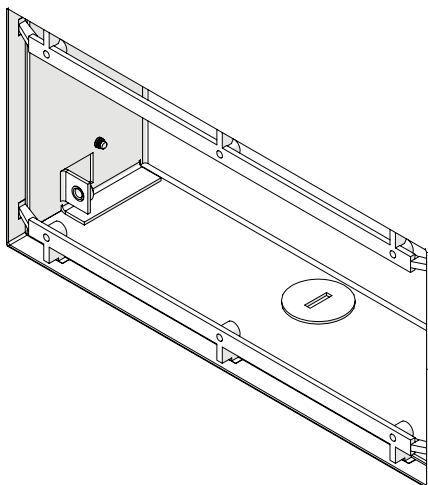


2. With a pair of diagonal cutters cut all four connections on the short side flush to the inside of the Mudring.

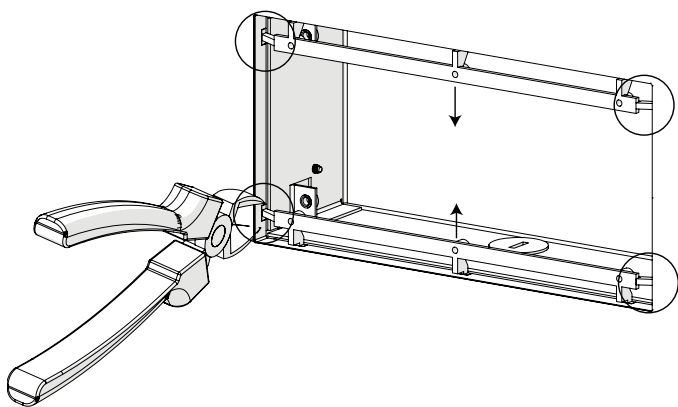


3. Remove the bridge by pulling it to the middle of the opening.

INSTALL THE TRIM COMPONENT.

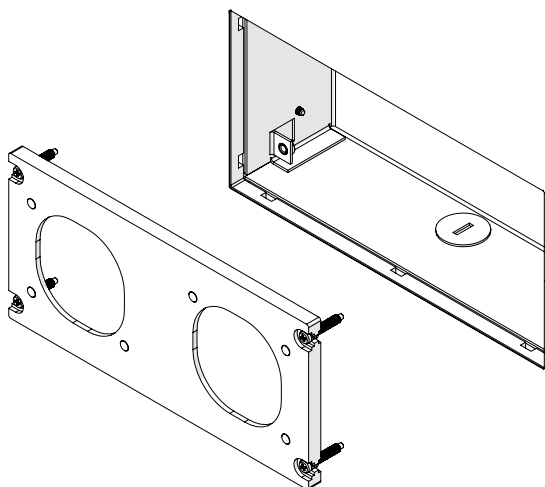


1. When the Keypad is ready to install insert the Trim Component into the box aligning the 4 screws with the for tabs in the Enclosure.

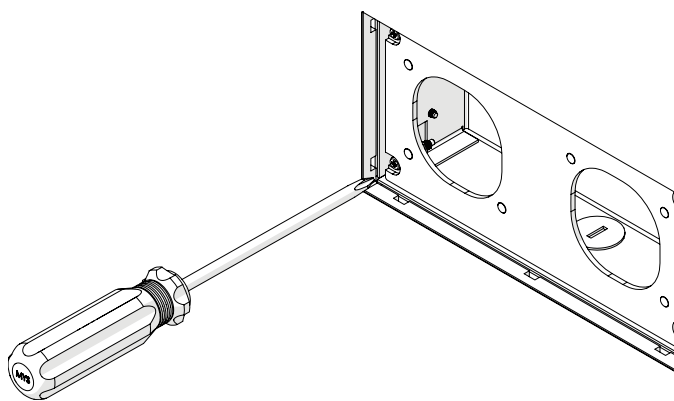


2. Use a Phillips screw driver to lower the Trim Component evenly with 3-4 turns on each screw.

NOTE: A Depth Adjustment Tool is recommended for the process, follow the instructions in the package.


3. If not using a Depth Adjusting Tool lower the Trim Component to approximate the thickness of the device to be installed.

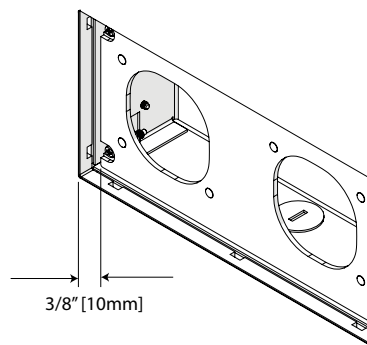

4. For Black Nova 3/8" [10.0mm]
5. This will approximate the location of the Fascia or Device flush to the finished surface, if there is a need

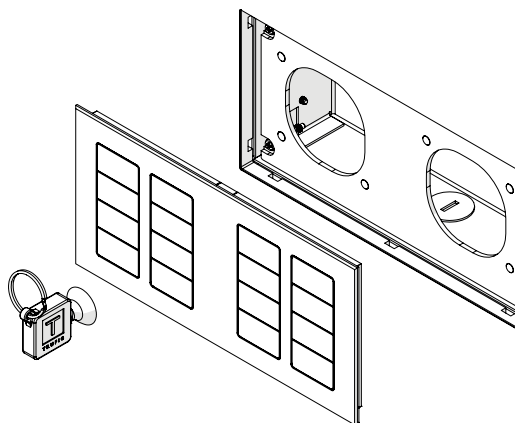


to further adjust the Device of Fascia remove it by using the suction cup and adjust in or out the screws as needed.

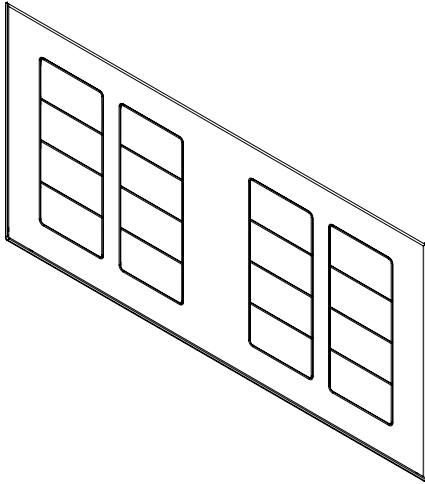

6. Connect the device being installed and test.



Scan QR code for additional information and resources. For technical support call (949) 492-7777 or visit trufig.com/keypad-downloads

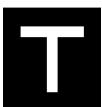

® 2025 SONANCE All rights reserved. TRUFIG is a registered trademark of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest SONANCE and TRUFIG product specification information visit our website at www.sonance.com.

991 Calle Amanecer - San Clemente, CA 92673 USA • Phone: 949.492.7777 • Fax: 949.361.5151 • Technical Support: 949.492.7777 • www.sonance.com