


SQUARE SHOWER DRAIN


MODELS

542837-MB	6" Matte Black
542837-SS	6" Stainless Steel
542852-MB	4" Matte Black
542852-SS	4" Stainless Steel


SQUARE SHOWER DRAINS COME WITH:

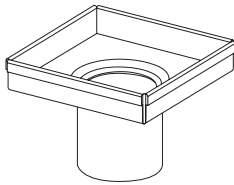


(1) Square Drain

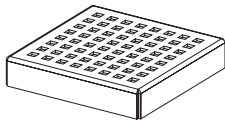


(1) Designer Grate

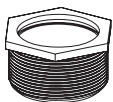

(1) 2" Threaded Outlet Adapter

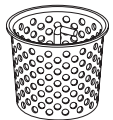


(1) Debris Basket

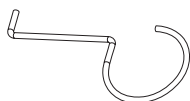

(1) Lifting Key

Note: Compatible with most standard shower base and rubber couplers (not included in box)

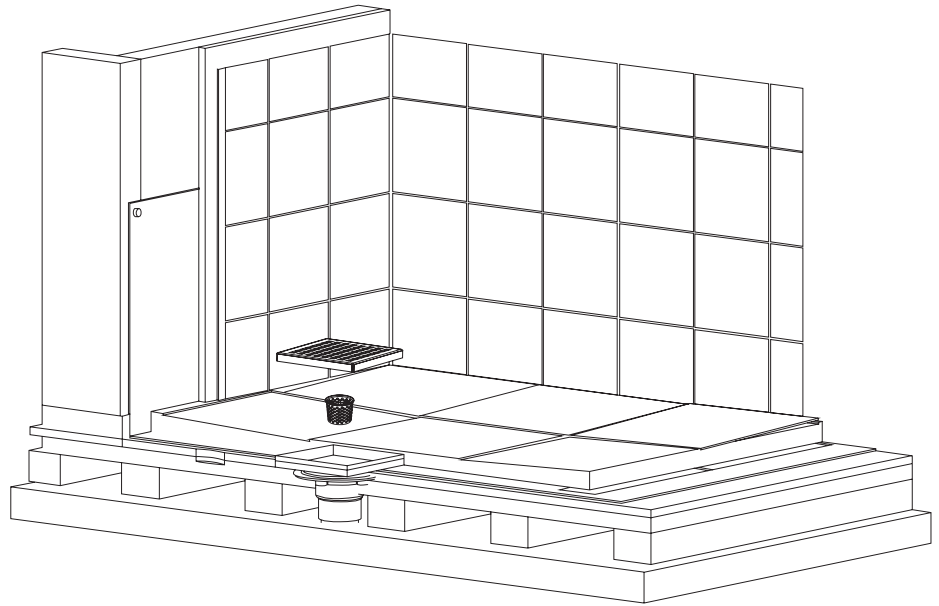

Your new Design House shower drain will give you years of trouble-free performance. Thank you for choosing our product for your home. Please read all of these instructions carefully before installing your new drain.

WOOD-FRAMED CONSTRUCTION INSTALLATION:

1. Once the shower pan drain base has been connected to the DWV system and the shower pan liner has been installed and tested to local jurisdiction guidelines, you can begin the installation of your decorative drain.
2. Make sure surfaces on the drain are clean and free of any debris.
3. Insert the 2" threaded coupling adapter until properly thread into shower pan drain base threads.
4. Determine the finished height of drain, taking into account finish substrate materials, and push stainless steel drain tailpiece into the 2" coupling adapter.
5. Next, pour concrete and maintain a 1/4" per foot slope towards drain per code.
6. Once the concrete has cured, install a thin-set and tile per the manufacturer's recommendation.

MAINTENANCE:

Easy to clean with approved stainless steel cleaners (soap and water). Designer grate and debris basket can be removed by grate key for ease of cleaning.

