

INSTALLATION GUIDE

50011 Depth Adjusting Tool Black Nova




Overview:

This installation guide will provide instructions to adjust a Black Nova or a Lutron Palladium 1 Col Euro style Trim Component so the keypad is flush to the finished surface


**NOTE: The Process is the same for both Gypsum and Solid Surface installations.
This process is the same for Back Nova or Lutron 1 Column Euro Fascia.**

INSTALLING THE TRIM COMPONENT


1. When the Keypad is ready to install insert the Trim Component into the box aligning the 4 screws with the 4 tabs.

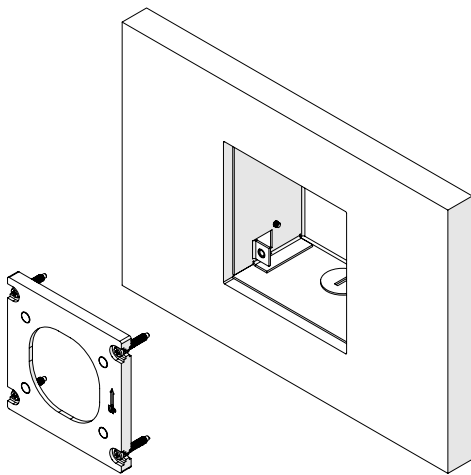

2. Using a Phillips screwdriver lower the Trim Component evenly with 3-4 turns on each screw).

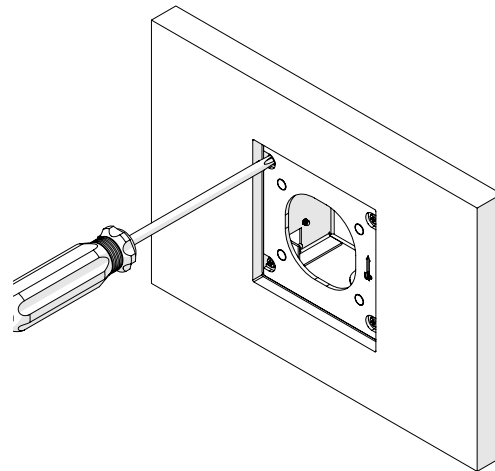

3. Once the front surface of the Trim Component is at the edge of the metal enclosure insert the Depth Adjusting Tool as shown.
4. Continue lowering the Trim Component until the Depth Adjusting Tool surface is flush with finished surface of the wall.

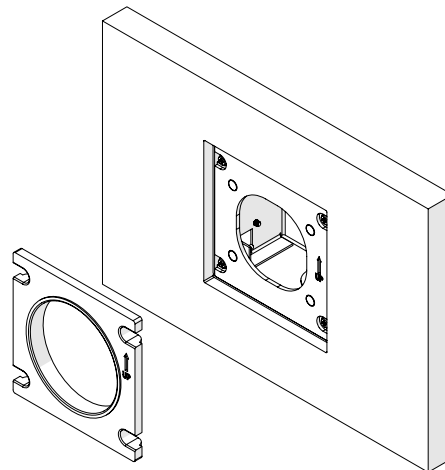


INSTALLATION GUIDE


50011 Depth Adjusting Tool Black Nova




Note: when installing The Black Nova Keypad used the Depth Adjusting Tool with the smooth towards the outside of the box.

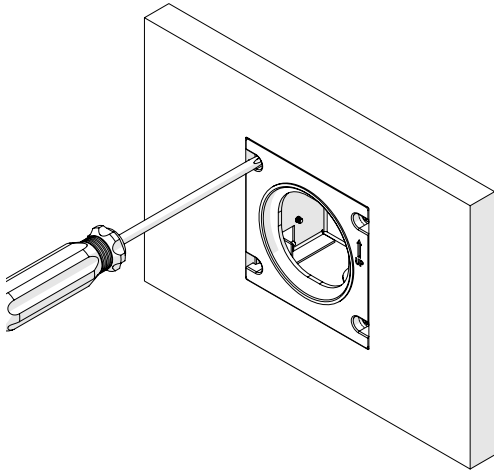

5. This will set the Keypad to the right height.

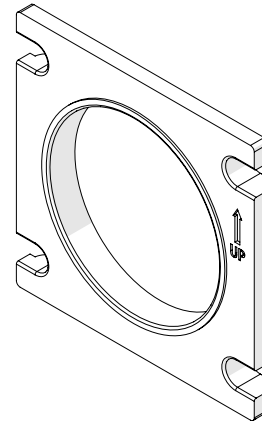

Note: when installing the Lutron 1 Column Euro Style place the Depth Adjustment tool with the smooth surface towards the inside of the box.

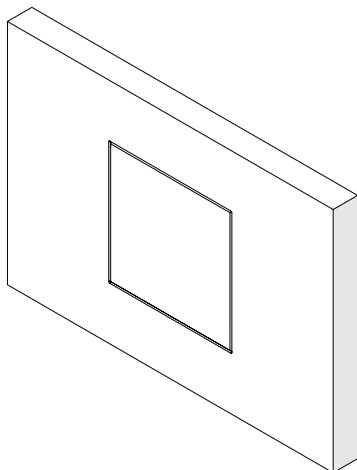

6. If there is a need to further adjust the Keypad remove it using the suction cup and adjust up or down the adjusting screw as needed.

