


NO.	Hardware List	Qty
A	Bolt 5/16" x 1-25/32"L	9
B	Bolt 5/16" x 5-7/8"L	2
C	Lock Washer 5/16" Dia	11
D	Flat Washer 5/16" Dia	11
E	French 3/16" Dia 4-3/4"L	1
F	Bolt Cover Caps	7
G	Screw	10

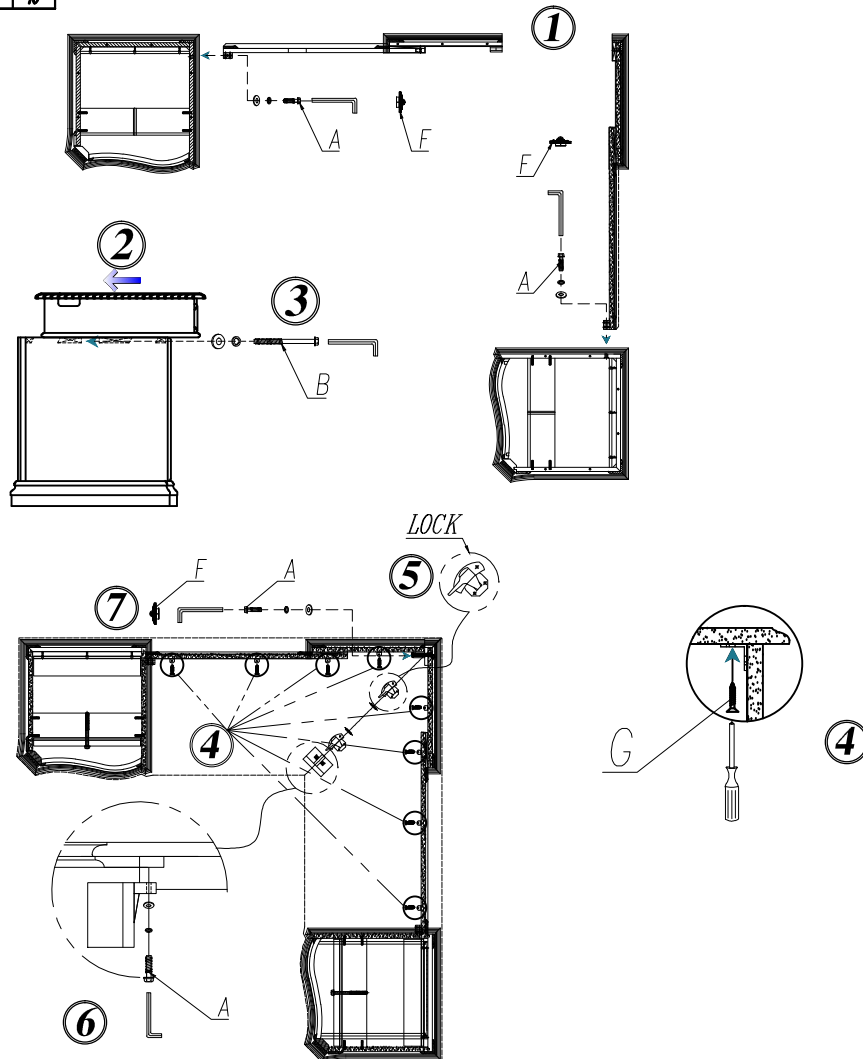

1. Assemble left pedestal & left modesty panel with Flat Washer (D) , Lock Washer(C), Bolt (A) by using Wrench (E) ,and cover with the Bolt Cover Caps(F), see step 1. Do not tighten bolts until later in assembly process.
2. Assemble right pedestal & right modesty panel with Flat Washer (D) , Lock Washer(C), Bolt (A) by using Wrench (E) ,and cover with the Bolt Cover Caps(F), see step 1. Do not tighten bolts until later in assembly process.
3. Place the left top assembly on the left pedestal and modesty panel assembly. As shown in the side view the top assembly is set a little forward on the pedestal then pushed back to lock the french cleats.
4. Open top drawer on the left pedestal assembly to secure the left top assembly to the left pedestal with bolt (B), lock washer (C), and flat washer (D), using wrench (E). Shown in step 3. Now tighten bolts attaching modesty panel to pedestal.
5. Place the right top assembly on the right pedestal and modesty panel assembly. As shown in the side view the top assembly is set a little forward on the pedestal then pushed back to lock the french cleats.
6. Open top drawer on the right pedestal assembly to secure the right top assembly to the right pedestal with bolt (B), lock washer (C), and flat washer (D), using wrench (E). Shown in step 3. Now tighten bolts attaching modesty panel to pedestal.
7. Attach left modesty panel to left top assembly and right modesty panel to right top assembly with screw (G) as shown in step 4.
8. Place the left and right assemblies in there intended final location, the desk cannot be moved after the left and right assemblies are connected.
9. Lock the top panel locks underneath the two top assembly,see step 5.
10. Attach the wood cleat between the drop front drawers with Flat Washer (D) , Lock Washer(C), Bolt (A) by using using Wrench (E) , shown in step 6.
11. Assemble the right and left modesty panels from under the desk with Flat Washer (D) , Lock Washer(C), Bolt (A) by using Wrench (E) ,and cover with the Bolt Cover Caps(F), as step 7.