


MAYA UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS





BOX#1

A. HEADBOARD 1 PC

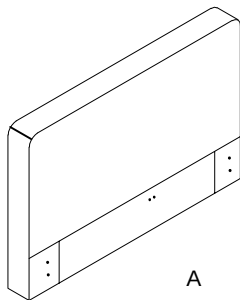




BOX#2

B. FOOTBOARD 1 PC
E. SLAT ROLL 1 SET
H. CENTER SLAT SUPPORT CLEAT 2 PCS

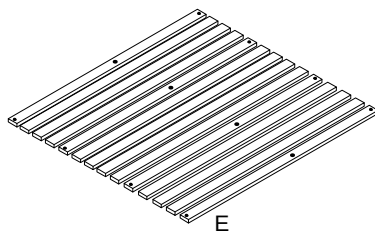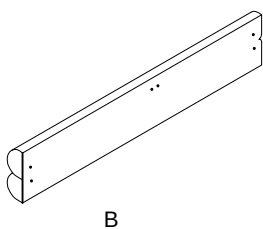

BOX#3





C. LEFT SIDE RAIL 1 PC
D. RIGHT SIDE RAIL 1 PC
F. CENTER SLAT SUPPORT 1 PC
G. SUPPORT LEG 4 PCS

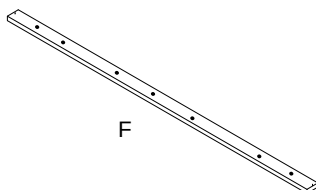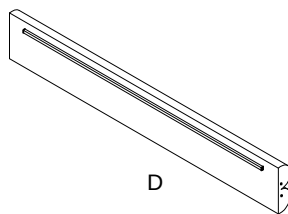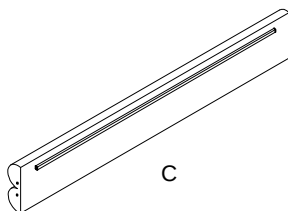

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8 x 90mm)		8 PCS
2	ALLEN BOLT (6 x 30mm)		4 PCS
3	ALLEN BOLT (6 x 50mm)		4 PCS
4	FLAT WASHER (8 x 22mm)		8 PCS
5	FLAT WASHER (6 x 16mm)		8 PCS
6	LOCK WASHER (8 x 22mm)		8 PCS
7	LOCK WASHER (6 x 16mm)		8 PCS
8	HEX NUT (8 x 12mm)		8 PCS
9	PHILLIPS SCREW (7 x 35mm)		10 PCS
10	ALLEN KEY (6mm)		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

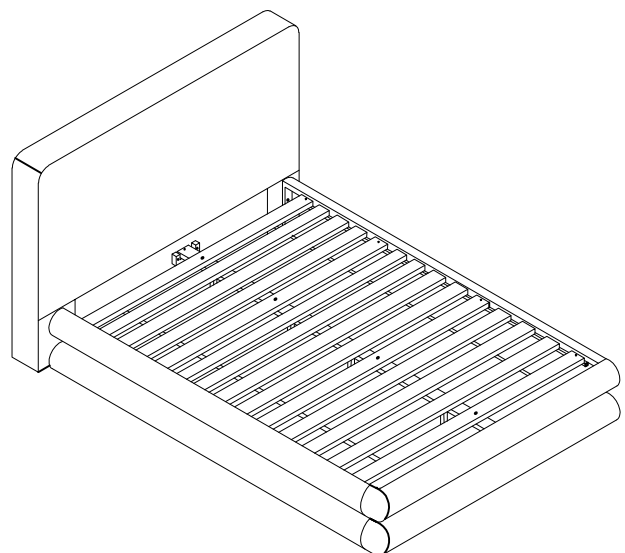


MAYA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 1:

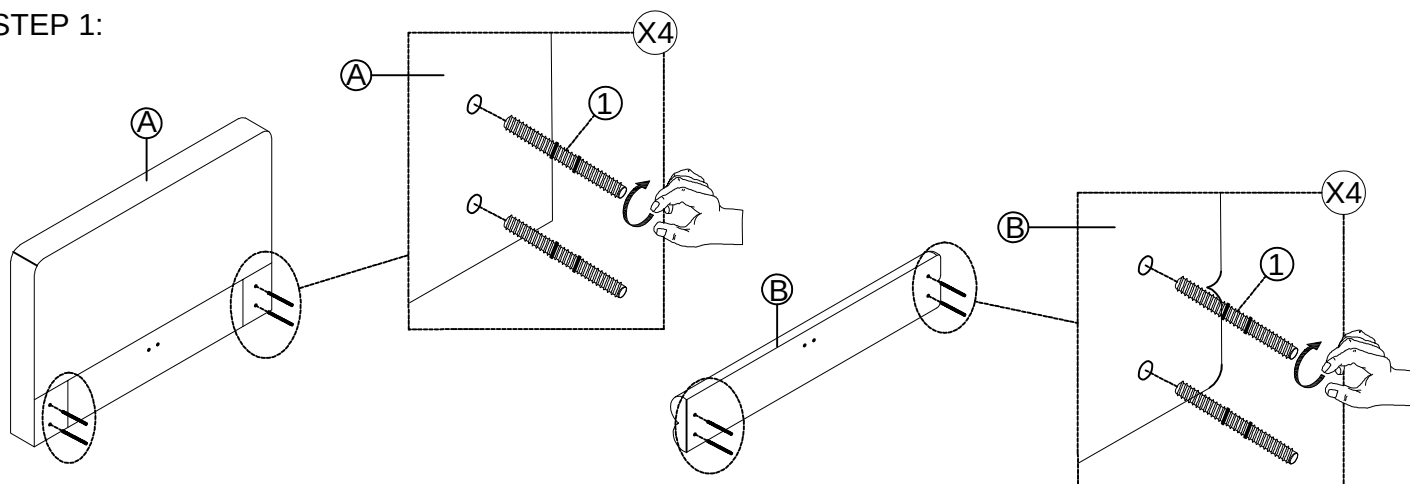

STEP 2:

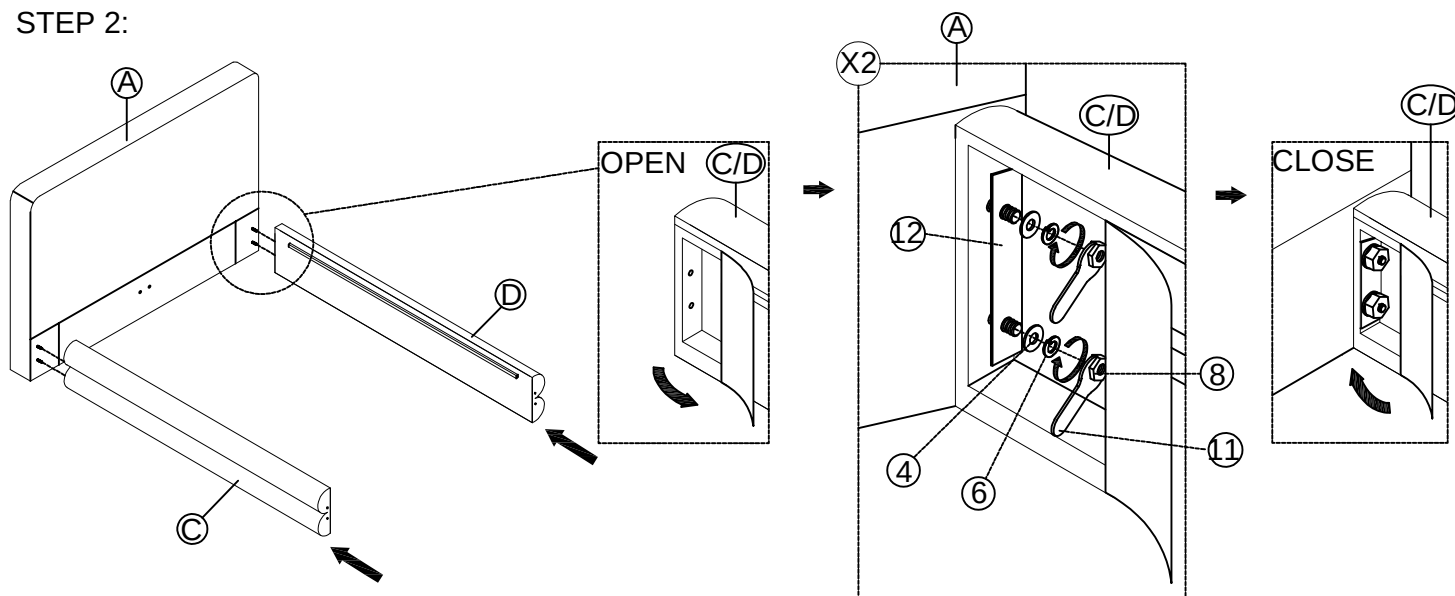

STEP 3:

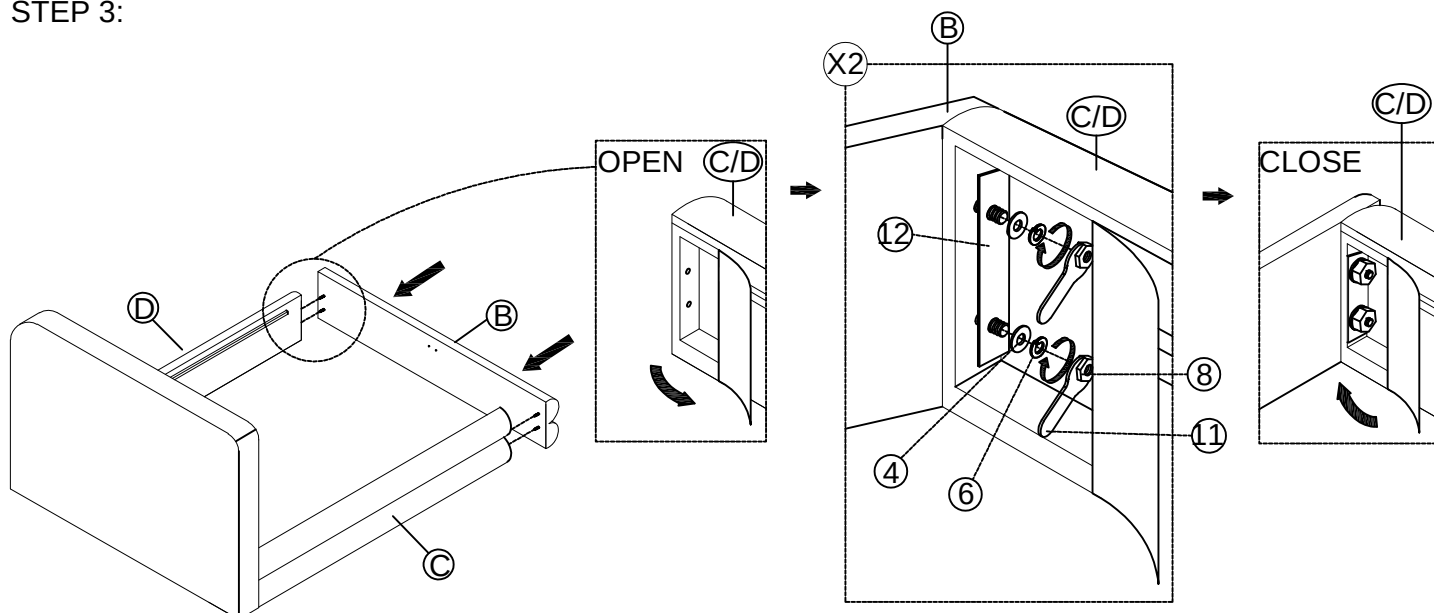

MAYA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

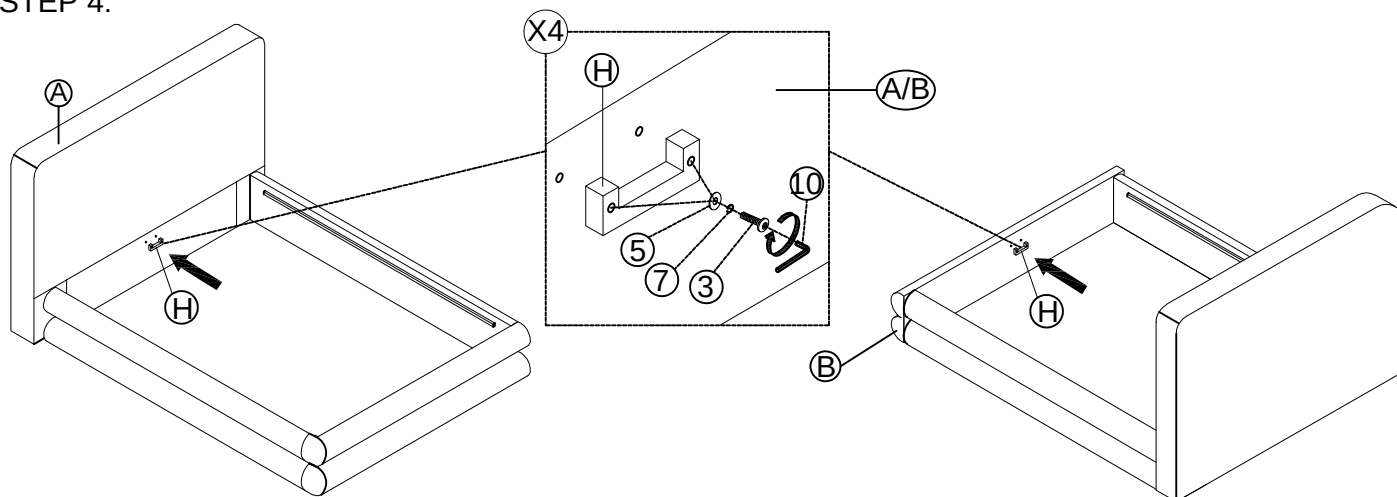

STEP 5:

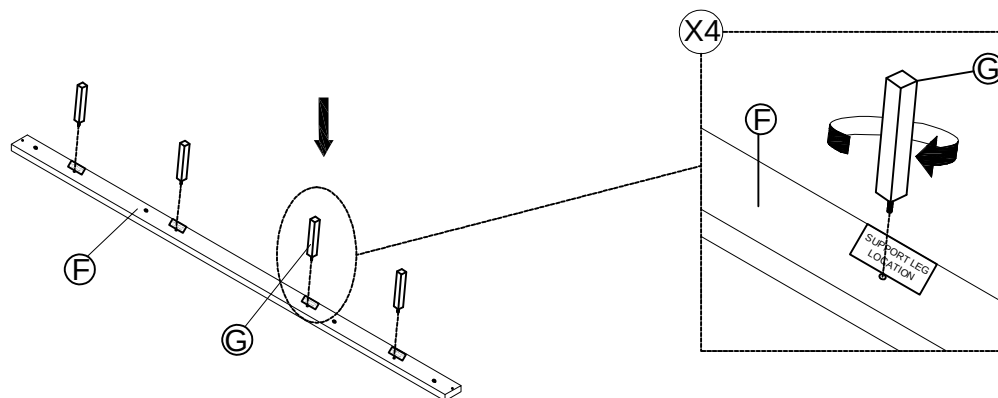

STEP 6:

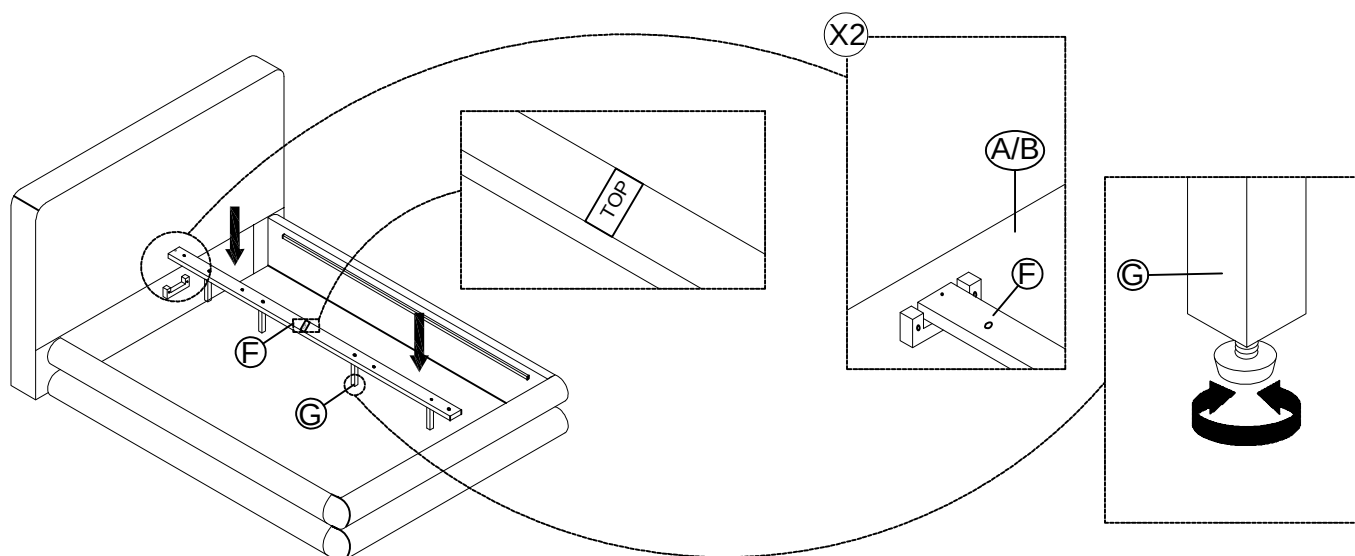


MAYA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 7:

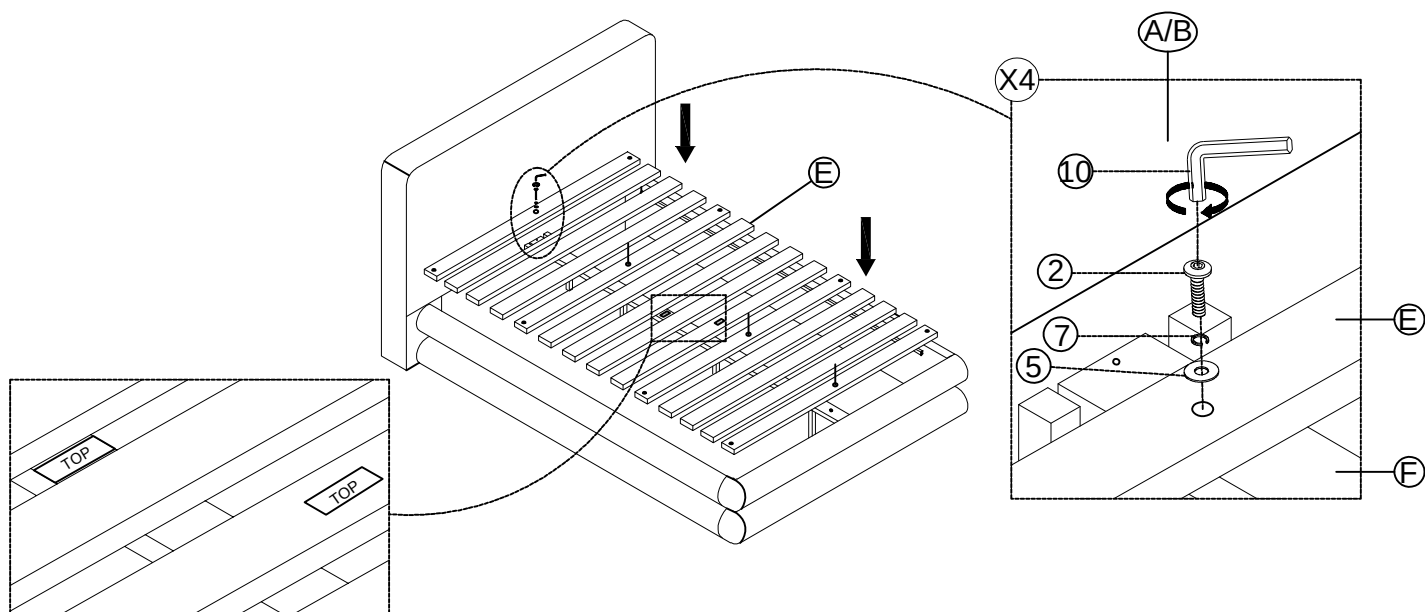


STEP 8:

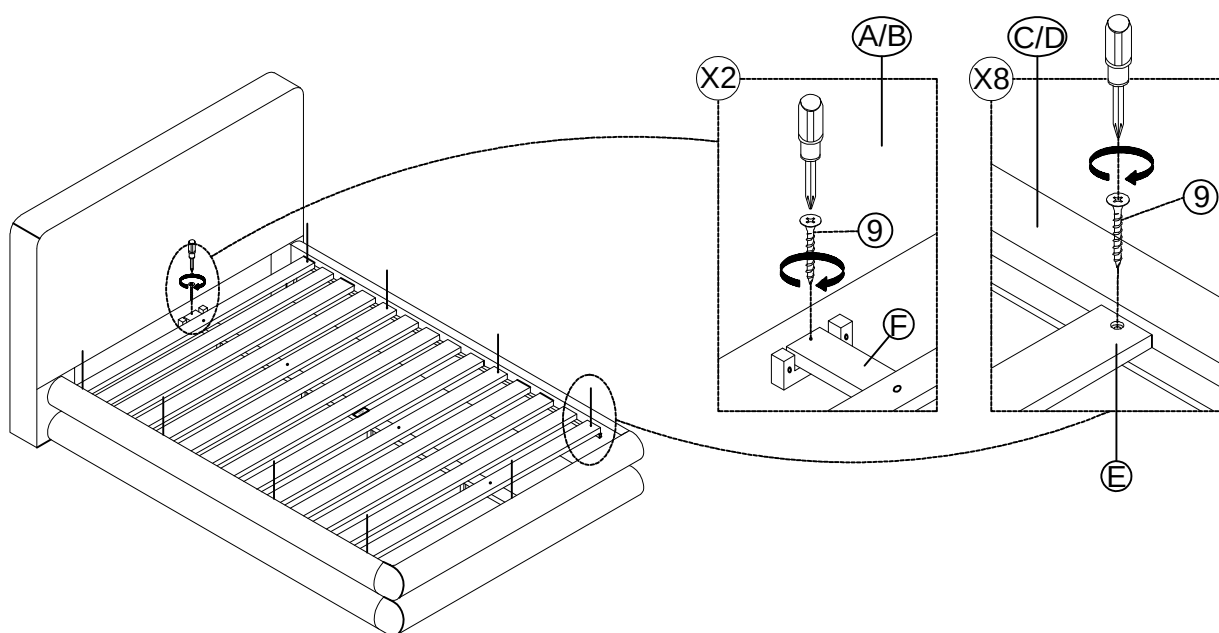

MAYA UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

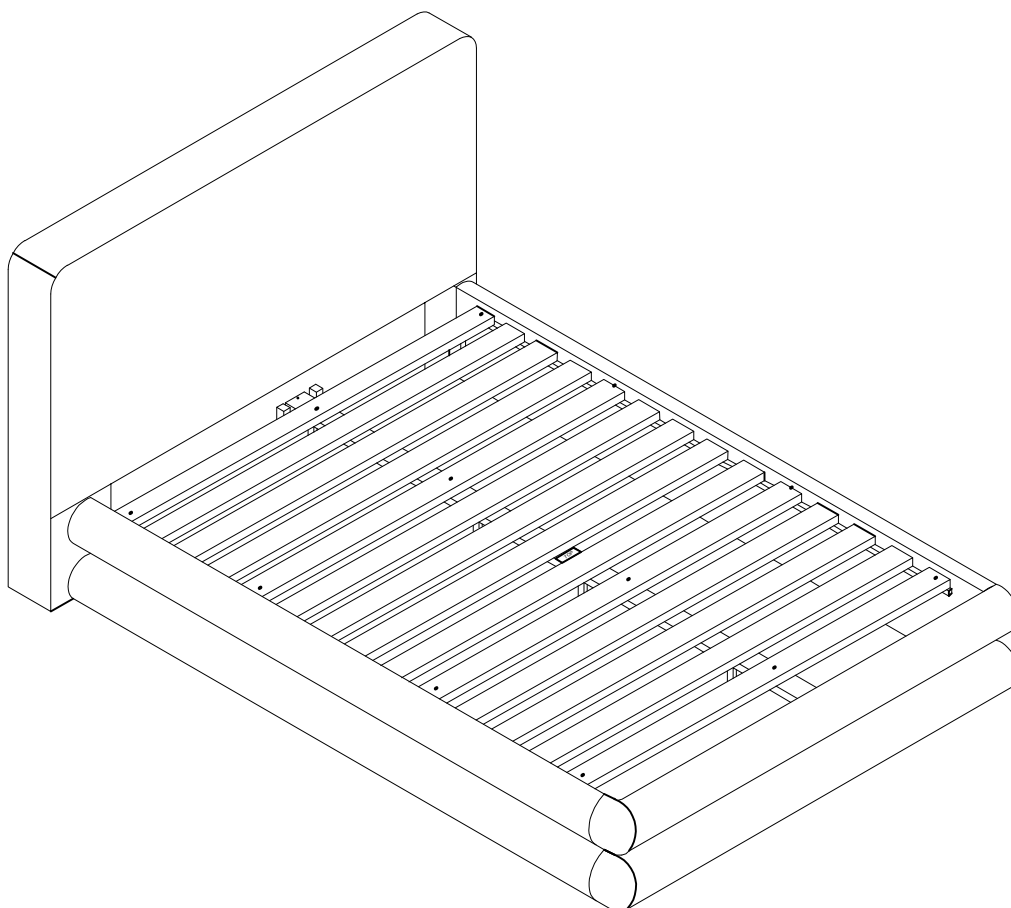


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

MAYA UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

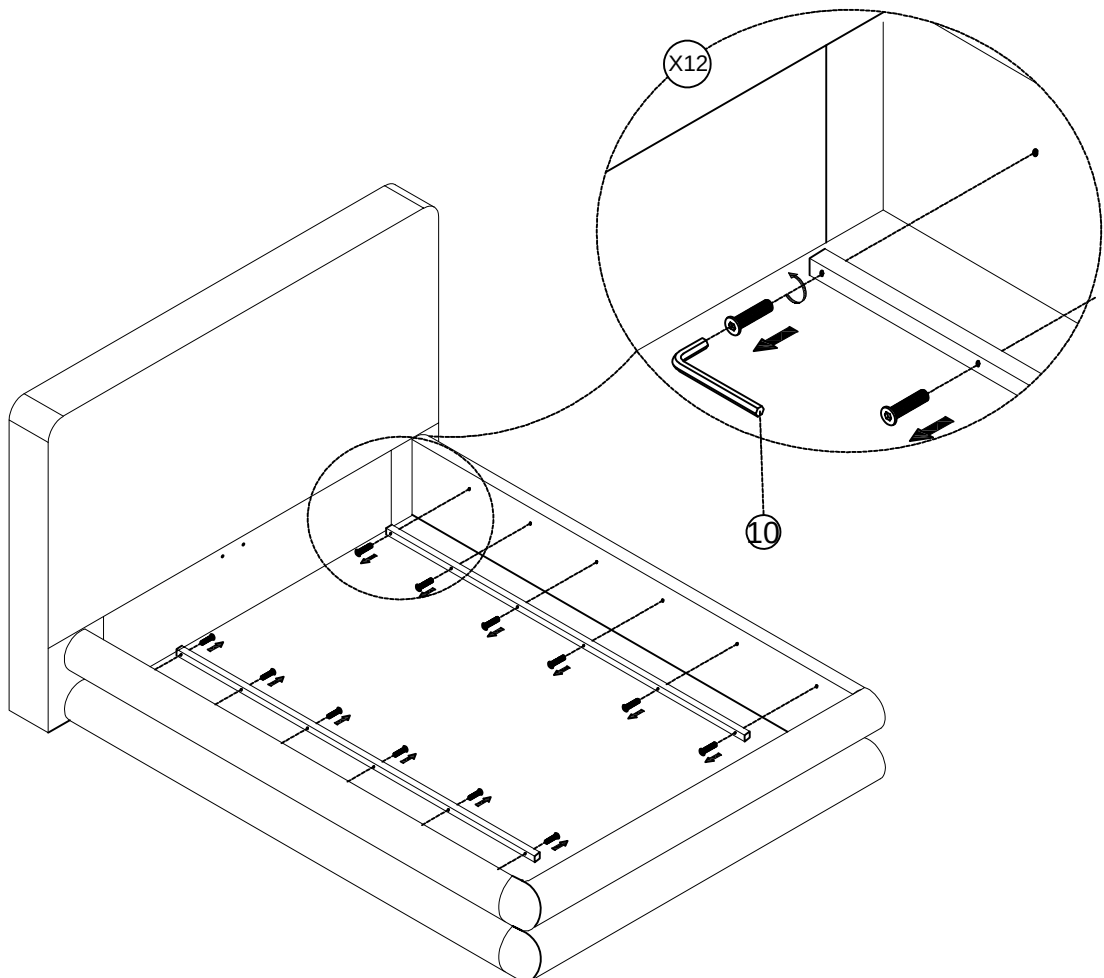

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

MAYA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

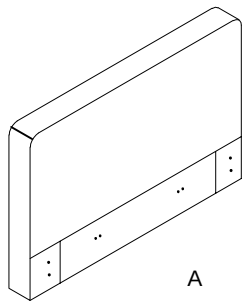

BOX#2

B. FOOTBOARD




1 PC

E. SLAT ROLL

1 SET

H. CENTER SLAT SUPPORT CLEAT

4 PCS

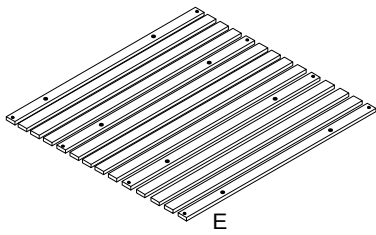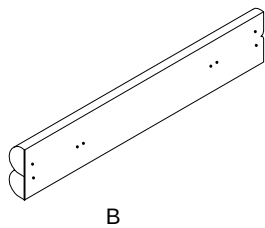

BOX#3

C. LEFT SIDE RAIL

1 PC

D. RIGHT SIDE RAIL




1 PC

F. CENTER SLAT SUPPORT

2 PCS

G. SUPPORT LEG



8 PCS

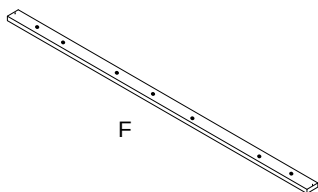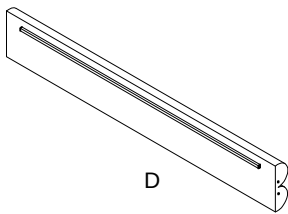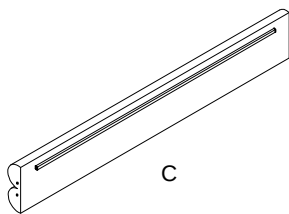

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8 x 90mm)		8 PCS
2	ALLEN BOLT (6 x 30mm)		8 PCS
3	ALLEN BOLT (6 x 50mm)		8 PCS
4	FLAT WASHER (8 x 22mm)		8 PCS
5	FLAT WASHER (6 x 16mm)		16 PCS
6	LOCK WASHER (8 x 22mm)		8 PCS
7	LOCK WASHER (6 x 16mm)		16 PCS
8	HEX NUT (8 x 12mm)		8 PCS
9	PHILLIPS SCREW (7 x 35mm)		12 PCS
10	ALLEN KEY (6mm)		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

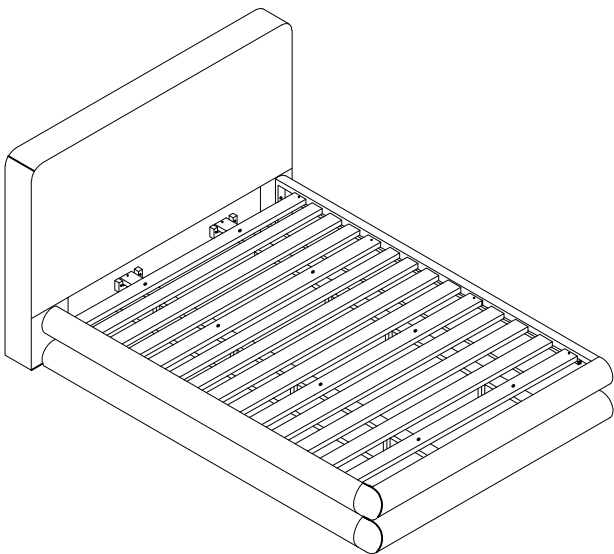


MAYA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

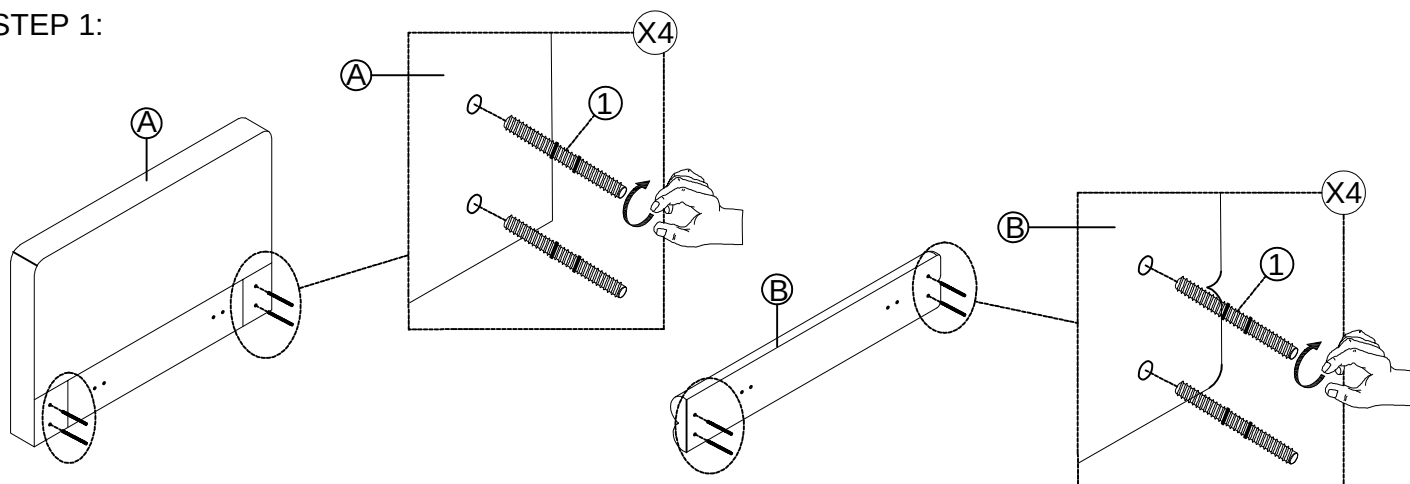

STEP 2:

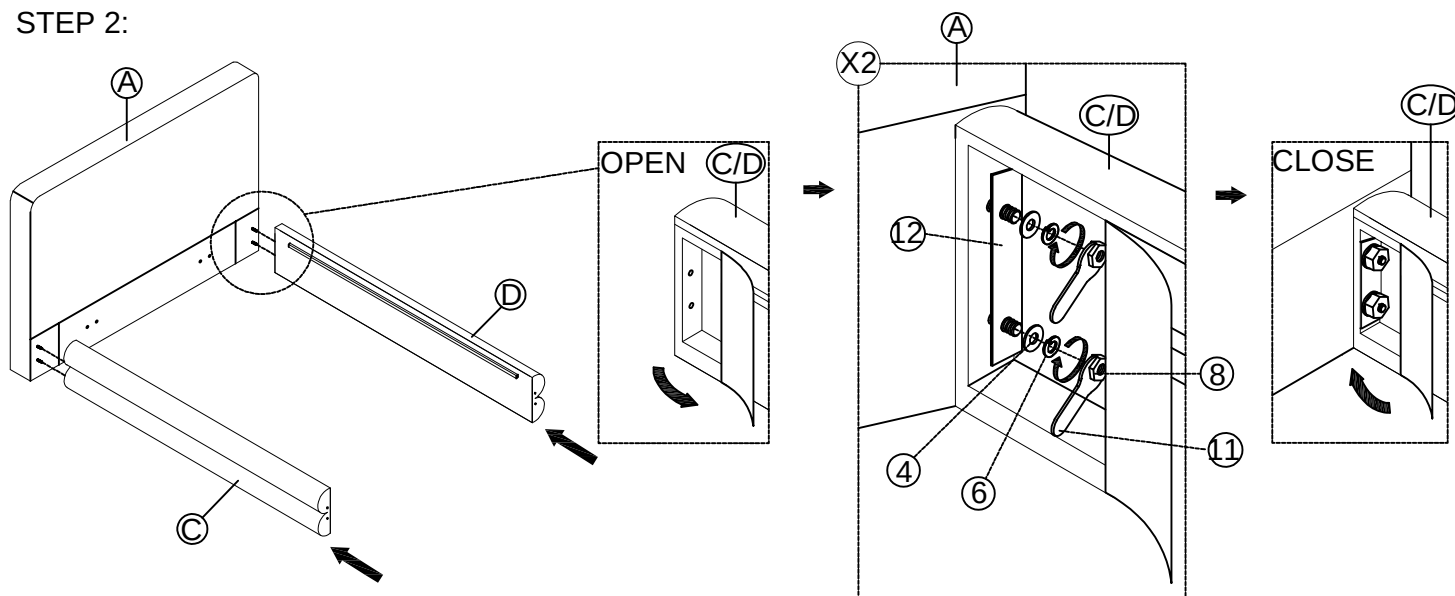

STEP 3:

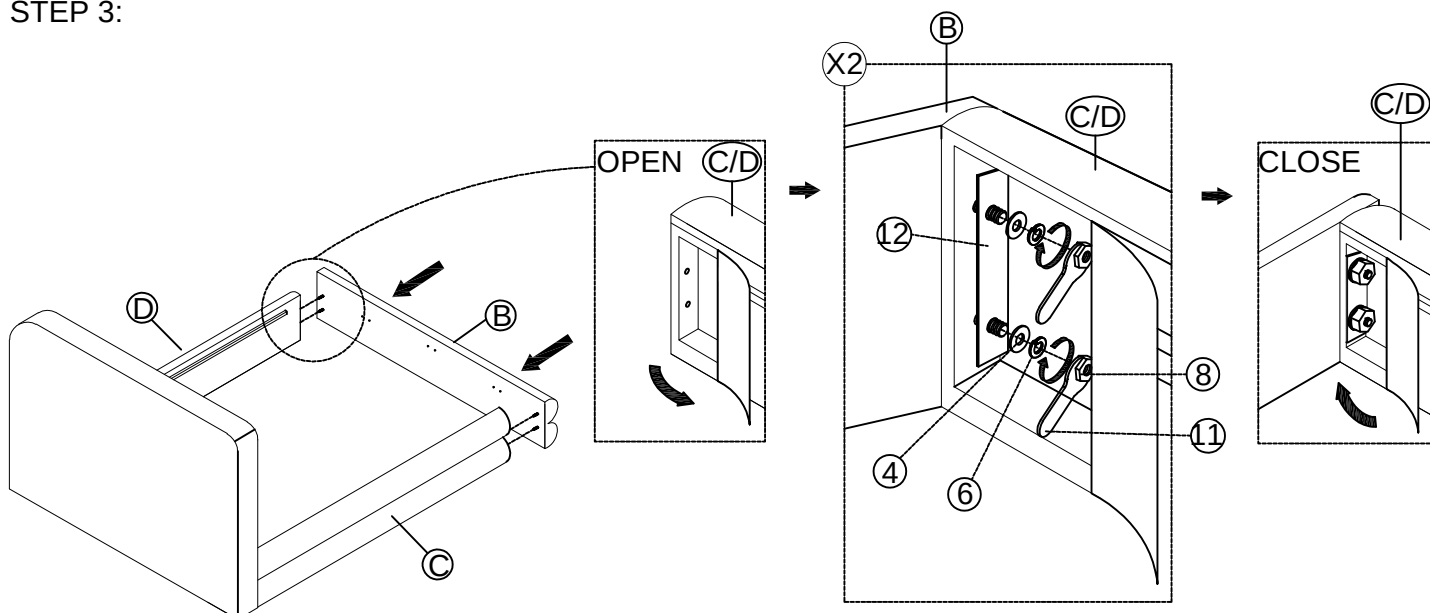

MAYA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

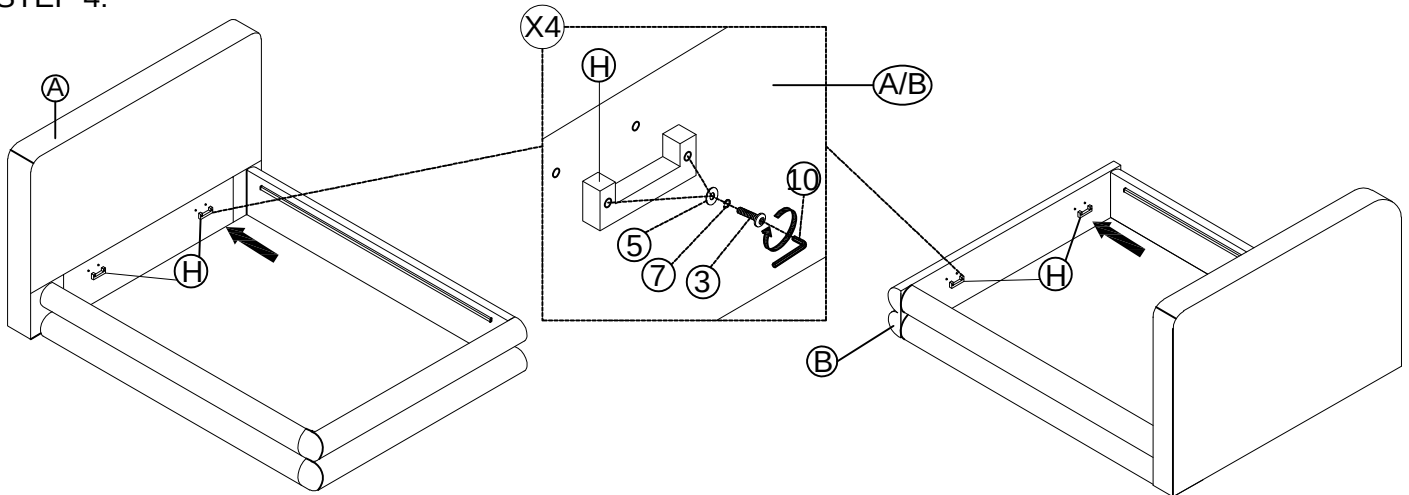

STEP 5:

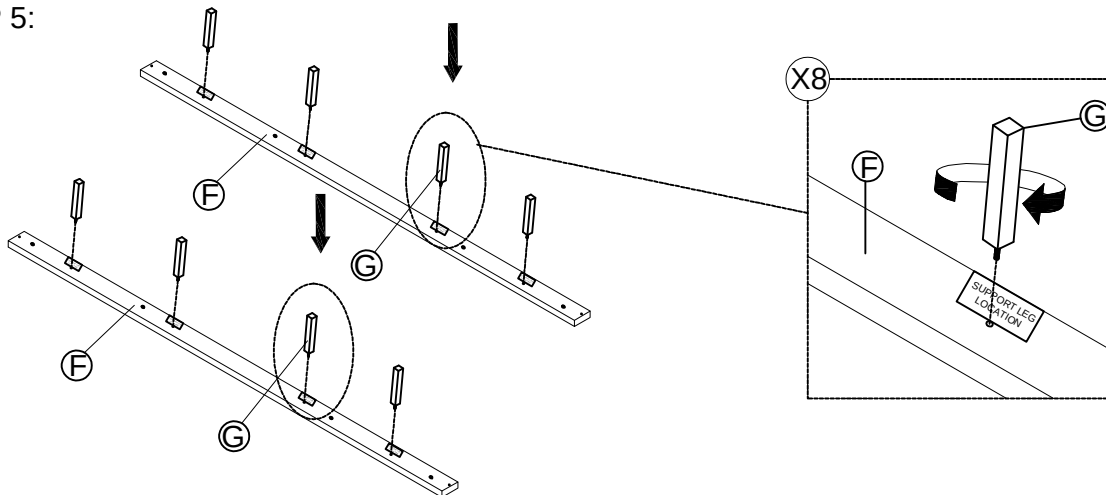

STEP 6:

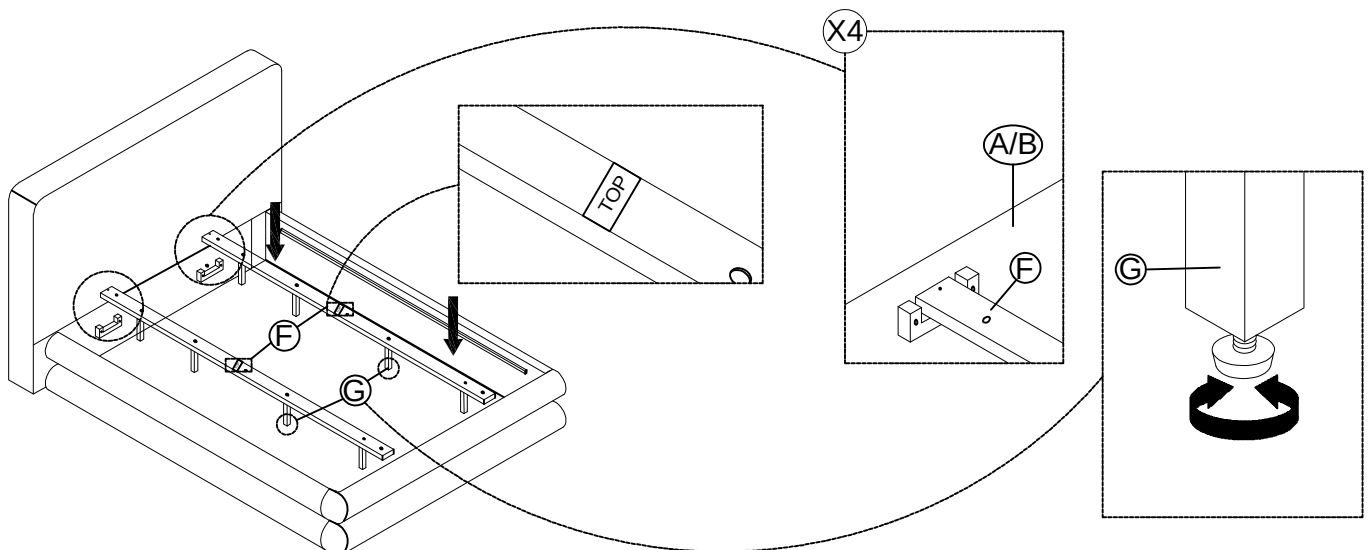


MAYA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

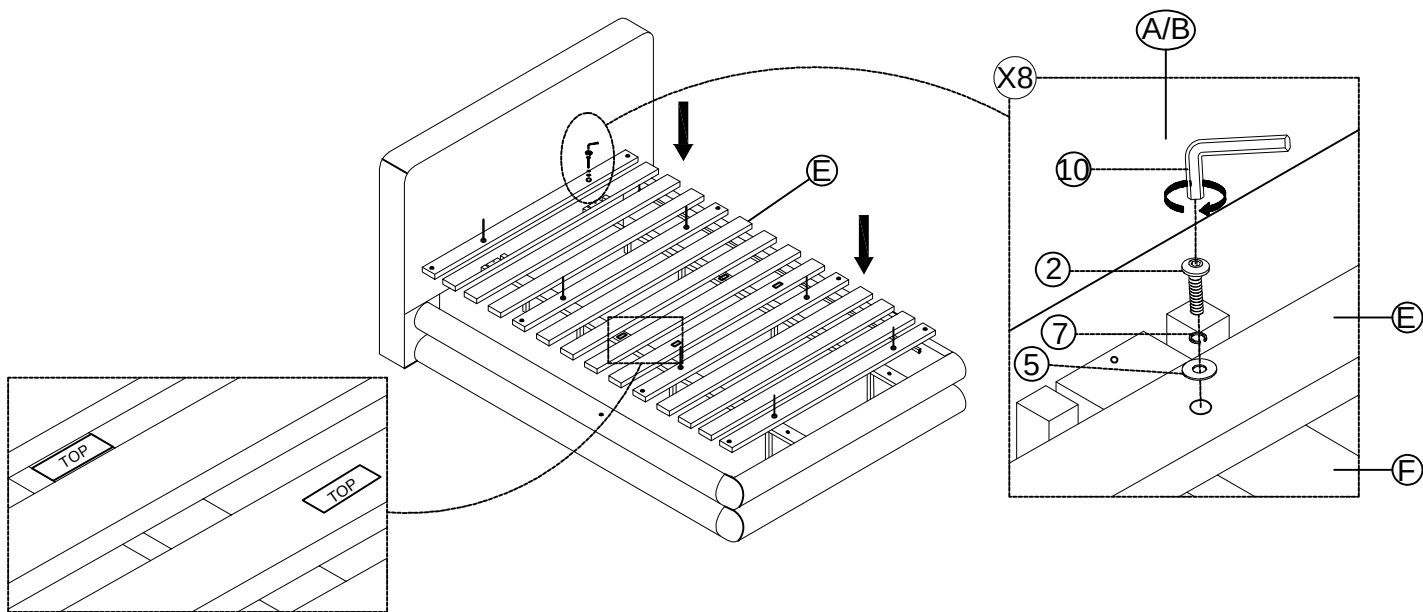


STEP 8:

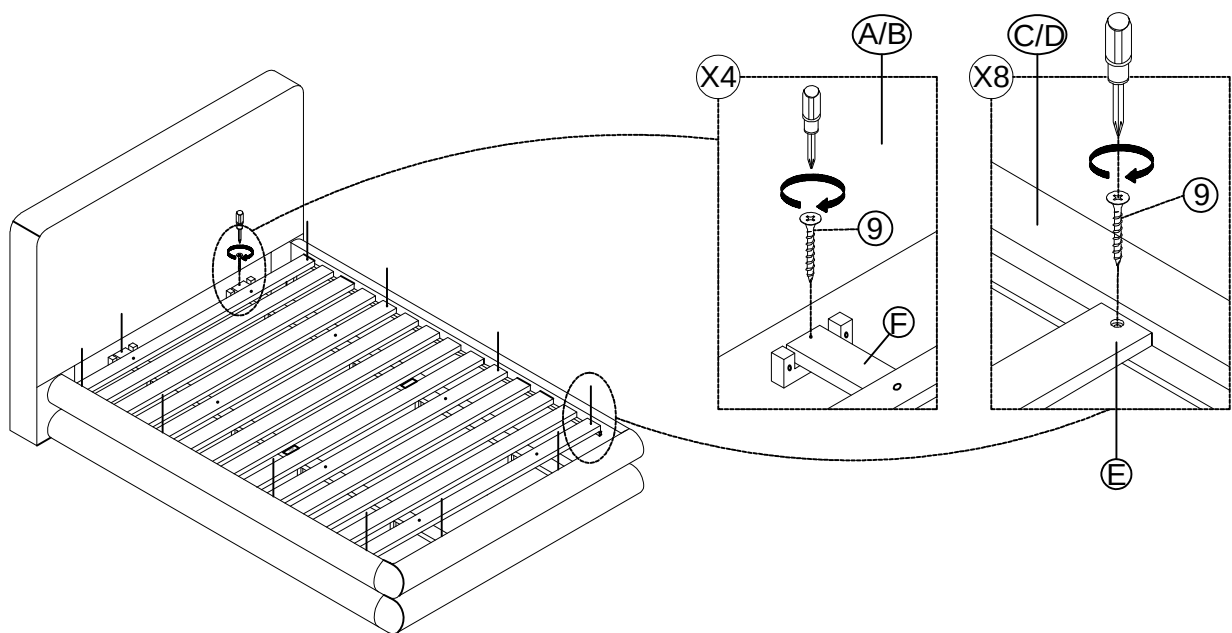

MAYA UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

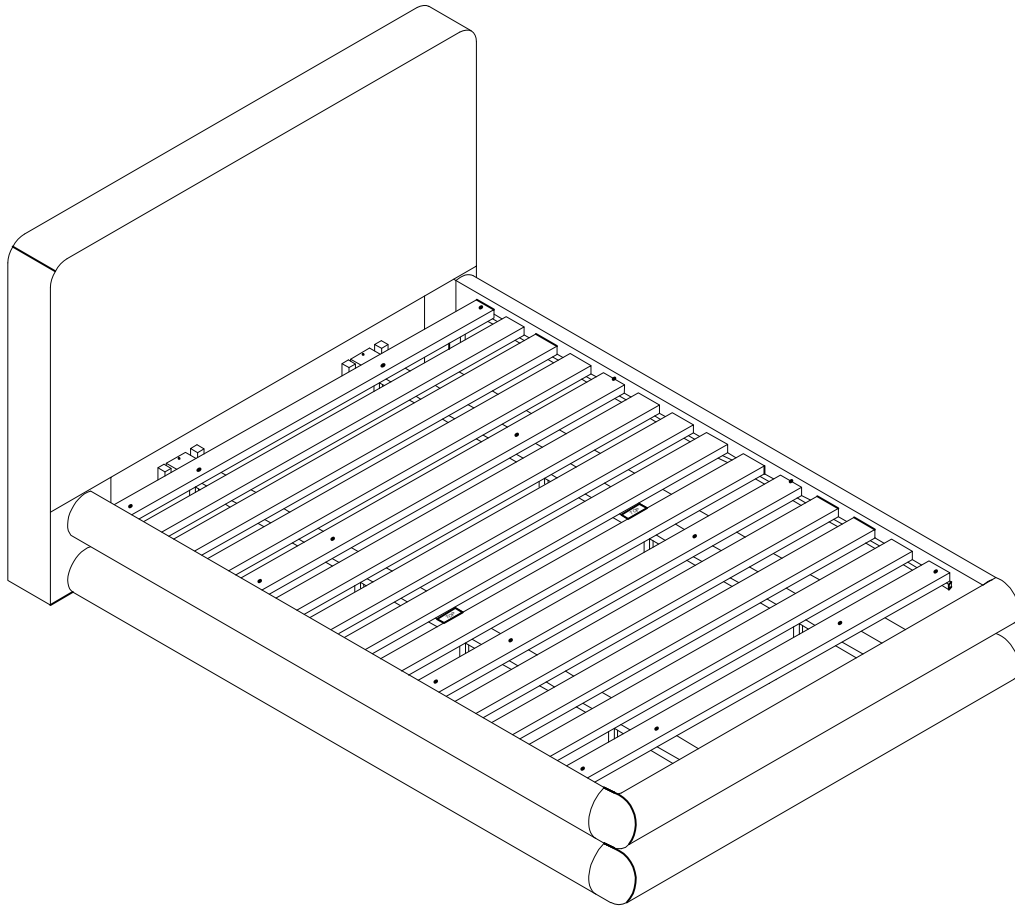


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

MAYA UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

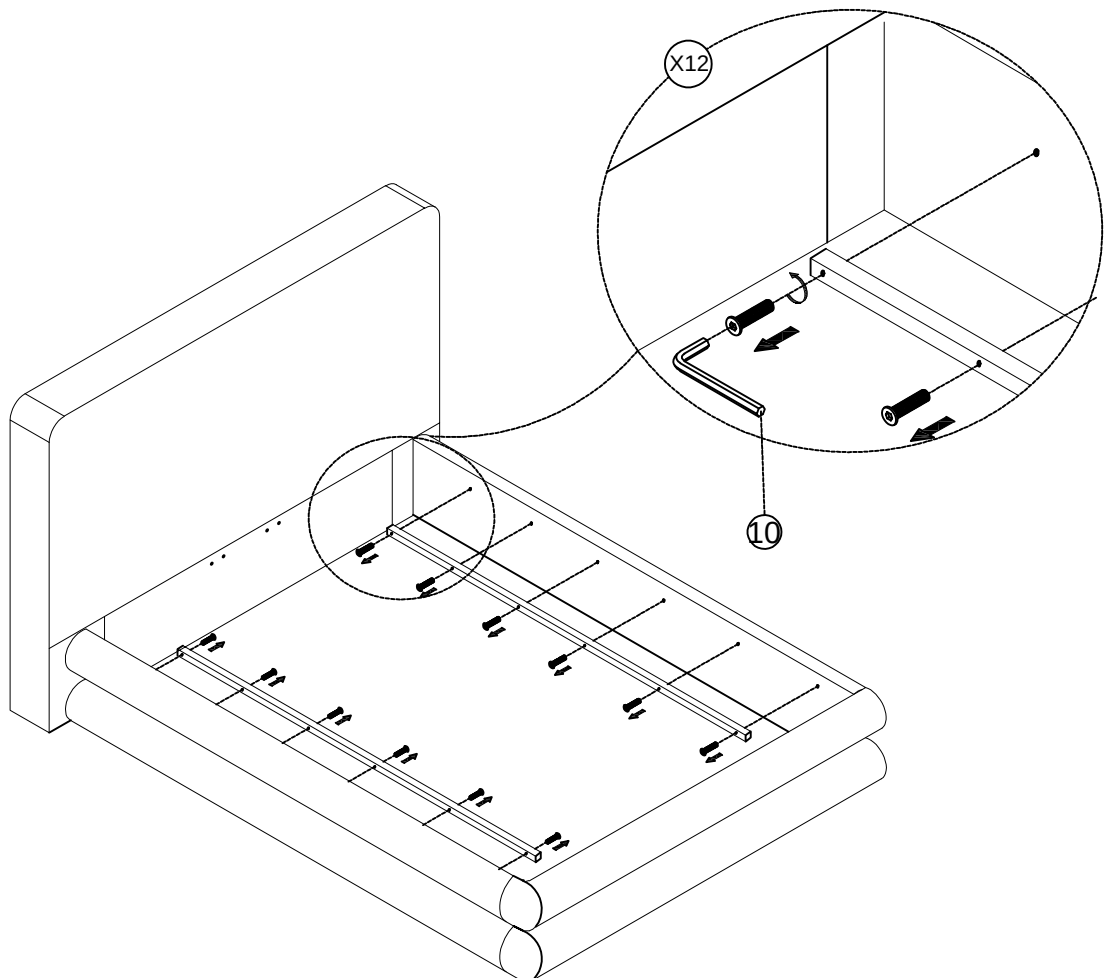

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

MAYA UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

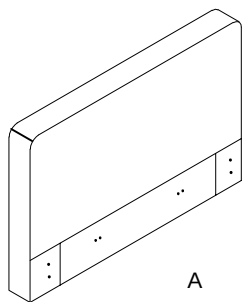

BOX#2

B. FOOTBOARD



1 PC

E. SLAT ROLL

1 SET

H. CENTER SLAT SUPPORT CLEAT

4 PCS

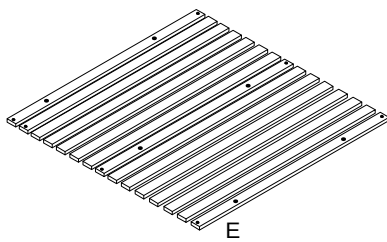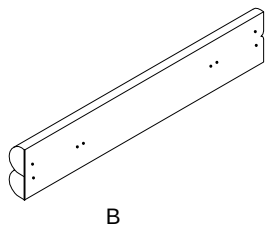

BOX#3

C. LEFT SIDE RAIL

1 PC

D. RIGHT SIDE RAIL




1 PC

F. CENTER SLAT SUPPORT

2 PCS

G. SUPPORT LEG




8 PCS

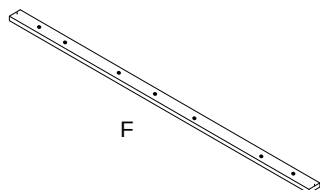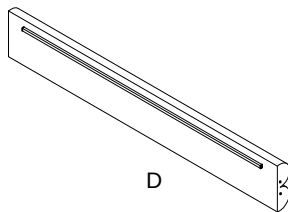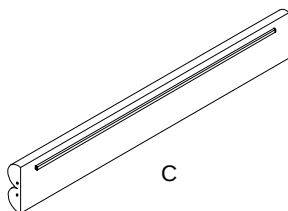

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8 x 90mm)		8 PCS
2	ALLEN BOLT (6 x 30mm)		6 PCS
3	ALLEN BOLT (6 x 50mm)		8 PCS
4	FLAT WASHER (8 x 22mm)		8 PCS
5	FLAT WASHER (6 x 16mm)		14 PCS
6	LOCK WASHER (8 x 22mm)		8 PCS
7	LOCK WASHER (6 x 16mm)		14 PCS
8	HEX NUT (8 x 12mm)		8 PCS
9	PHILLIPS SCREW (7 x 35mm)		10 PCS
10	ALLEN KEY (6mm)		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

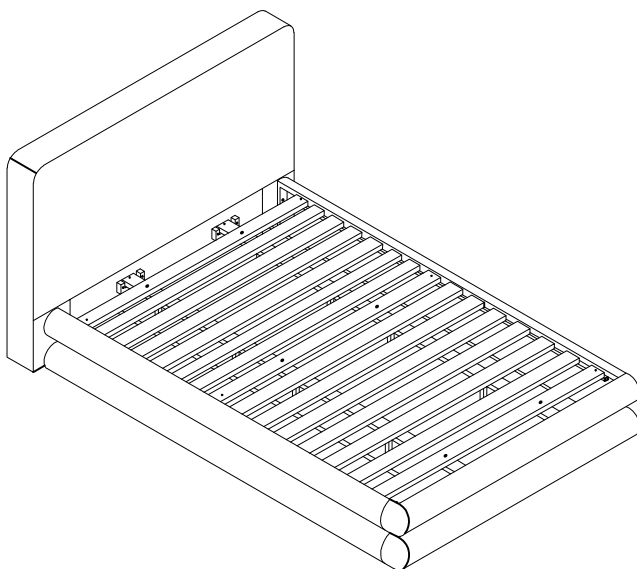


MAYA UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

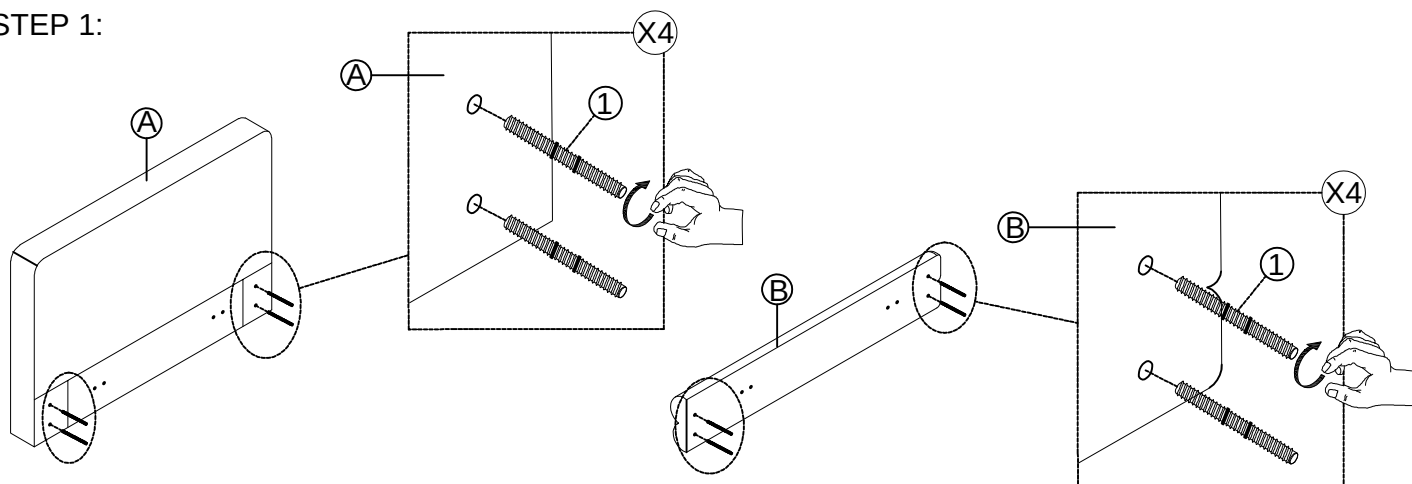

STEP 2:

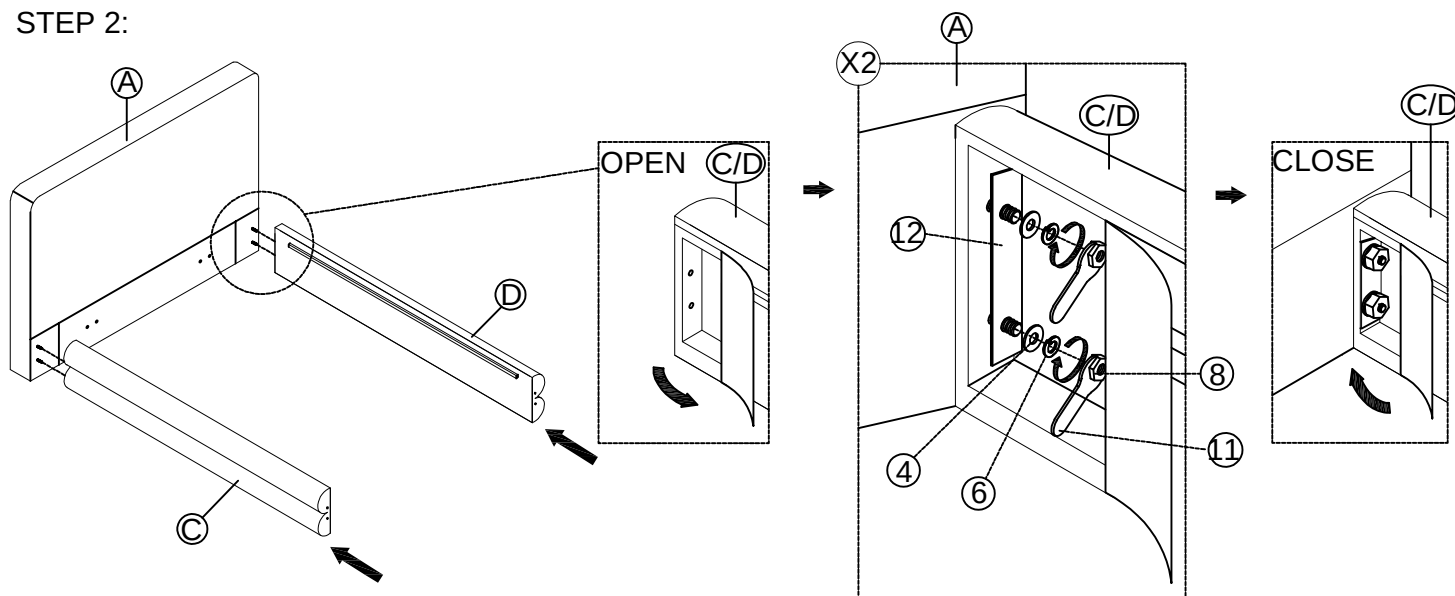

STEP 3:

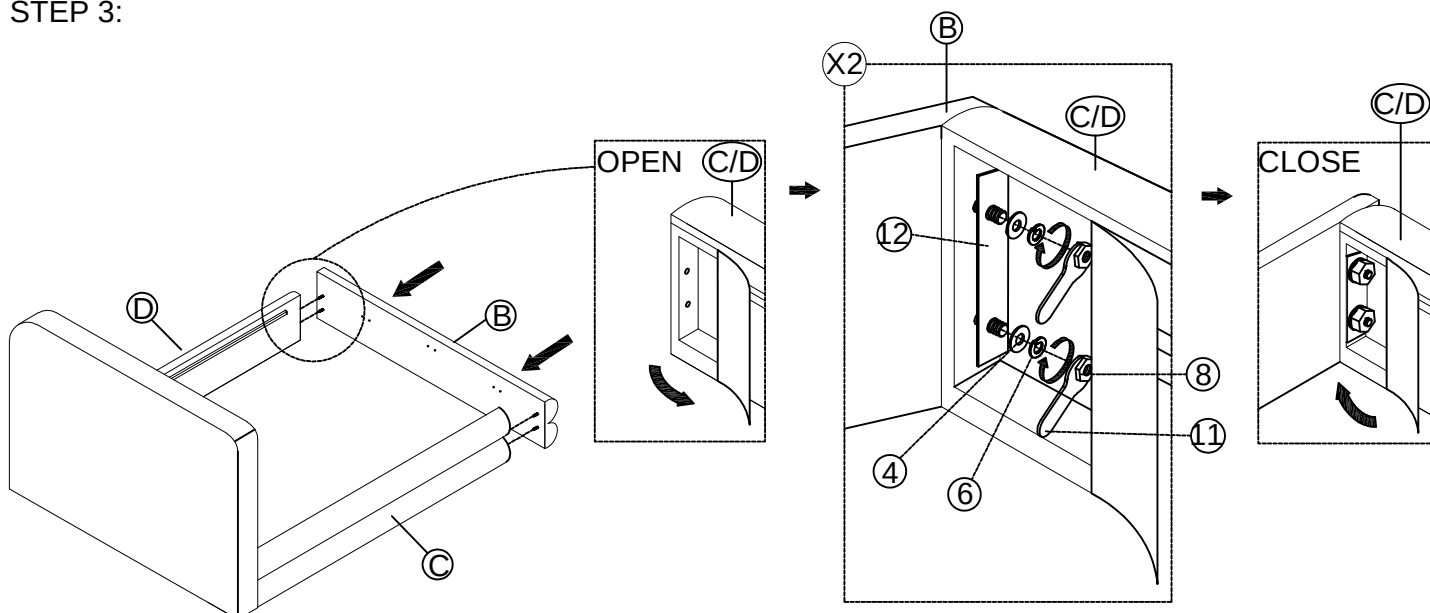

MAYA UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

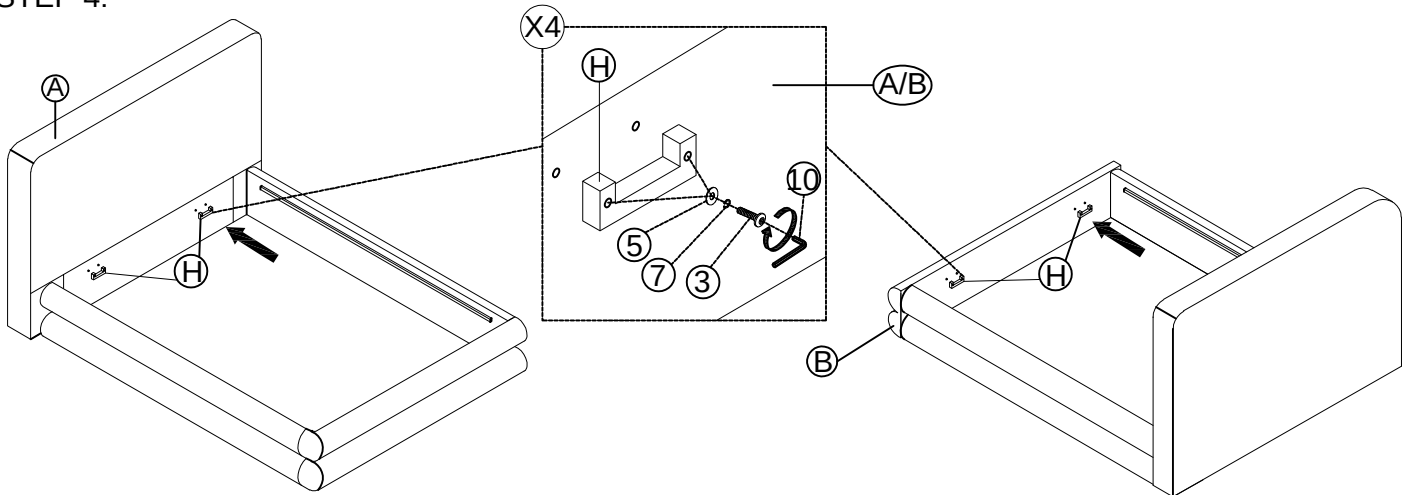

STEP 5:

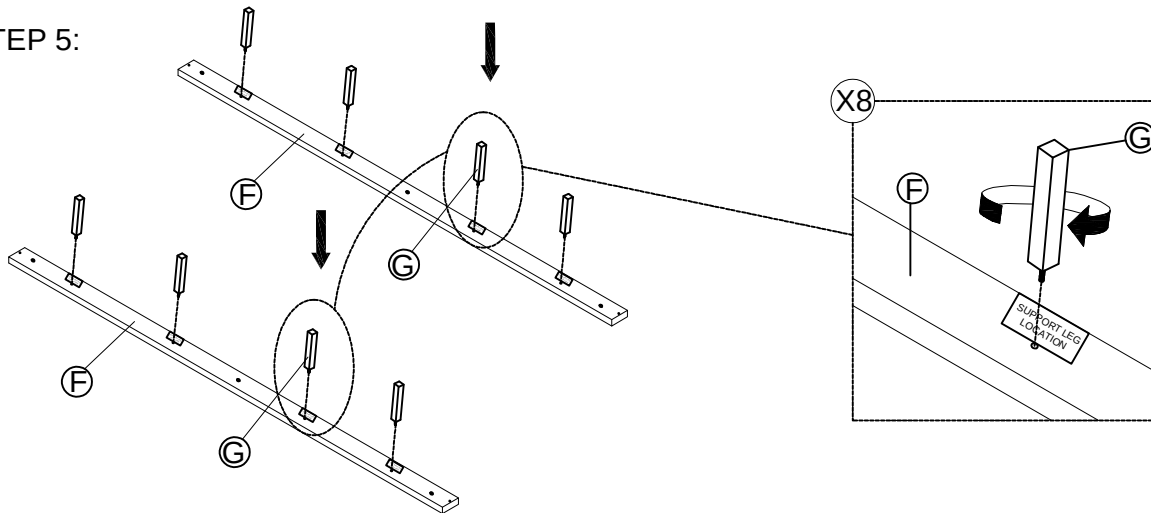

STEP 6:

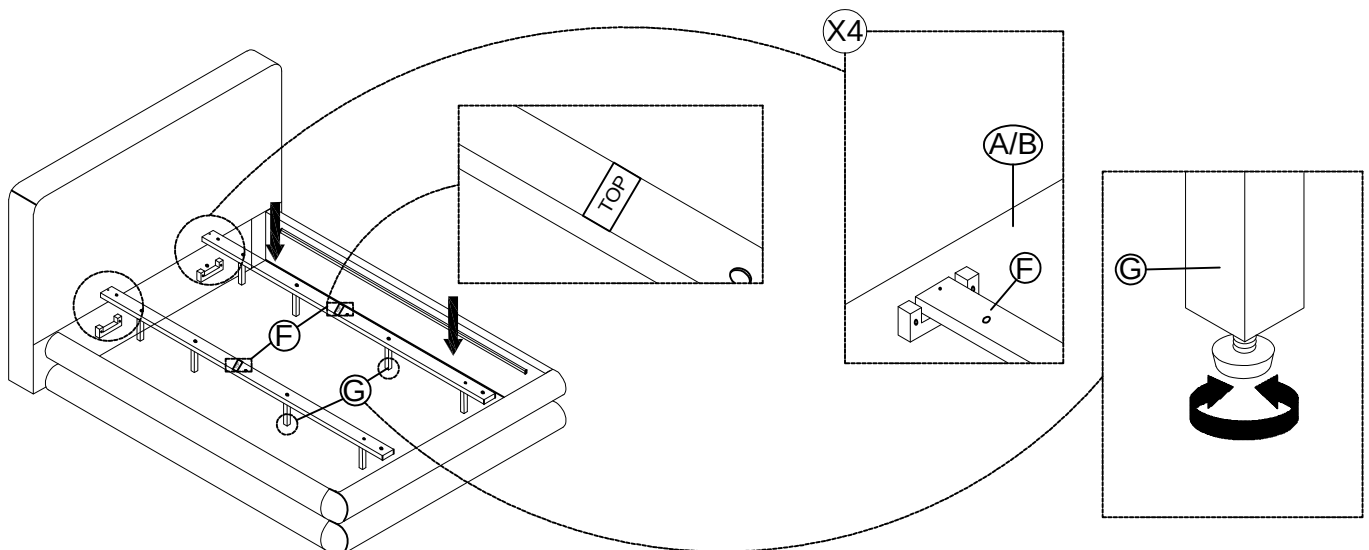


MAYA UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

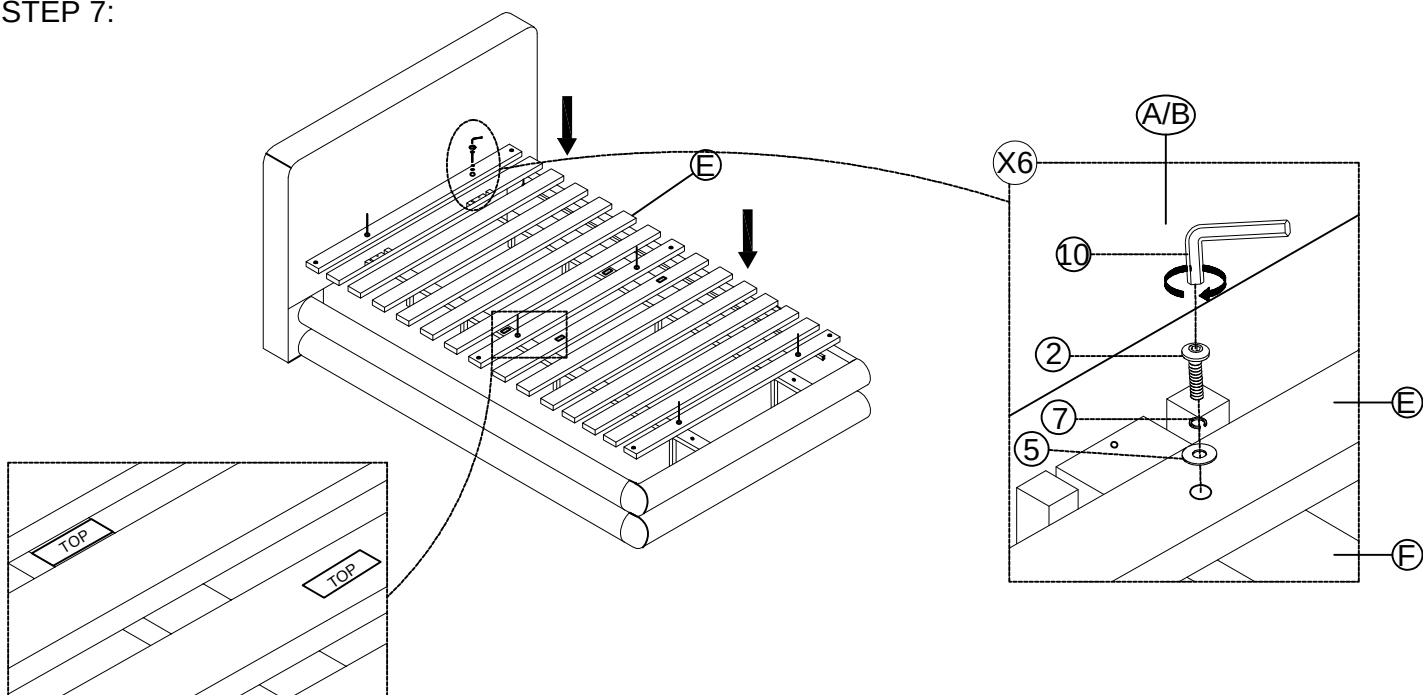


STEP 8:

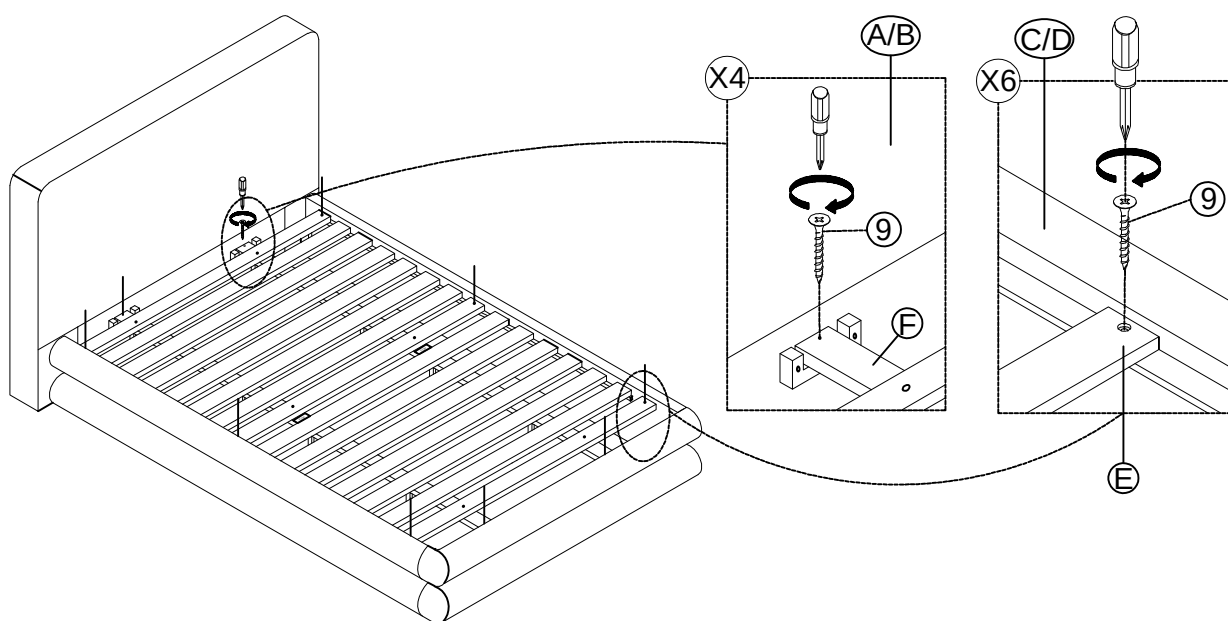

MAYA UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS

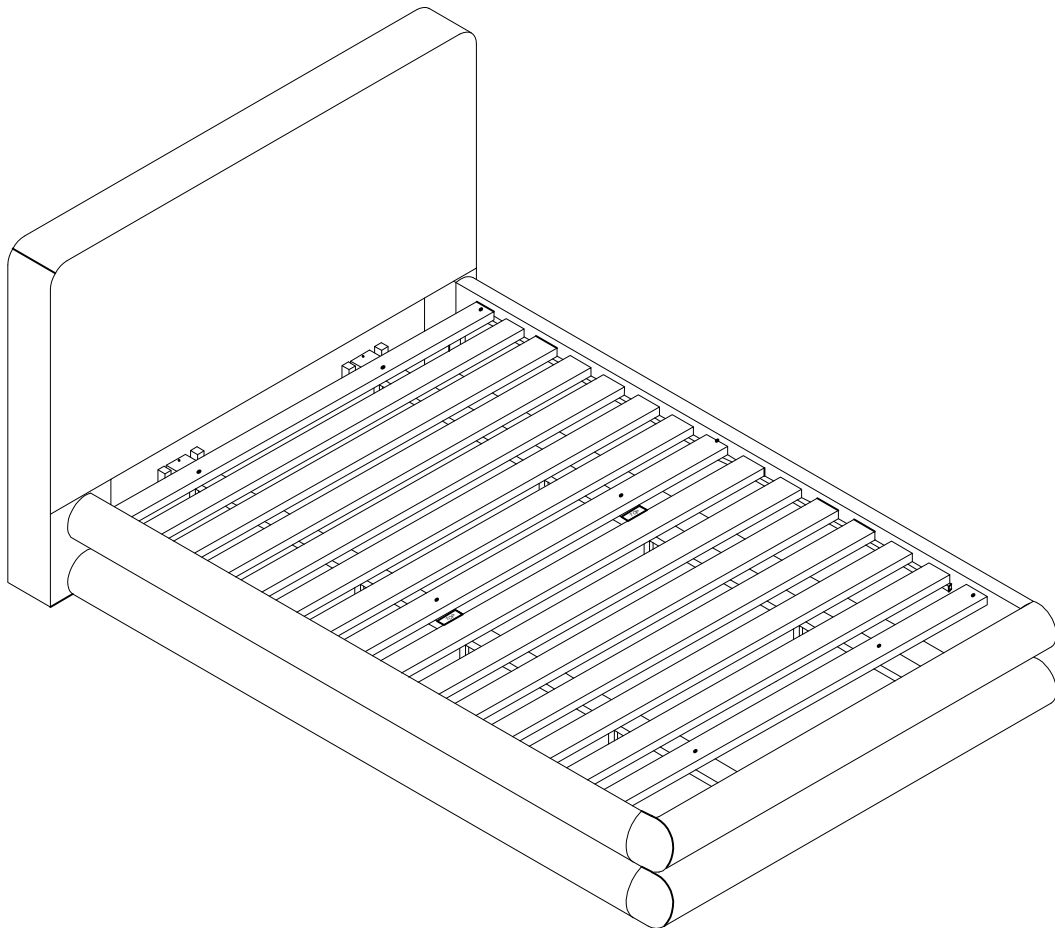


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

MAYA UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

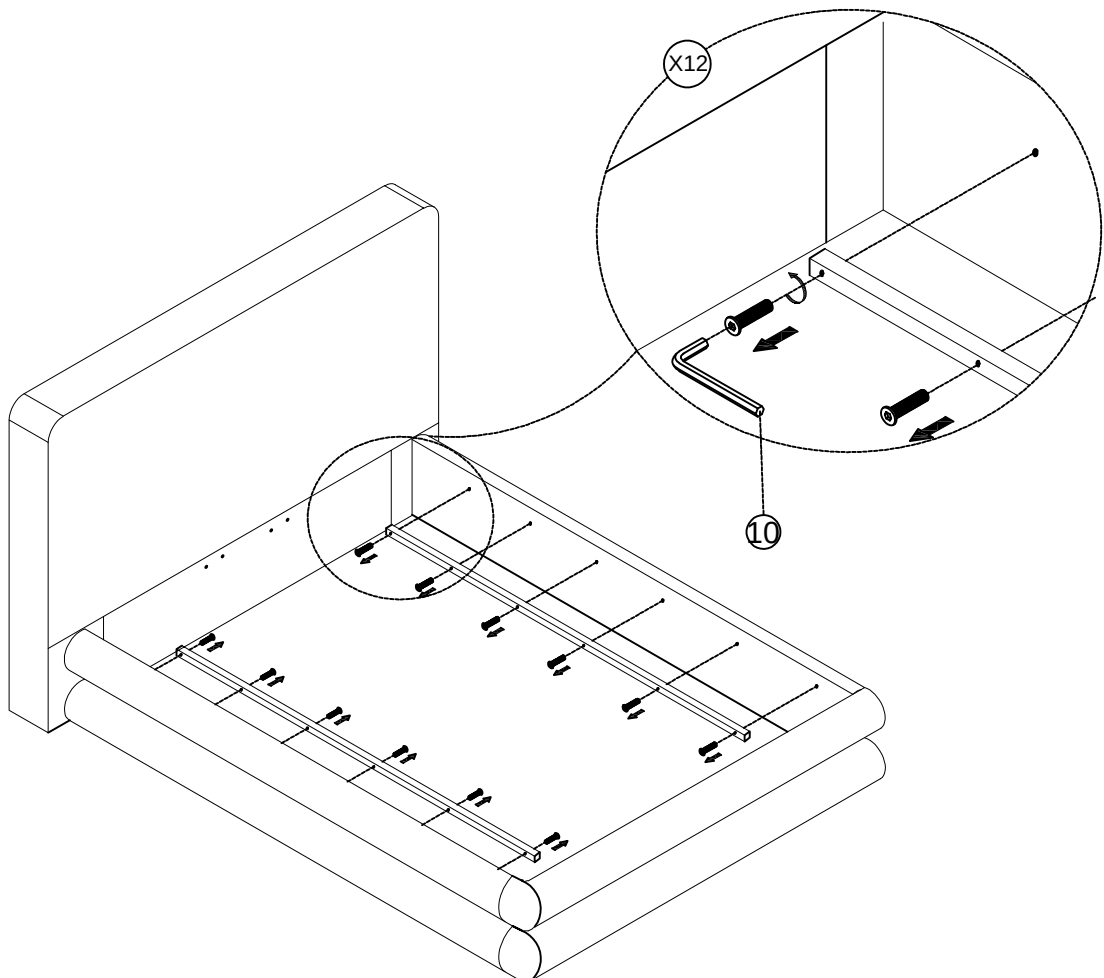

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

MAYA UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

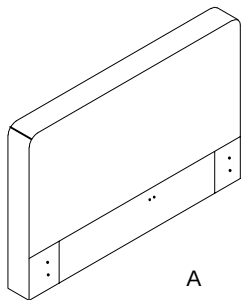

A

BOX#2

B. FOOTBOARD


1 PC

E. SLAT ROLL


1 SET

H. CENTER SLAT SUPPORT CLEAT

2 PCS

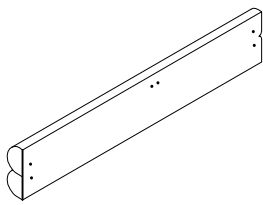

B

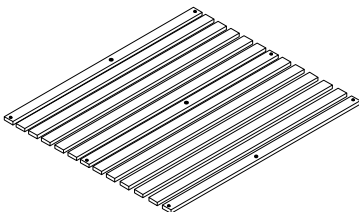

E



H

BOX#3

C. LEFT SIDE RAIL

1 PC

D. RIGHT SIDE RAIL


1 PC

F. CENTER SLAT SUPPORT


1 PC

G. SUPPORT LEG


4 PCS

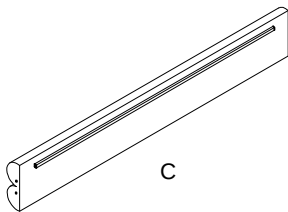

C

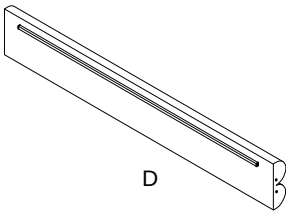

D

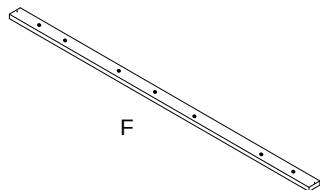

F





G

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8 x 90mm)		8 PCS
2	ALLEN BOLT (6 x 30mm)		3 PCS
3	ALLEN BOLT (6 x 50mm)		4 PCS
4	FLAT WASHER (8 x 22mm)		8 PCS
5	FLAT WASHER (6 x 16mm)		7 PCS
6	LOCK WASHER (8 x 22mm)		8 PCS
7	LOCK WASHER (6 x 16mm)		7 PCS
8	HEX NUT (8 x 12mm)		8 PCS
9	PHILLIPS SCREW (7 x 35mm)		8 PCS
10	ALLEN KEY (6mm)		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

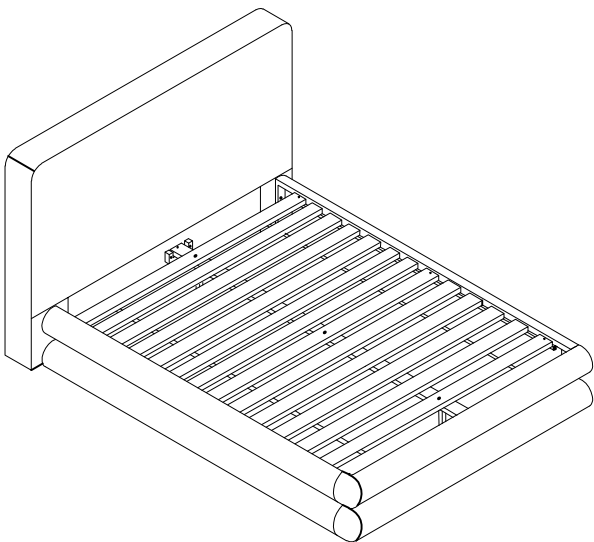


MAYA UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STEP 1:

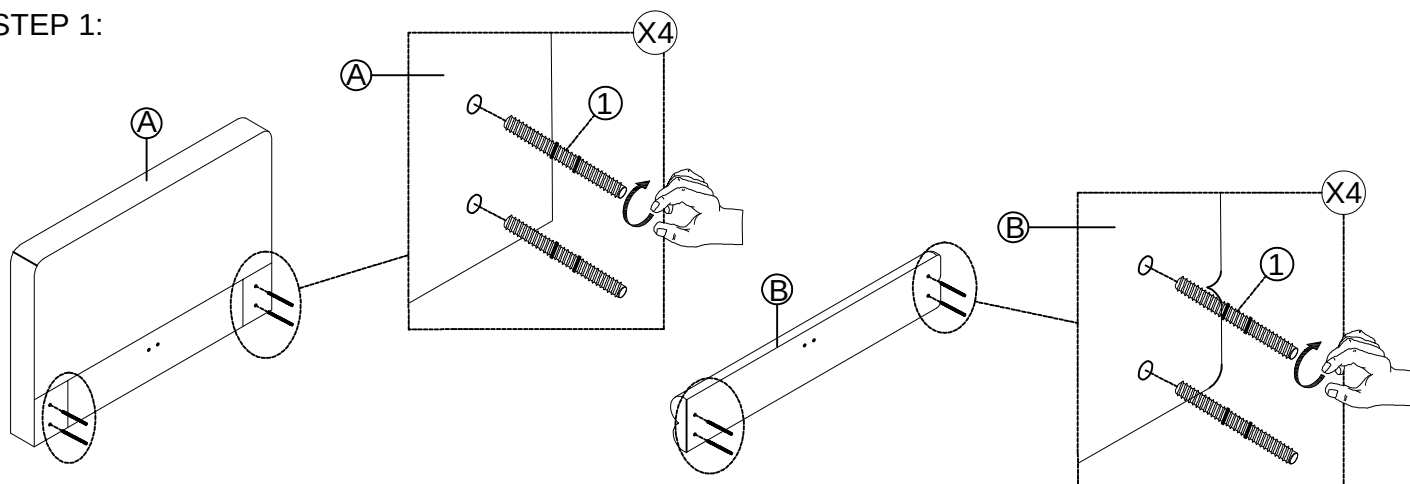

STEP 2:

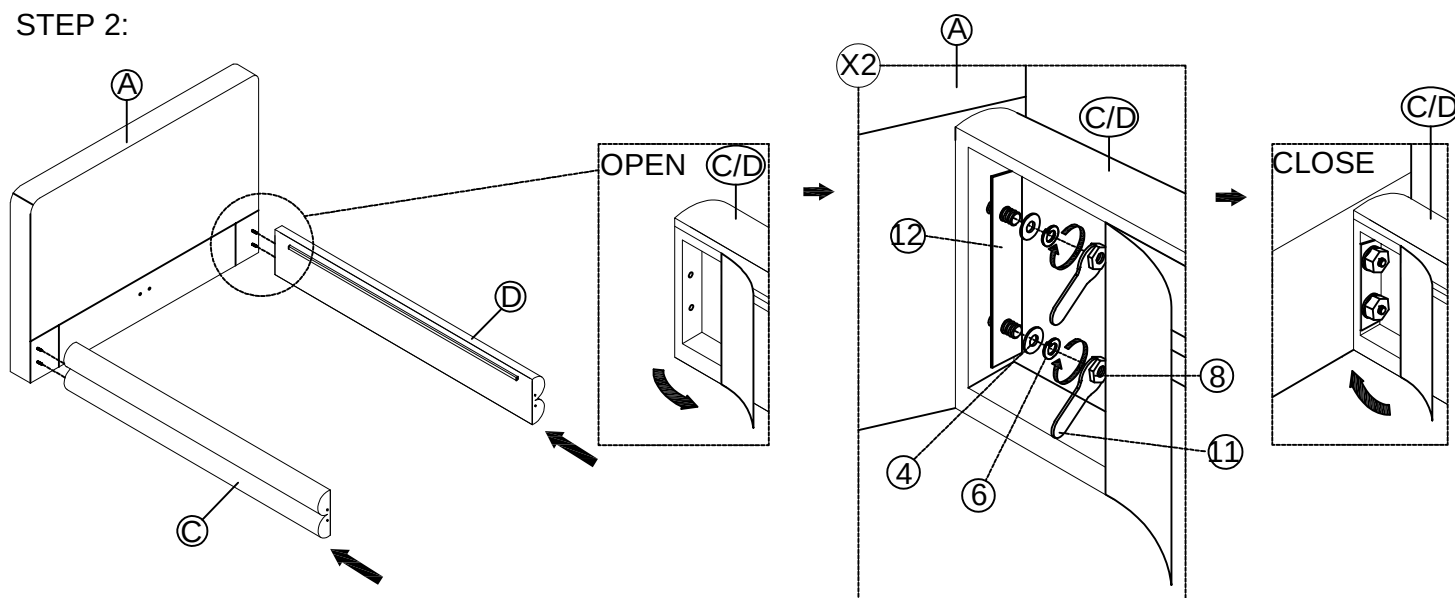

STEP 3:

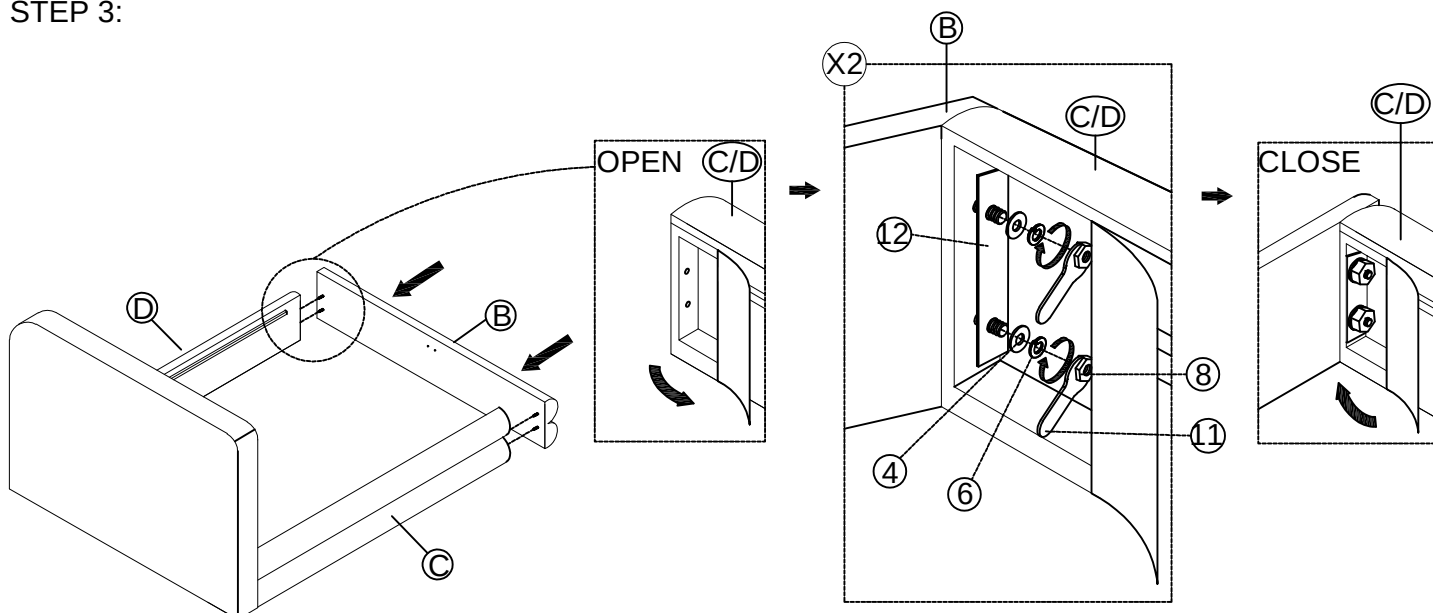

MAYA UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

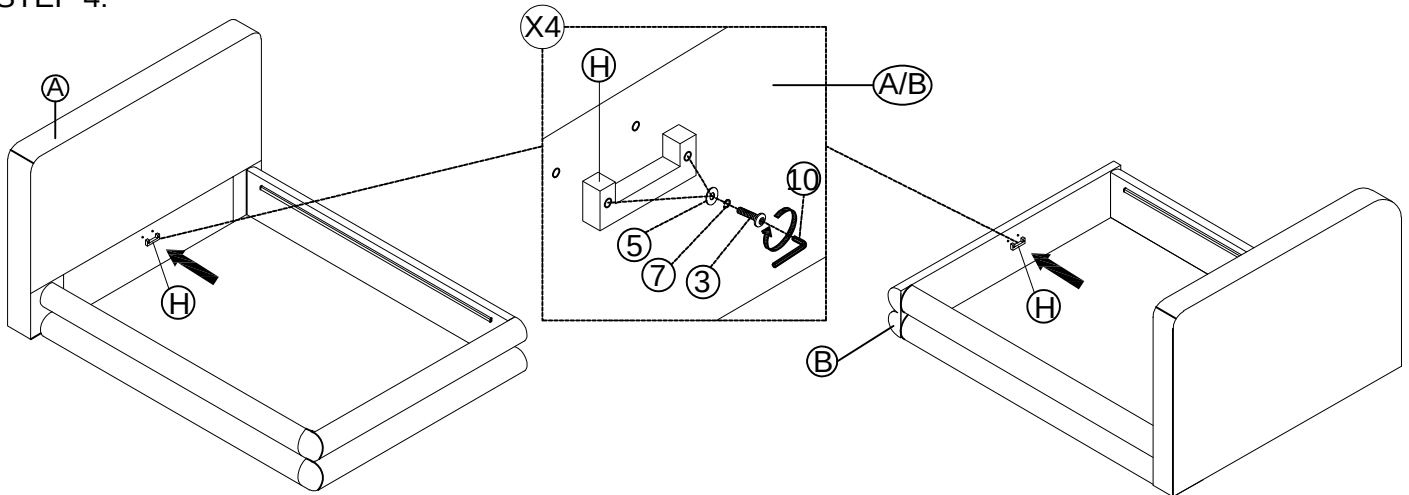

STEP 5:

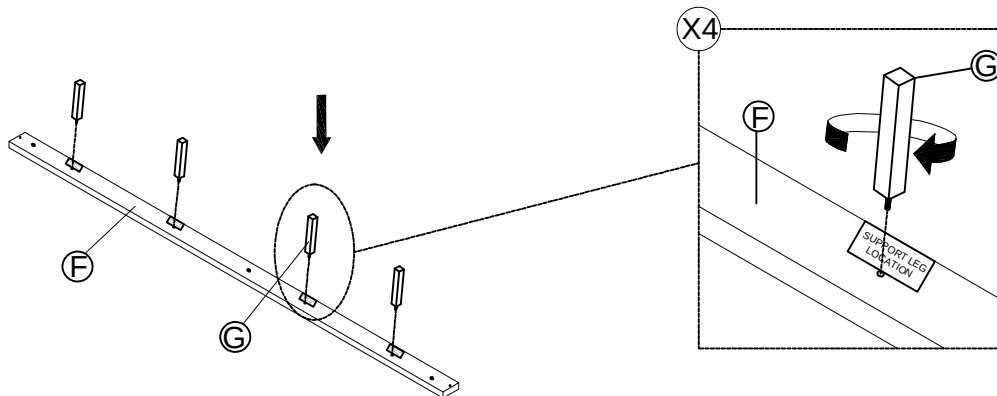

STEP 6:

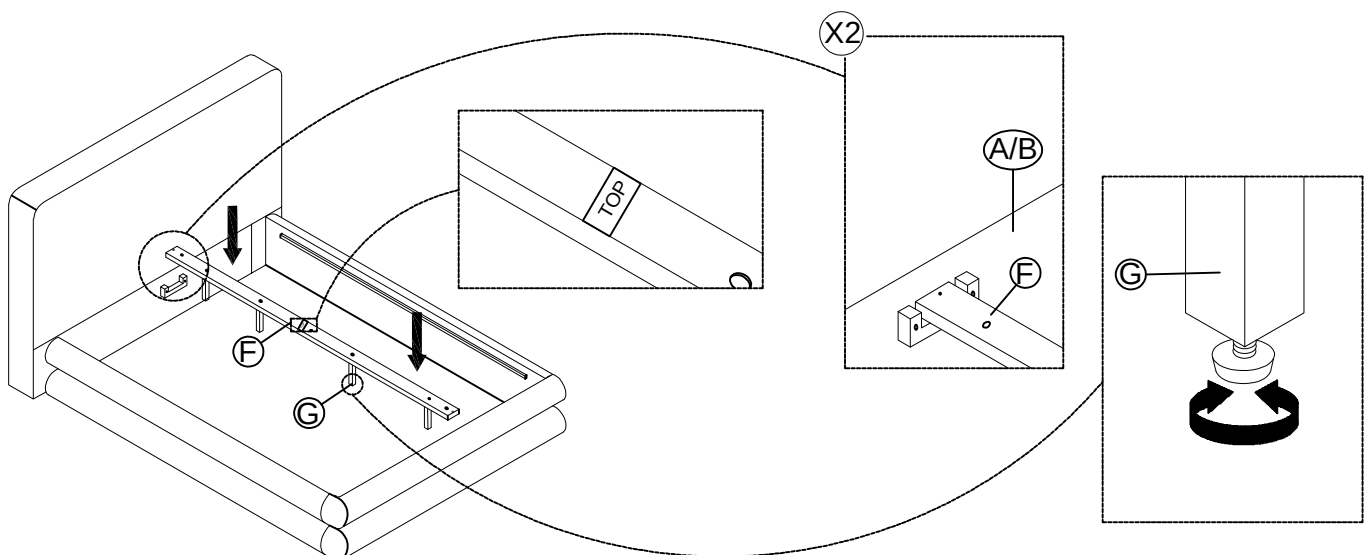


MAYA UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



STEP 7:

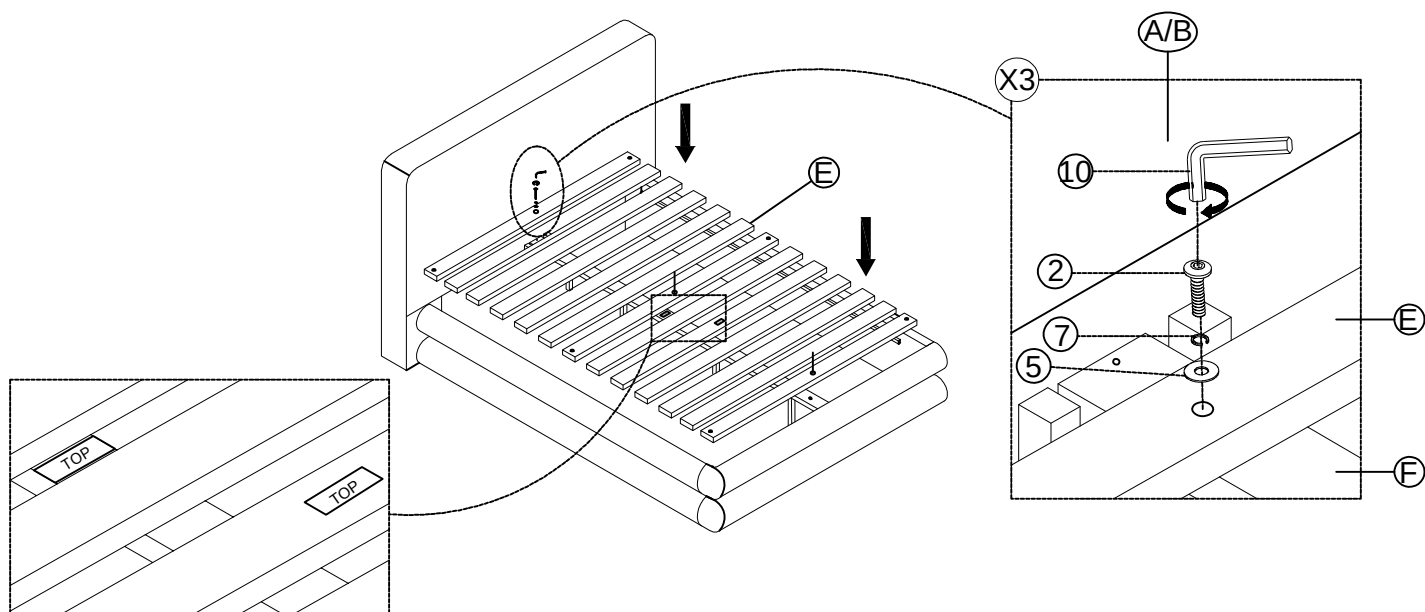


STEP 8:

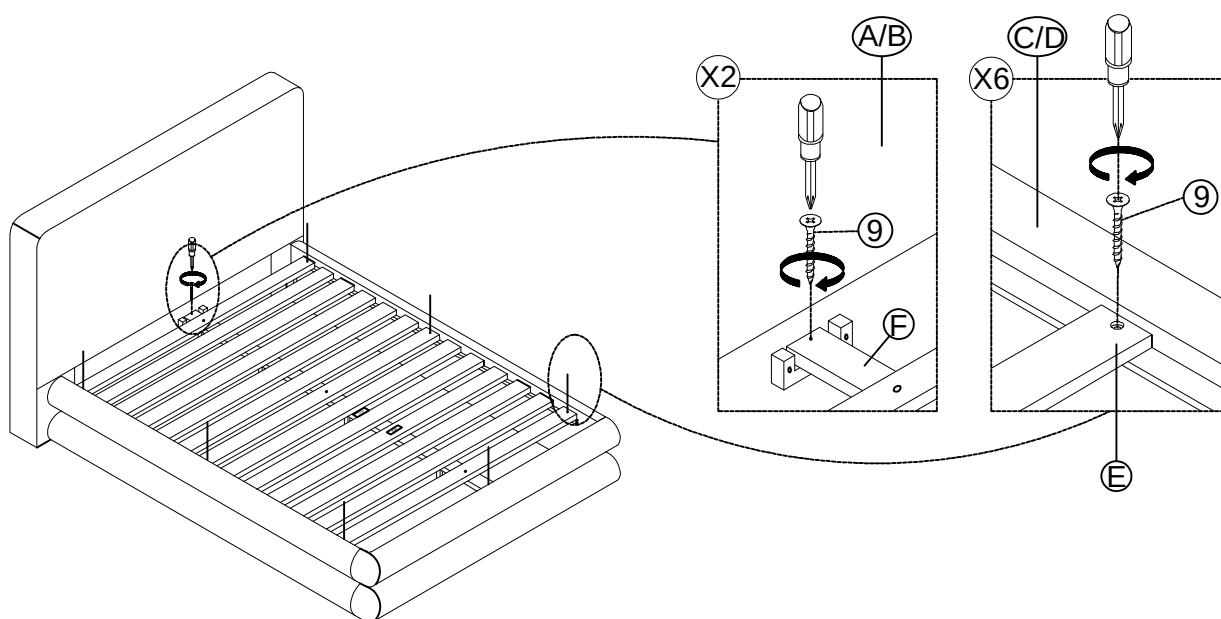

MAYA UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS

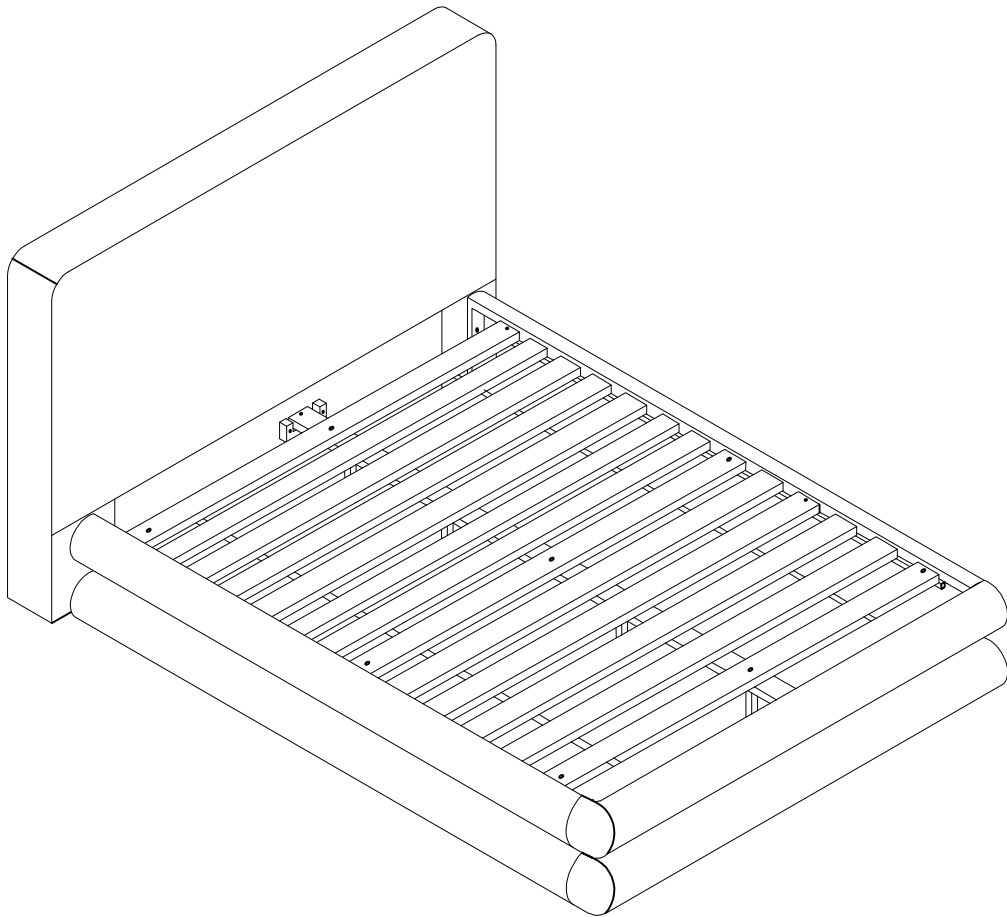


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

MAYA UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

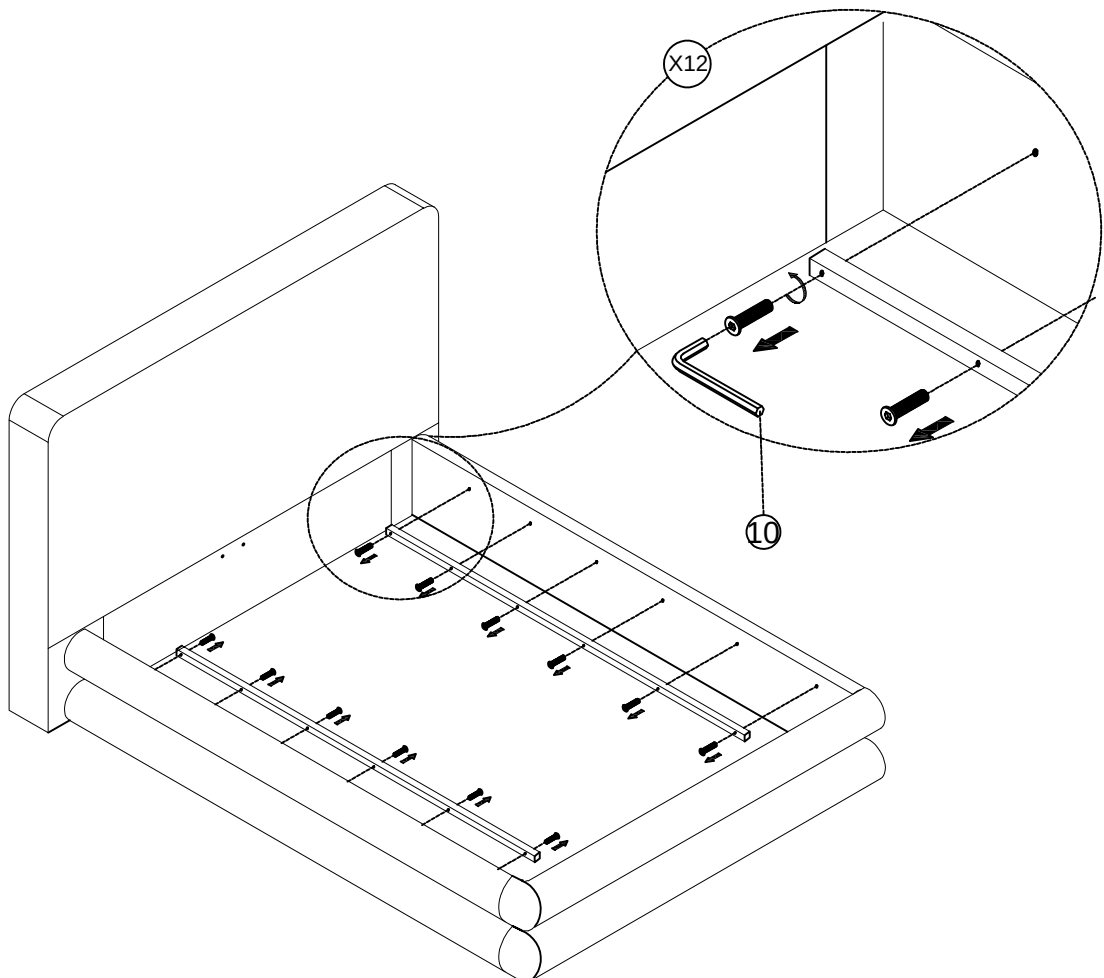

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION