


Installation Instructions for Choice Series Privacy Leversets with a 60mm backset


Step 1. Door Preparation

- Fold template where indicated.
- Position template on door edge at desired latch height.
- Firmly hold template and mark latch height and handle fixing holes at required backset (refer template).
- Measure door thickness and mark centre.
- Drill 25mm latch hole.
Note: it is important to drill this hole squarely.
- Drill a 50mm hole through door face at 60mm backset as marked on template.
Note: Lever may be used on existing Ø54mm door prep.

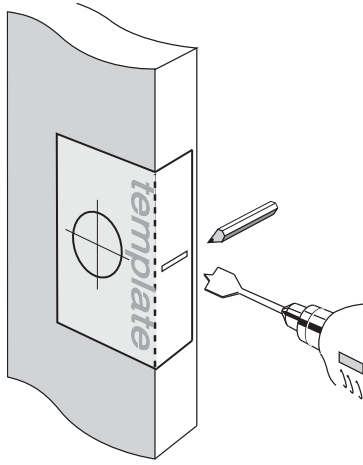

Step 2. Install Latch to Door


- Mark and chisel door edge for latch face plate to a recess of 2mm or until flush with door. Use latch face plate as a template.

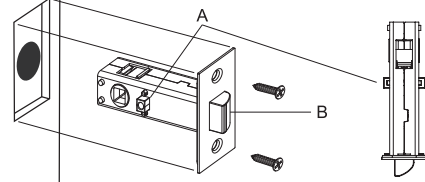

- Insert latch into door, ensuring that:
 - The bevelled area of the latchbolt (B) is facing the direction of door closure.
 - The threaded drive bar (A) is sitting proud on both sides of the latch body
- Pre-drill screw holes with suitable drill size.
- Fasten with wood screws provided

Step 3. Install Lever Assemblies to Door

- Insert square drive spindle (1) through latch in door. Depress button (2) and push spindle through the latch until the button is visible on the other side. The spindle is now retained in the centre of the latch.
- Remove rosette covers (3) from both lever assemblies.
- Place one lever assembly (4) onto the square drive spindle.
- Place the other lever assembly (5) into position, locating it onto the other side of the spindle.
- Fasten both lever assemblies together with screws provided (6):
 - Use long screws for thick doors and short screws for thin doors.
 - Each under-rose features a countersunk hole and a threaded hole.
 - Install one screw from either side, through the countersunk hole and into the threaded hole of the opposite under-rose.
 - Then tighten the screw head on each side.
- Re-apply rosette covers (3) to both under-roses by pushing the covers over the rubber rings until flush with door.
- For Square rosette cover (9), tighten grub screw (10) using Allen Key (11), found on the underside of the rosette cover.
- **Depress latchbolt (B)** and install the privacy button (7) through the privacy button / emergency release hole (8) on the internal side of the door and screw tight. Ensure this is completely tightened, then release latchbolt.

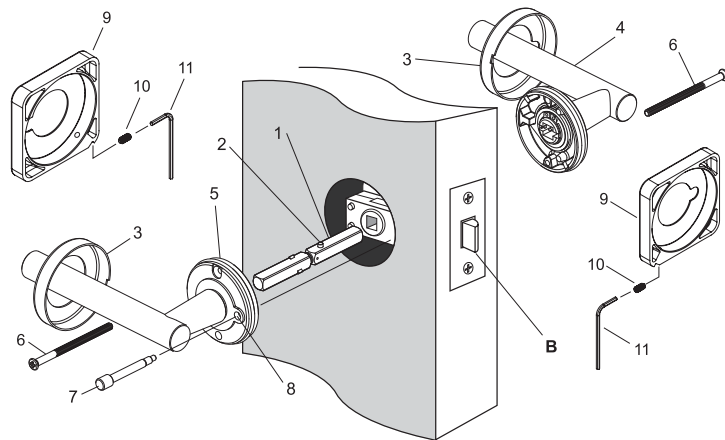

NOTE: Carefully follow these instructions when installing.
Screws to be tightened to a recommended 2.5Nm torque.



Mark centre-line
of latch hole

FOLD HERE

Fit here on door edge

Fit here on door edge

BACKSET 60mm

50mm hole
- refer Step 1.

Optional Hole Pattern
3 x 10mm hole

Optional Hole Pattern
25mm hole

Suits doors 32mm to 45mm thick.



ALLEGION

1800 098 094

info.au@allegion.com
gainsboroughhardware.com.au

⚠️ PRINT TO SCALE ⚠️

