





# Verta Dummy Trim Installation Instructions

## Contents

1. 1 x Dummy Lever
2. 2 x Studs
3. 2 x Fixing Screws (M4 x 20mm)
4. 2 x Fixing Screws (M4 x 30mm)
5. 2 x Washers

## Tools Required

- Tape measure
- Soft pencil
- Level
- 6.5mm drill bit
- Power drill
- Philips screwdriver

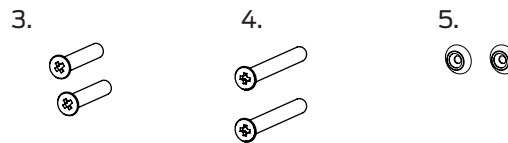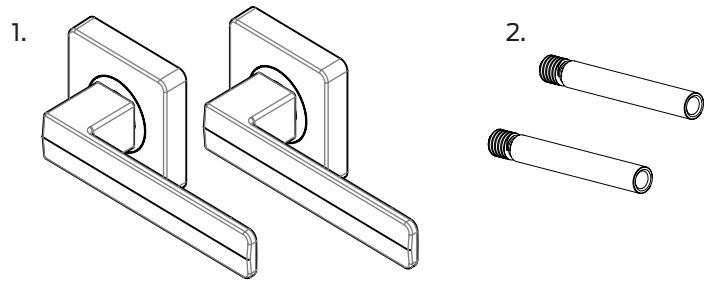

## Note


Check door thickness first

- For doors 35-40mm thick, use 20mm M4 screws (x2)
- For doors 40-50mm thick, use 30mm M4 screws (x2)

## Step 1: Door Preparation

If door is predrilled, go to step 2, otherwise follow the steps below

- 1.1 With a soft pencil, mark holes as per template
- 1.2 Check alignment using a level
- 1.3 Drill holes

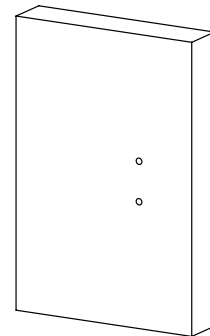

## Step 2. Furniture Installation

- 2.1 Screw studs on to rose as shown
- 2.2 Align studs with drilled holes, and secure with M4 screws and washers

