


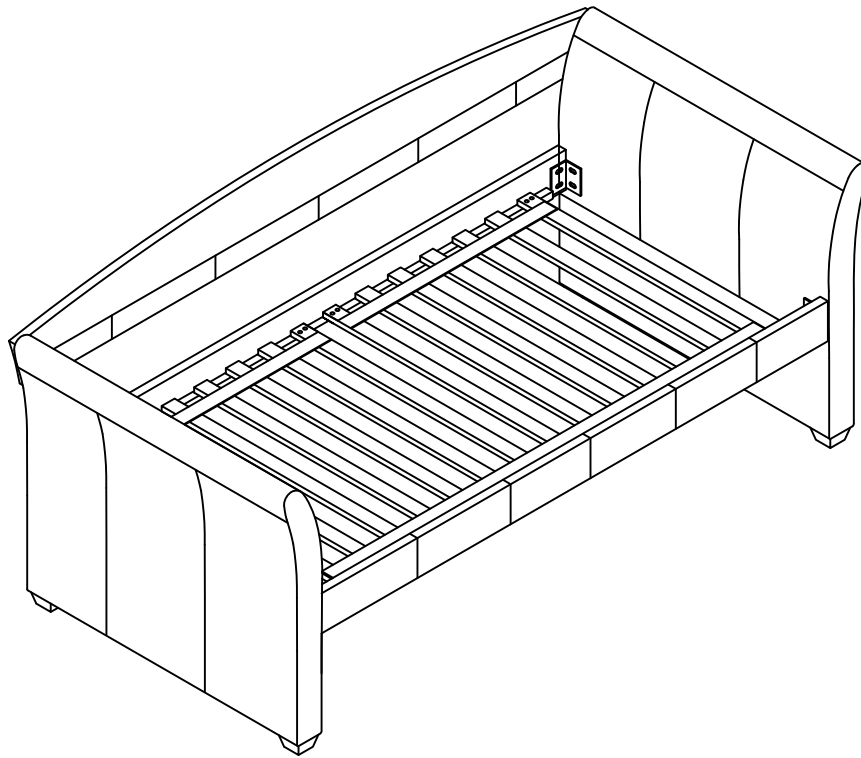





Assembly Instruction


**PAIR OF ARM, UPHOLSTERY
PU BROWN PU DAYBED**



HARDWARE LIST


A		ø5/16"X2"L	12PCS	D		ø5/16"	1PC
B		ø5/16"X3/4"L	8PCS	E		#8X1-1/4"L	16PCS
C		ø5/16"Xø3/4"	20PCS	F		60X90mm	4PCS

G

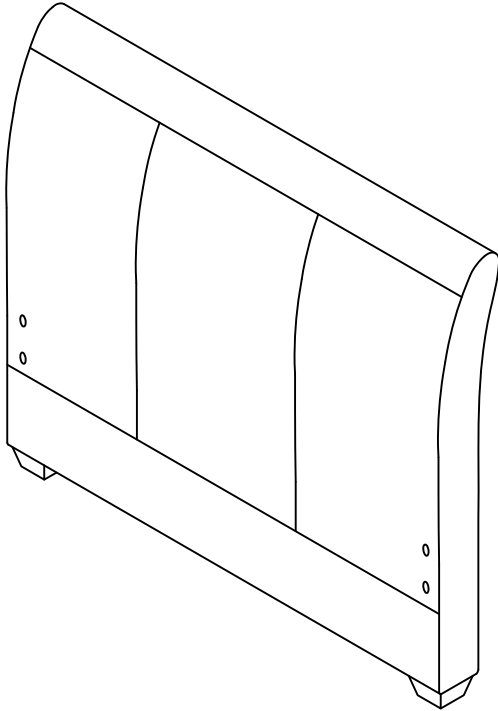


2PCS

H

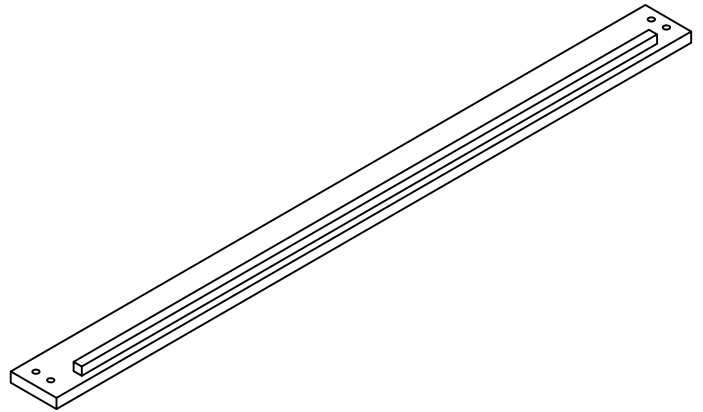


2PCS

I

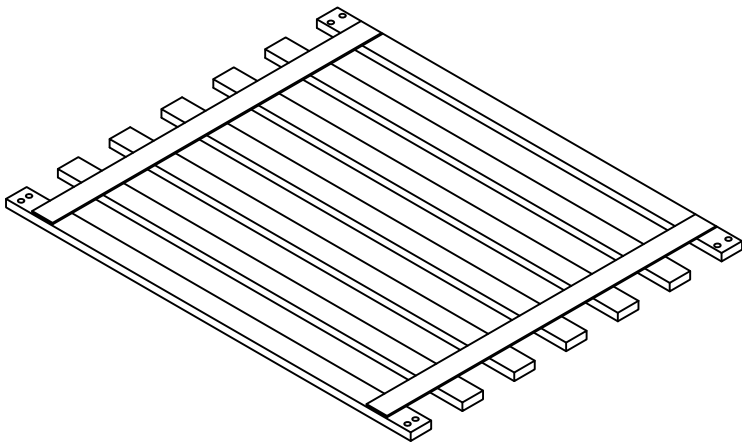


2PCS

J

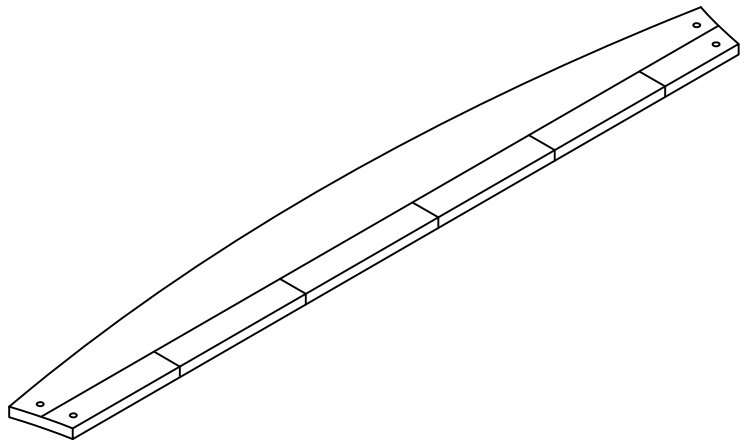


1PC

step 1

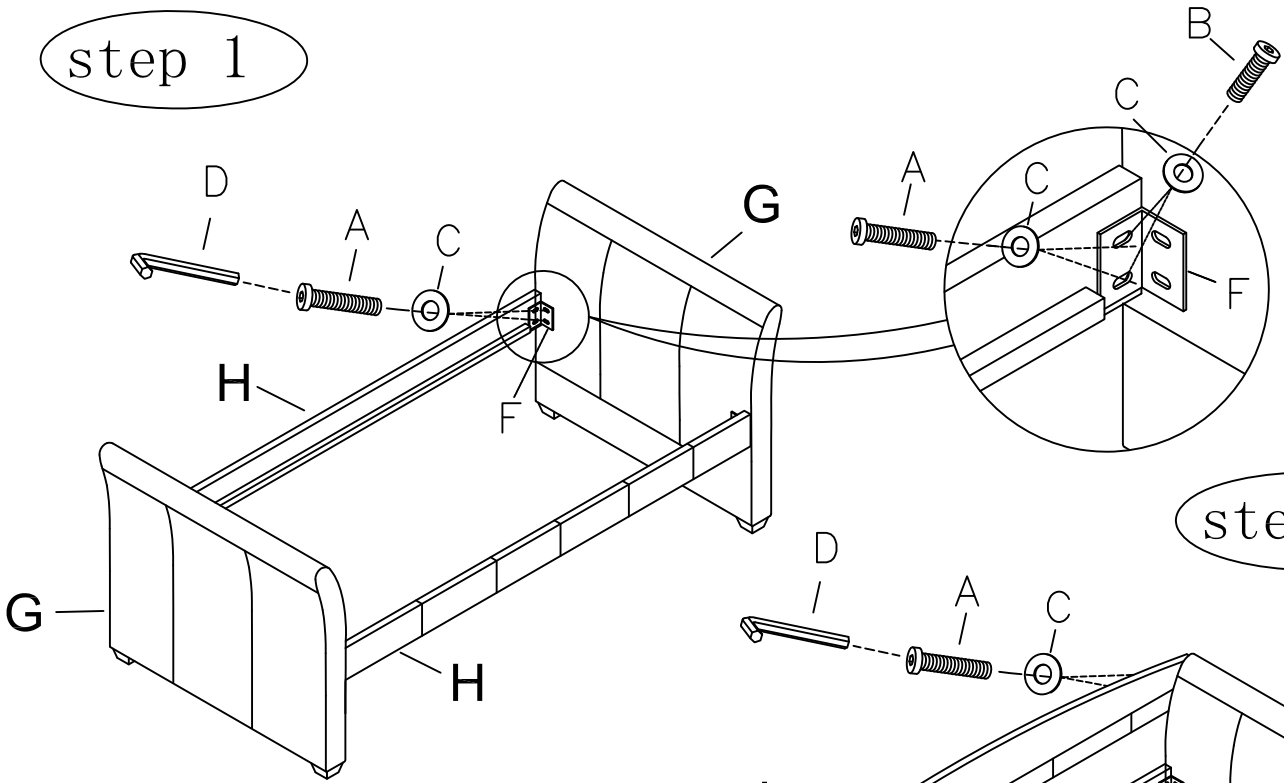

step 2

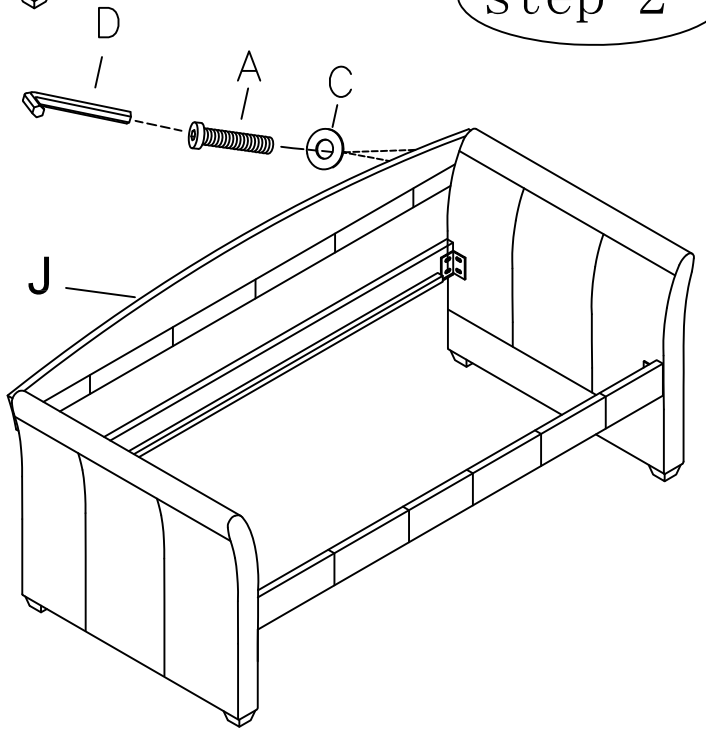

step 3

