

ASSEMBLY INSTRUCTION


3-TIER RECTANGULAR BAR CART WITH GLASS SHELF

A Glass




3 pcs

B Top Stretcher




2 pcs

C Lower Stretcher



2 pcs

D Side Frame-1




2 pcs

E Side Frame-2




2 pcs

F Top Frame




1 pc

G Lower Frame




2 pcs

H Bolt
Ø3/16"x3/4"




20 pcs

I Bolt
Ø3/16"x1/2"




12 pcs

J Allen Key
M4

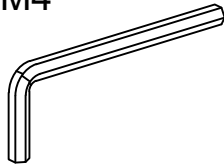


1 pc

K Brake Caster

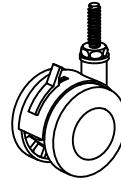

2 pcs

L Caster

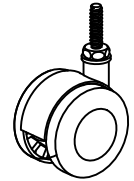


2 pcs

M Spanner




1 pc

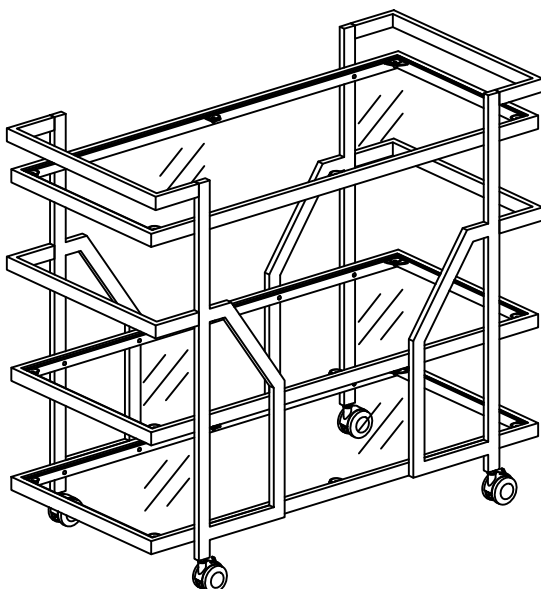


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach one piece of Side Frame-1 (D) & Side Frame-2 (E) to Top Frame (F) and Lower Frame (G), using Bolt (H) by Allen Key (J) as below shown.

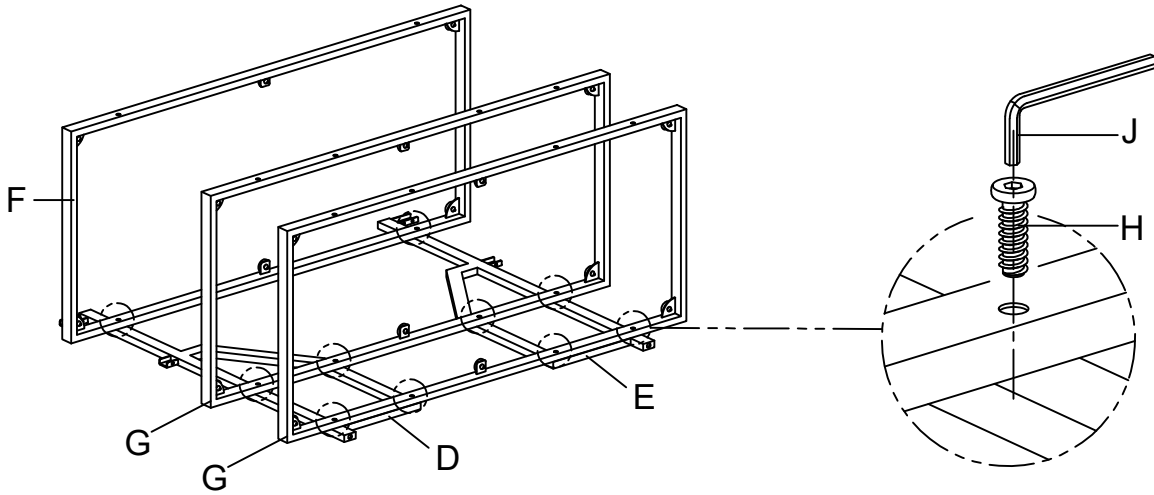


- 2** Attach the rest piece of Side Frame-1 (D) & Side Frame-2 (E) to the other side of Top Frame (F) and Lower Frame (G), using Bolt (H) by Allen Key (J) as below shown.

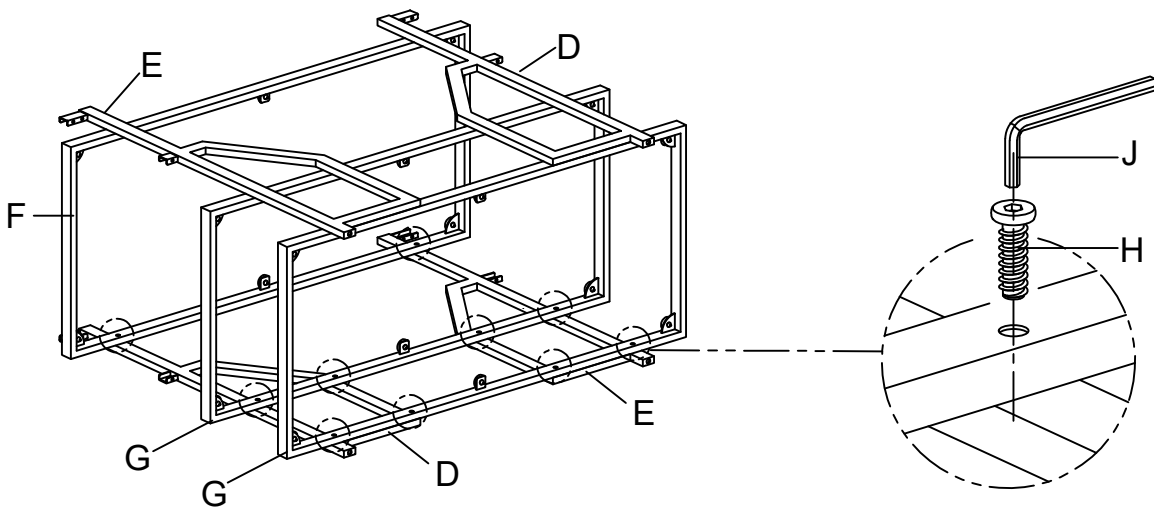

- 3** Put the pre-assembled bar cart frame upside down on the carpet, then insert Top Stretcher (B) & Lower Stretcher (C) to Side Frame-1 (D) & Side Frame-2 (E), using Bolt (I) by Allen Key (J) as below shown.

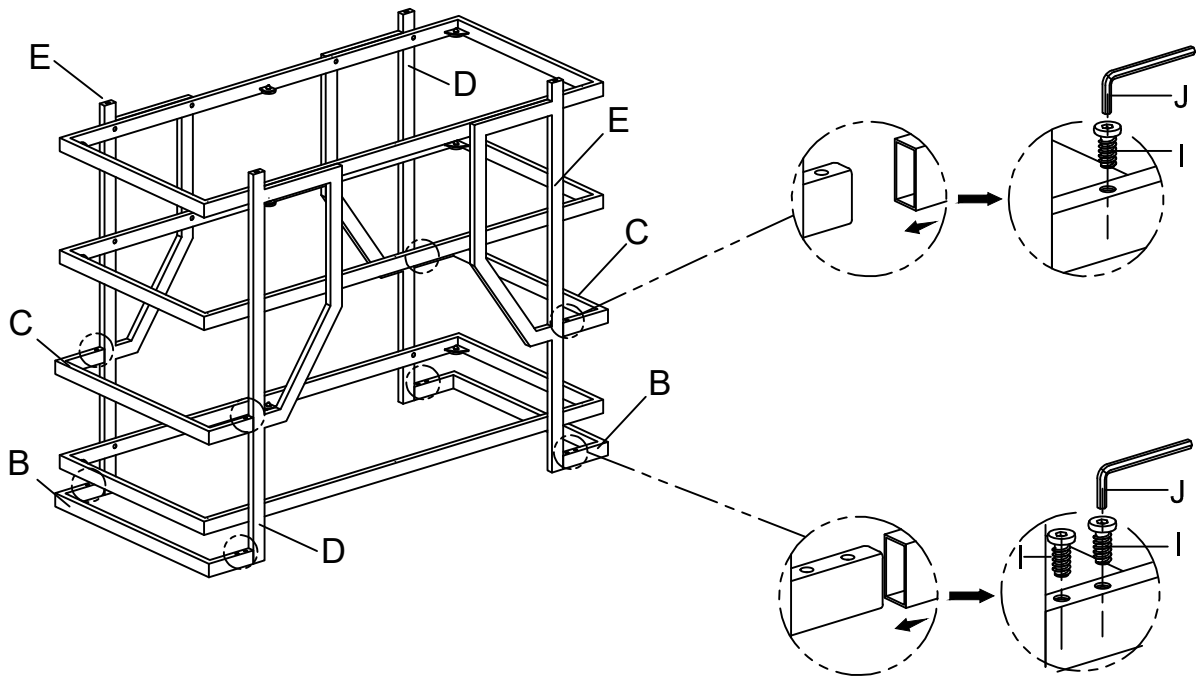


- 4** Attach Brake Caster (K) & Caster (L) to the bottom of Side Frame-1 (D) & Side Frame-2 (E), using Spanner (M) to tighten as below shown.

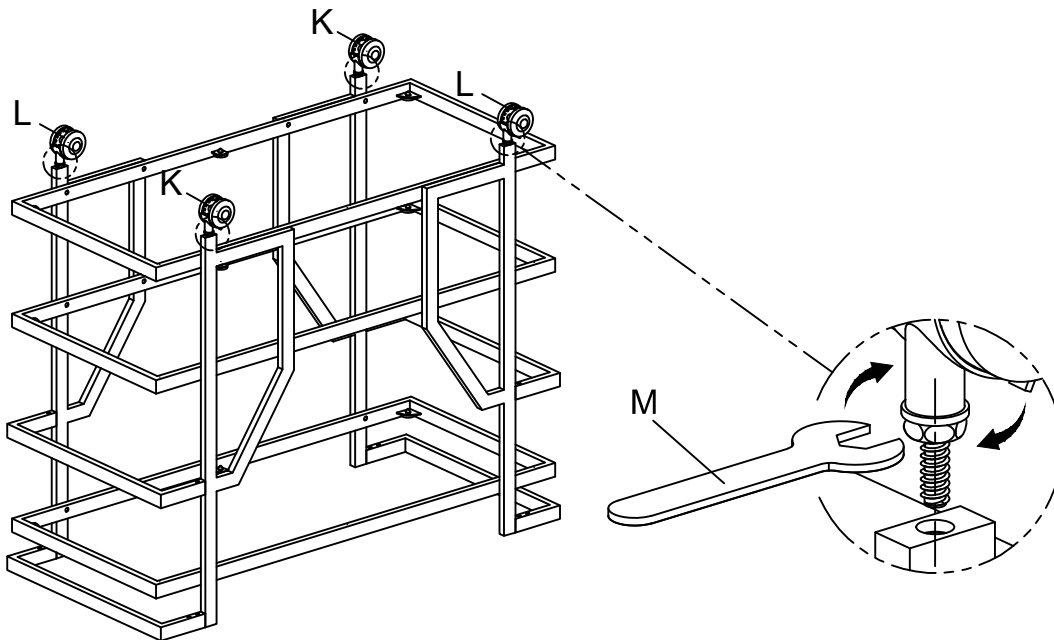

5

Put Glass (A) onto Top Frame (F) & Lower Frame (G) as below shown.

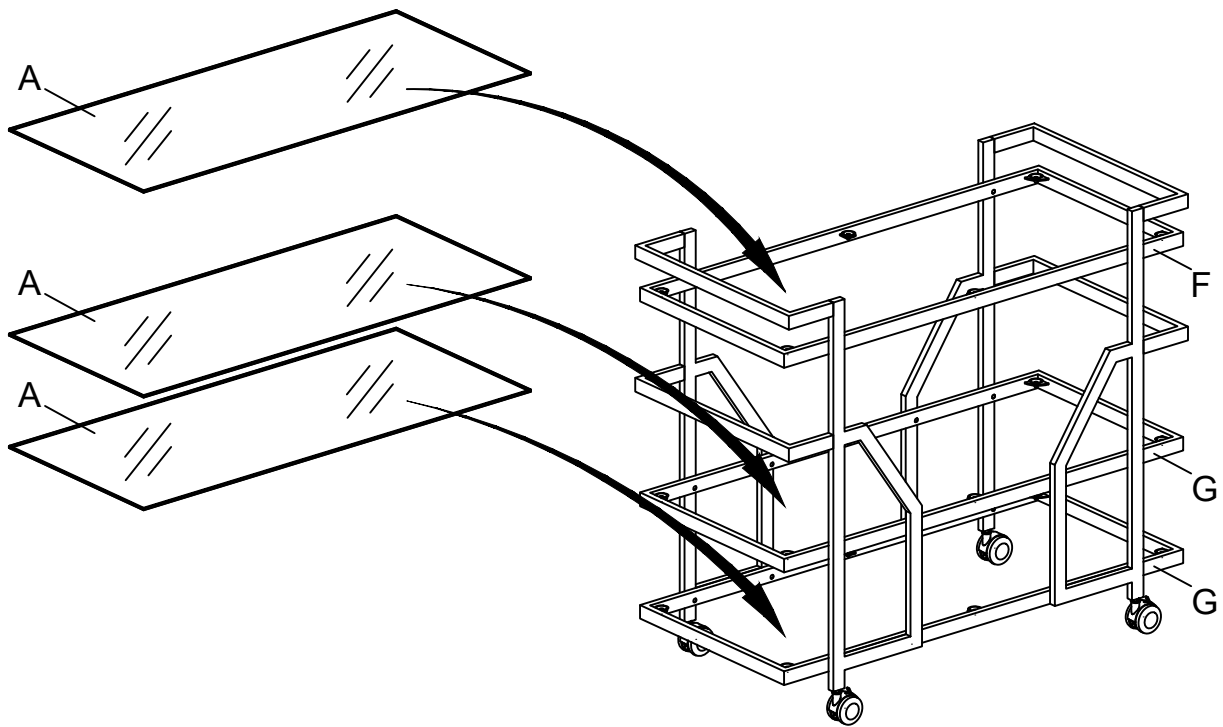

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.