

# KIKI UPHOLSTERED QUEEN BED


## ASSEMBLY INSTRUCTIONS



### BOX#1

A. HEADBOARD  
I. LEG

1 PC  
2 PCS

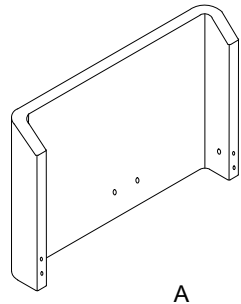

### HARDWARE KIT PACKED IN BOX #1

| No. | Description            | Image | Quantity |
|-----|------------------------|-------|----------|
| 1   | ALLEN BOLT (8 x 50mm)  |       | 2 PCS    |
| 2   | FLAT WASHER (8 x 19mm) |       | 2 PCS    |
| 3   | LOCK WASHER (8 x 22mm) |       | 2 PCS    |
| 4   | ALLEN KEY (8mm)        |       | 1 PC     |



### HARDWARE KIT PACKED IN BOX #2

|    |                           |  |        |
|----|---------------------------|--|--------|
| 5  | THREADED BOLT (8 x 90mm)  |  | 8 PCS  |
| 6  | ALLEN BOLT (8 x 50mm)     |  | 2 PCS  |
| 7  | ALLEN BOLT (6 x 50mm)     |  | 8 PCS  |
| 8  | ALLEN BOLT (6 x 30mm)     |  | 4 PCS  |
| 9  | FLAT WASHER (8 x 22mm)    |  | 8 PCS  |
| 10 | FLAT WASHER (8 x 19mm)    |  | 2 PCS  |
| 11 | FLAT WASHER (6 x 16mm)    |  | 12 PCS |
| 12 | LOCK WASHER (8 x 22mm)    |  | 10 PCS |
| 13 | LOCK WASHER (6 x 16mm)    |  | 12 PCS |
| 14 | HEX NUT (8mm)             |  | 8 PCS  |
| 15 | PHILLIPS SCREW (7 x 35mm) |  | 10 PCS |
| 16 | ALLEN KEY (6mm)           |  | 1 PC   |
| 17 | ALLEN KEY (8mm)           |  | 1 PC   |
| 18 | WRENCH                    |  | 1 PC   |
| 19 | CONNECTING BRACKET        |  | 4 PCS  |

### BOX#2

B. FOOTBOARD  
C. SLAT ROLL  
H. CENTER SLAT SUPPORT CLEAT  
I. LEG




1 PC  
1 SET  
2 PCS  
2 PCS

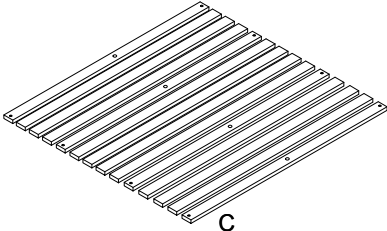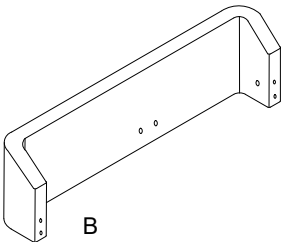





### BOX#3

D. LEFT SIDE RAIL  
E. RIGHT SIDE RAIL  
F. CENTER SLAT SUPPORT  
G. SUPPORT LEG

1 PC  
1 PC  
1 PC  
4 PCS

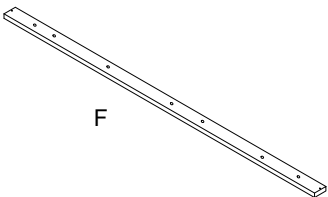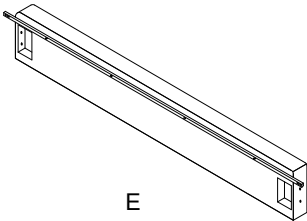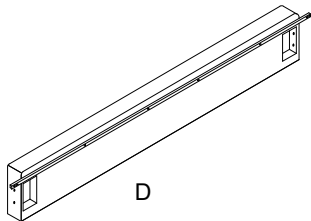


### FULLY ASSEMBLED

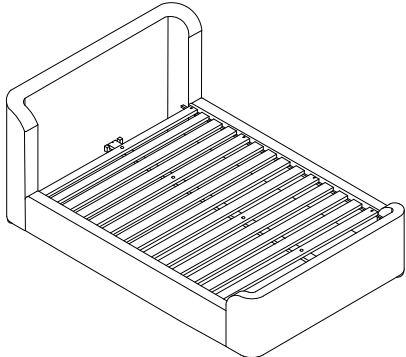


# KIKI UPHOLSTERED QUEEN BED

## ASSEMBLY INSTRUCTIONS


### STEP 1:

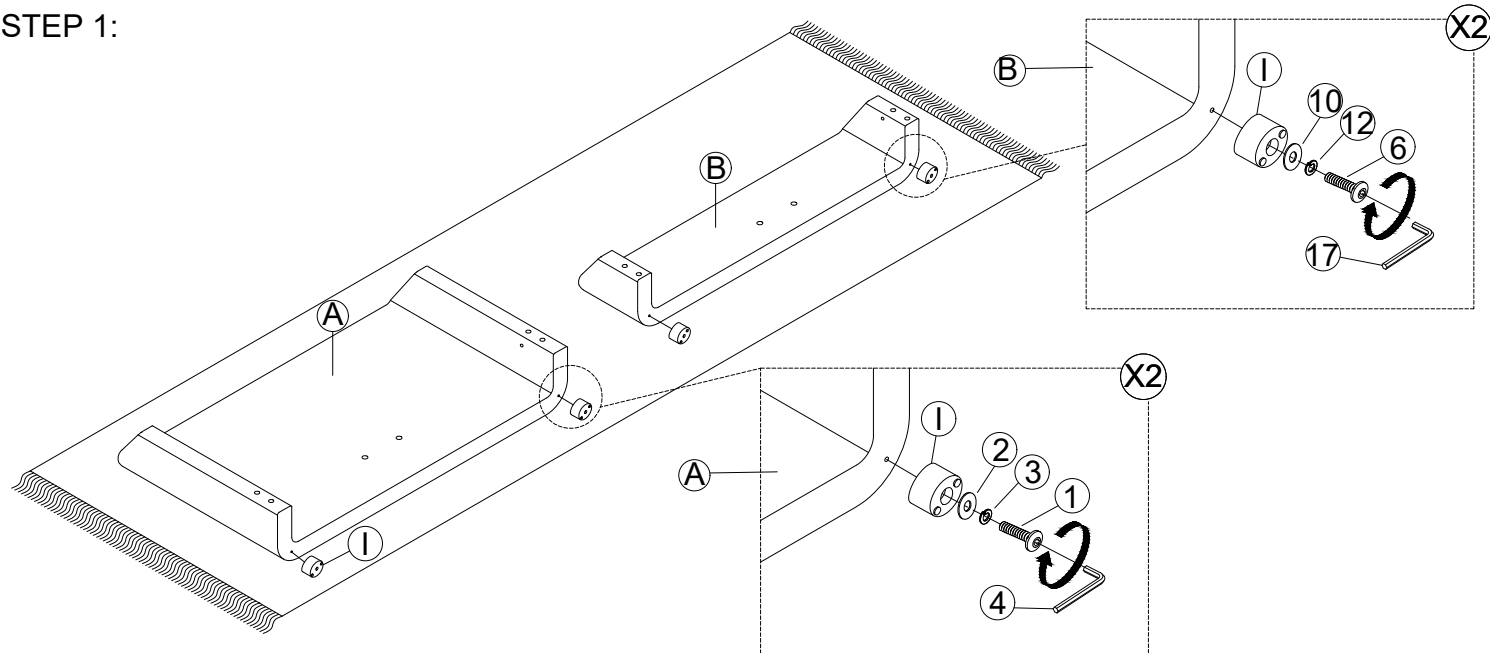

### STEP 2:

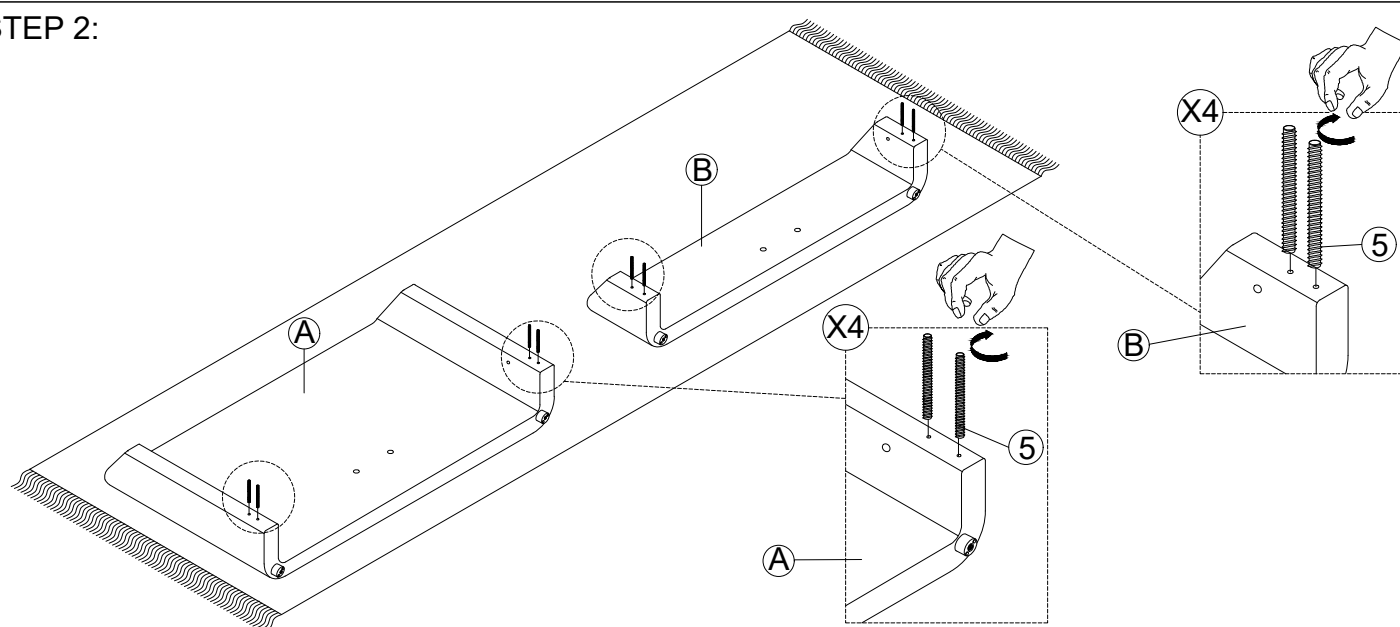


### STEP 3:

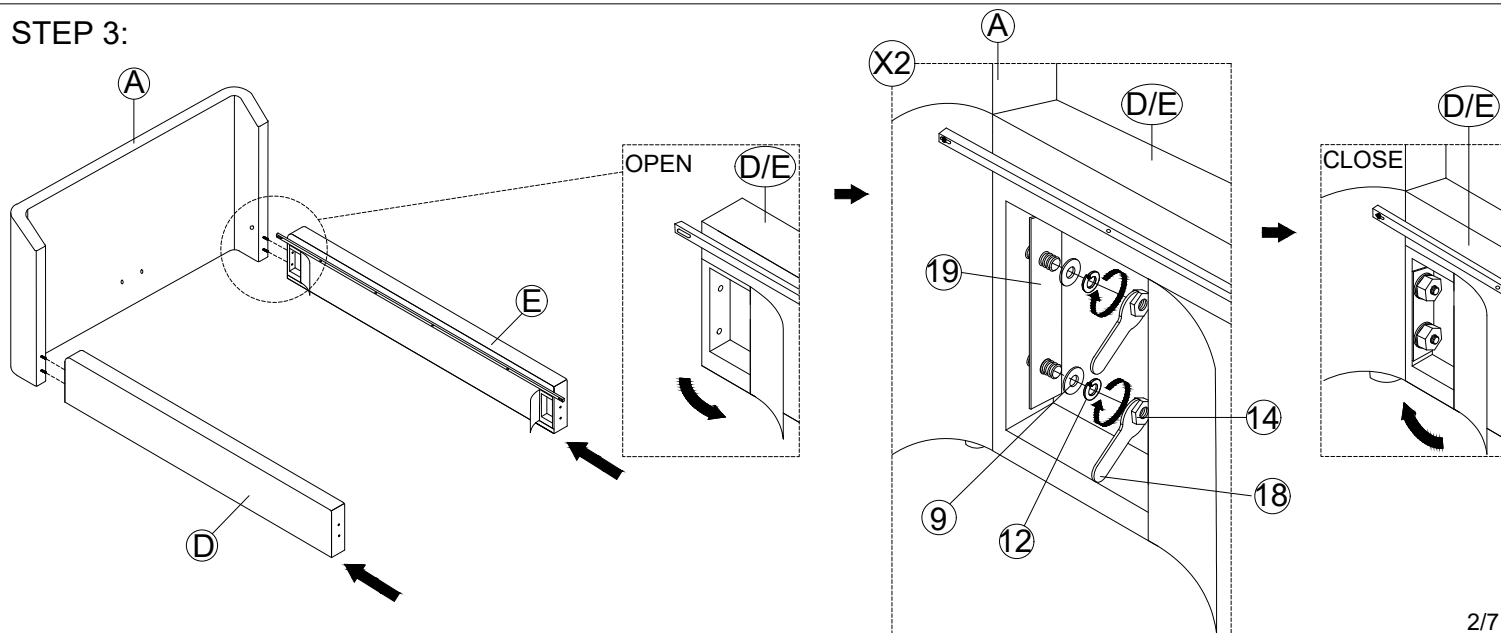

# KIKI UPHOLSTERED QUEEN BED

## ASSEMBLY INSTRUCTIONS


### STEP 4:

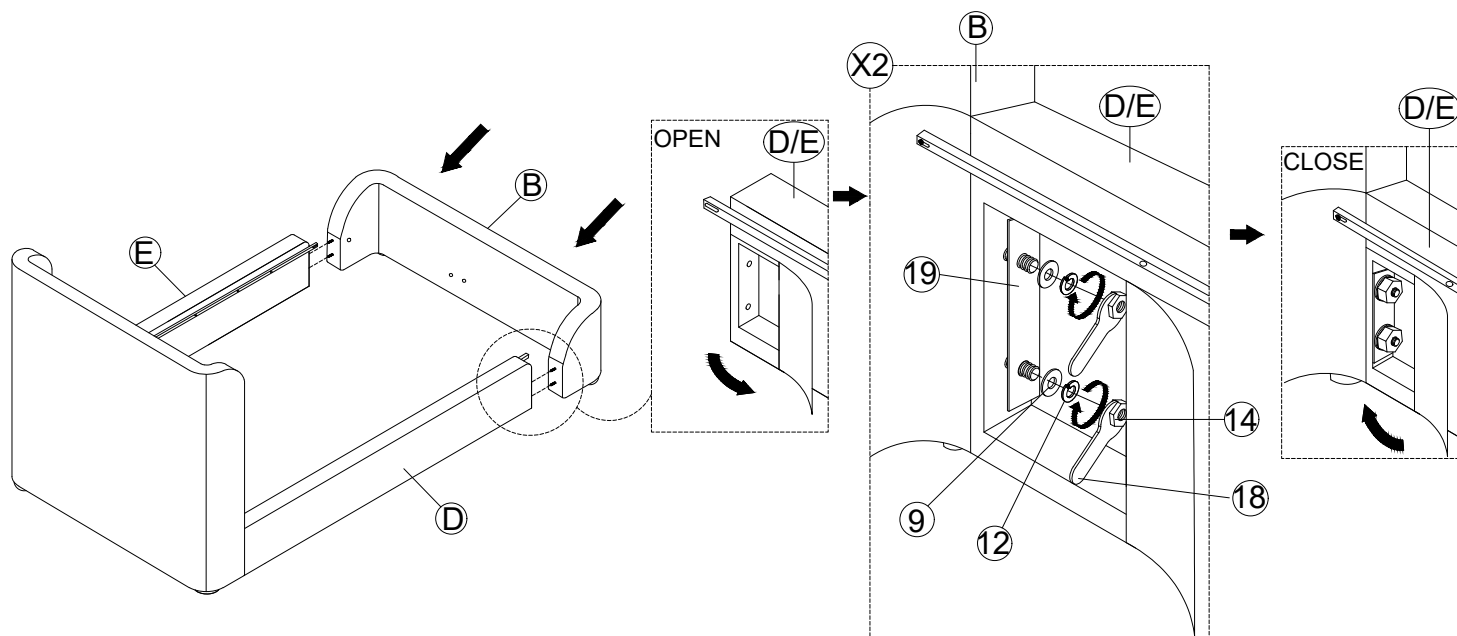

### STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

### STEP 5:

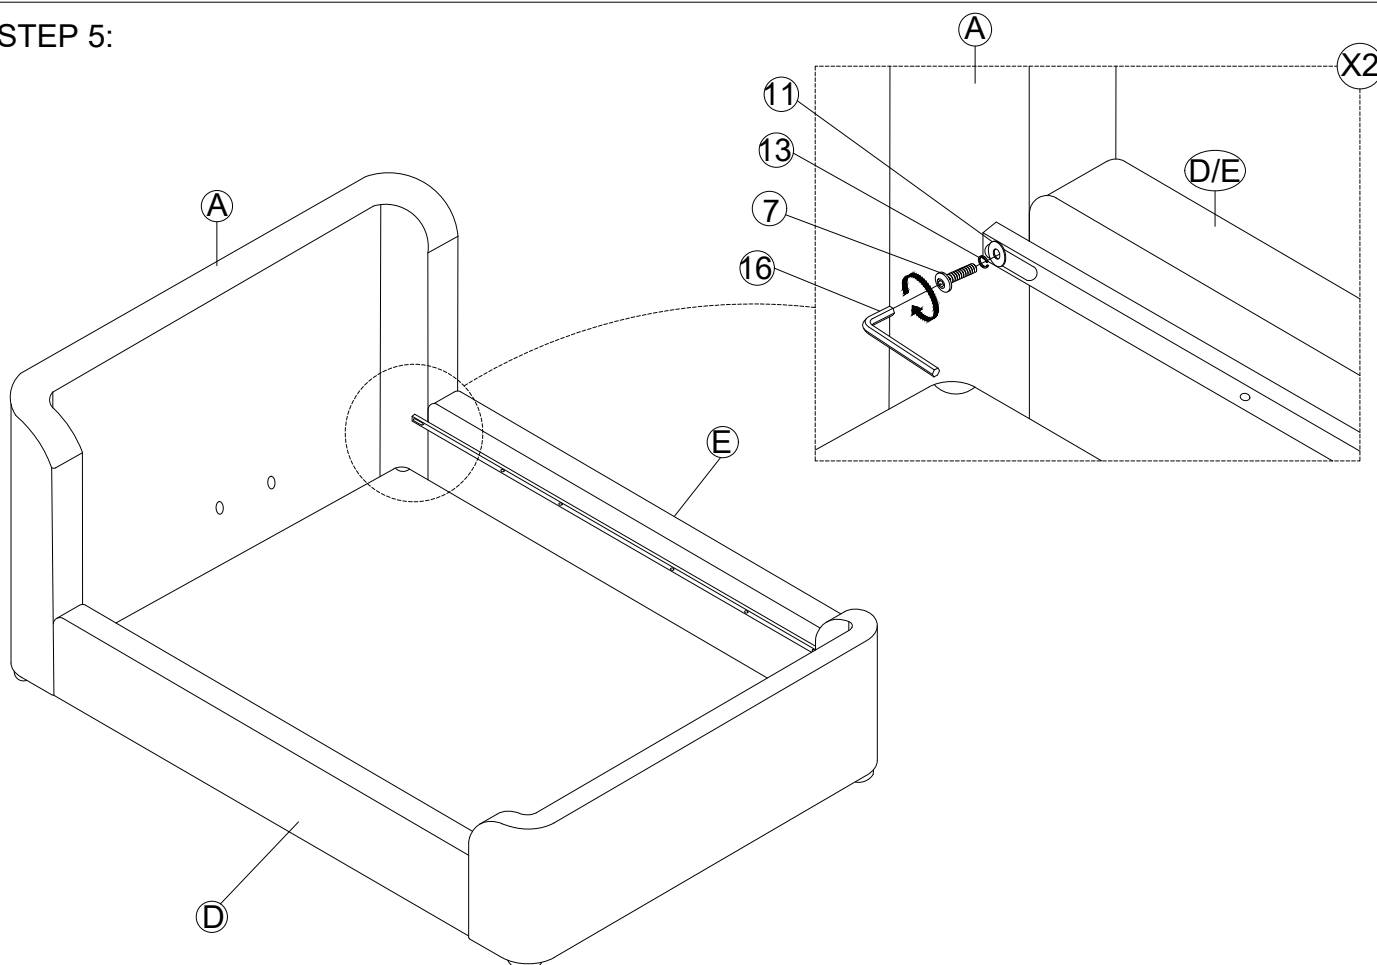


# KIKI UPHOLSTERED QUEEN BED


## ASSEMBLY INSTRUCTIONS




### STEP 6:

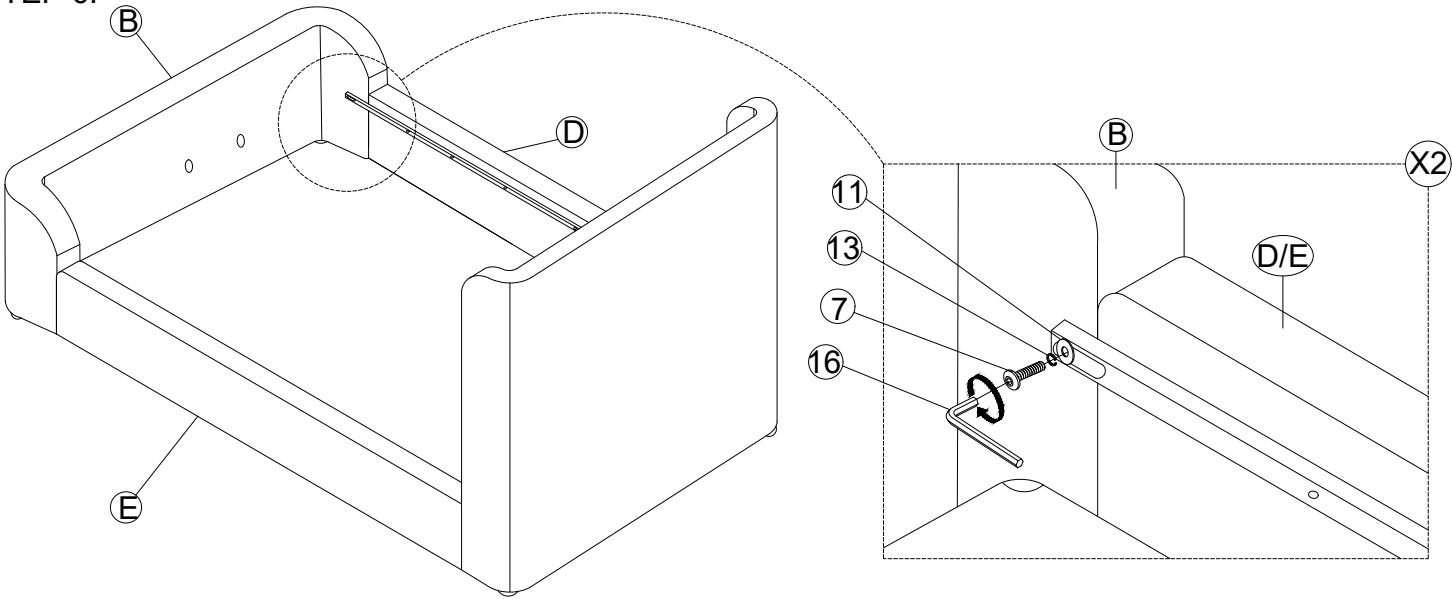

### STEP 7:

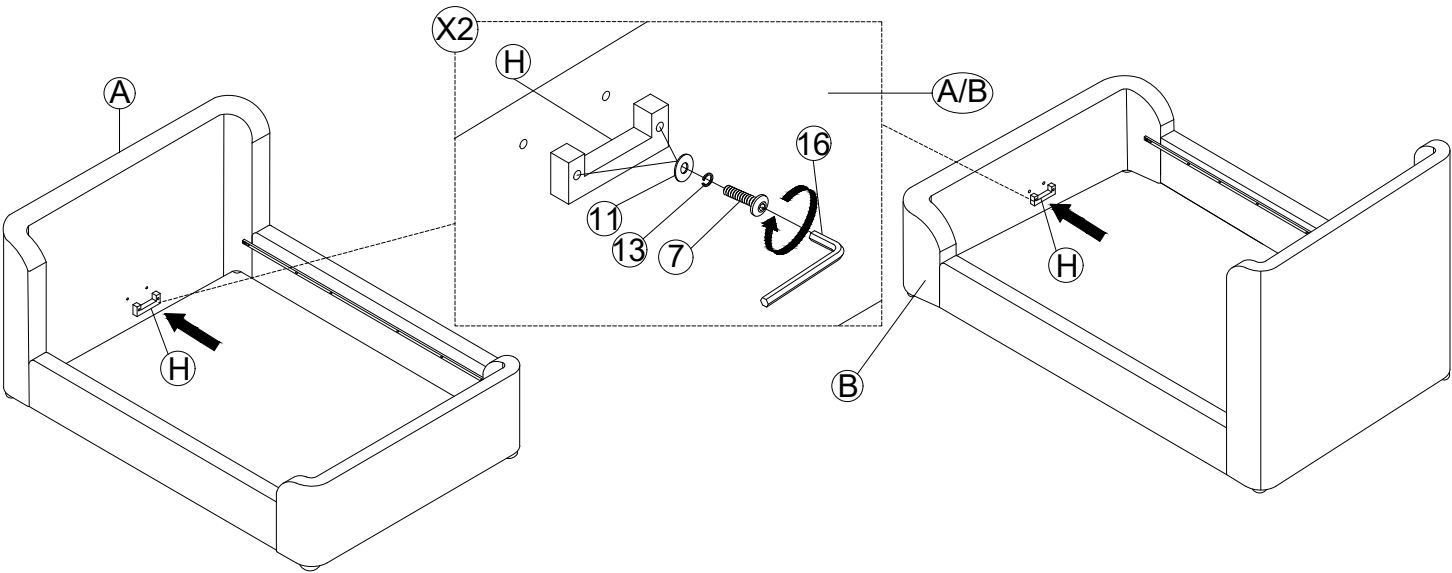

### STEP 8:

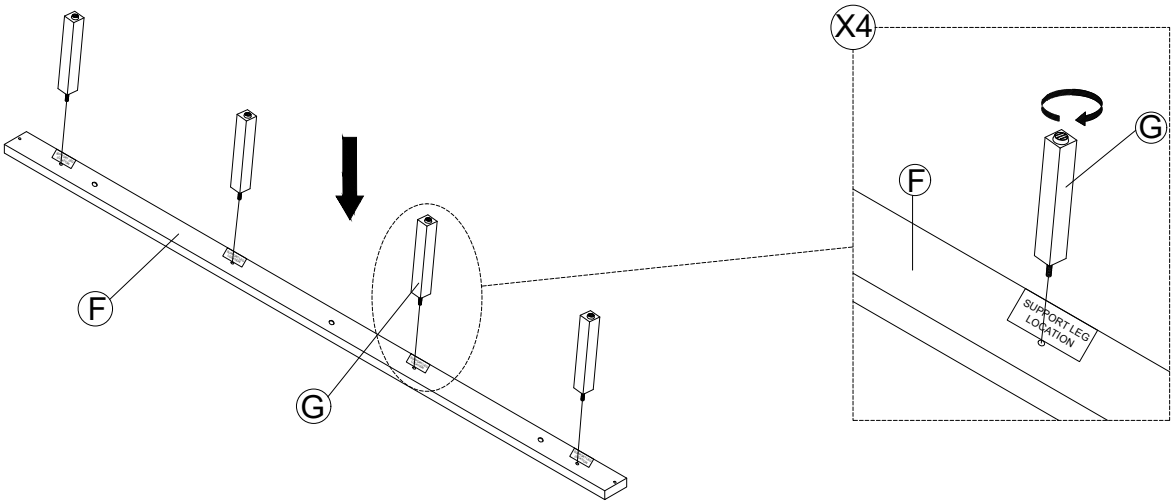


# KIKI UPHOLSTERED QUEEN BED


## ASSEMBLY INSTRUCTIONS




STEP 9:

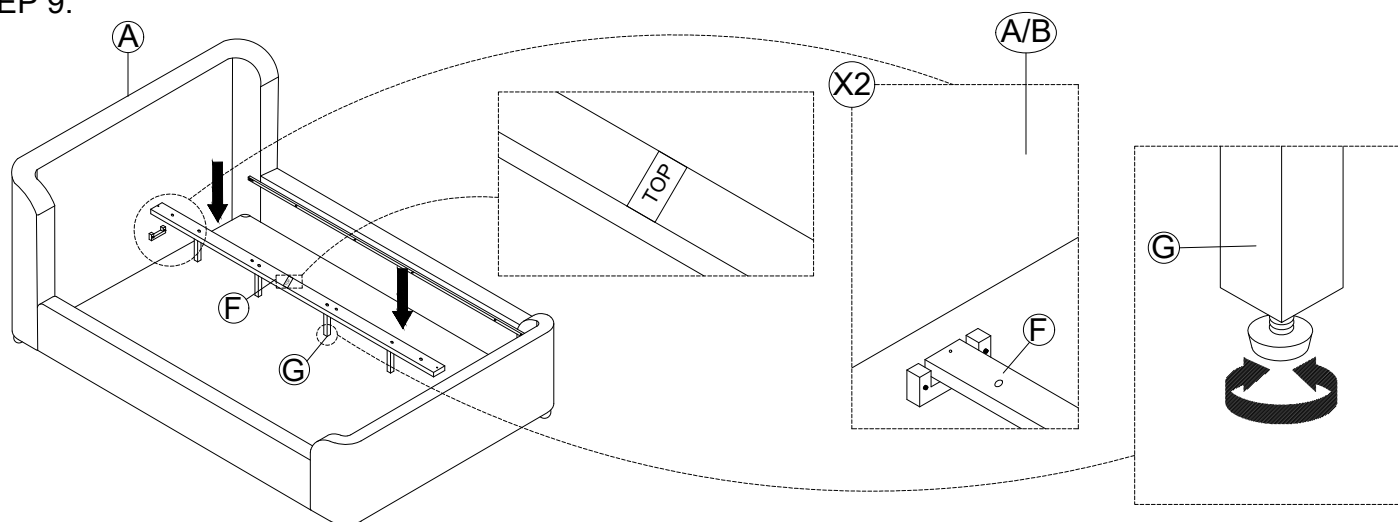


STEP 10:

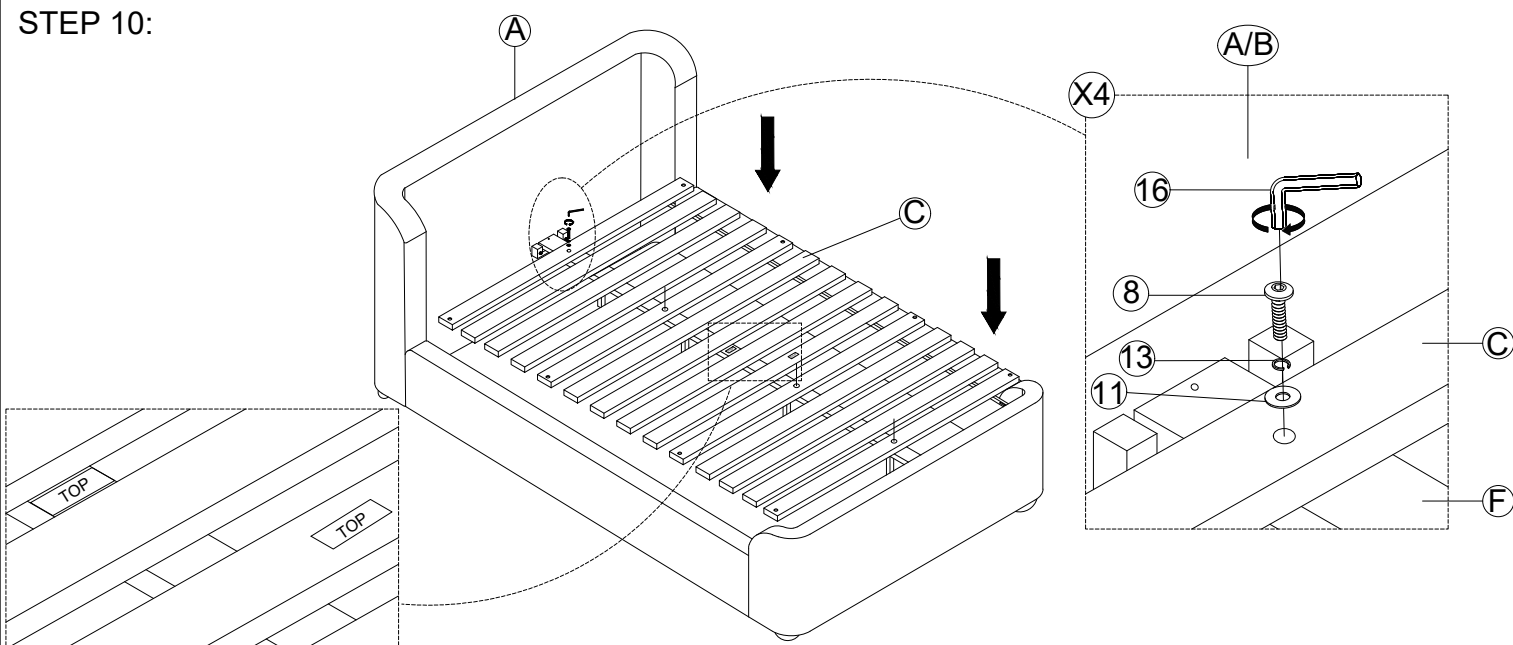

STEP 11:

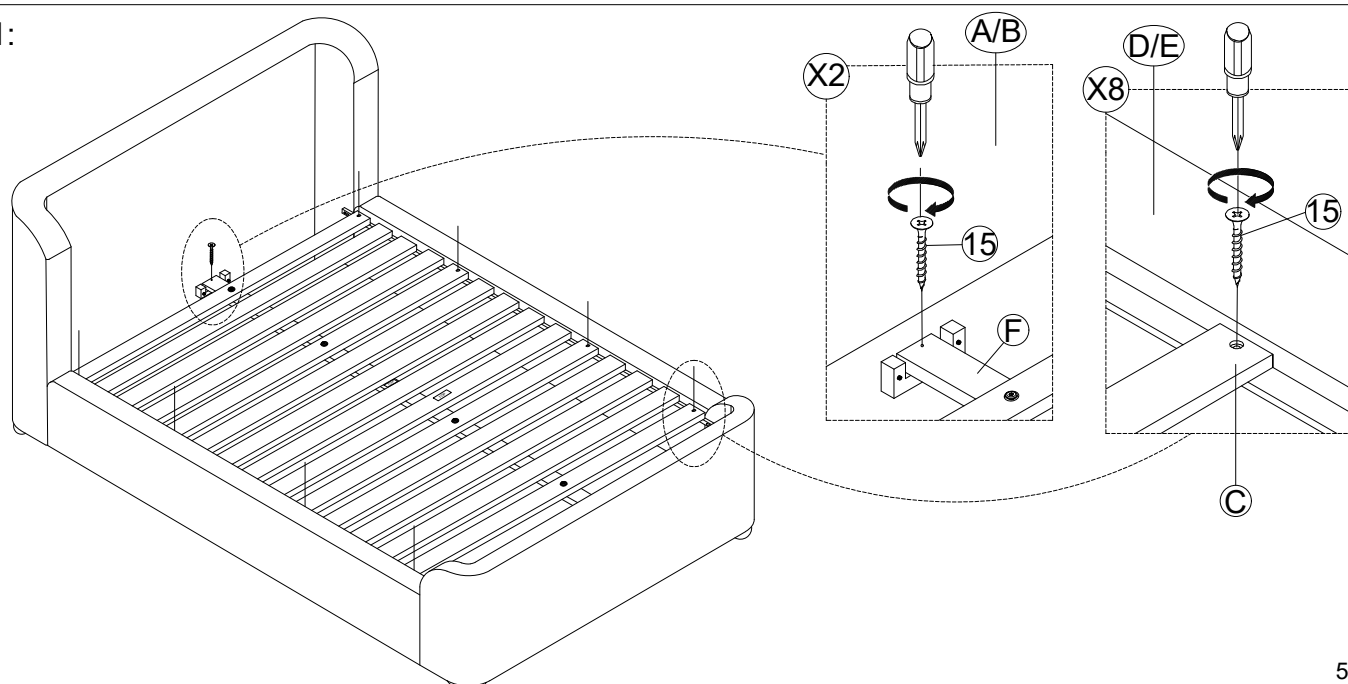

# KIKI UPHOLSTERED QUEEN BED ASSEMBLY INSTRUCTIONS

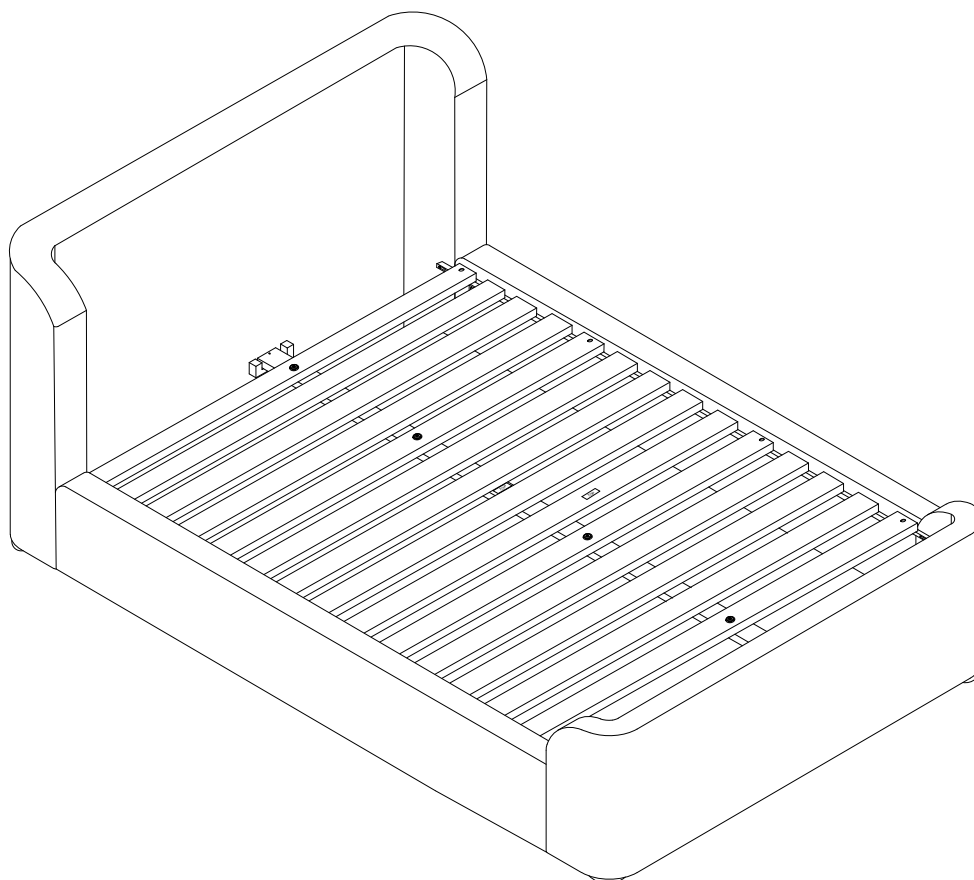


**ASSEMBLY COMPLETE**

## INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



## MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# KIKI UPHOLSTERED QUEEN BED

## ASSEMBLY INSTRUCTIONS



### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

**THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:**

|                              |       |
|------------------------------|-------|
| C. SLAT ROLL                 | 1 SET |
| F. CENTER SLAT SUPPORT       | 1 PC  |
| G. SUPPORT LEG               | 4 PCS |
| H. CENTER SLAT SUPPORT CLEAT | 2 PCS |

**STEP 1:**

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

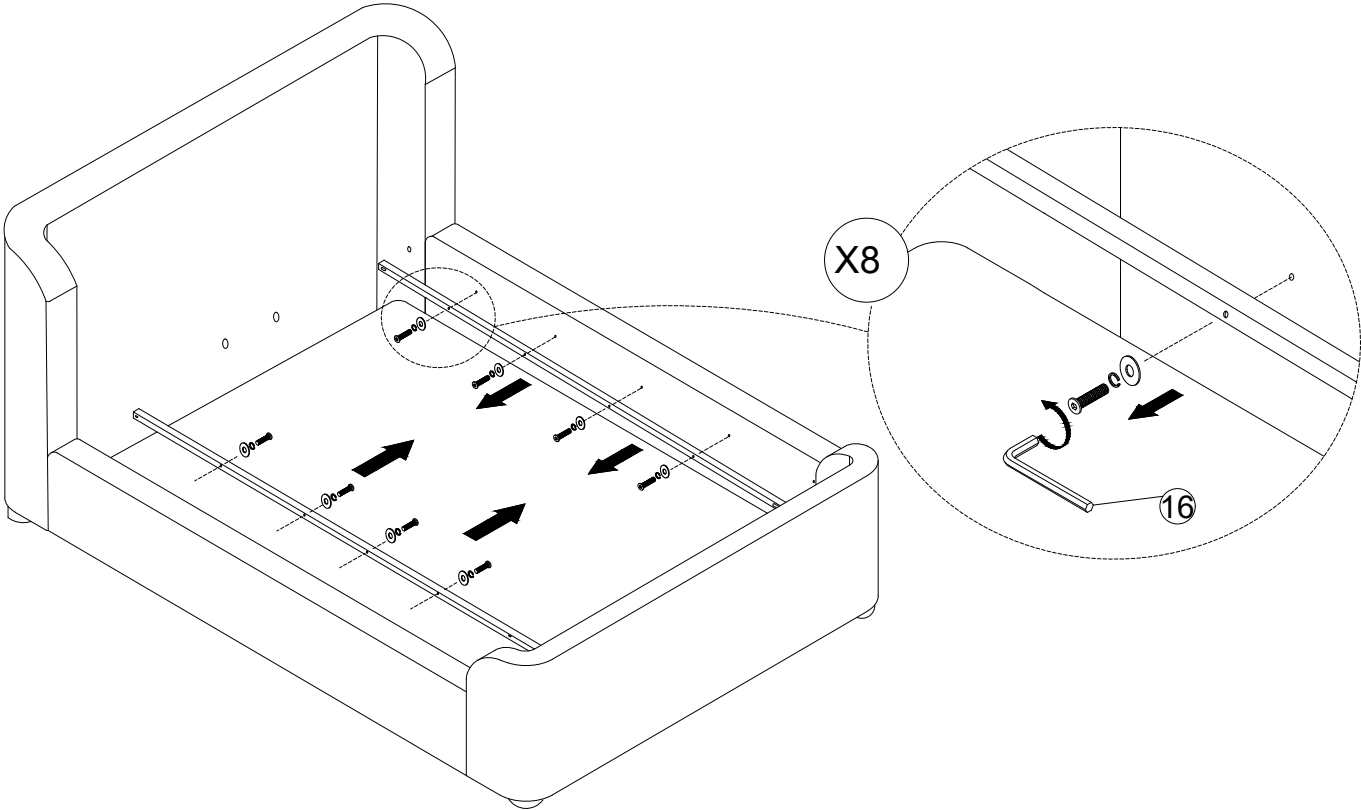

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

# KIKI UPHOLSTERED KING BED


## ASSEMBLY INSTRUCTIONS



### BOX#1

A. HEADBOARD  
I. LEG

1 PC  
2 PCS

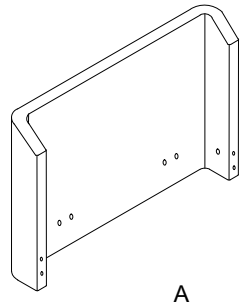

### HARDWARE KIT PACKED IN BOX #1

| No. | Description            | Image | Quantity |
|-----|------------------------|-------|----------|
| 1   | ALLEN BOLT (8 x 50mm)  |       | 2 PCS    |
| 2   | FLAT WASHER (8 x 19mm) |       | 2 PCS    |
| 3   | LOCK WASHER (8 x 22mm) |       | 2 PCS    |
| 4   | ALLEN KEY (8mm)        |       | 1 PC     |



### HARDWARE KIT PACKED IN BOX #2

|    |                           |  |        |
|----|---------------------------|--|--------|
| 5  | THREADED BOLT (8 x 90mm)  |  | 8 PCS  |
| 6  | ALLEN BOLT (8 x 50mm)     |  | 2 PCS  |
| 7  | ALLEN BOLT (6 x 50mm)     |  | 12 PCS |
| 8  | ALLEN BOLT (6 x 30mm)     |  | 8 PCS  |
| 9  | FLAT WASHER (8 x 22mm)    |  | 8 PCS  |
| 10 | FLAT WASHER (8 x 19mm)    |  | 2 PCS  |
| 11 | FLAT WASHER (6 x 16mm)    |  | 20 PCS |
| 12 | LOCK WASHER (8 x 22mm)    |  | 10 PCS |
| 13 | LOCK WASHER (6 x 16mm)    |  | 20 PCS |
| 14 | HEX NUT (8mm)             |  | 8 PCS  |
| 15 | PHILLIPS SCREW (7 x 35mm) |  | 12 PCS |
| 16 | ALLEN KEY (6mm)           |  | 1 PC   |
| 17 | ALLEN KEY (8mm)           |  | 1 PC   |
| 18 | WRENCH                    |  | 1 PC   |
| 19 | CONNECTING BRACKET        |  | 4 PCS  |

### BOX#2

B. FOOTBOARD  
C. SLAT ROLL  
H. CENTER SLAT SUPPORT CLEAT  
I. LEG




1 PC  
1 SET  
4 PCS  
2 PCS

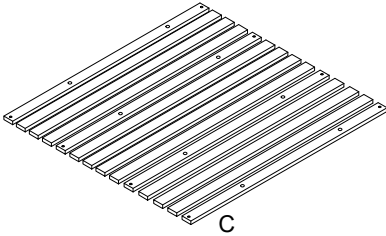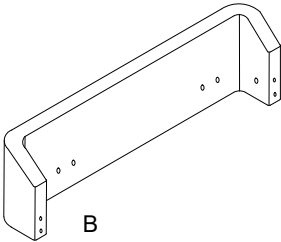



### BOX#3

D. LEFT SIDE RAIL  
E. RIGHT SIDE RAIL  
F. CENTER SLAT SUPPORT  
G. SUPPORT LEG

1 PC  
1 PC  
2 PCS  
8 PCS

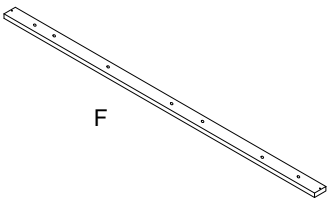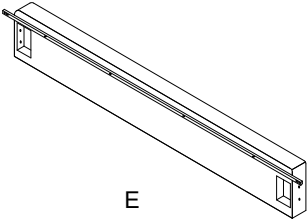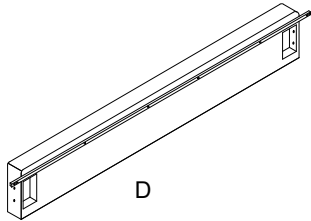

### FULLY ASSEMBLED

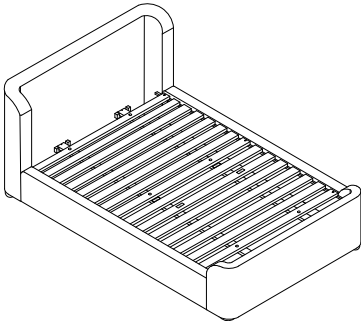


# KIKI UPHOLSTERED KING BED


## ASSEMBLY INSTRUCTIONS




### STEP 1:

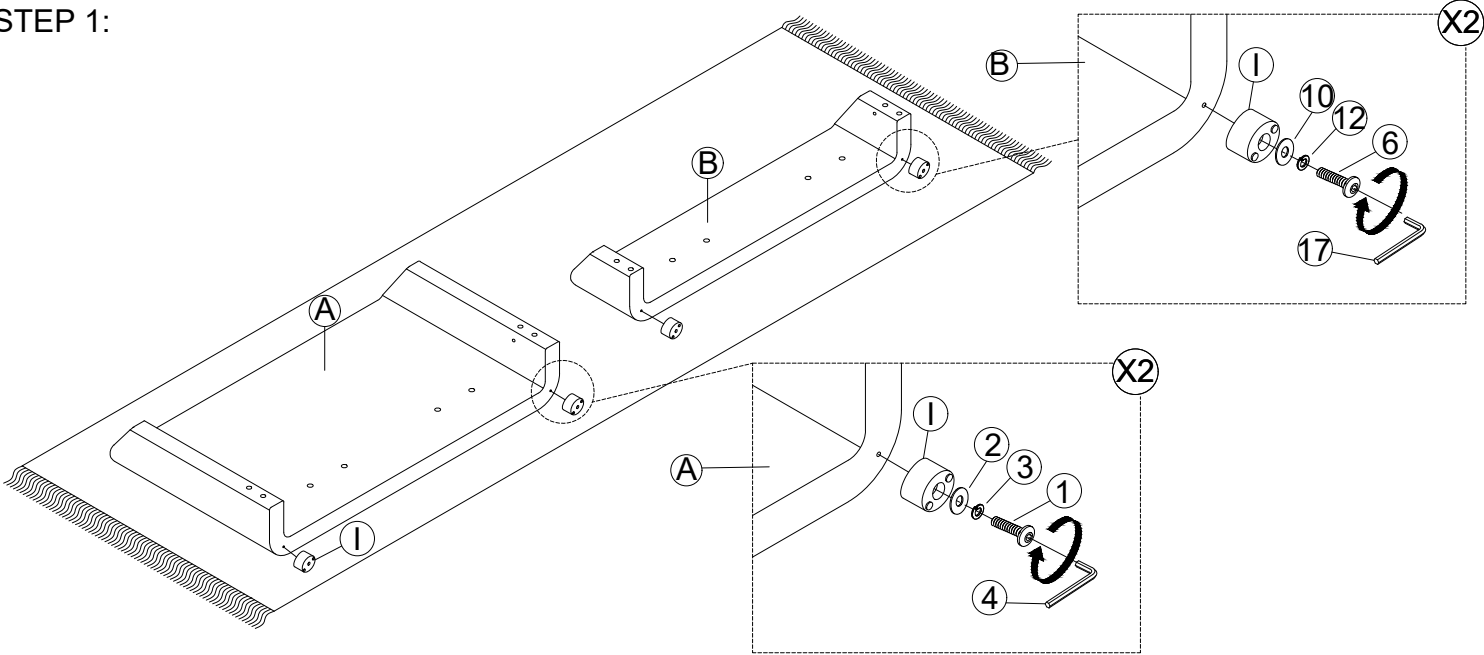

### STEP 2:

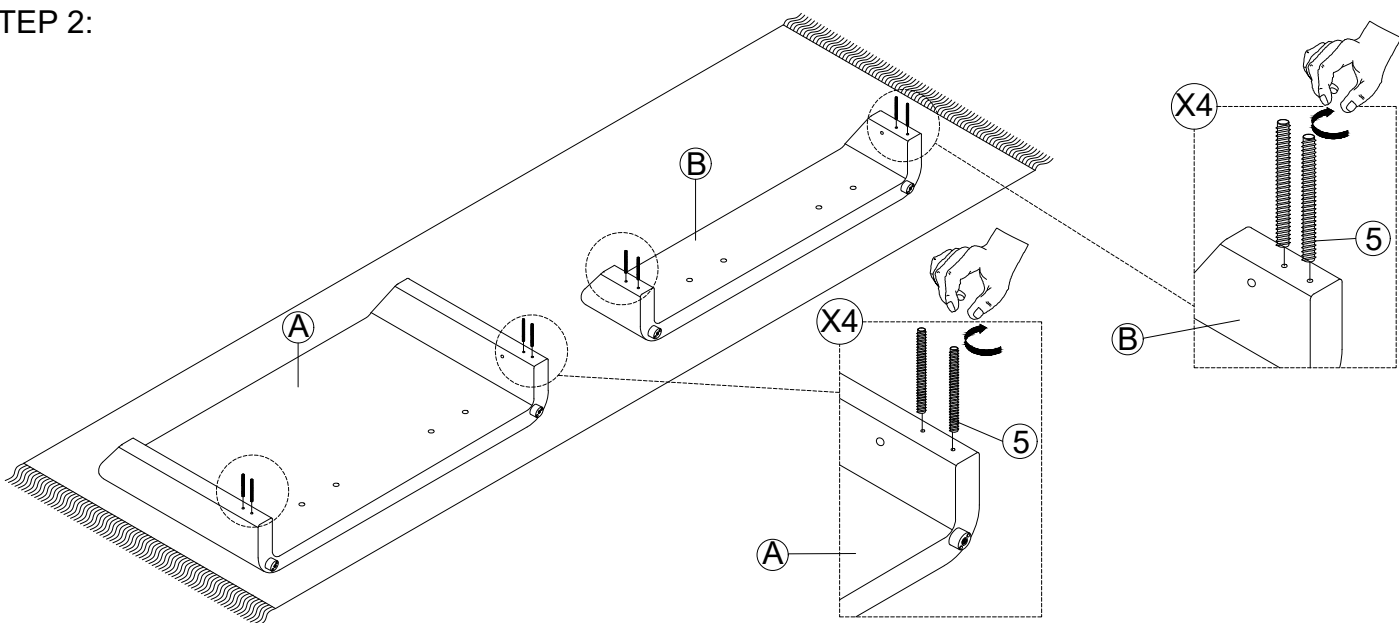


### STEP 3:

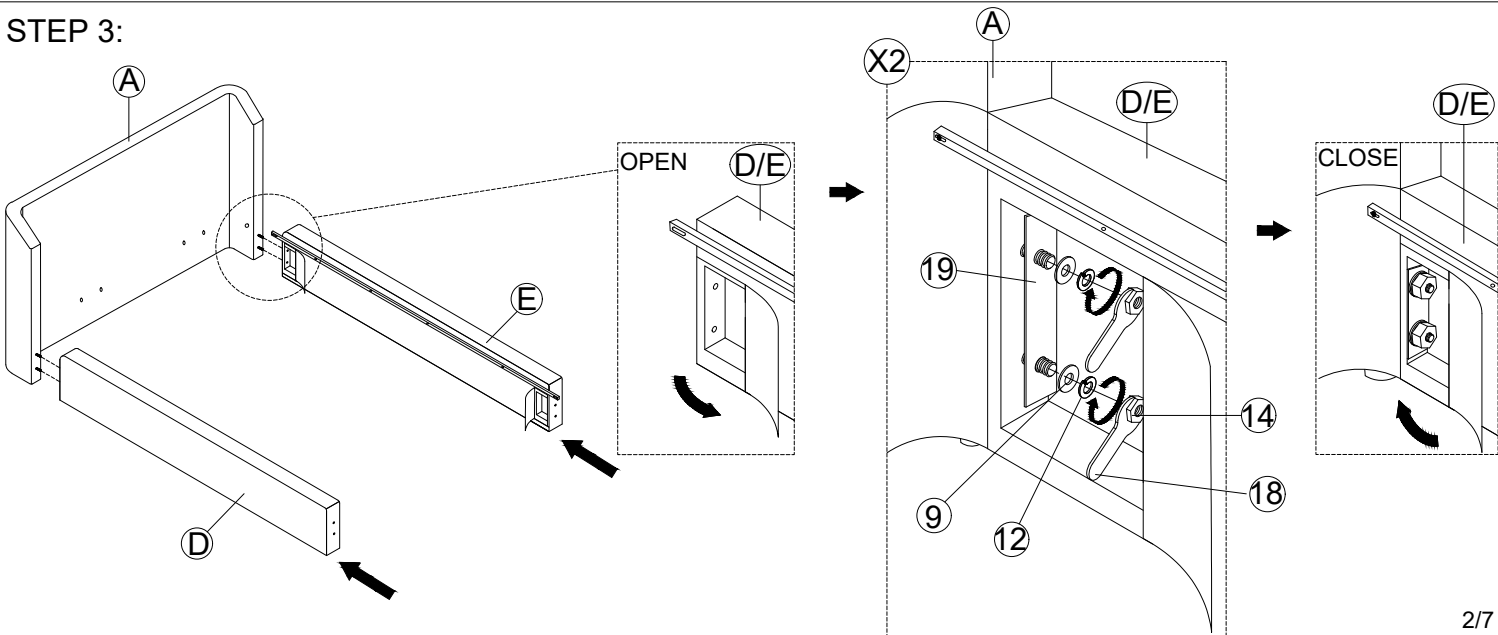

# KIKI UPHOLSTERED KING BED

## ASSEMBLY INSTRUCTIONS


### STEP 4:

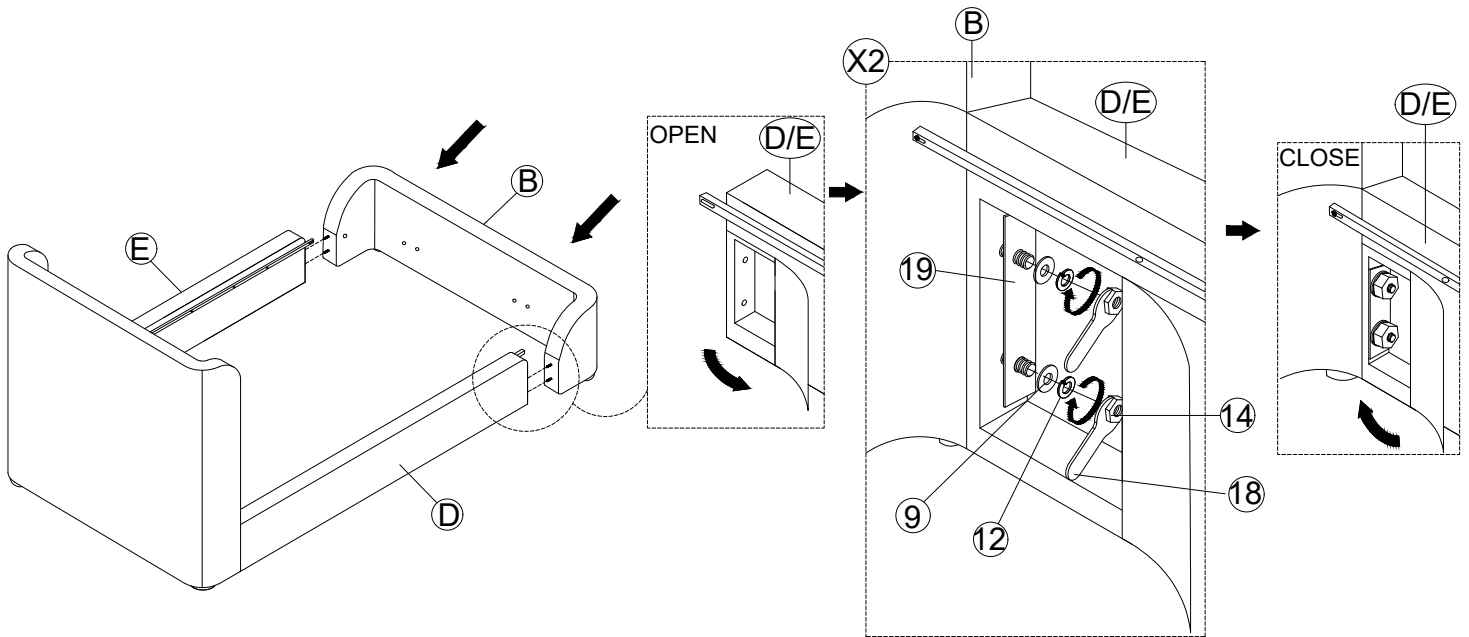

### STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

### STEP 5:

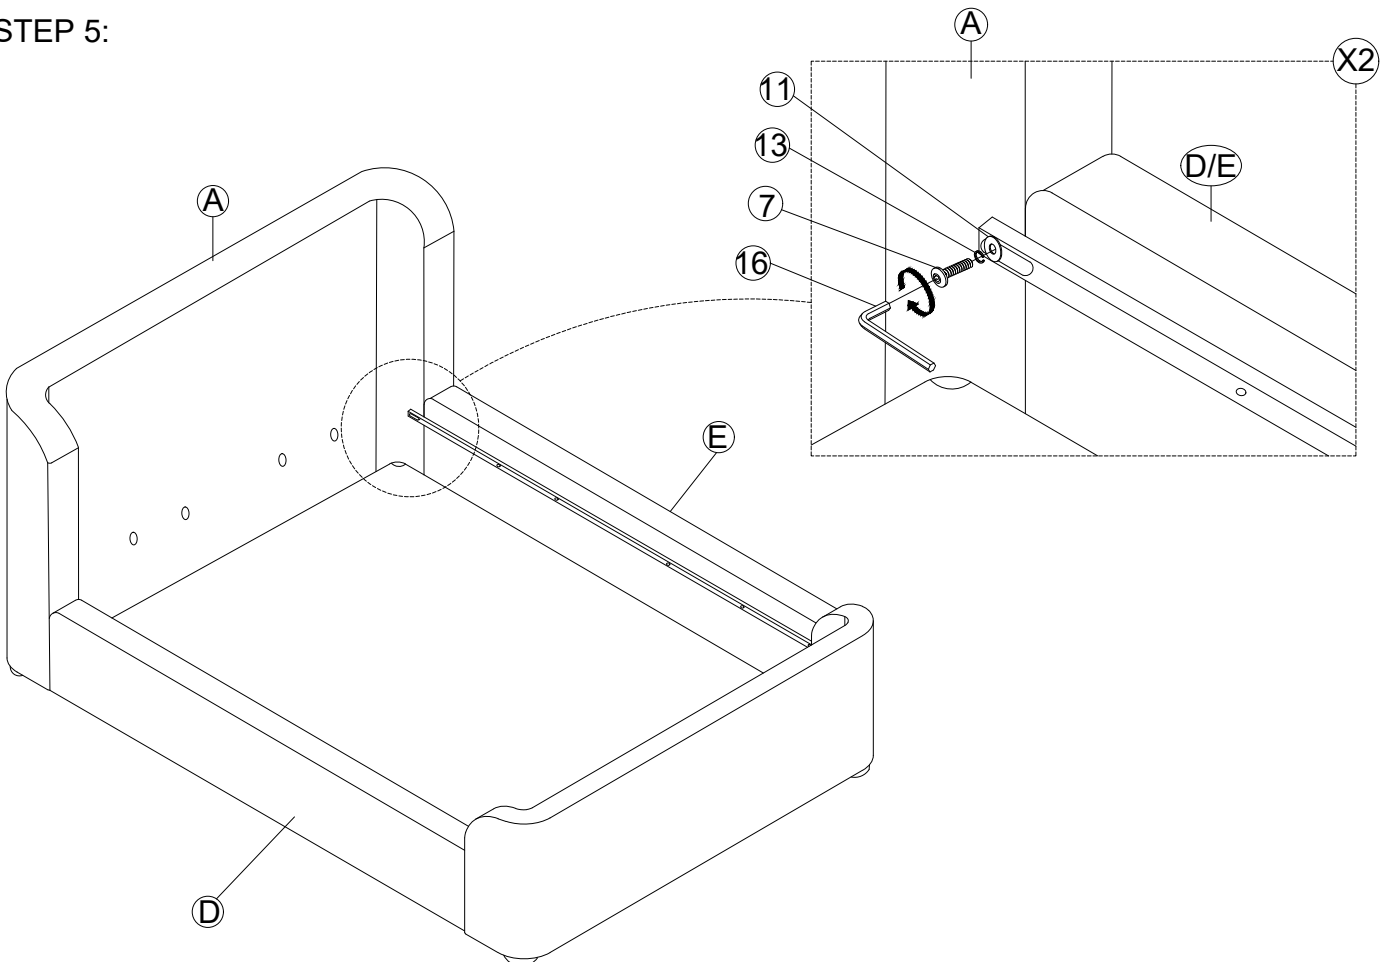


# KIKI UPHOLSTERED KING BED


## ASSEMBLY INSTRUCTIONS




### STEP 6:

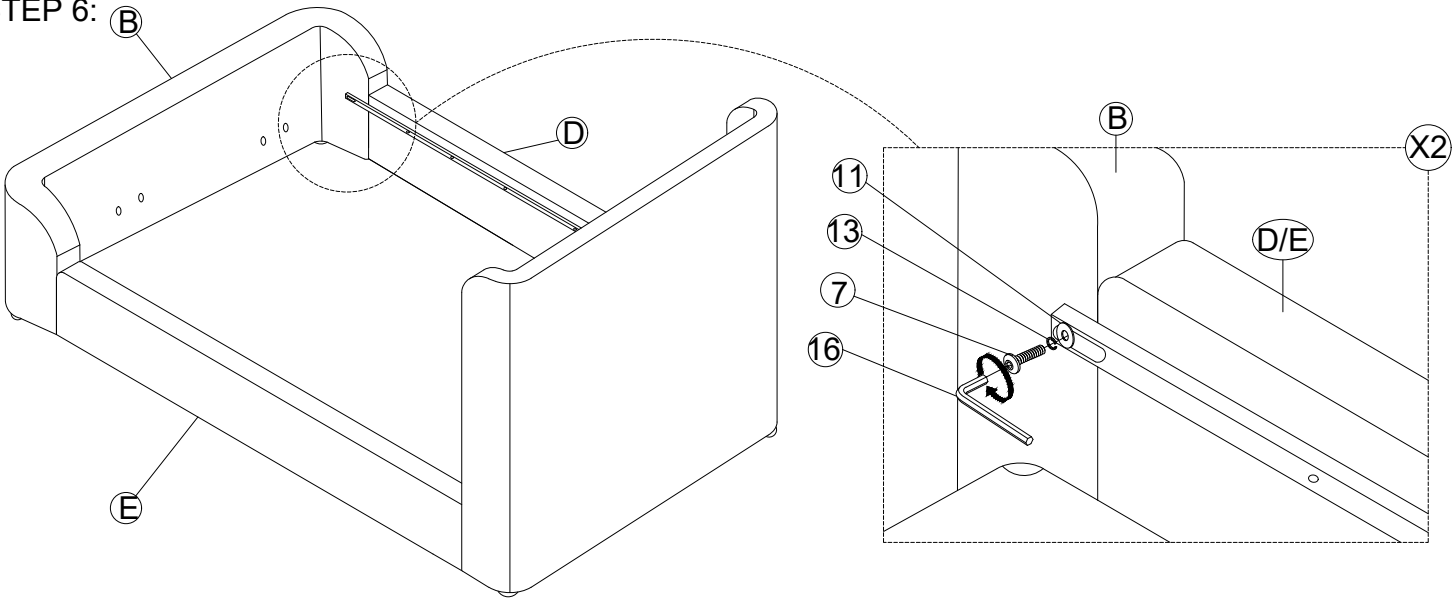

### STEP 7:

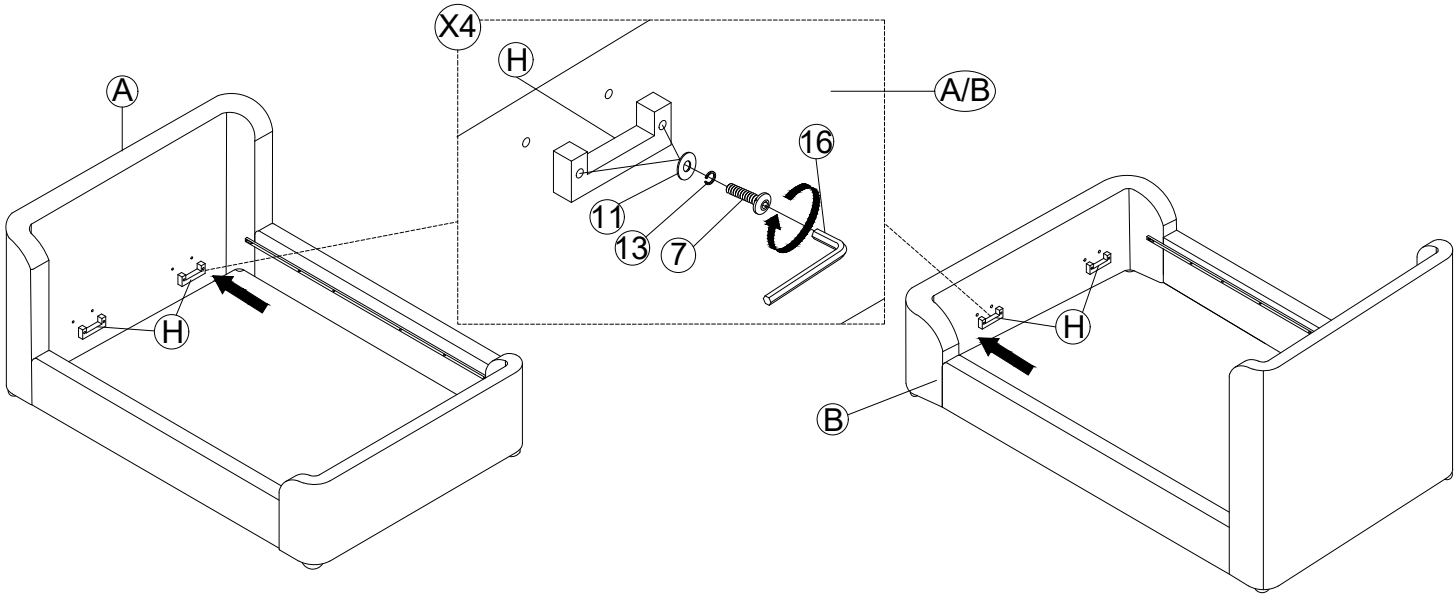

### STEP 8:

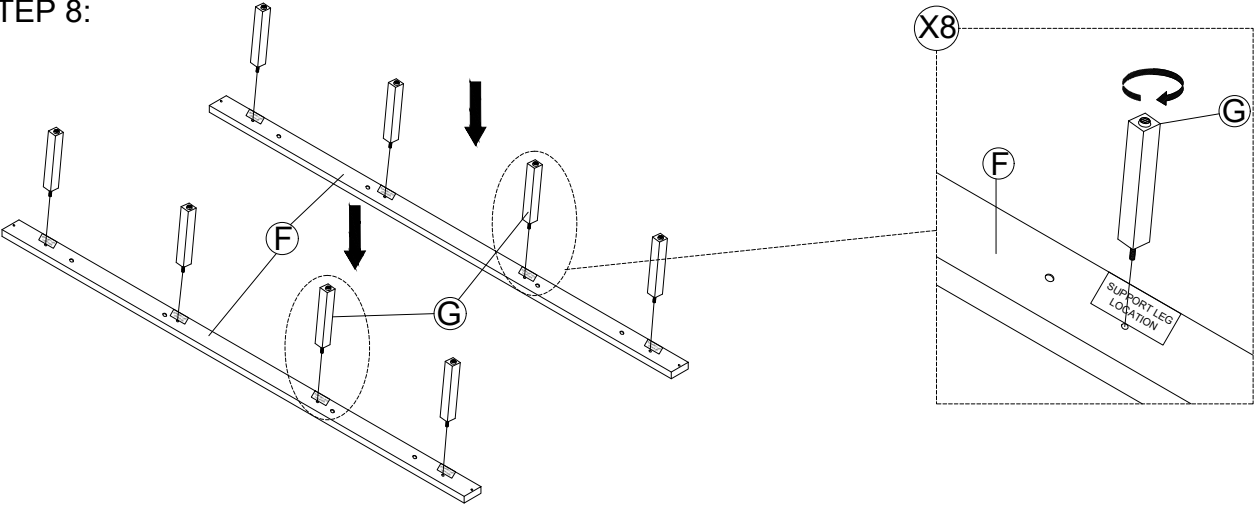


# KIKI UPHOLSTERED KING BED


## ASSEMBLY INSTRUCTIONS




STEP 9:

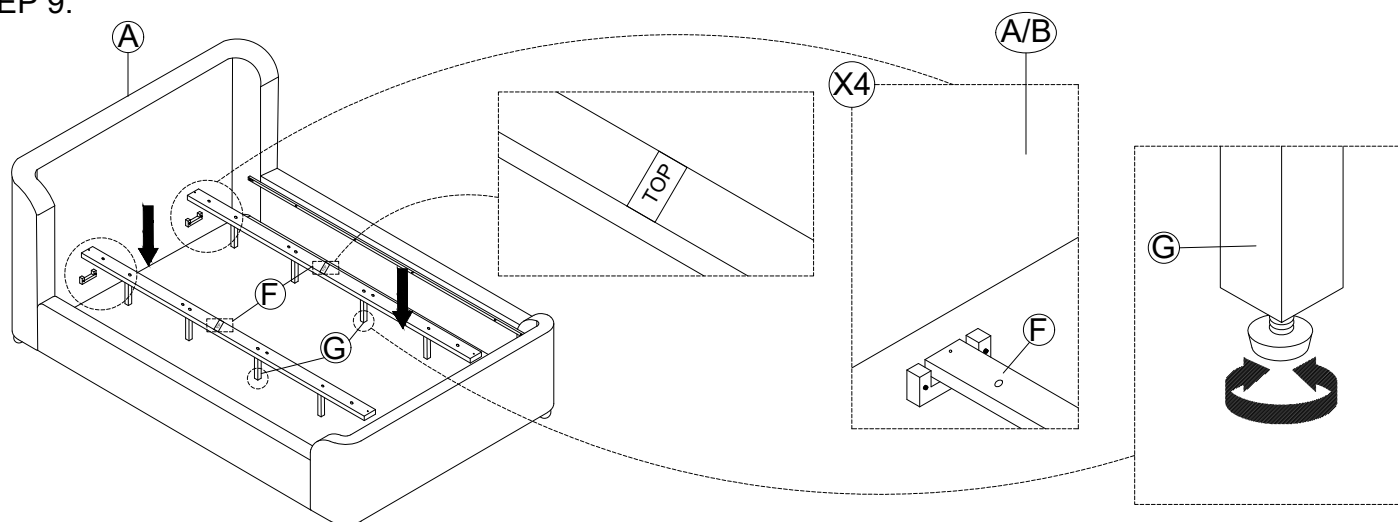

STEP 10:

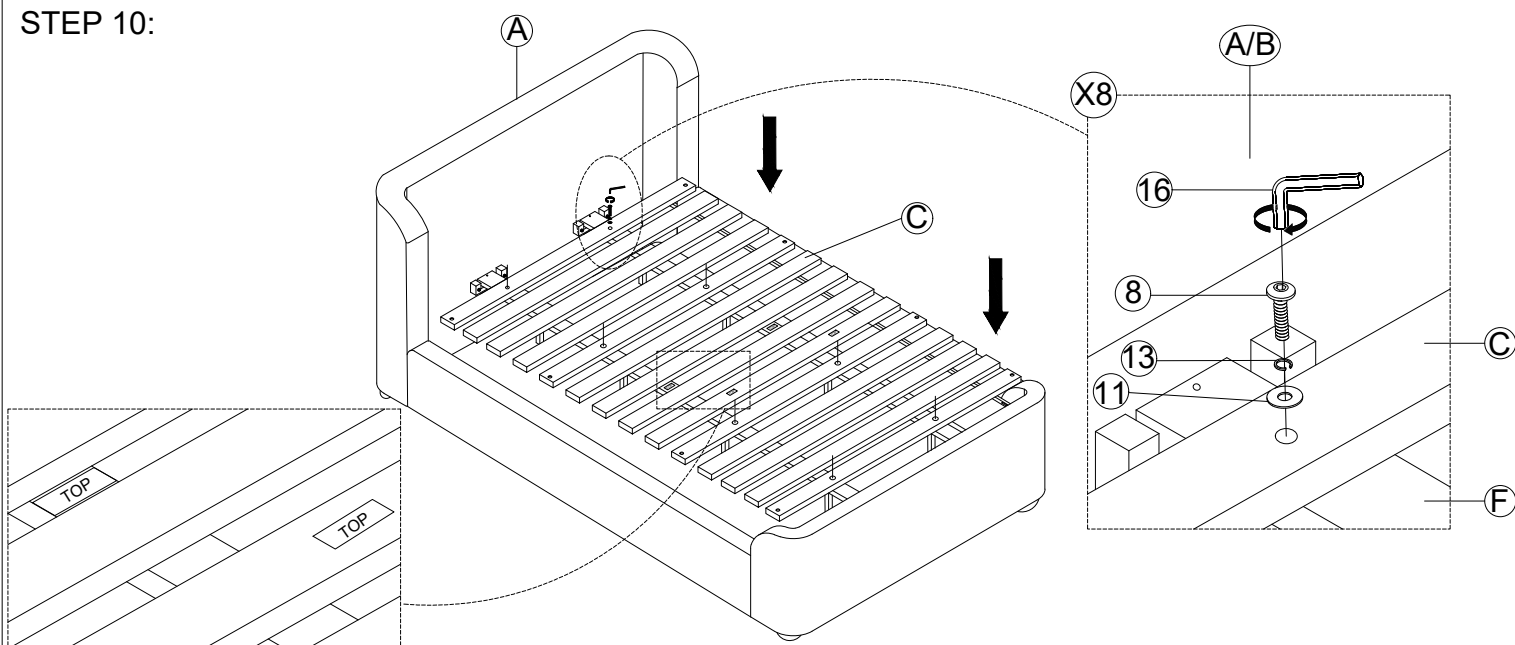


STEP 11:

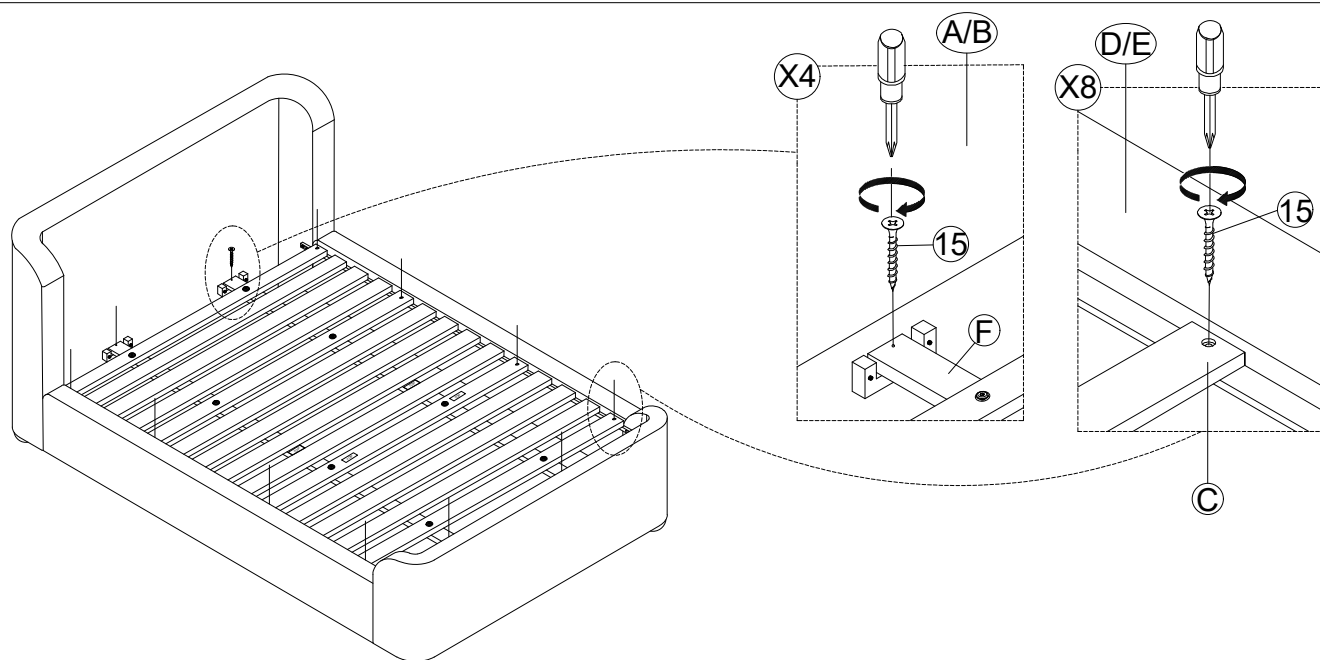

# KIKI UPHOLSTERED KING BED

## ASSEMBLY INSTRUCTIONS

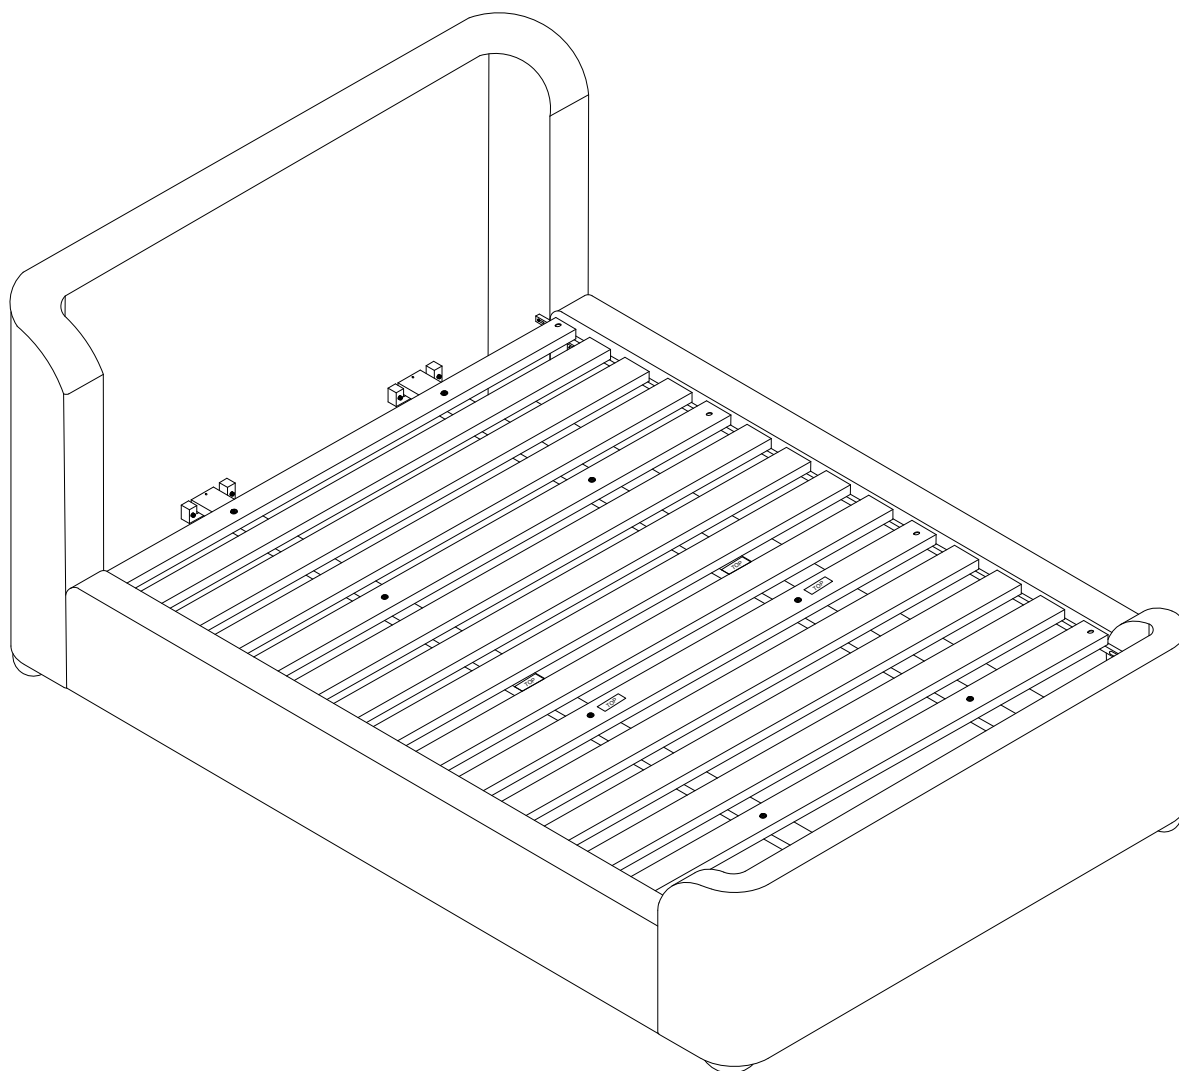


**ASSEMBLY COMPLETE**

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# KIKI UPHOLSTERED KING BED

## ASSEMBLY INSTRUCTIONS



### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

**THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:**

|                              |       |
|------------------------------|-------|
| C. SLAT ROLL                 | 1 SET |
| F. CENTER SLAT SUPPORT       | 2 PCS |
| G. SUPPORT LEG               | 8 PCS |
| H. CENTER SLAT SUPPORT CLEAT | 4 PCS |

**STEP 1:**

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

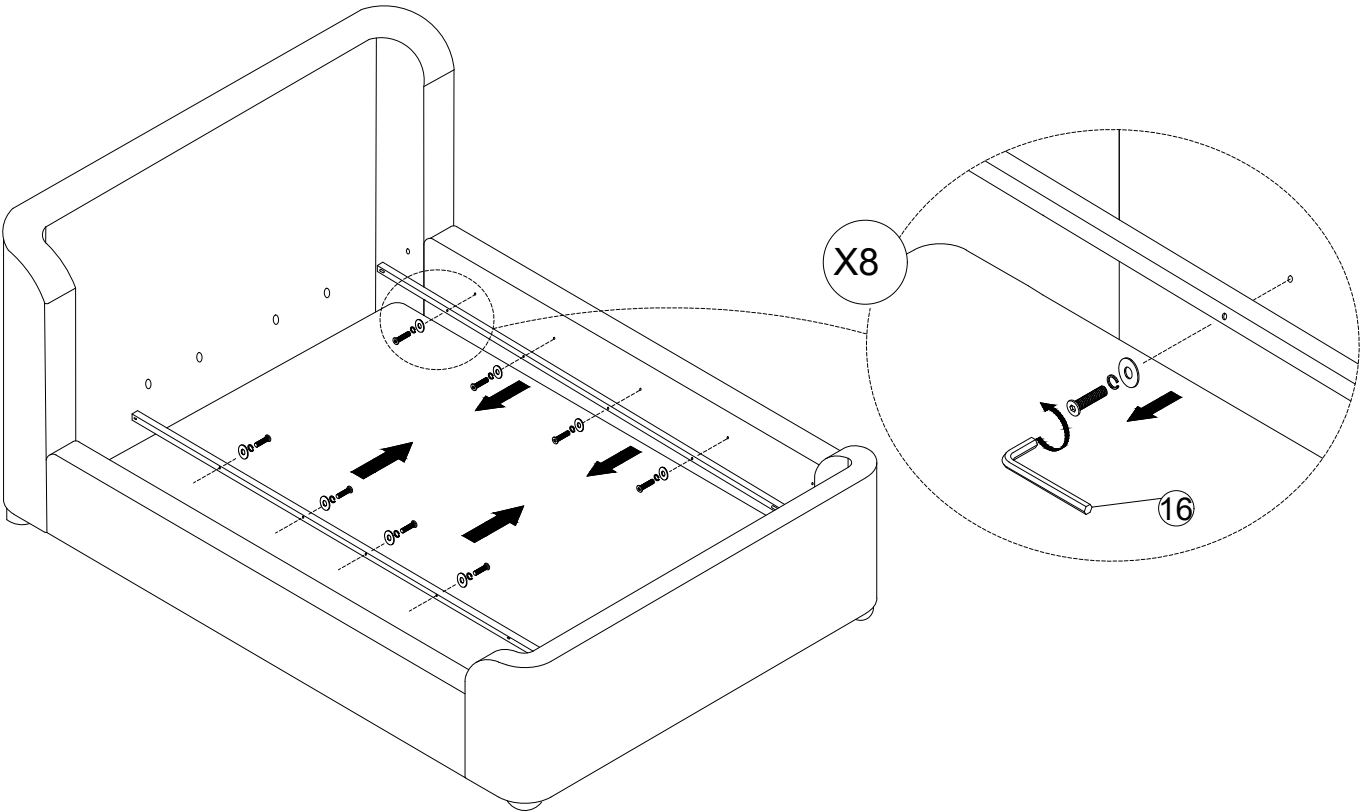

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

# KIKI UPHOLSTERED C.KING BED


## ASSEMBLY INSTRUCTIONS



### BOX#1

A. HEADBOARD  
I. LEG

1 PC  
2 PCS

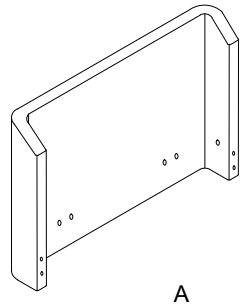

### HARDWARE KIT PACKED IN BOX #1

| No. | Description            | Image | Quantity |
|-----|------------------------|-------|----------|
| 1   | ALLEN BOLT (8 x 50mm)  |       | 2 PCS    |
| 2   | FLAT WASHER (8 x 19mm) |       | 2 PCS    |
| 3   | LOCK WASHER (8 x 22mm) |       | 2 PCS    |
| 4   | ALLEN KEY (8mm)        |       | 1 PC     |



### HARDWARE KIT PACKED IN BOX #2

|    |                           |  |        |
|----|---------------------------|--|--------|
| 5  | THREADED BOLT (8 x 90mm)  |  | 8 PCS  |
| 6  | ALLEN BOLT (8 x 50mm)     |  | 2 PCS  |
| 7  | ALLEN BOLT (6 x 50mm)     |  | 12 PCS |
| 8  | ALLEN BOLT (6 x 30mm)     |  | 6 PCS  |
| 9  | FLAT WASHER (8 x 22mm)    |  | 8 PCS  |
| 10 | FLAT WASHER (8 x 19mm)    |  | 2 PCS  |
| 11 | FLAT WASHER (6 x 16mm)    |  | 18 PCS |
| 12 | LOCK WASHER (8 x 22mm)    |  | 10 PCS |
| 13 | LOCK WASHER (6 x 16mm)    |  | 18 PCS |
| 14 | HEX NUT (8mm)             |  | 8 PCS  |
| 15 | PHILLIPS SCREW (7 x 35mm) |  | 10 PCS |
| 16 | ALLEN KEY (6mm)           |  | 1 PC   |
| 17 | ALLEN KEY (8mm)           |  | 1 PC   |
| 18 | WRENCH                    |  | 1 PC   |
| 19 | CONNECTING BRACKET        |  | 4 PCS  |

### BOX#2

B. FOOTBOARD  
C. SLAT ROLL  
H. CENTER SLAT SUPPORT CLEAT  
I. LEG




1 PC  
1 SET  
4 PCS  
2 PCS

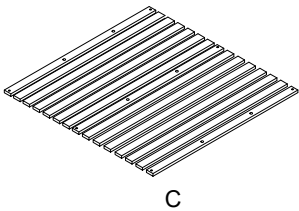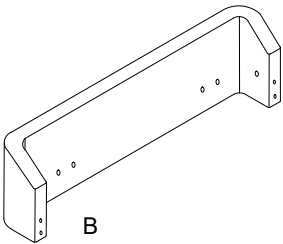





### BOX#3

D. LEFT SIDE RAIL  
E. RIGHT SIDE RAIL  
F. CENTER SLAT SUPPORT  
G. SUPPORT LEG

1 PC  
1 PC  
2 PCS  
8 PCS

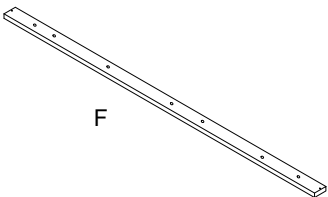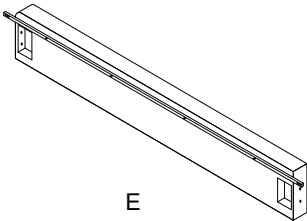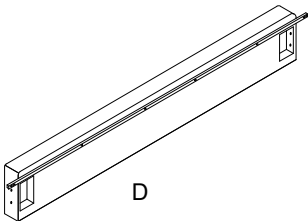

### FULLY ASSEMBLED

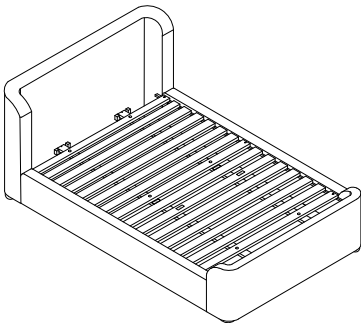


# KIKI UPHOLSTERED C.KING BED


## ASSEMBLY INSTRUCTIONS




### STEP 1:

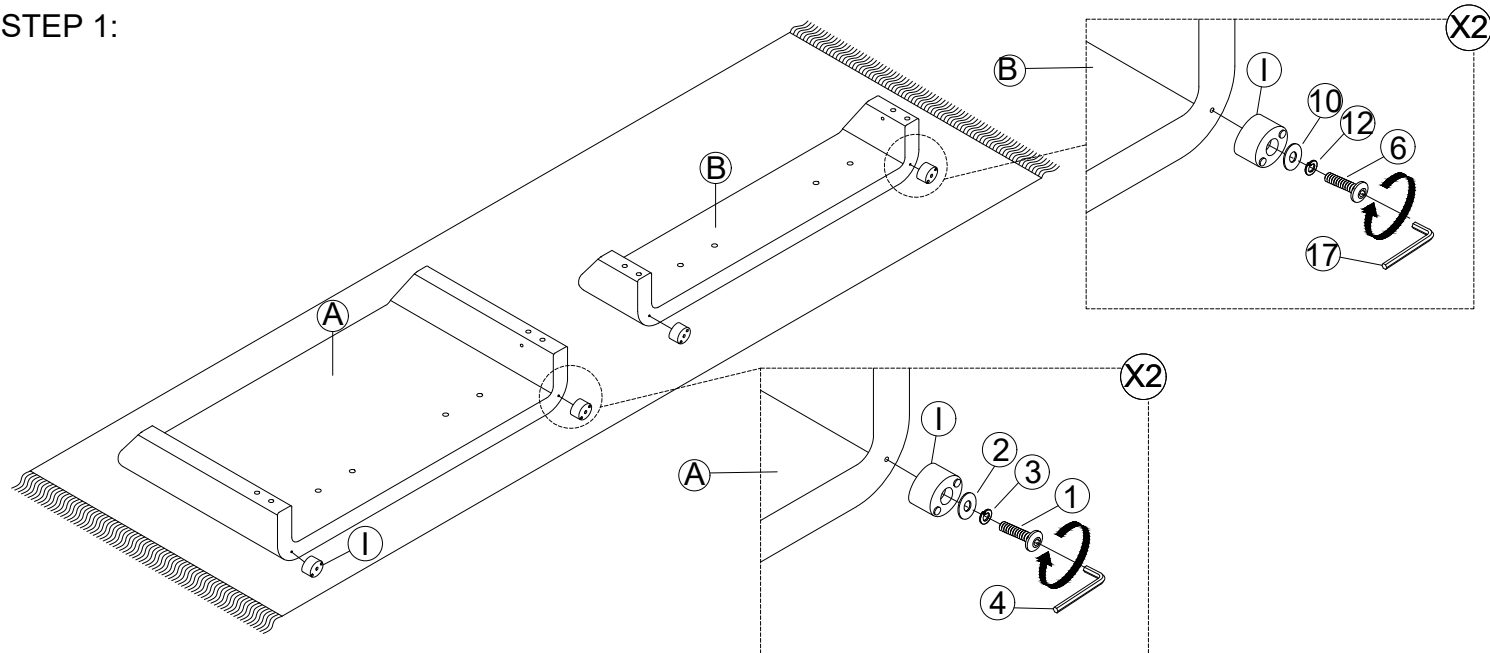

### STEP 2:

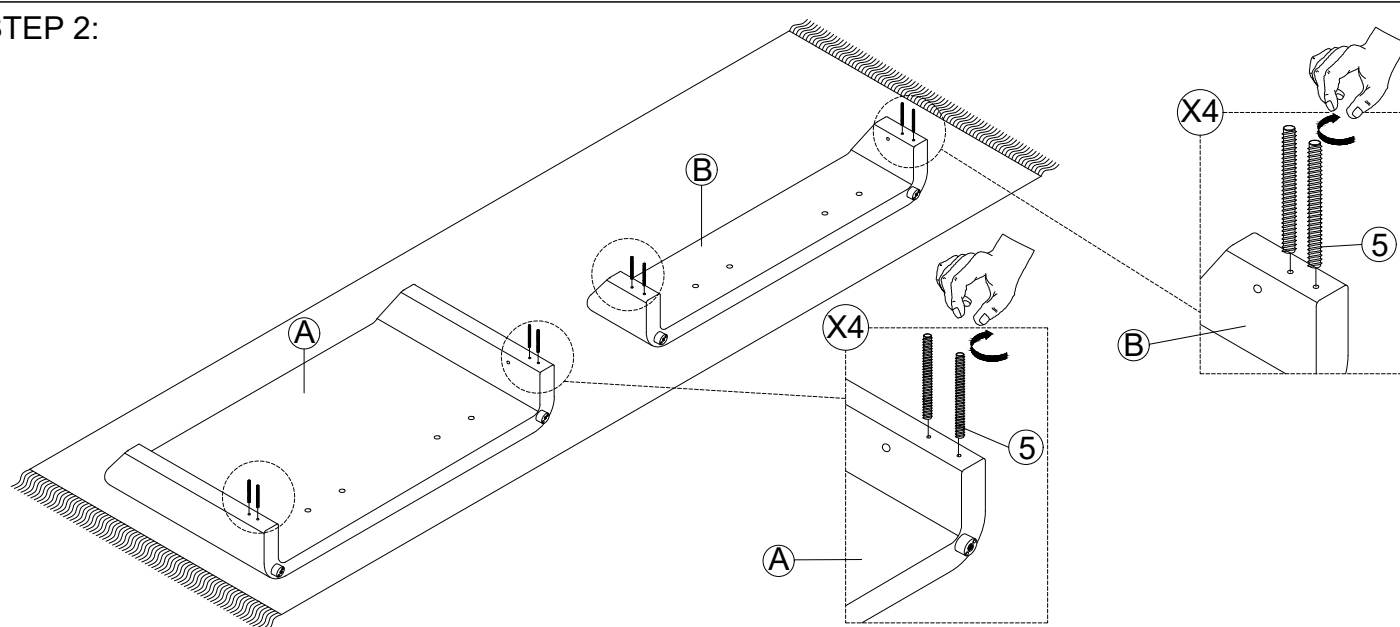


### STEP 3:

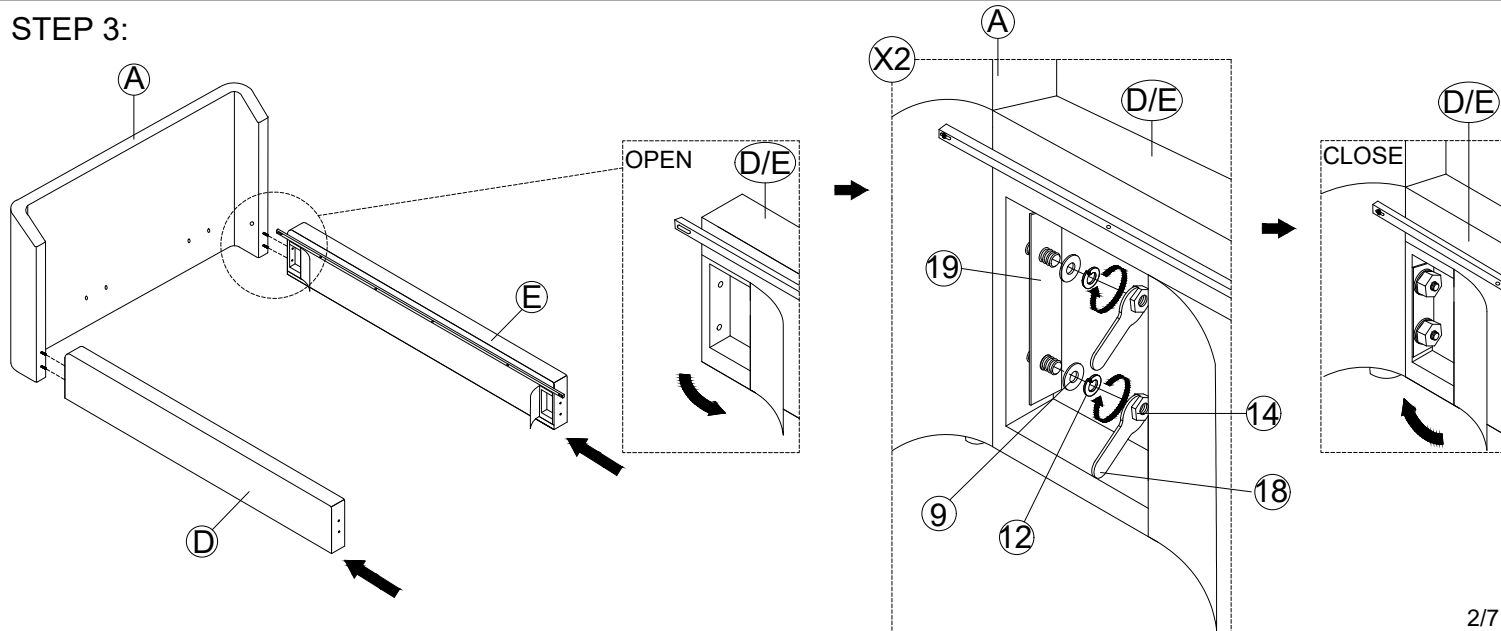

# KIKI UPHOLSTERED C.KING BED

## ASSEMBLY INSTRUCTIONS


### STEP 4:

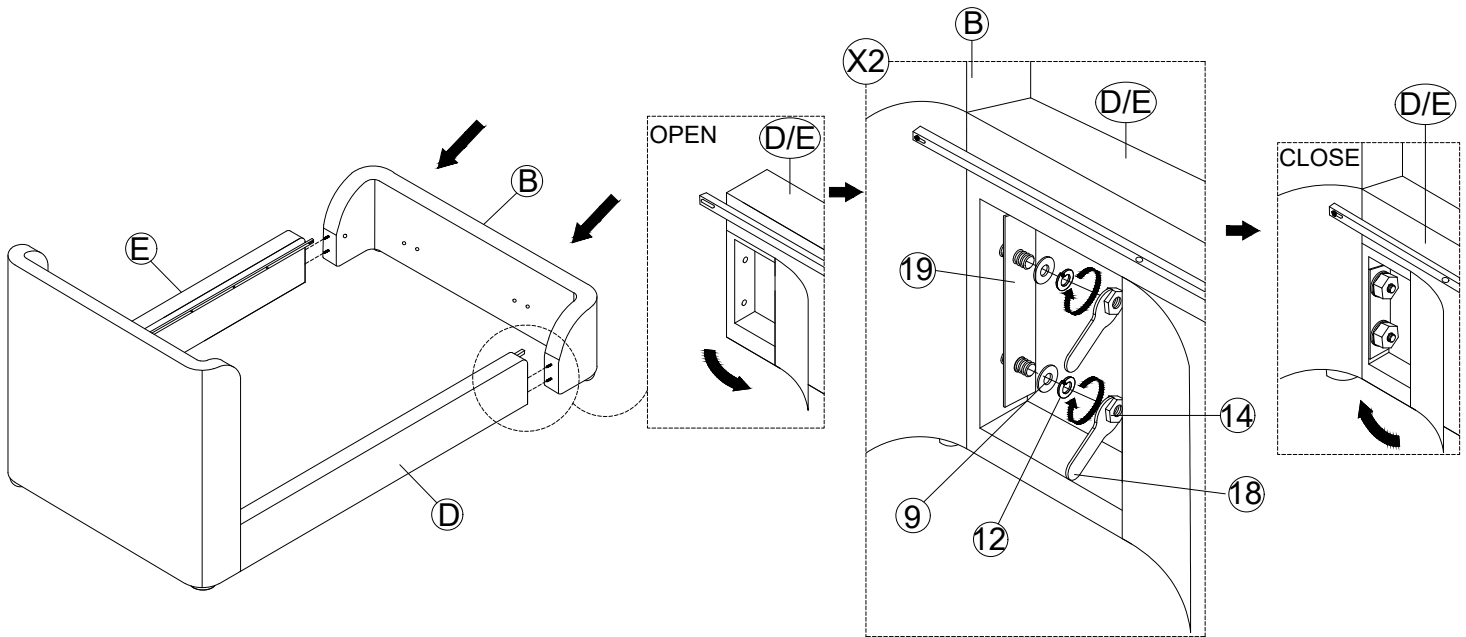

### STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

### STEP 5:

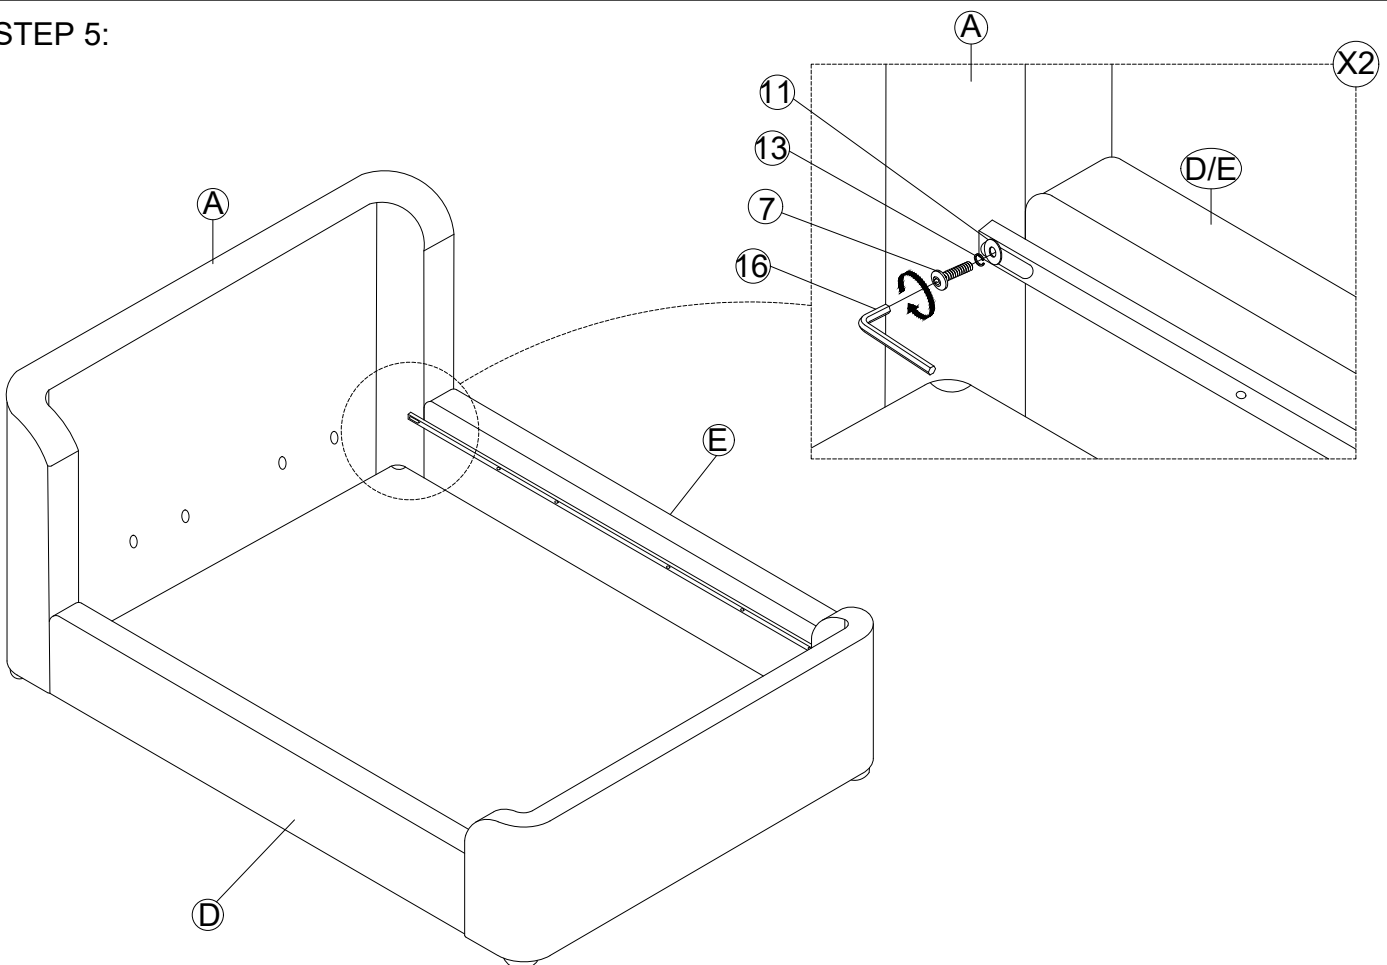


# KIKI UPHOLSTERED C.KING BED


## ASSEMBLY INSTRUCTIONS




STEP 6:

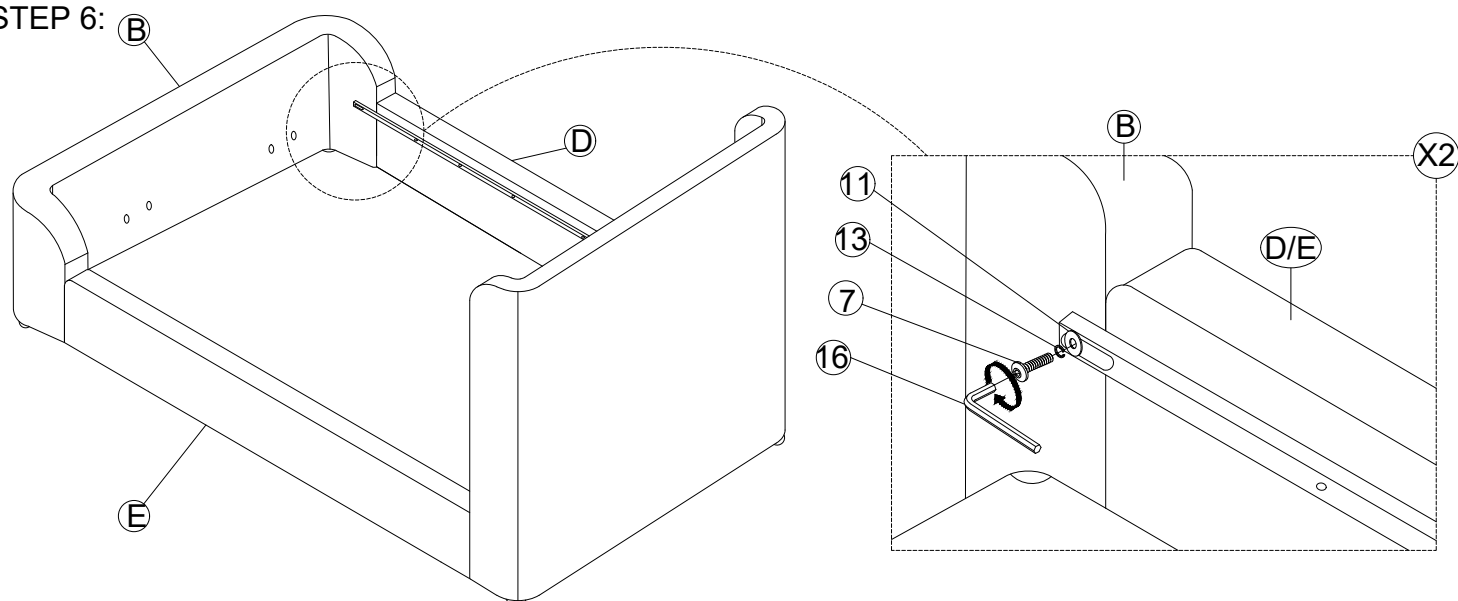

STEP 7:

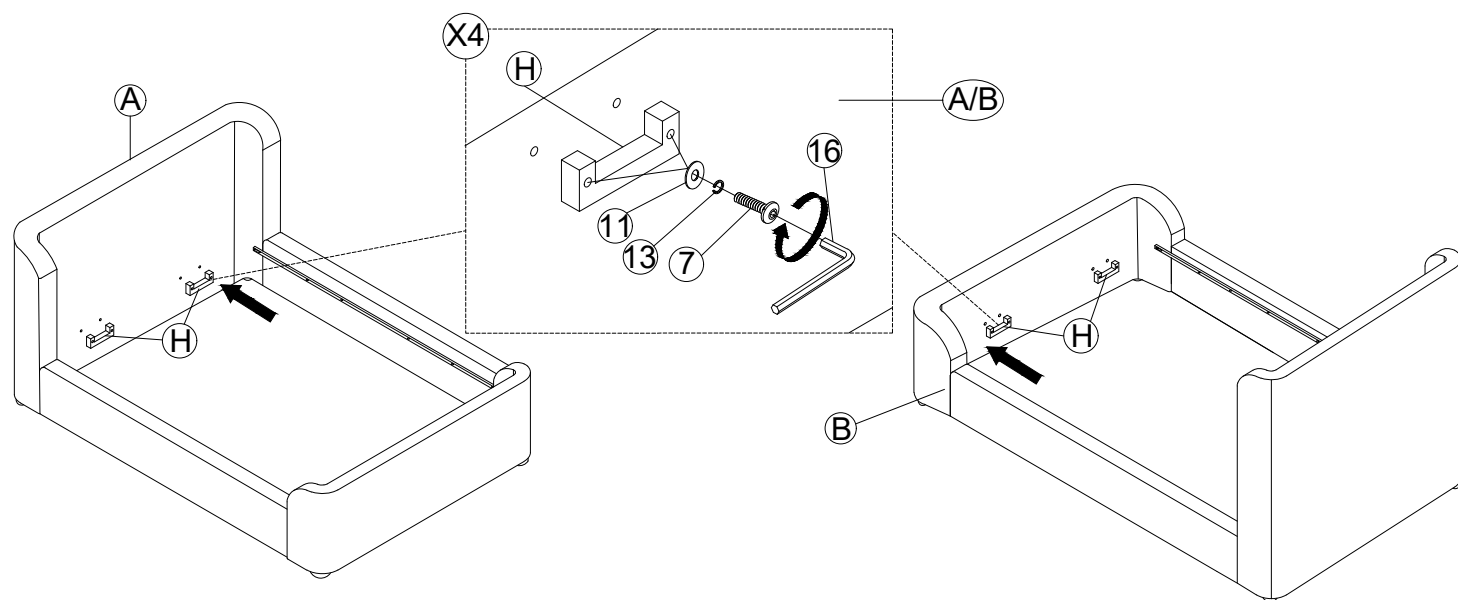

STEP 8:

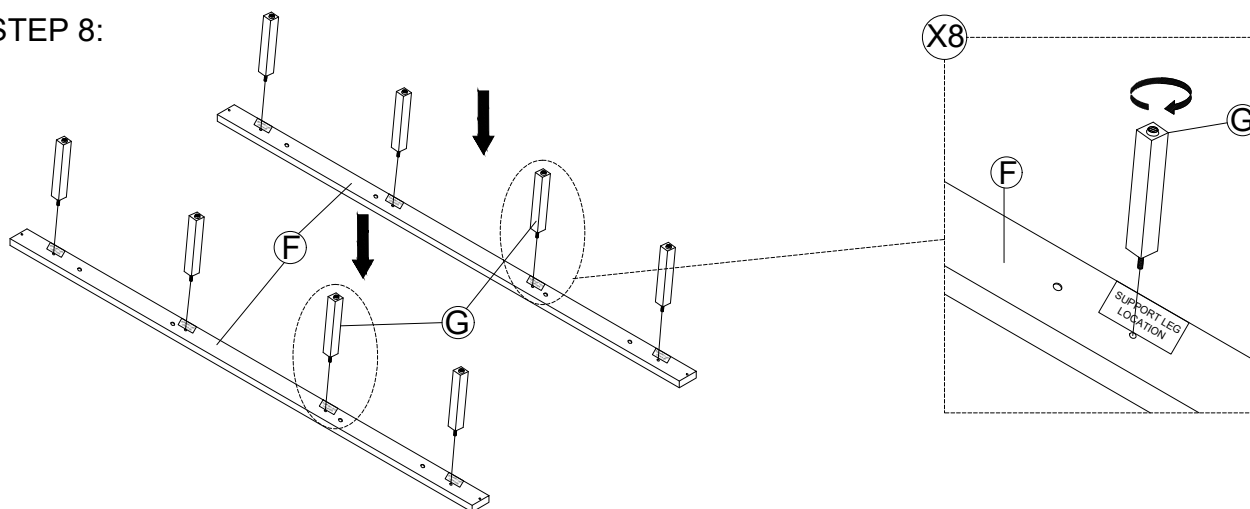


# KIKI UPHOLSTERED C.KING BED


## ASSEMBLY INSTRUCTIONS




STEP 9:

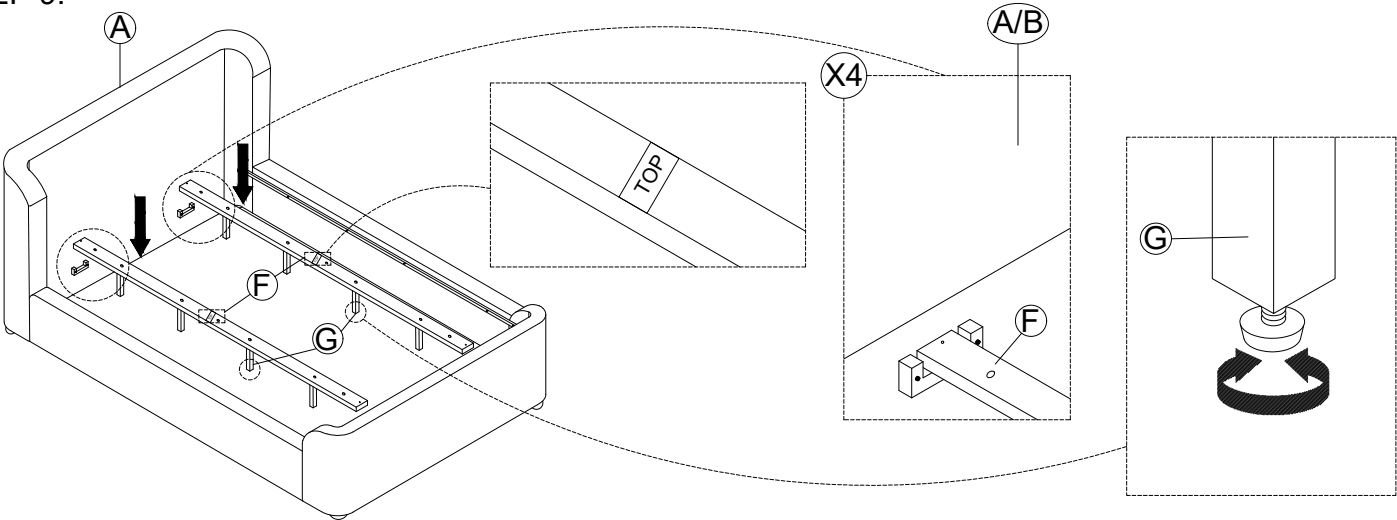

STEP 10:

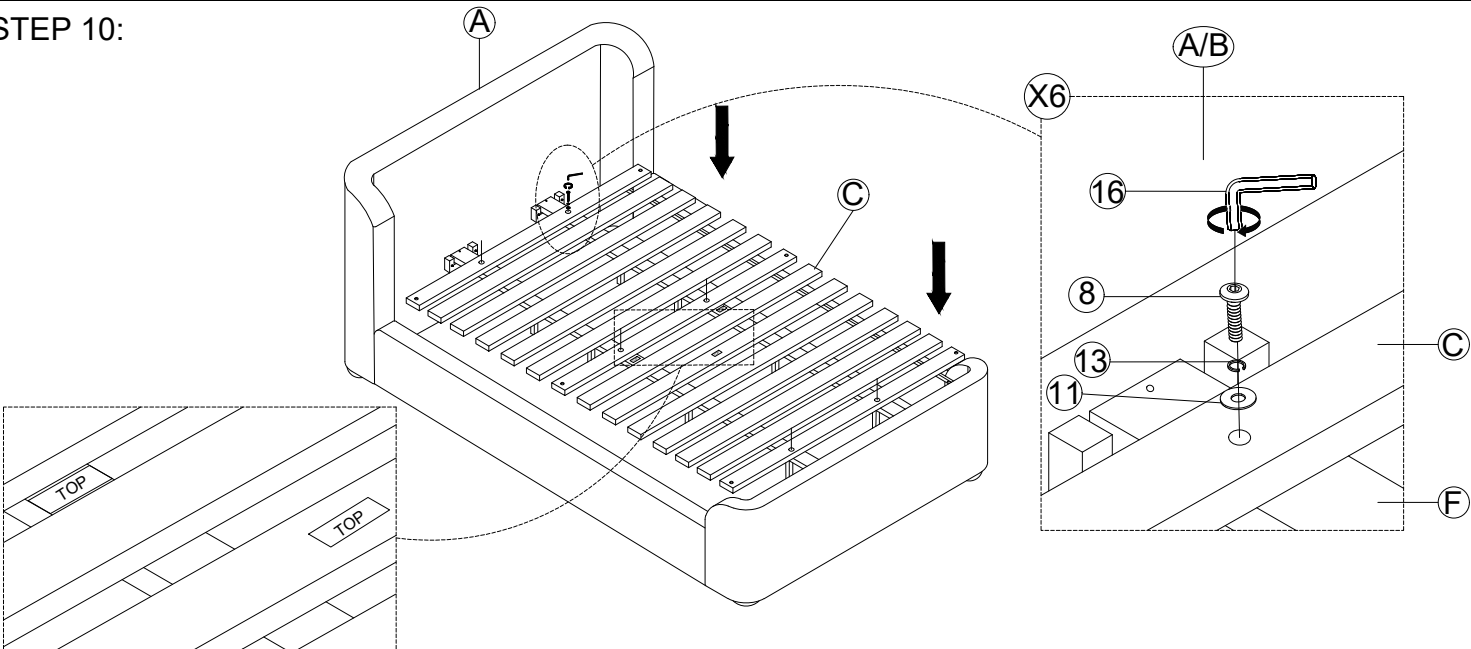


STEP 11:

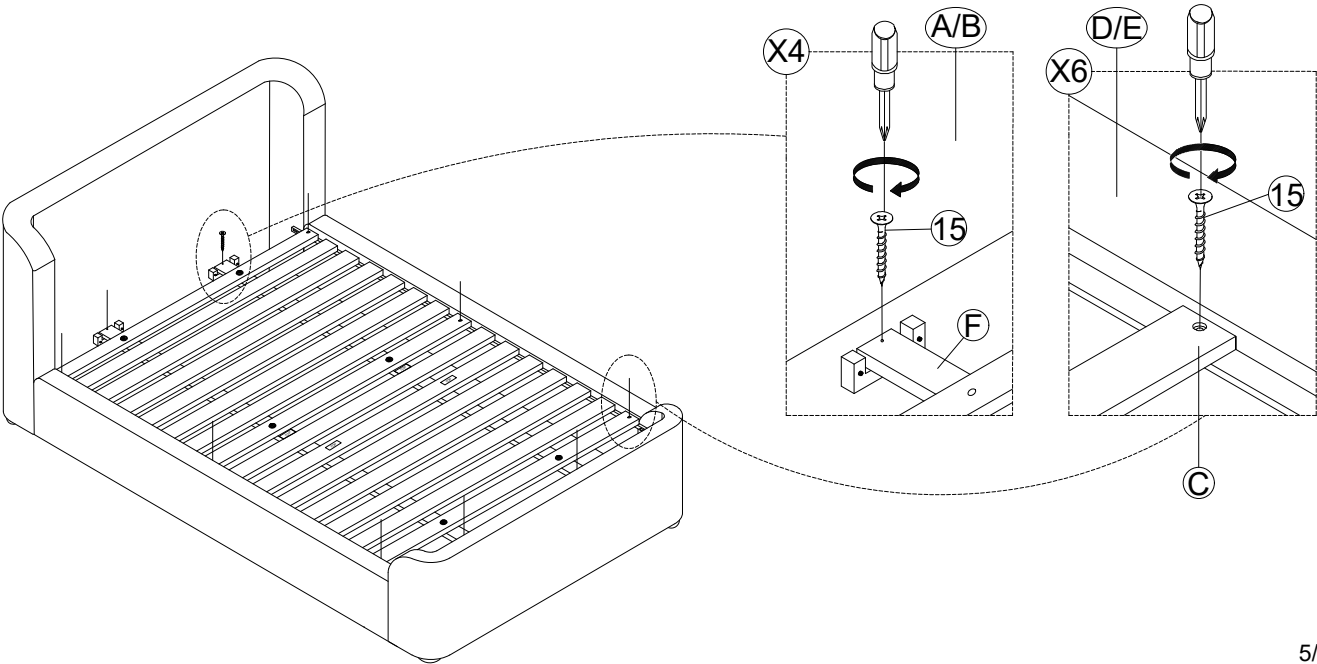

# KIKI UPHOLSTERED C.KING BED

## ASSEMBLY INSTRUCTIONS

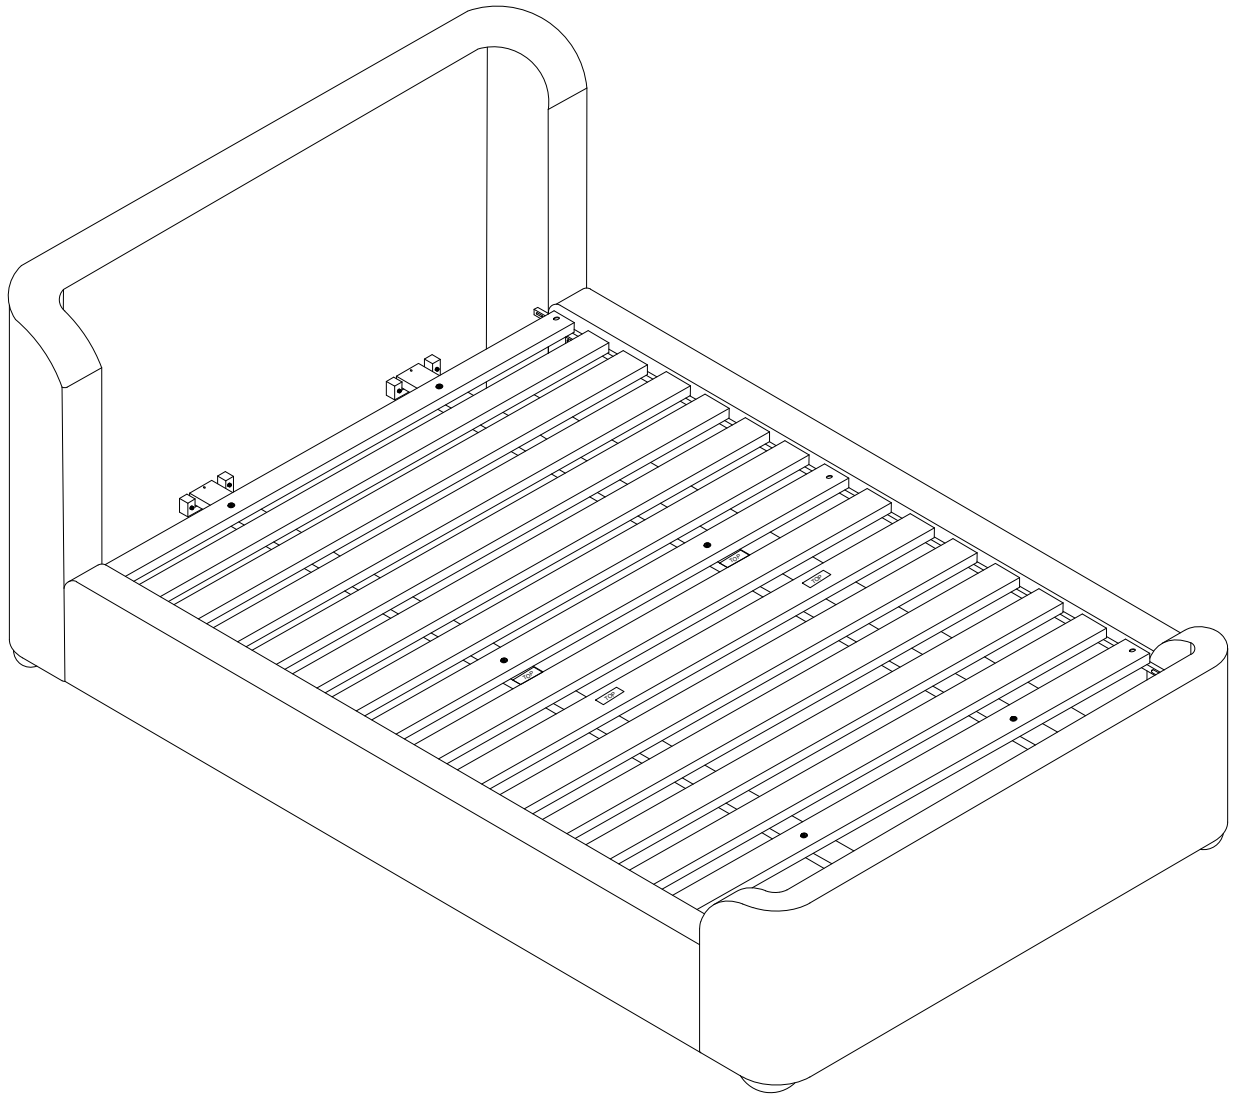


**ASSEMBLY COMPLETE**

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# KIKI UPHOLSTERED C.KING BED

## ASSEMBLY INSTRUCTIONS



### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

|                              |       |
|------------------------------|-------|
| C. SLAT ROLL                 | 1 SET |
| F. CENTER SLAT SUPPORT       | 2 PCS |
| G. SUPPORT LEG               | 8 PCS |
| H. CENTER SLAT SUPPORT CLEAT | 4 PCS |

#### STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

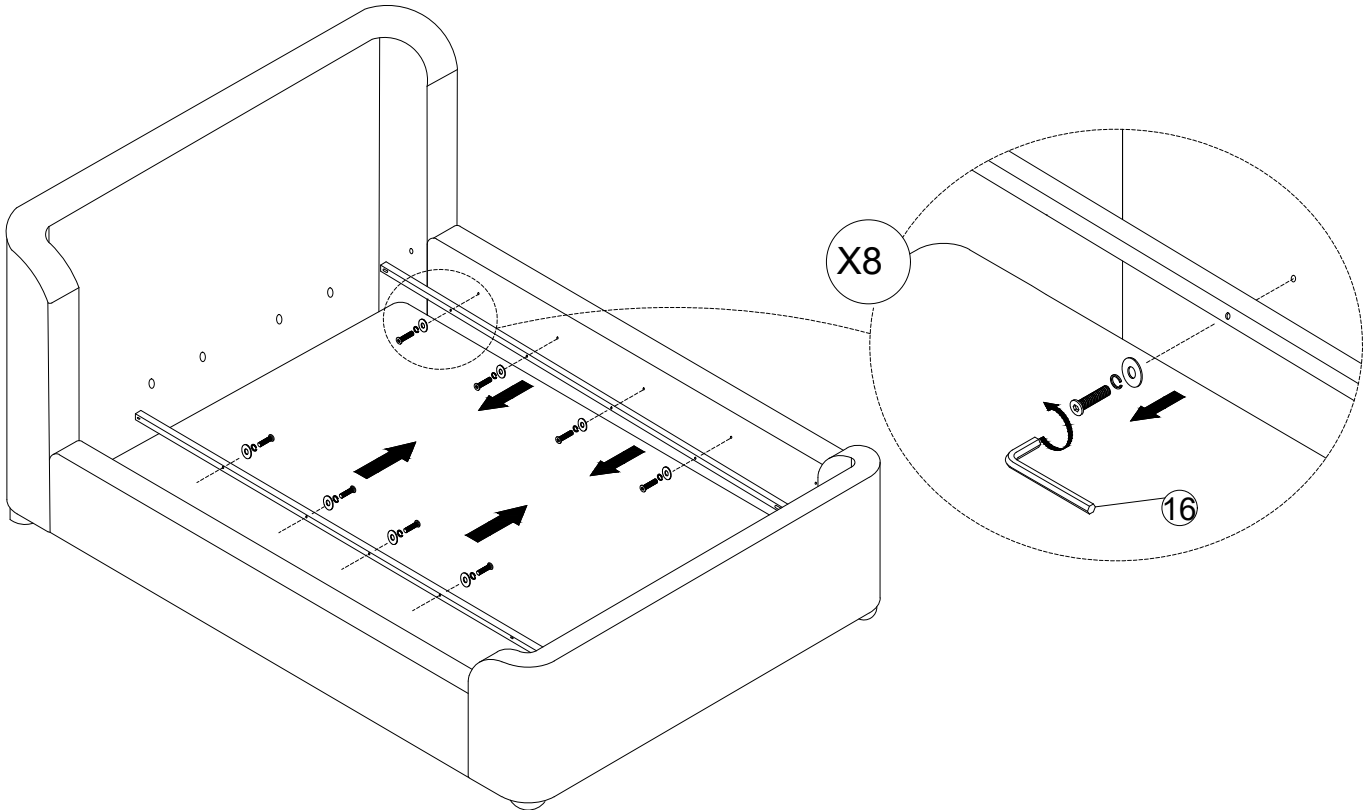

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

# KIKI UPHOLSTERED FULL BED


## ASSEMBLY INSTRUCTIONS



### BOX#1

A. HEADBOARD  
I. LEG

1 PC  
2 PCS

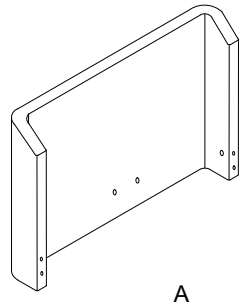

### HARDWARE KIT PACKED IN BOX #1

| No. | Description            | Image | Quantity |
|-----|------------------------|-------|----------|
| 1   | ALLEN BOLT (8 x 50mm)  |       | 2 PCS    |
| 2   | FLAT WASHER (8 x 19mm) |       | 2 PCS    |
| 3   | LOCK WASHER (8 x 22mm) |       | 2 PCS    |
| 4   | ALLEN KEY (8mm)        |       | 1 PC     |



### HARDWARE KIT PACKED IN BOX #2

|    |                           |  |        |
|----|---------------------------|--|--------|
| 5  | THREADED BOLT (8 x 90mm)  |  | 8 PCS  |
| 6  | ALLEN BOLT (8 x 50mm)     |  | 2 PCS  |
| 7  | ALLEN BOLT (6 x 50mm)     |  | 8 PCS  |
| 8  | ALLEN BOLT (6 x 30mm)     |  | 3 PCS  |
| 9  | FLAT WASHER (8 x 22mm)    |  | 8 PCS  |
| 10 | FLAT WASHER (8 x 19mm)    |  | 2 PCS  |
| 11 | FLAT WASHER (6 x 16mm)    |  | 11 PCS |
| 12 | LOCK WASHER (8 x 22mm)    |  | 10 PCS |
| 13 | LOCK WASHER (6 x 16mm)    |  | 11 PCS |
| 14 | HEX NUT (8mm)             |  | 8 PCS  |
| 15 | PHILLIPS SCREW (7 x 35mm) |  | 8 PCS  |
| 16 | ALLEN KEY (6mm)           |  | 1 PC   |
| 17 | ALLEN KEY (8mm)           |  | 1 PC   |
| 18 | WRENCH                    |  | 1 PC   |
| 19 | CONNECTING BRACKET        |  | 4 PCS  |

### BOX#2

B. FOOTBOARD  
C. SLAT ROLL  
H. CENTER SLAT SUPPORT CLEAT  
I. LEG




1 PC  
1 SET  
2 PCS  
2 PCS

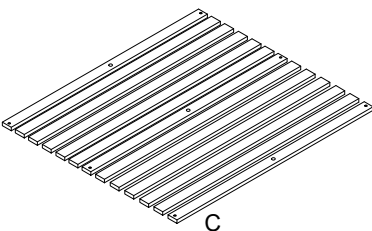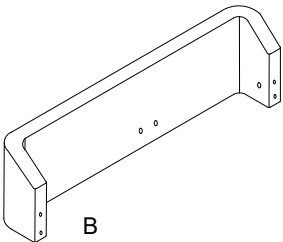





### BOX#3

D. LEFT SIDE RAIL  
E. RIGHT SIDE RAIL  
F. CENTER SLAT SUPPORT  
G. SUPPORT LEG

1 PC  
1 PC  
1 PC  
4 PCS

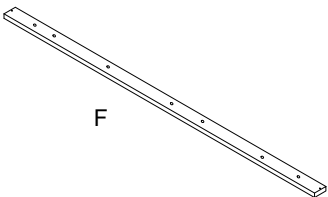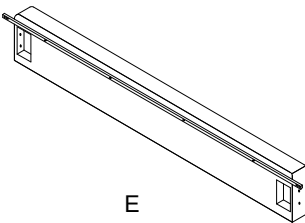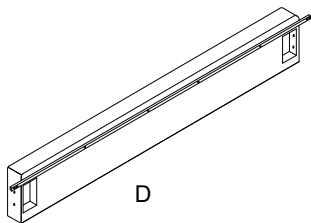


### FULLY ASSEMBLED

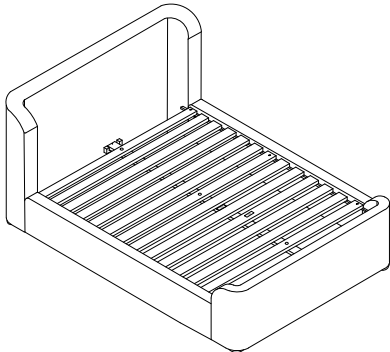


# KIKI UPHOLSTERED FULL BED

## ASSEMBLY INSTRUCTIONS


### STEP 1:

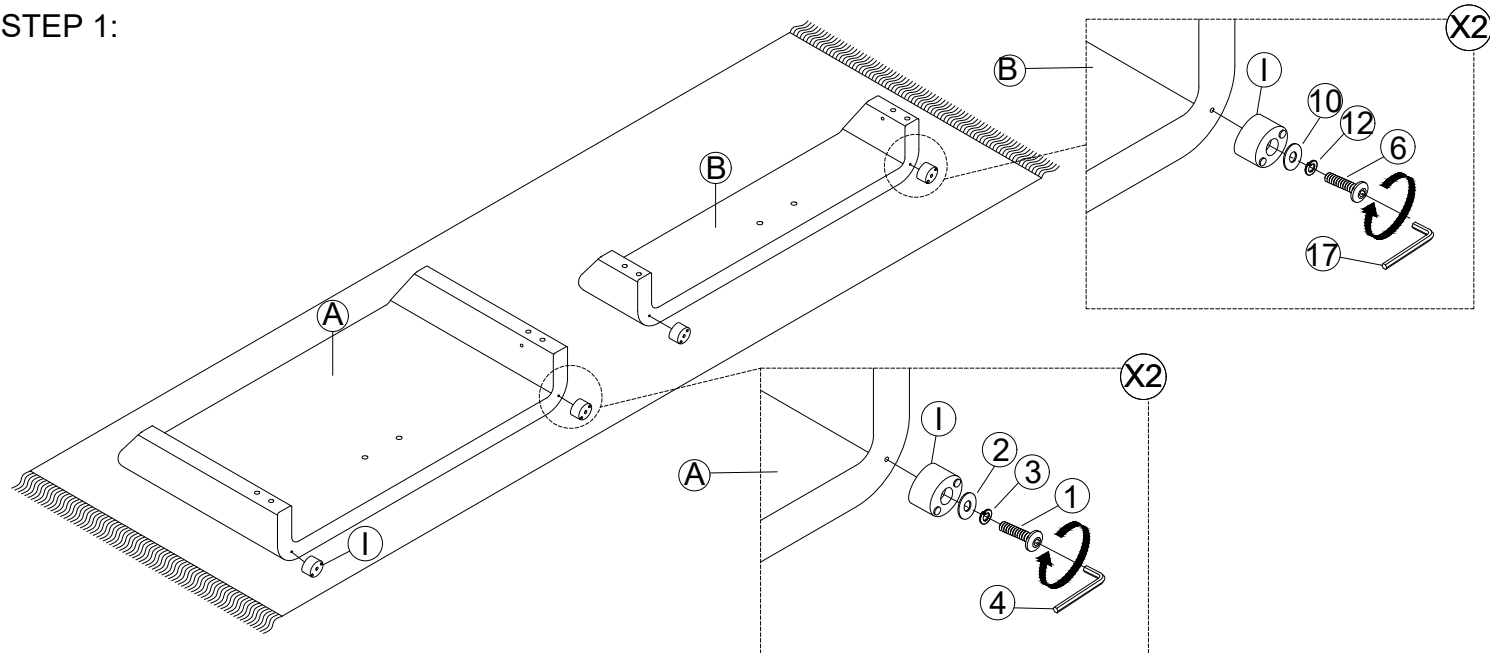

### STEP 2:

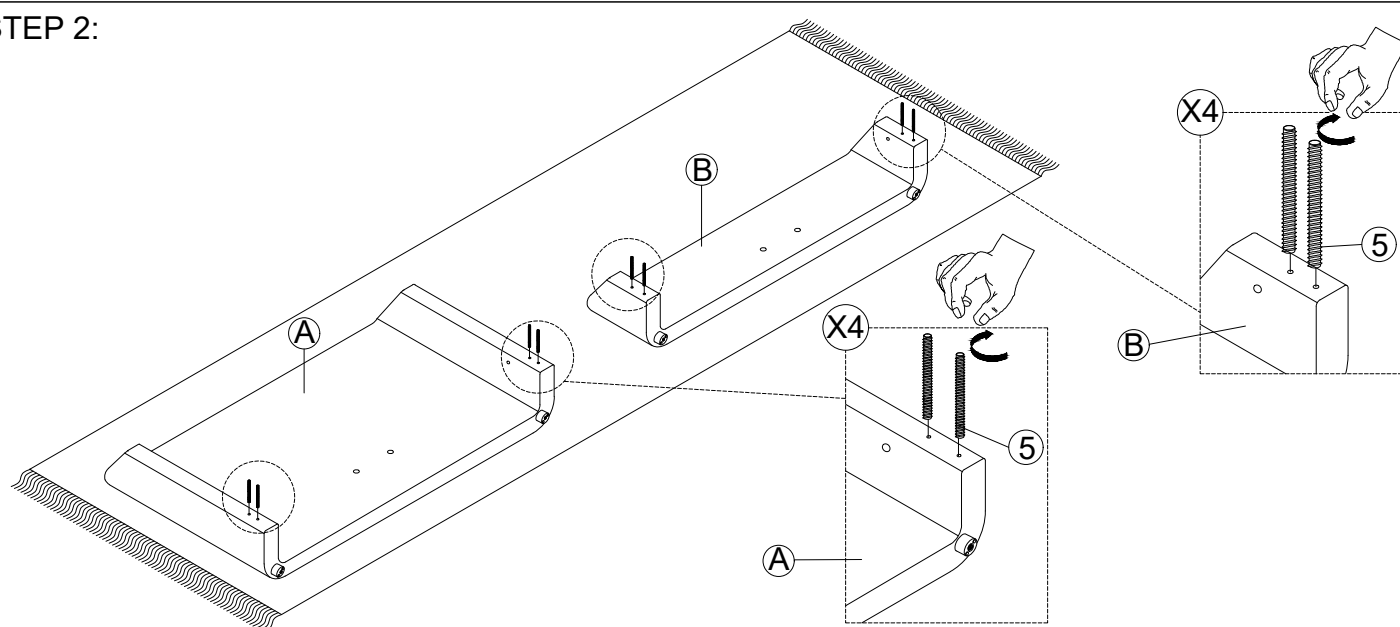

### STEP 3:

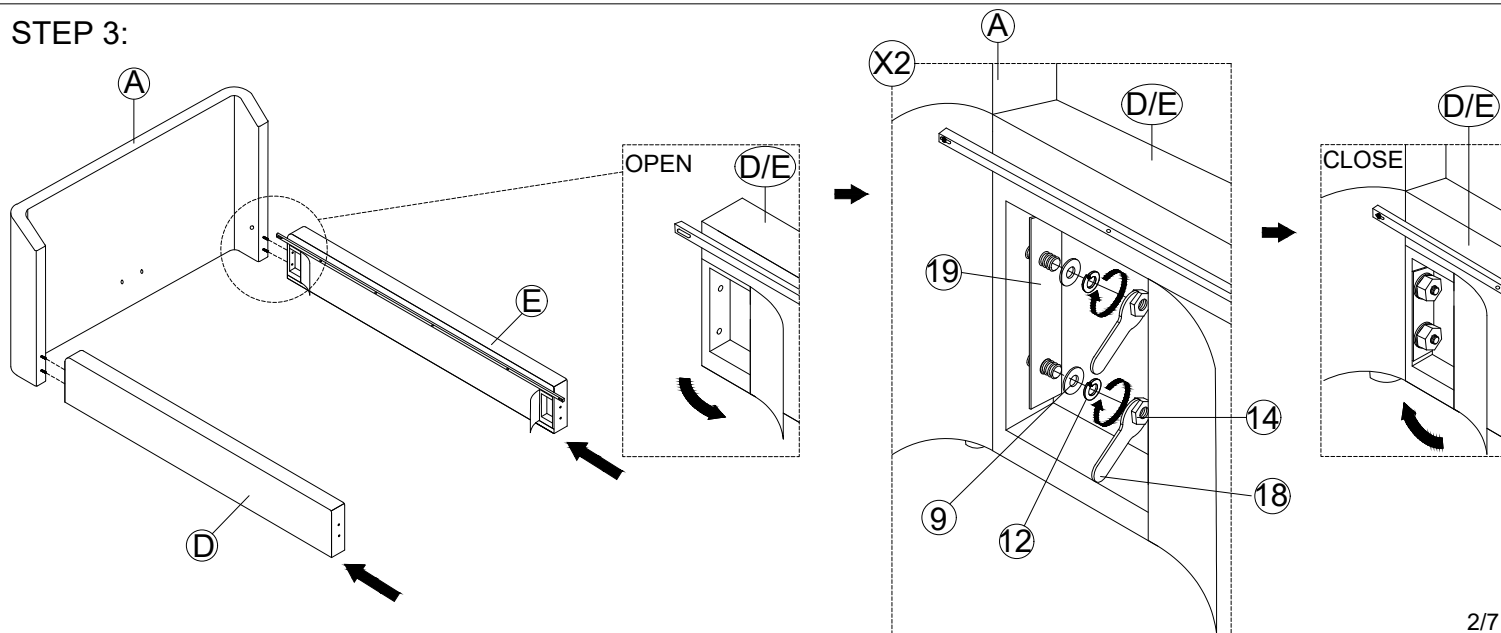


# KIKI UPHOLSTERED FULL BED

## ASSEMBLY INSTRUCTIONS




### STEP 4:

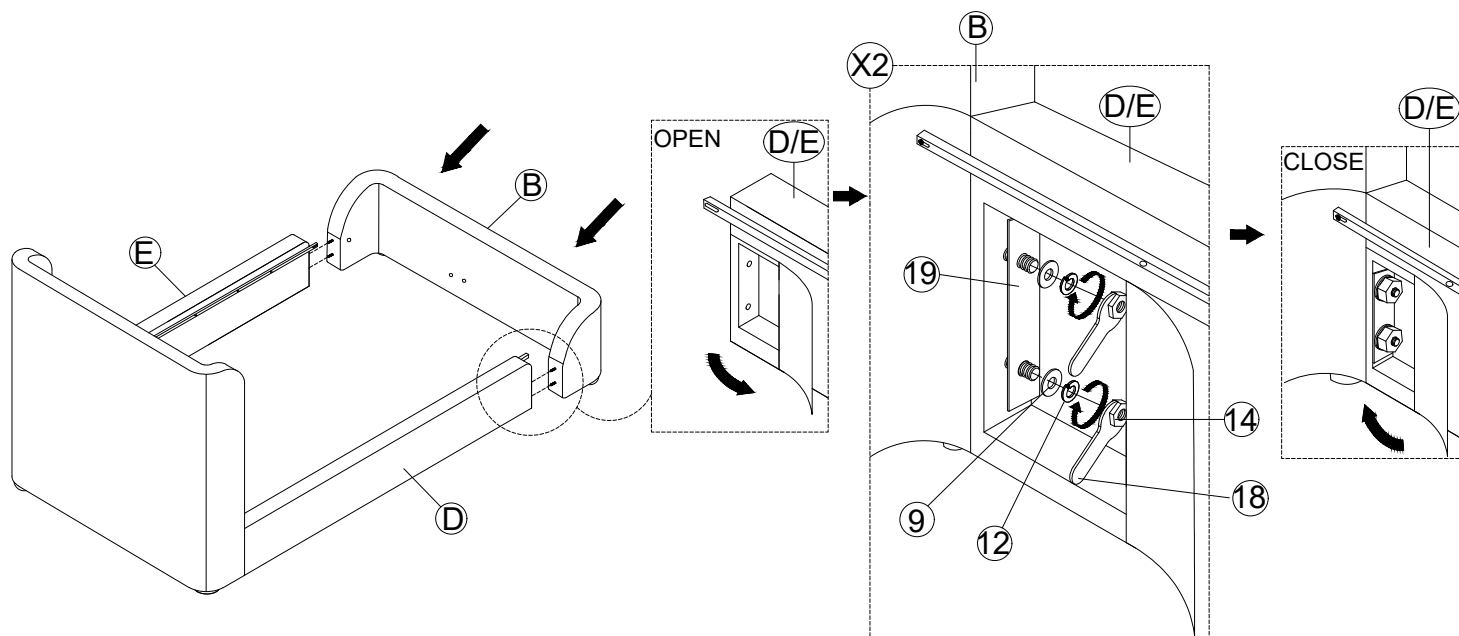

### STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

### STEP 5:

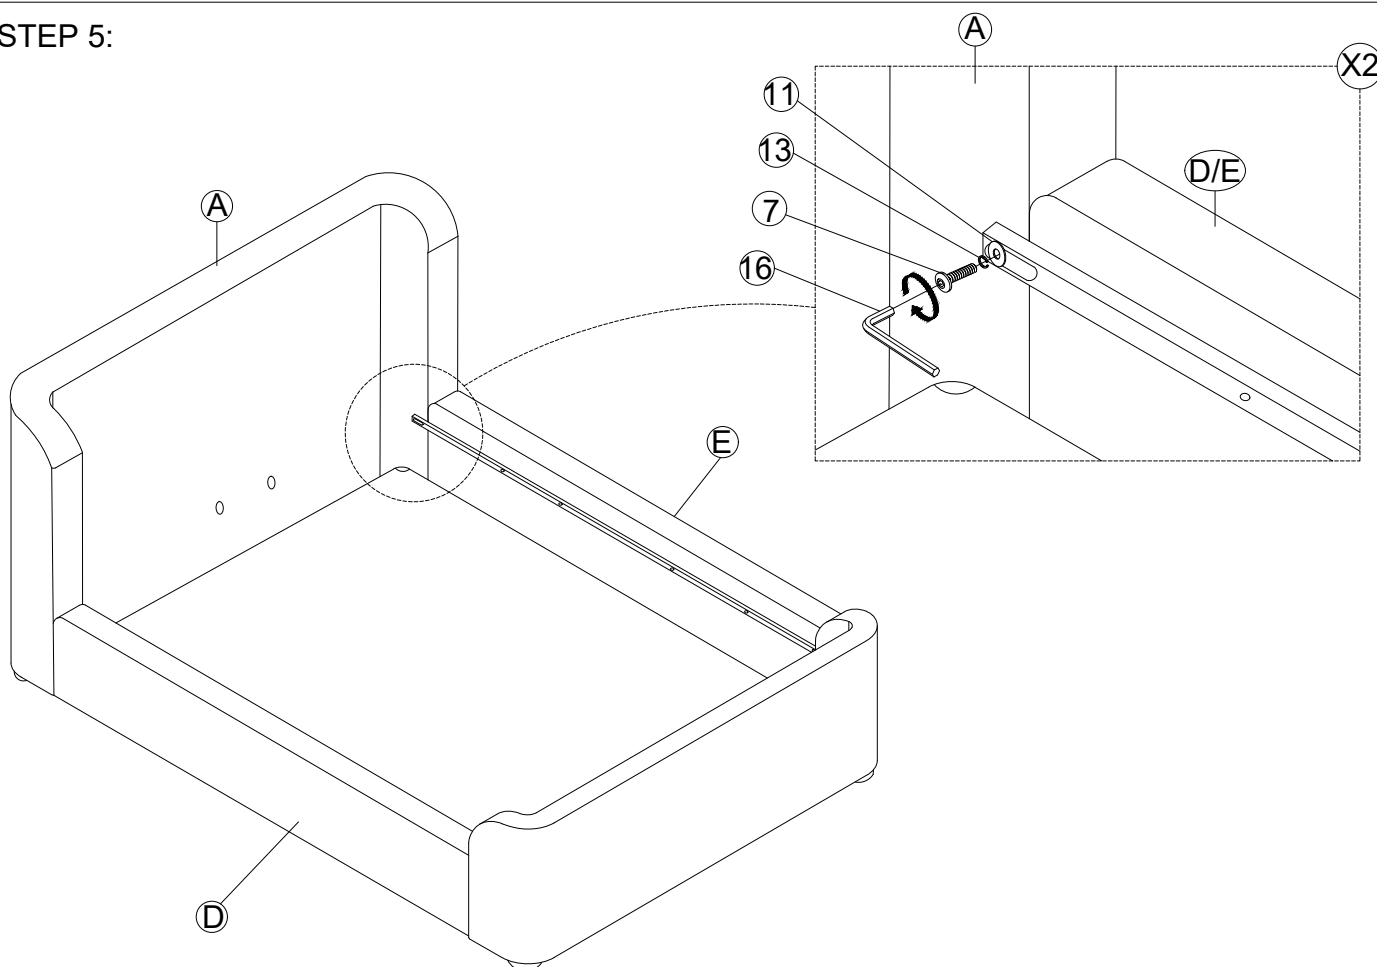


# KIKI UPHOLSTERED FULL BED


## ASSEMBLY INSTRUCTIONS




STEP 6:

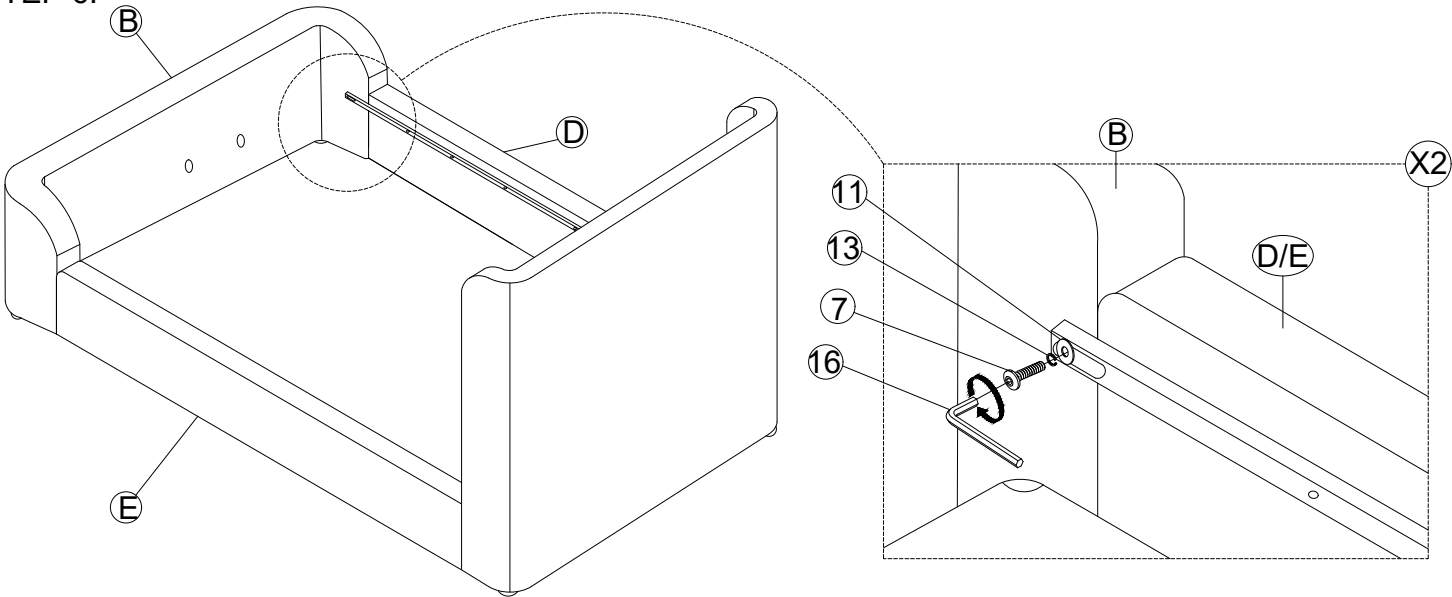

STEP 7:

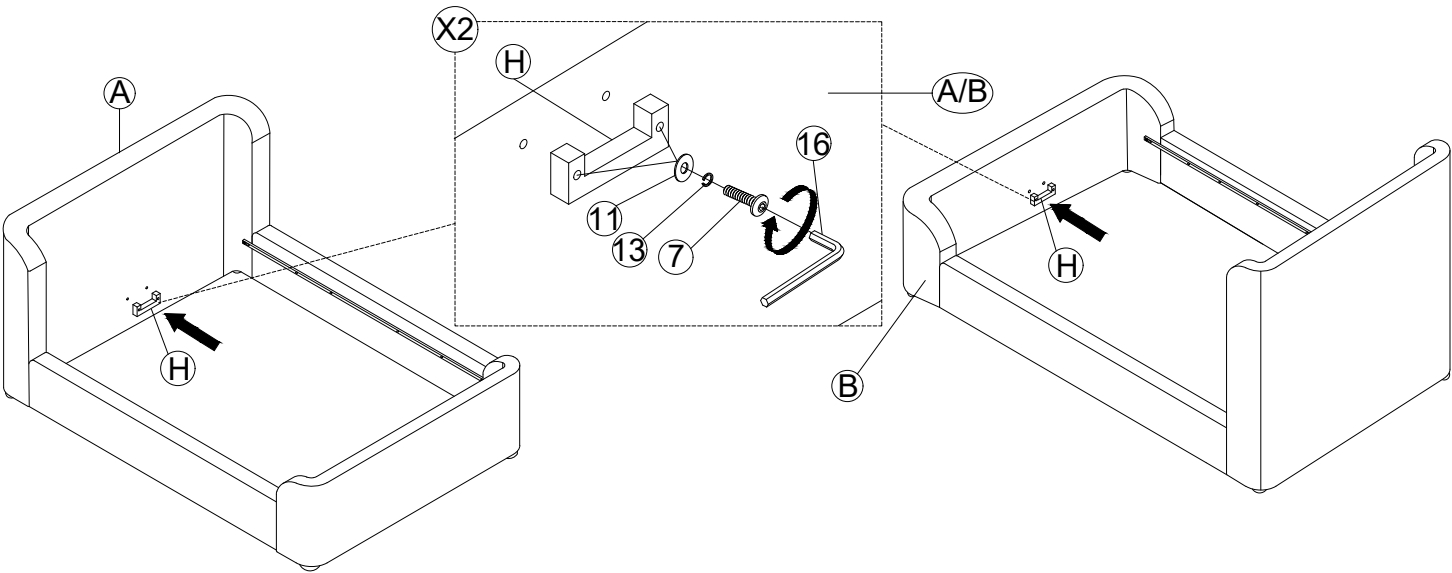

STEP 8:

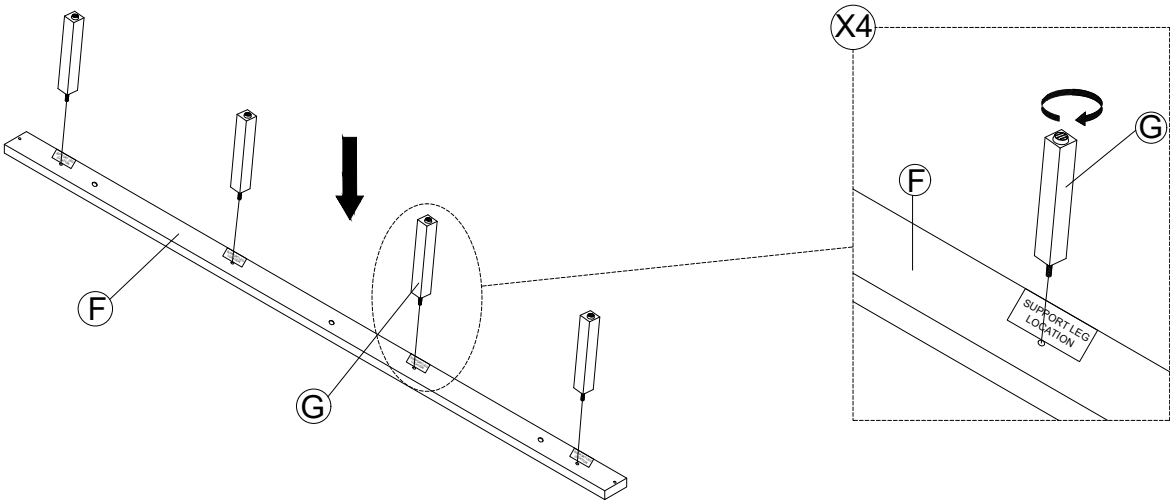


# KIKI UPHOLSTERED FULL BED


## ASSEMBLY INSTRUCTIONS




STEP 9:

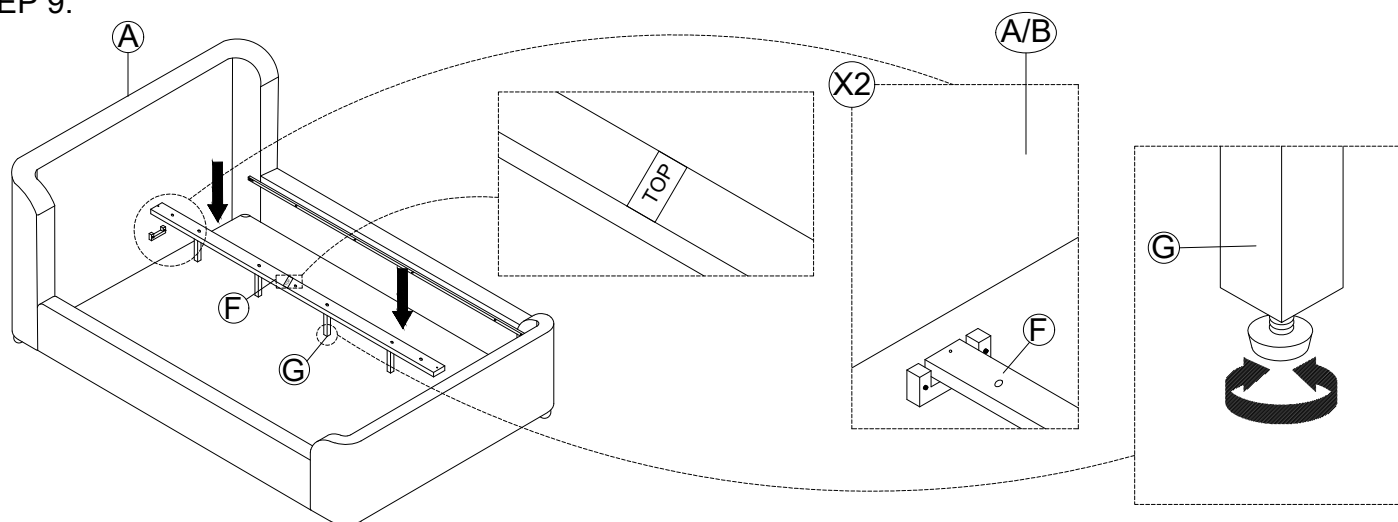


STEP 10:

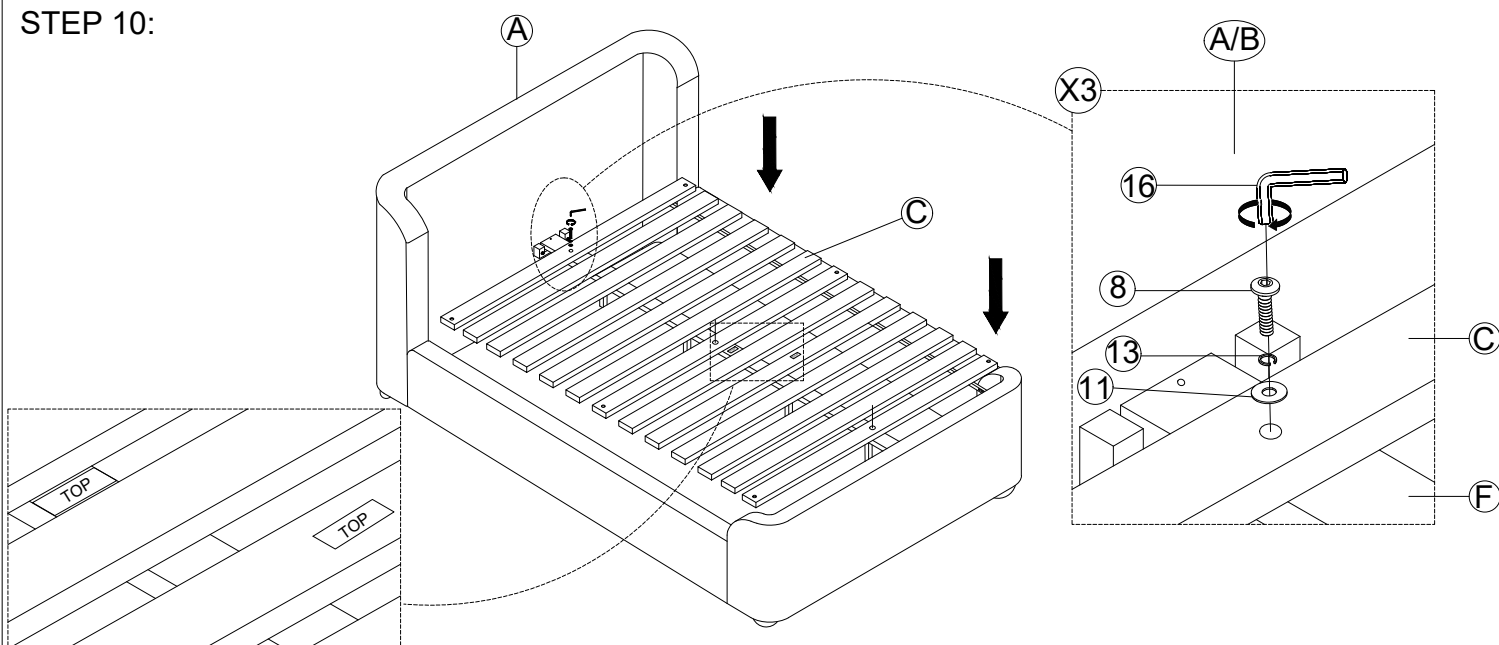

STEP 11:

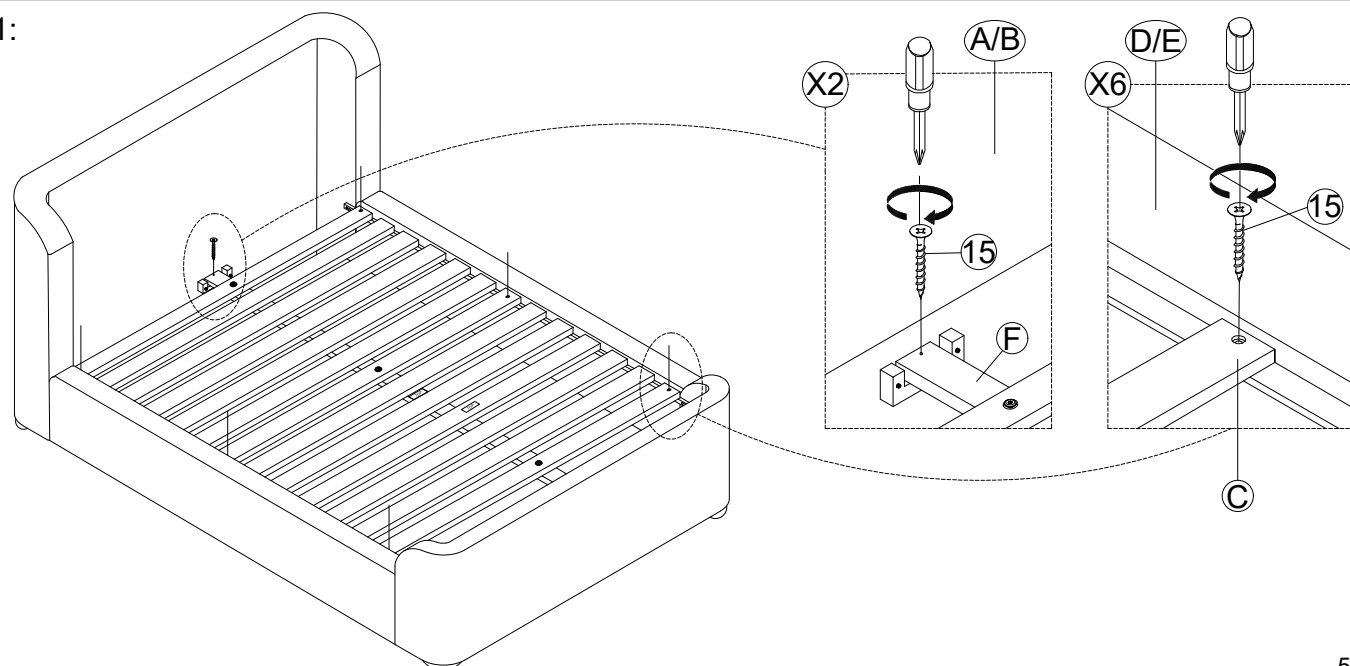

# KIKI UPHOLSTERED FULL BED ASSEMBLY INSTRUCTIONS

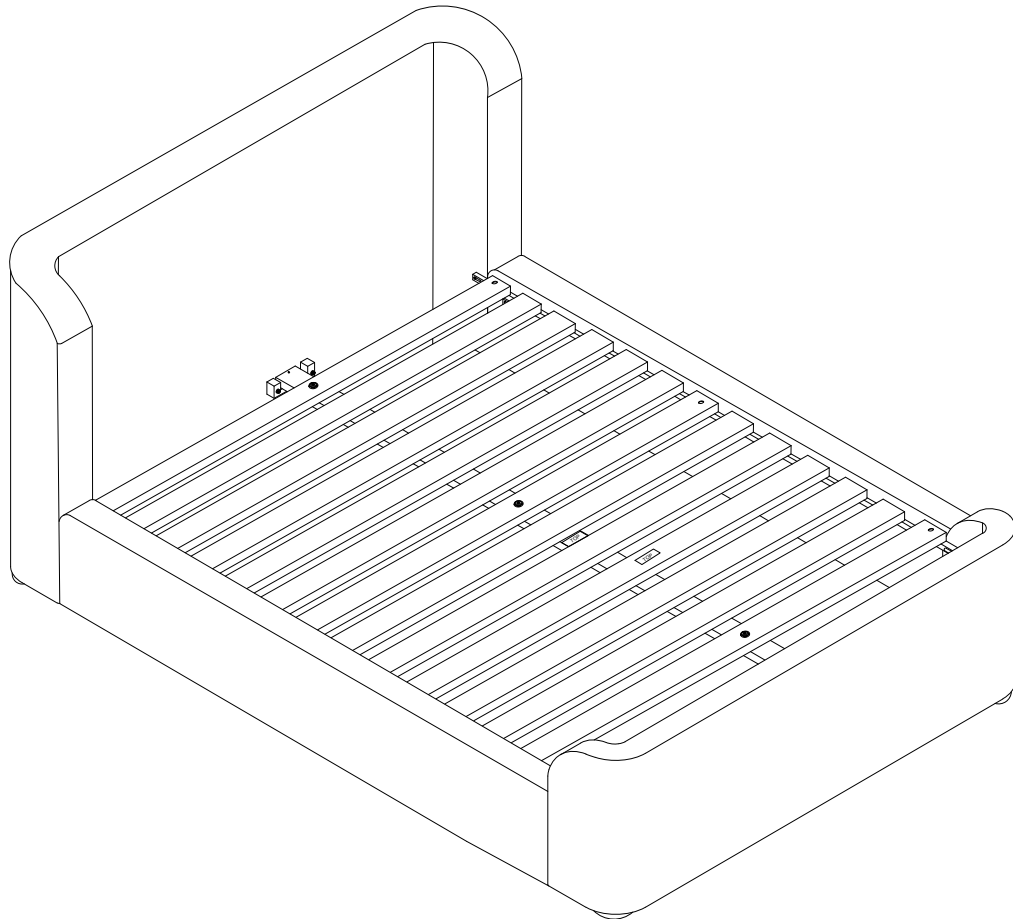


**ASSEMBLY COMPLETE**

## INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



## MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# KIKI UPHOLSTERED FULL BED

## ASSEMBLY INSTRUCTIONS



### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

|                              |       |
|------------------------------|-------|
| C. SLAT ROLL                 | 1 SET |
| F. CENTER SLAT SUPPORT       | 1 PC  |
| G. SUPPORT LEG               | 4 PCS |
| H. CENTER SLAT SUPPORT CLEAT | 2 PCS |

#### STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

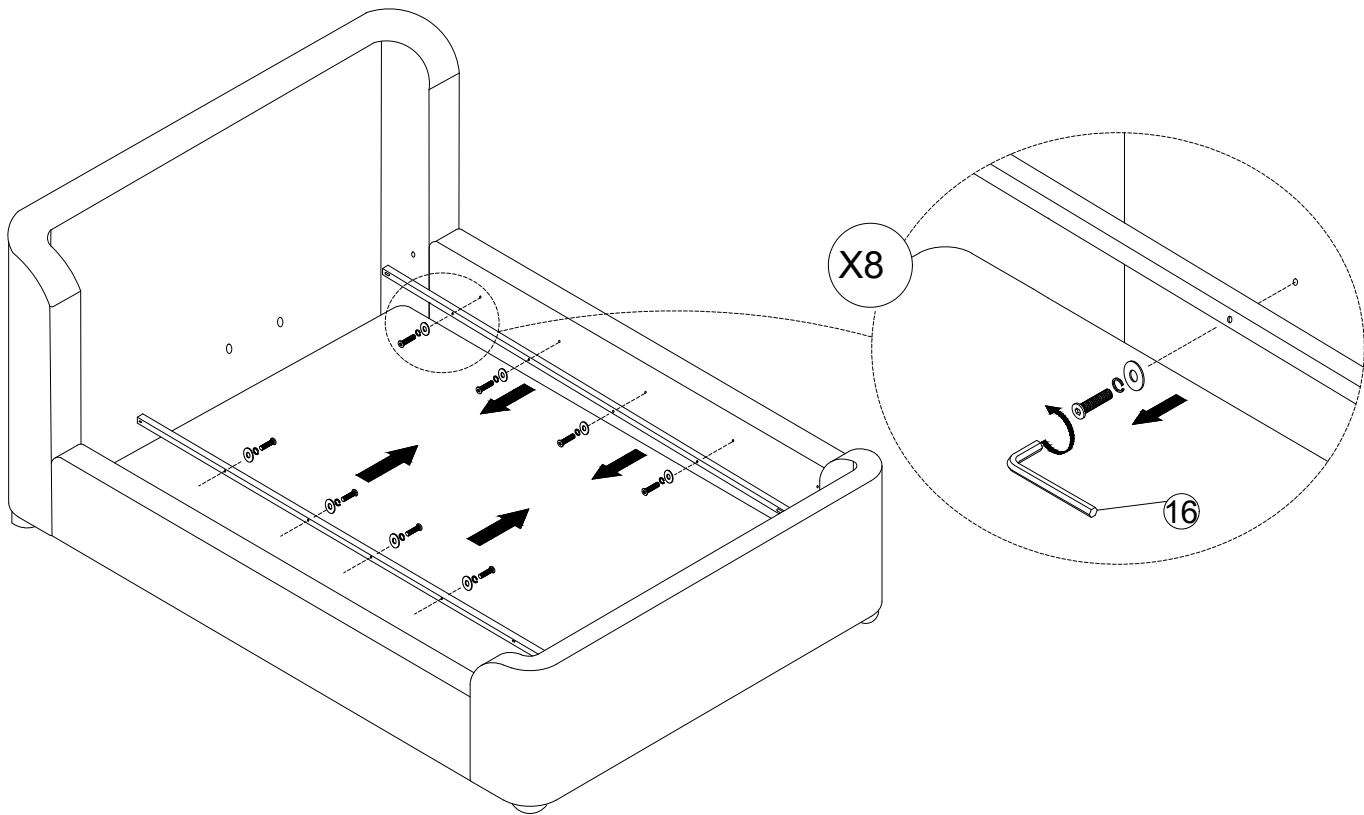

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION