

IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.


CUSTOMER SERVICE:

Toll-free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

TOOLS NECESSARY:


Screw Gun Tape Measure

NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

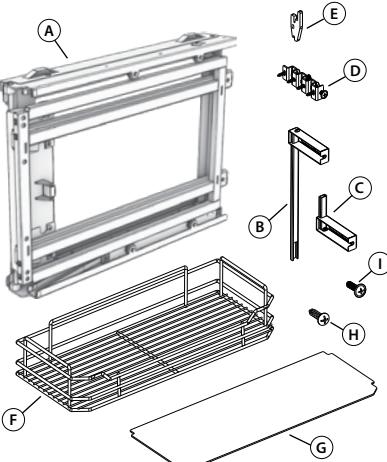
PARTS IDENTIFICATION:


A	Base Unit	1X
B	Door Bracket - Long Arm	1X
C	Door Bracket - Short Arm	1X
D	Attachment Bracket	2X
E	Basket Hook	2X
F	Wire Basket	1X
G	Basket Liner	1X
H	#8 x 1/2" Pan Head Phillips Wood Screw	6X
I	#8 x 5/8" Pan Head Phillips Wood Screw	8X




Right-Hand Installation (Optional)

This unit comes assembled for left-hand installation. For right-hand installation, the door bracket arms need to be converted for the correct orientation before installing in the cabinet.

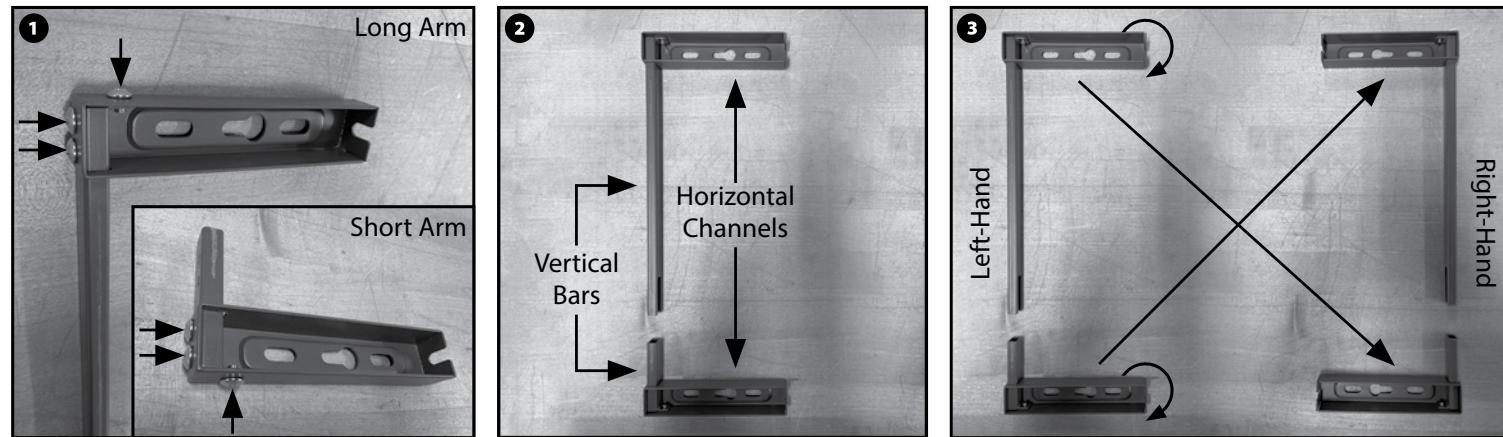


Remove (6) screws as shown above (Figure 1). Then, separate the horizontal channels from the vertical bars (Figure 2). Take the horizontal bar from the short arm, rotate it 180° so that the holes for the two screws are on the right side, and then slide it onto the vertical bar from the long arm. Take the horizontal channel from the long arm, rotate it 180° so that the holes for the two screws are on the right side, and then slide it onto the vertical bar from the short arm (Figure 3). Using the 6 screws from the first step, reassemble the door bracket arms in the new right-hand orientation.

Cabinet Installation

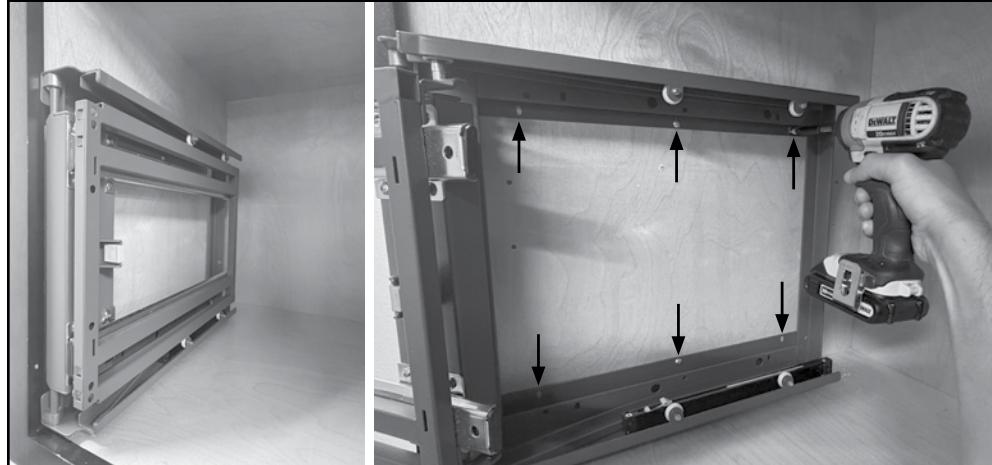

1

Place unit against inside cabinet wall as shown with the edge against rear of face frame (for frameless cabinets, set back 3/4"). Cycle the unit to gain access to the mounting holes, and secure to the cabinet side with (6) #8 x 1/2" screws.

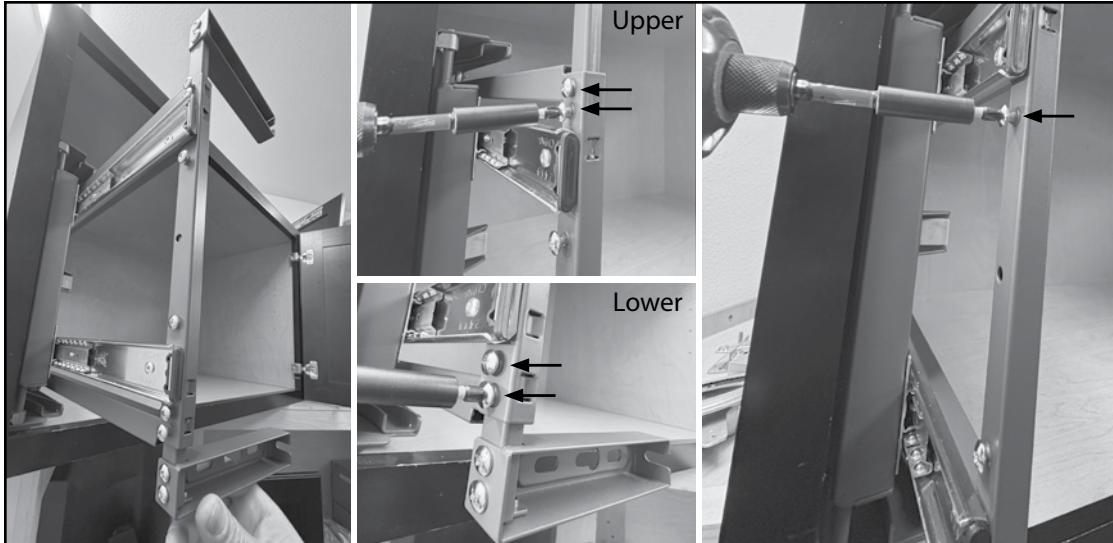

2


With unit extended, insert lower door arm into bottom of pullout and upper door arm into top as shown. Adjust the arms so they are within 1/8" of cabinet opening and tighten the machine screws at the locations shown to keep the arms in place.

If installing the unit in a cabinet with a 15" door opening height, tighten the screw located just below the top slide to secure the door arms in place.




3

Close the unit and temporarily hold the door in its approximate location. With the opposite door open, reach into the cabinet and lightly trace around door bracket arms (upper and lower) to aid in bracket installation.

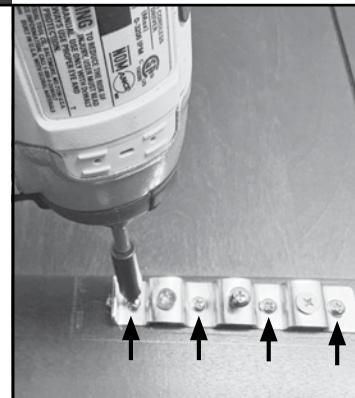

4

Remove the door and center the attachment brackets between the marks made in step 3 and secure with (4) #8 x 5/8" screws per bracket.

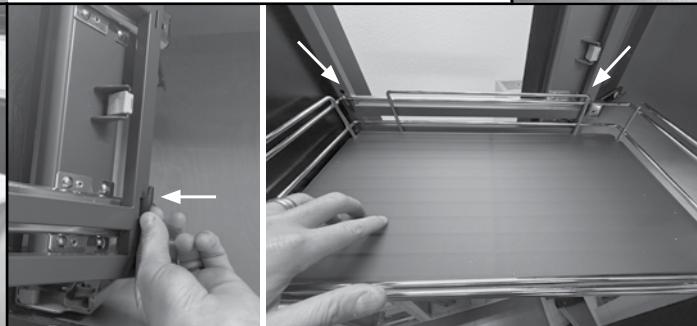


5

Secure the door to the unit by sliding the attachment bracket center screw into the keyhole of the door bracket arms and tighten the center screw.

6

Insert (2) basket hooks into the lower slots of the pullout as shown. Set basket onto the hooks and place the liner into the basket.

Door Adjustment

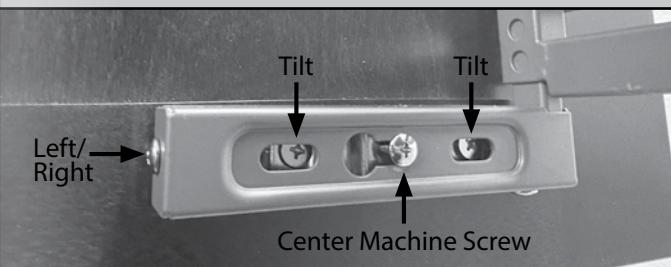

Left/Right: Loosen center machine screw and adjust machine screw on side of horizontal door arm. Retighten center screw.

Up/Down: Loosen screws securing vertical door arms from Step 2. Adjust and retighten.

Tilt: Loosen center machine screw and turn 2 outside screws in/out for desired tilt. Retighten center screw.