

BARN DOOR

GUIDE TO DRILLING HOLES FOR SLIDING DOOR WHEEL INSTALLATION

1


What you need:



- Power drill
- Phillips screw bit
- 3/8" drill bit
- Tape measure


2

Your door is designed with two distinct sides, allowing you to choose the orientation according to your preference. Please determine whether you will install the sliding hardware on the face or the backface of the door, and then proceed with drilling the holes.

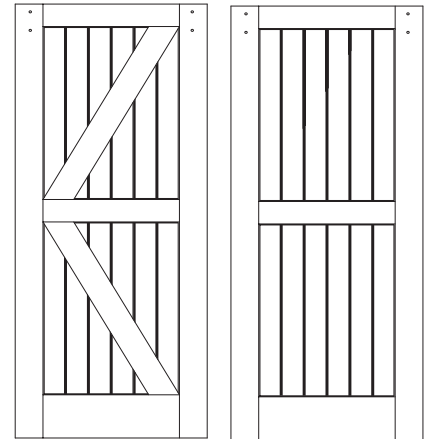

3

Before drilling the 4 (four) holes for the sliding wheel hardware, ensure your door is positioned correctly with the top and bottom rails properly oriented. The bottom rail is wider, measuring 8 inches, while the top rail is narrower at 4-1/4 inches. It is crucial to drill the holes only into the top rail, following the appropriate measurements as per next figure.

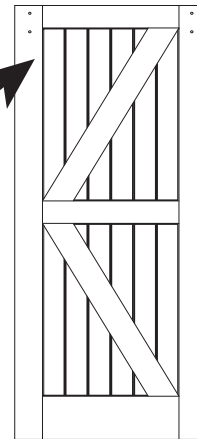

4

Your door DOES NOT come pre-drilled. To install the two sliding wheels, you will need to drill four (4) holes yourself using a drill and a 3/8" diameter drill bit. Please ensure you maintain the precise distances between the holes.

