

KIKI UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

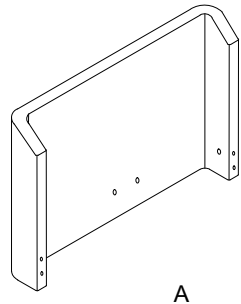

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8 x 50mm)		2 PCS
2	FLAT WASHER (8 x 19mm)		2 PCS
3	LOCK WASHER (8 x 22mm)		2 PCS
4	ALLEN KEY (8mm)		1 PC



HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (8 x 90mm)		8 PCS
6	ALLEN BOLT (8 x 50mm)		2 PCS
7	ALLEN BOLT (6 x 50mm)		8 PCS
8	ALLEN BOLT (6 x 30mm)		4 PCS
9	FLAT WASHER (8 x 22mm)		8 PCS
10	FLAT WASHER (8 x 19mm)		2 PCS
11	FLAT WASHER (6 x 16mm)		12 PCS
12	LOCK WASHER (8 x 22mm)		10 PCS
13	LOCK WASHER (6 x 16mm)		12 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		10 PCS
16	ALLEN KEY (6mm)		1 PC
17	ALLEN KEY (8mm)		1 PC
18	WRENCH		1 PC
19	CONNECTING BRACKET		4 PCS

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG




1 PC
1 SET
2 PCS
2 PCS

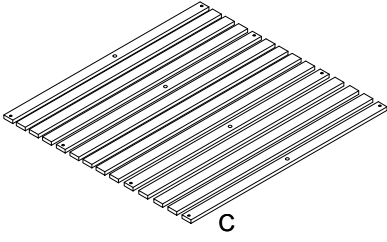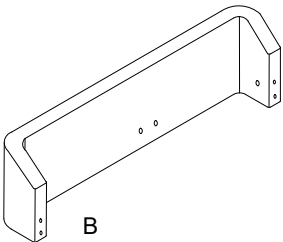





BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
1 PC
4 PCS

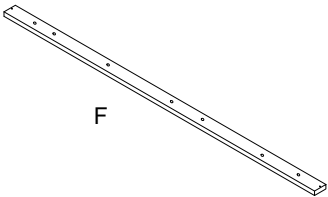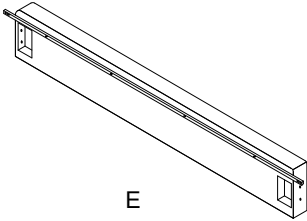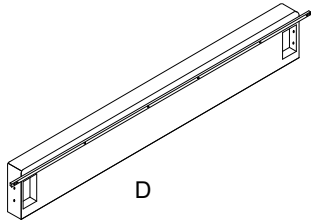

FULLY ASSEMBLED

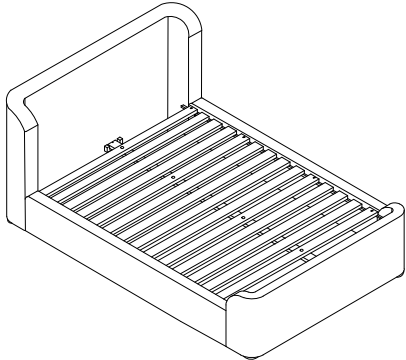


KIKI UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 1:

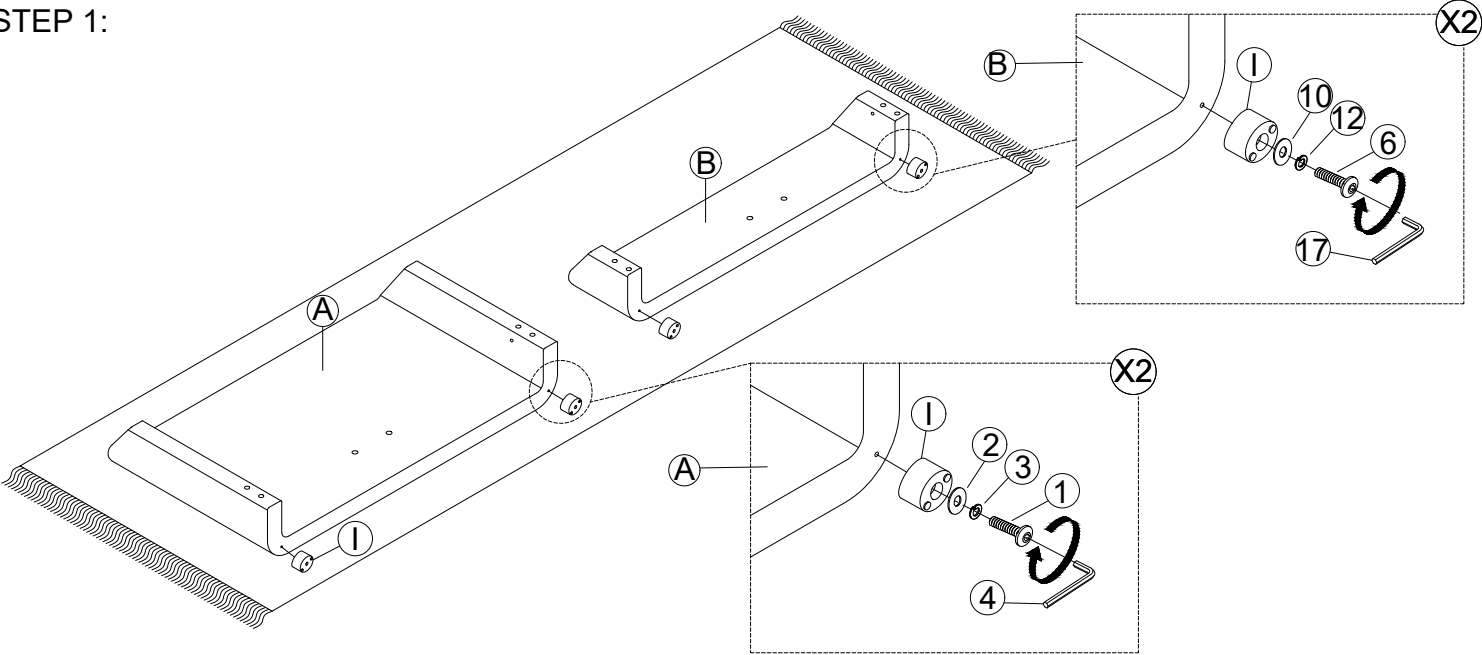

STEP 2:

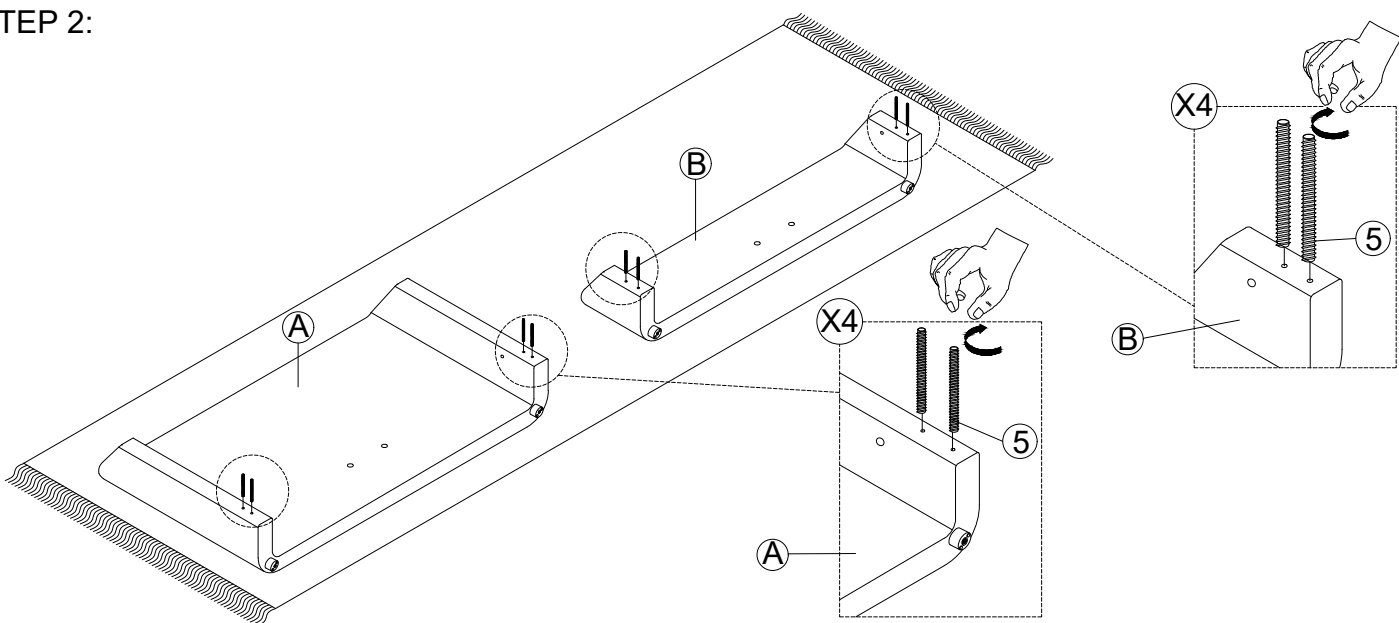


STEP 3:

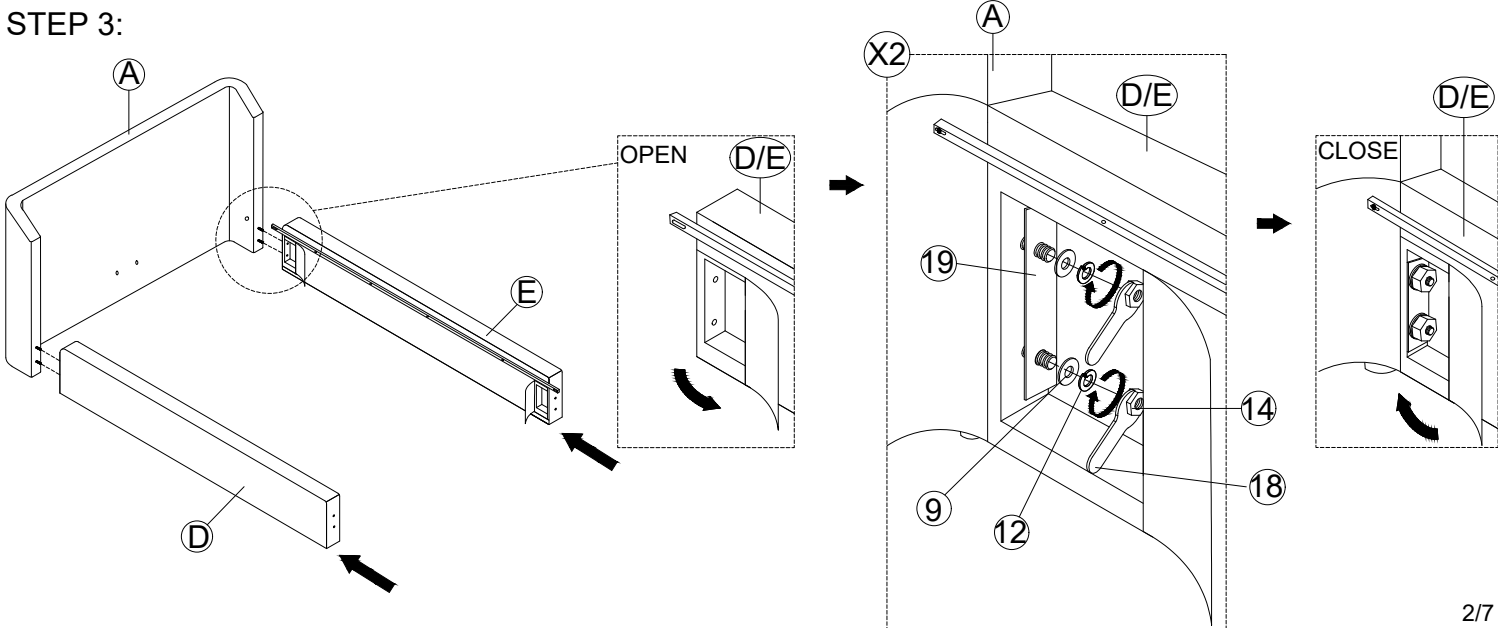

KIKI UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS


STEP 4:

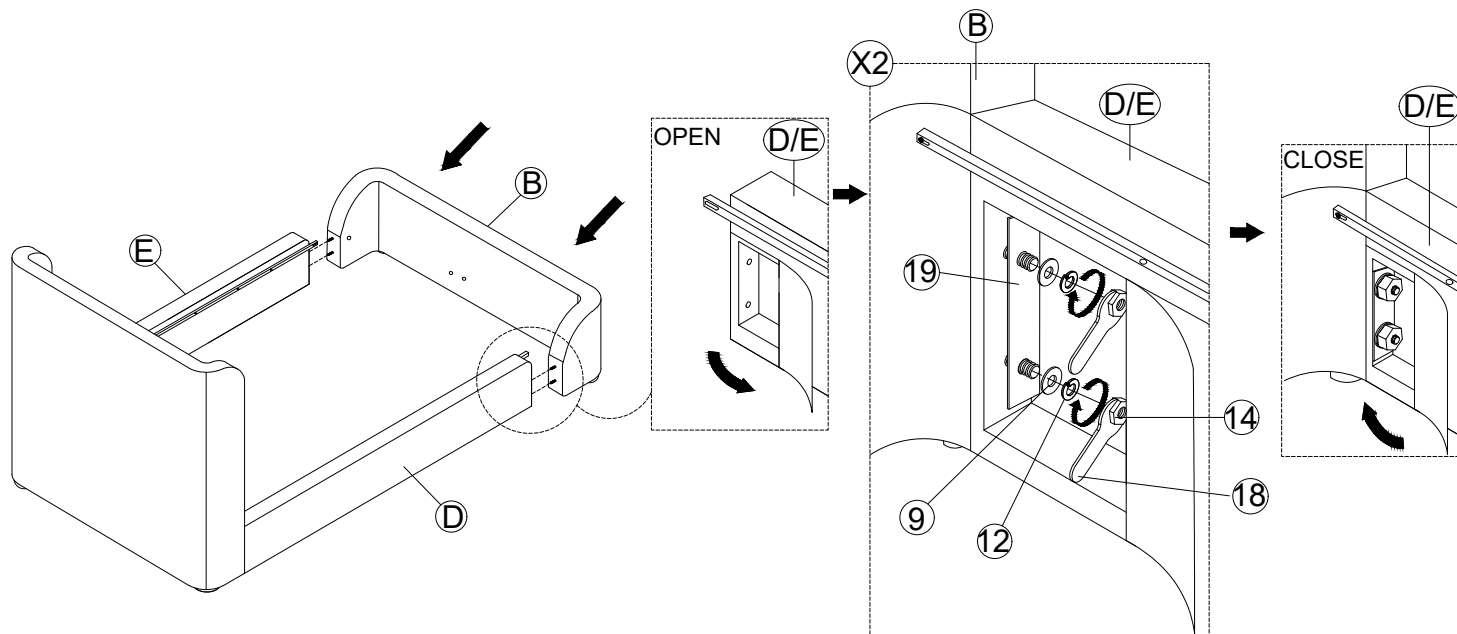

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

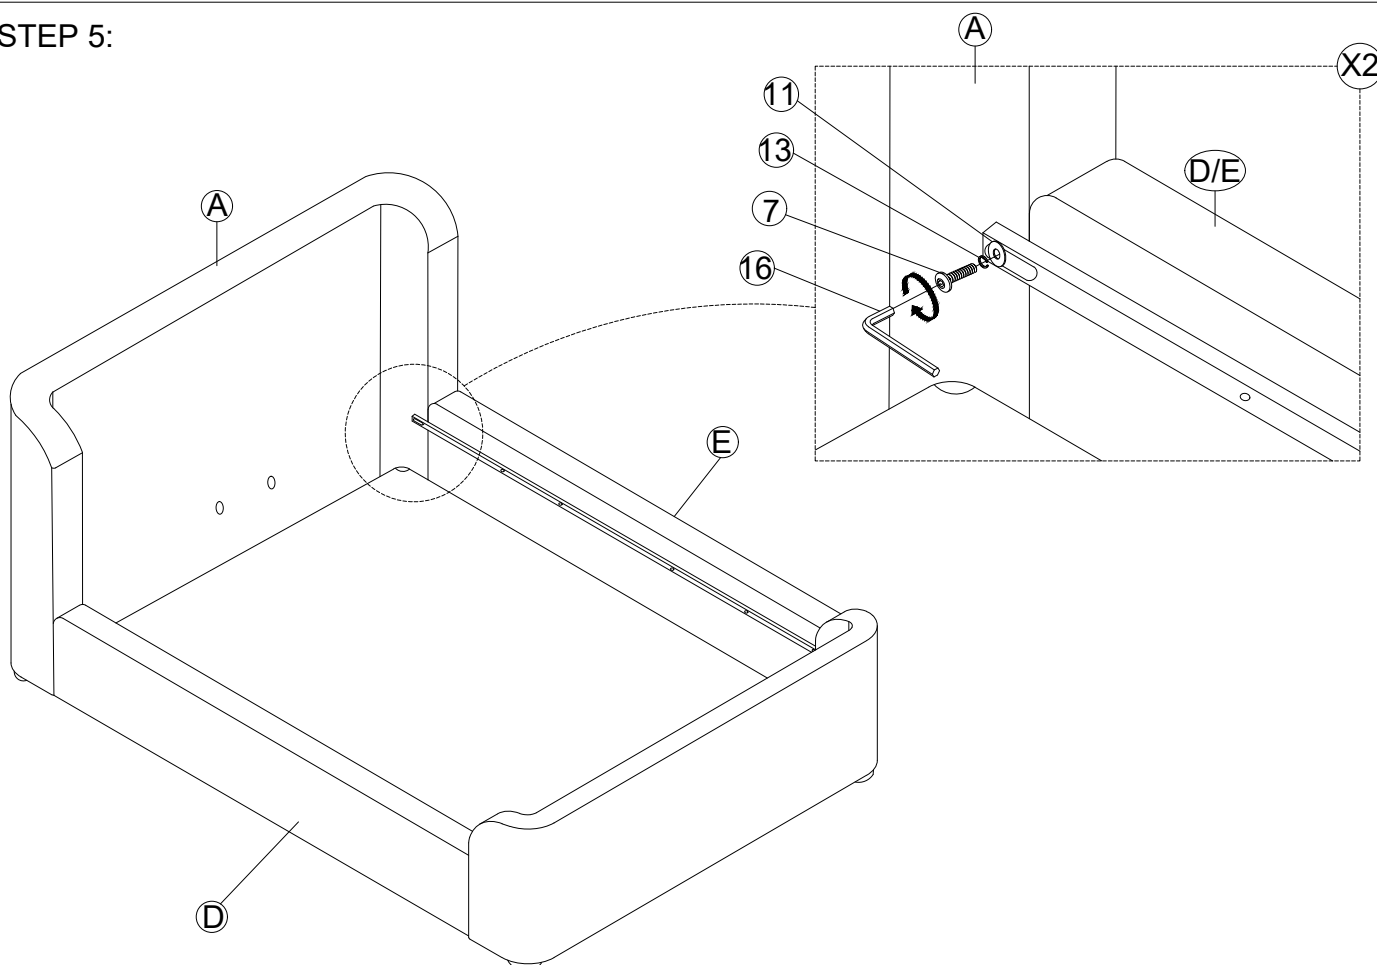


KIKI UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 6:

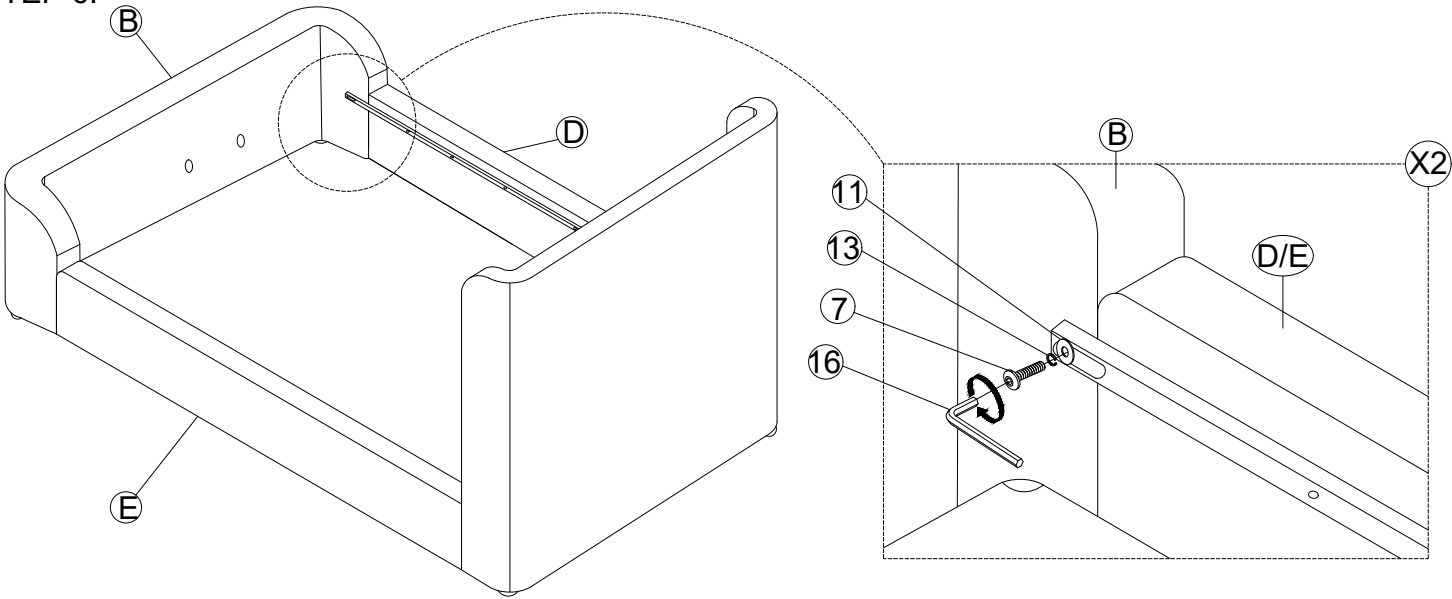

STEP 7:

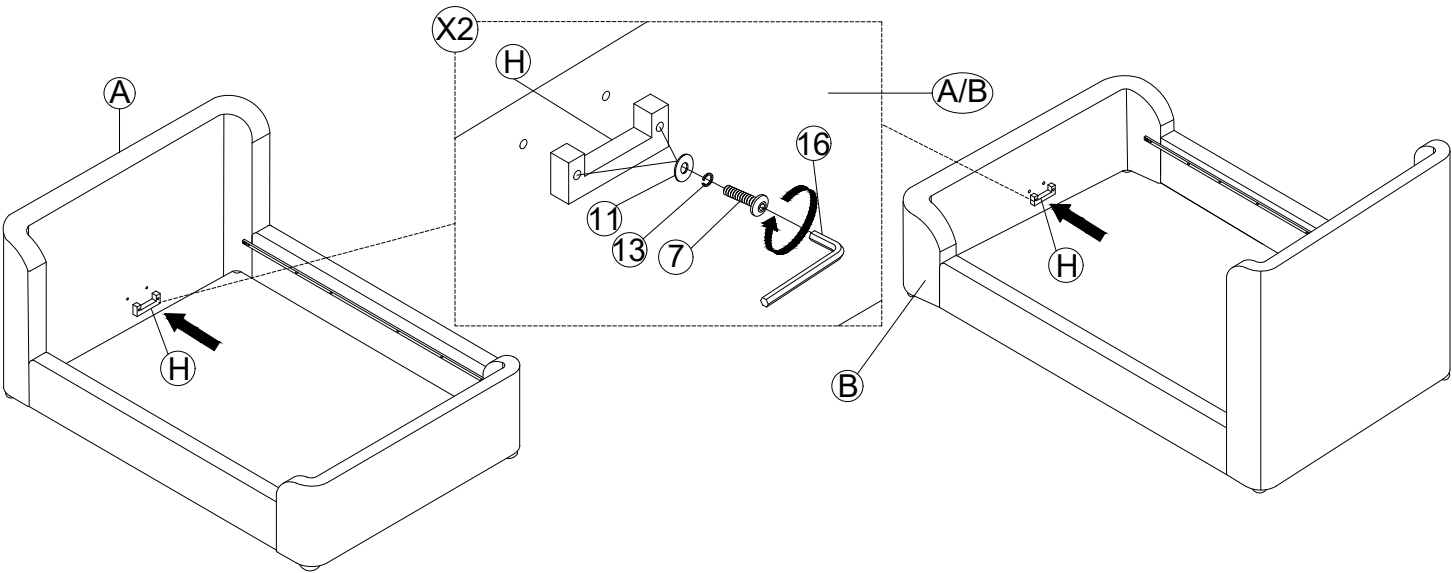

STEP 8:

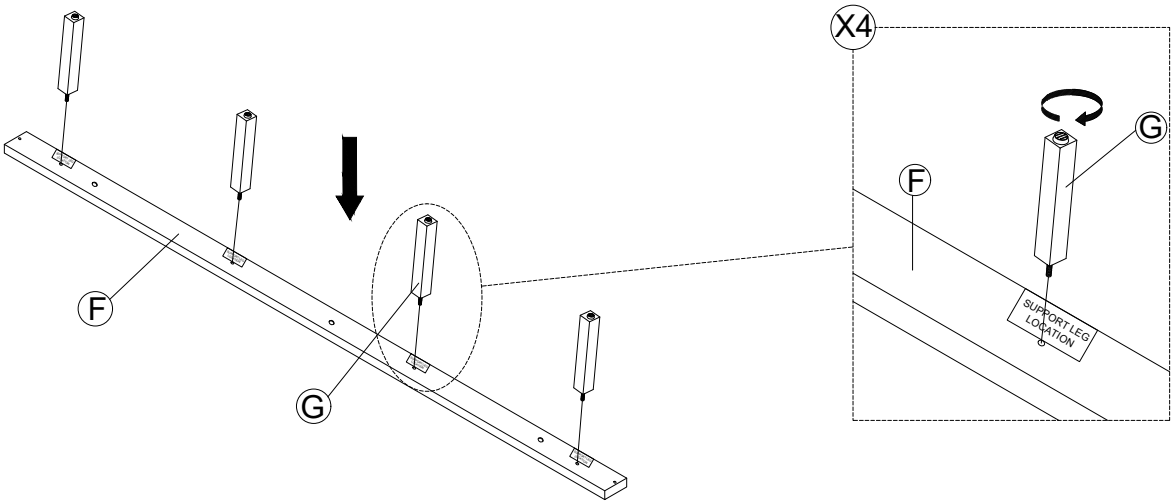


KIKI UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 9:

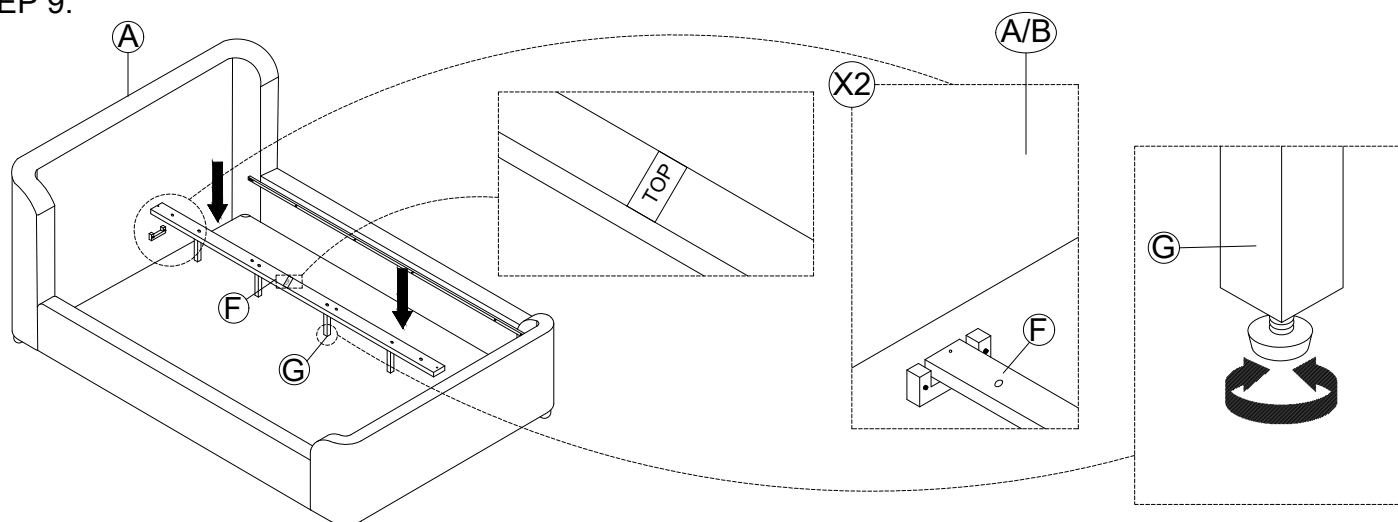

STEP 10:

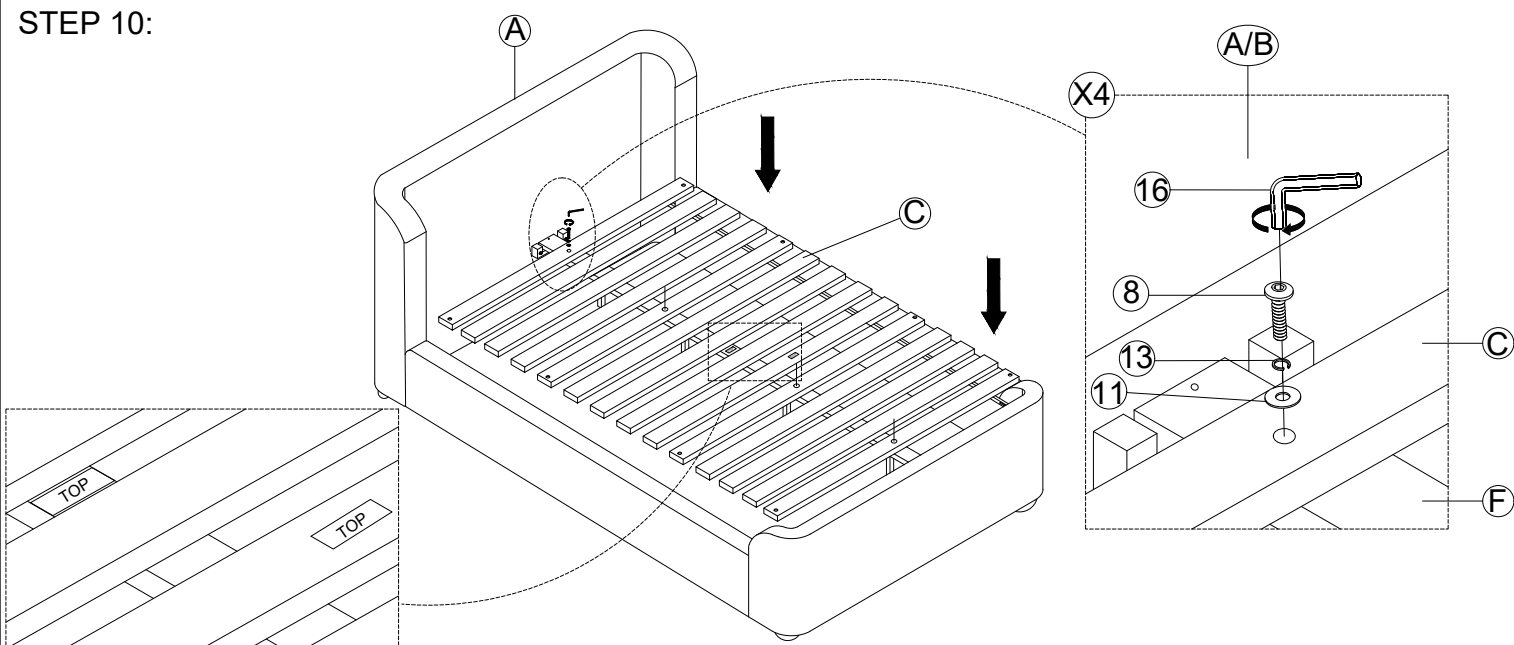


STEP 11:

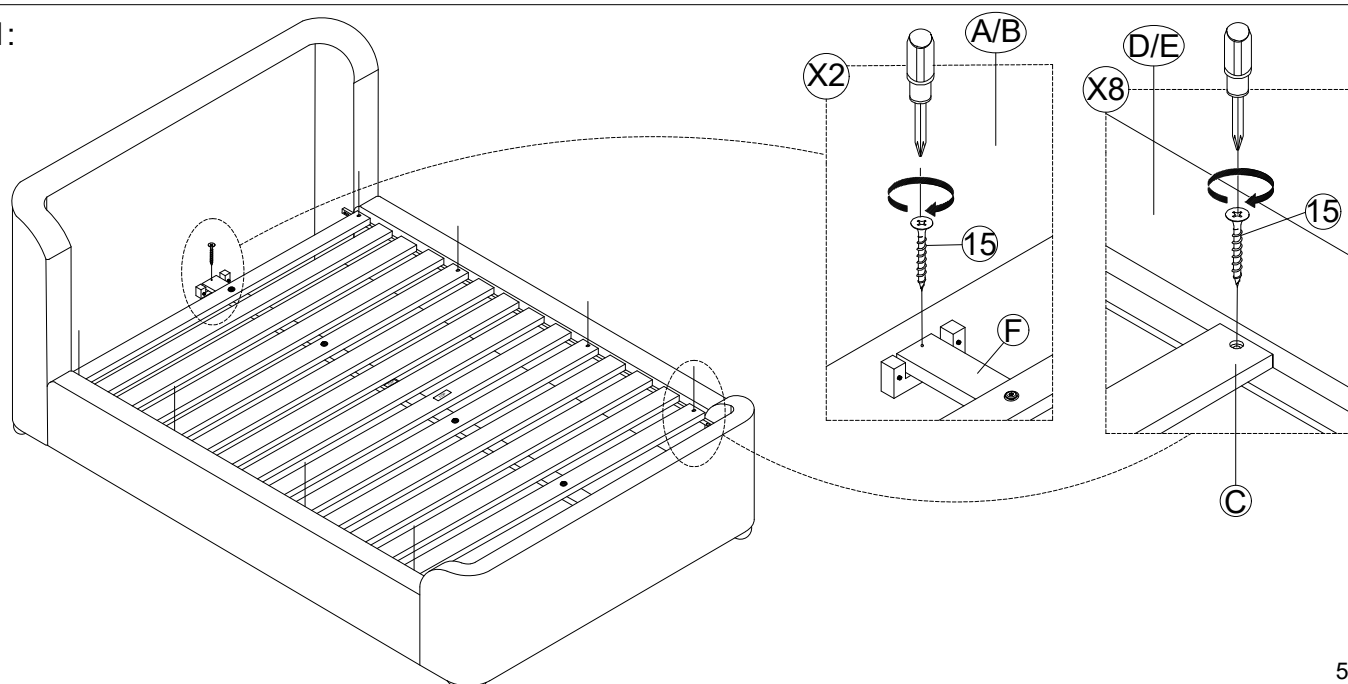

KIKI UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

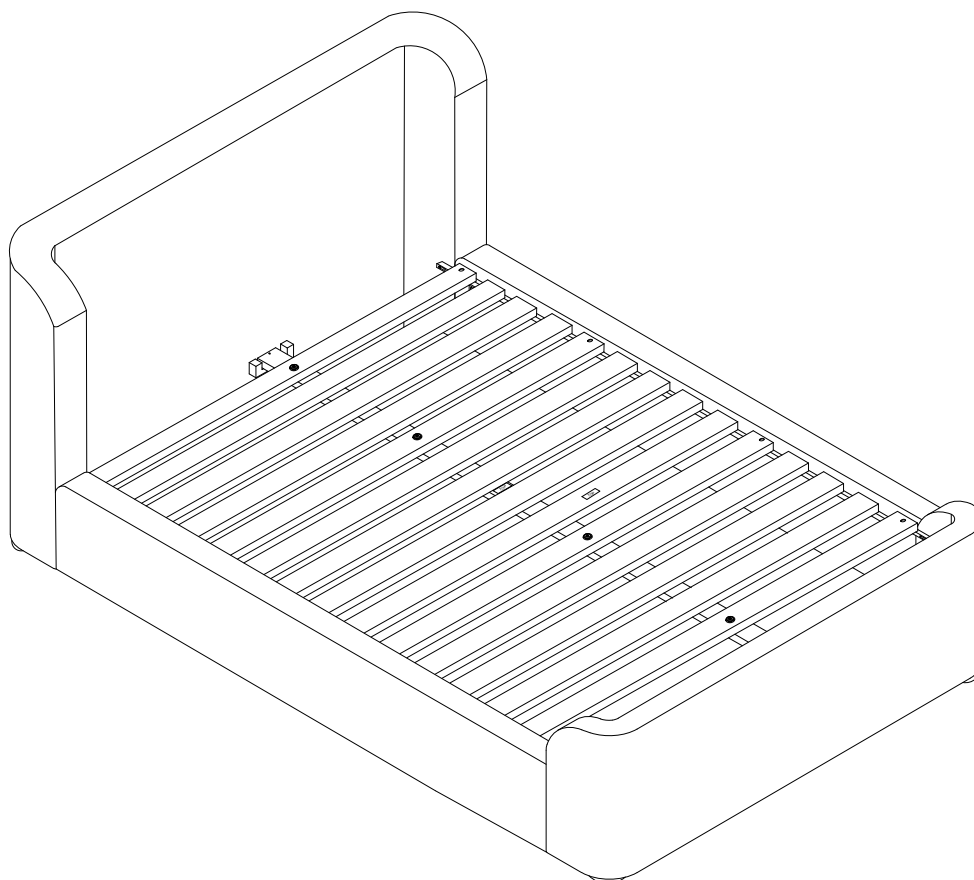


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KIKI UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

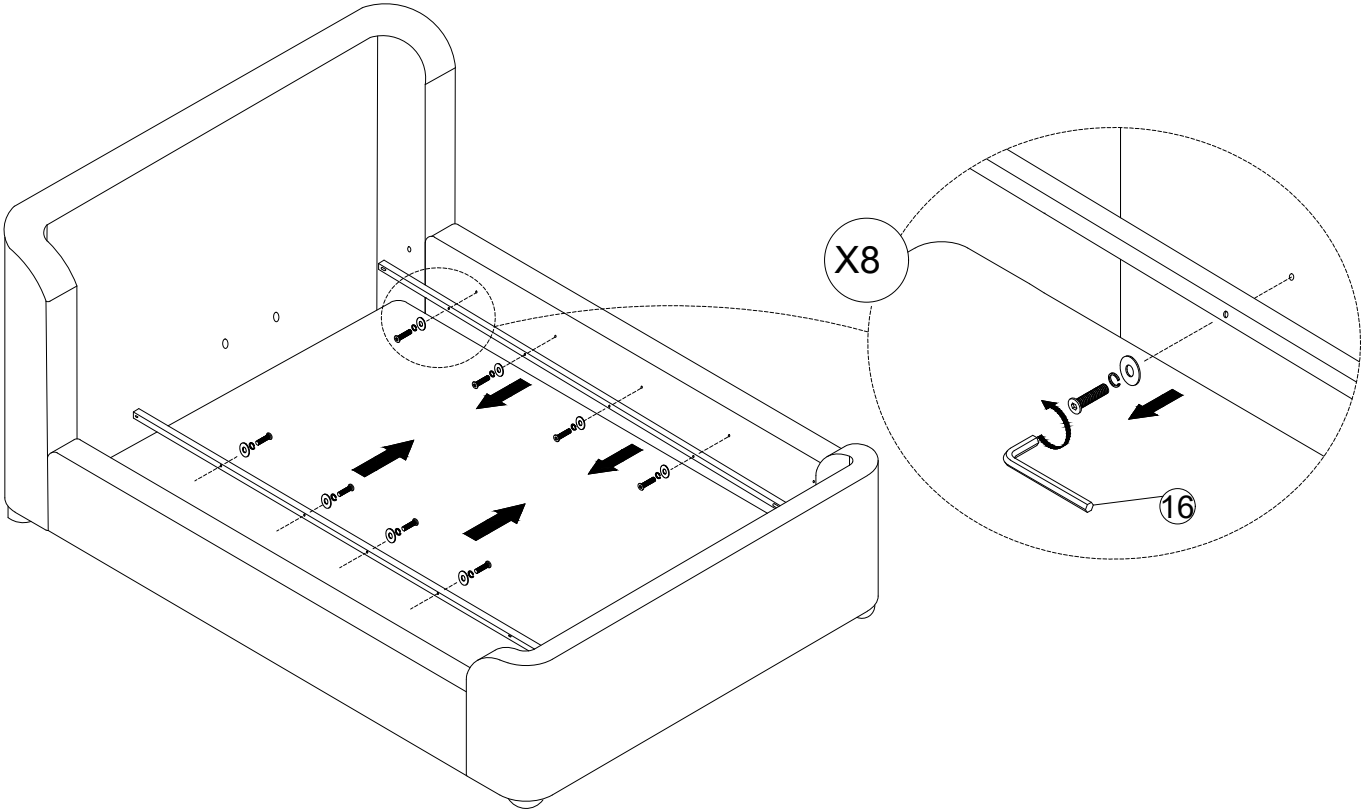

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


KIKI UPHOLSTERED KING BED
ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

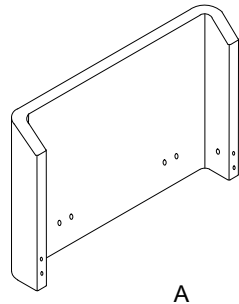

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8 x 50mm)		2 PCS
2	FLAT WASHER (8 x 19mm)		2 PCS
3	LOCK WASHER (8 x 22mm)		2 PCS
4	ALLEN KEY (8mm)		1 PC



HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (8 x 90mm)		8 PCS
6	ALLEN BOLT (8 x 50mm)		2 PCS
7	ALLEN BOLT (6 x 50mm)		12 PCS
8	ALLEN BOLT (6 x 30mm)		8 PCS
9	FLAT WASHER (8 x 22mm)		8 PCS
10	FLAT WASHER (8 x 19mm)		2 PCS
11	FLAT WASHER (6 x 16mm)		20 PCS
12	LOCK WASHER (8 x 22mm)		10 PCS
13	LOCK WASHER (6 x 16mm)		20 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		12 PCS
16	ALLEN KEY (6mm)		1 PC
17	ALLEN KEY (8mm)		1 PC
18	WRENCH		1 PC
19	CONNECTING BRACKET		4 PCS

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG




1 PC
1 SET
4 PCS
2 PCS

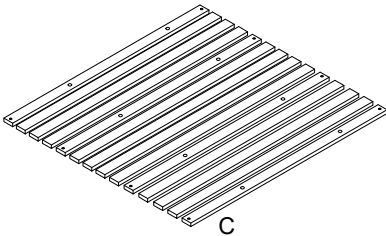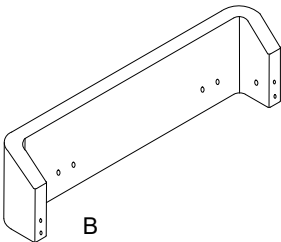





BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
2 PCS
8 PCS

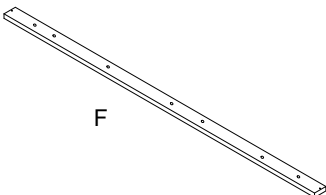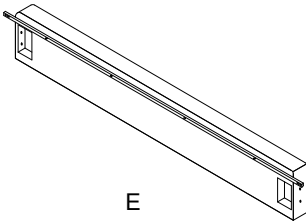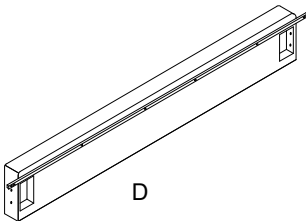


FULLY ASSEMBLED

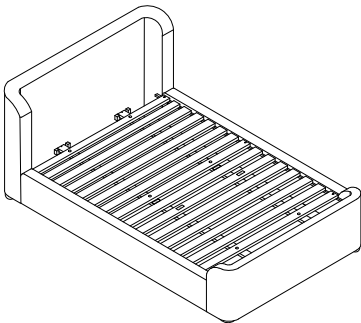


KIKI UPHOLSTERED KING BED
ASSEMBLY INSTRUCTIONS




STEP 1:

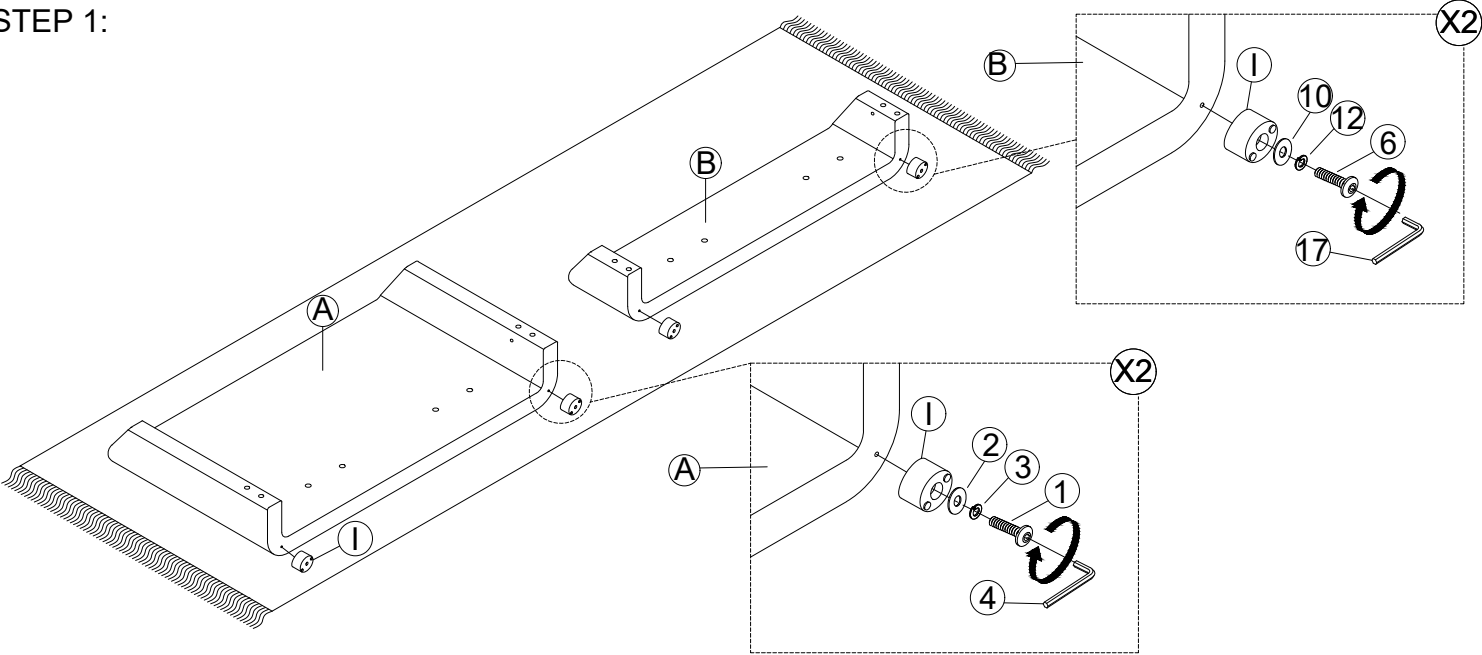

STEP 2:

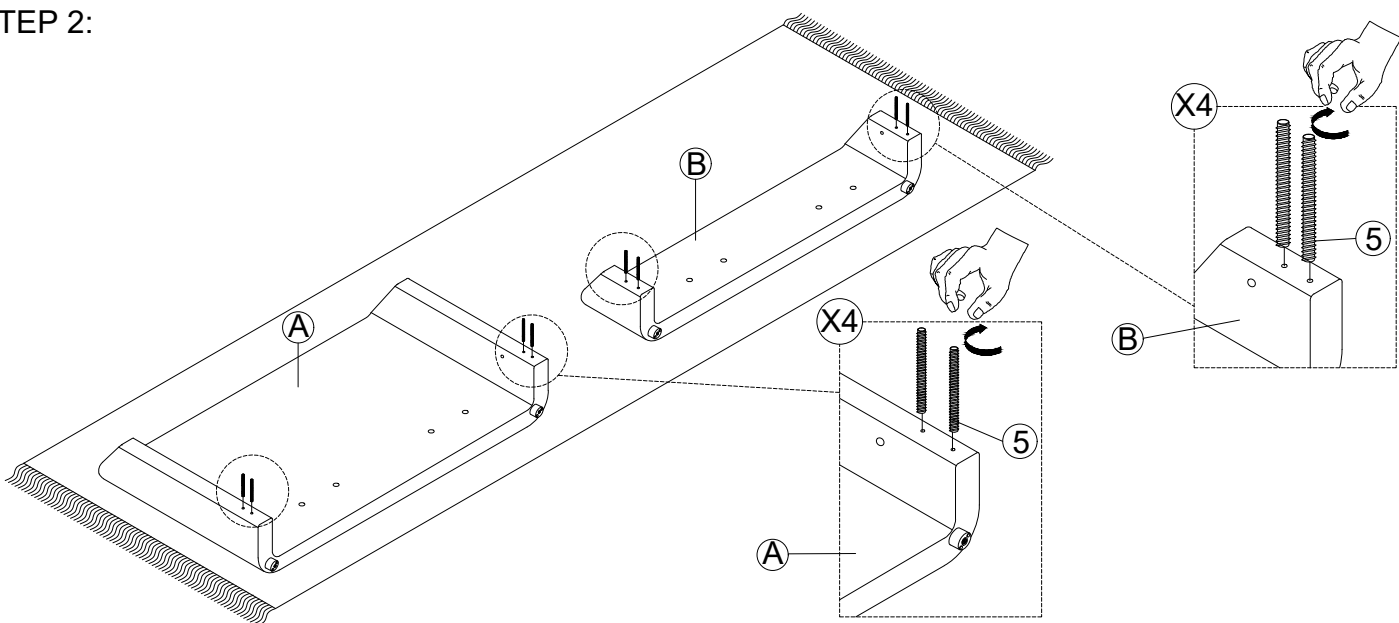


STEP 3:

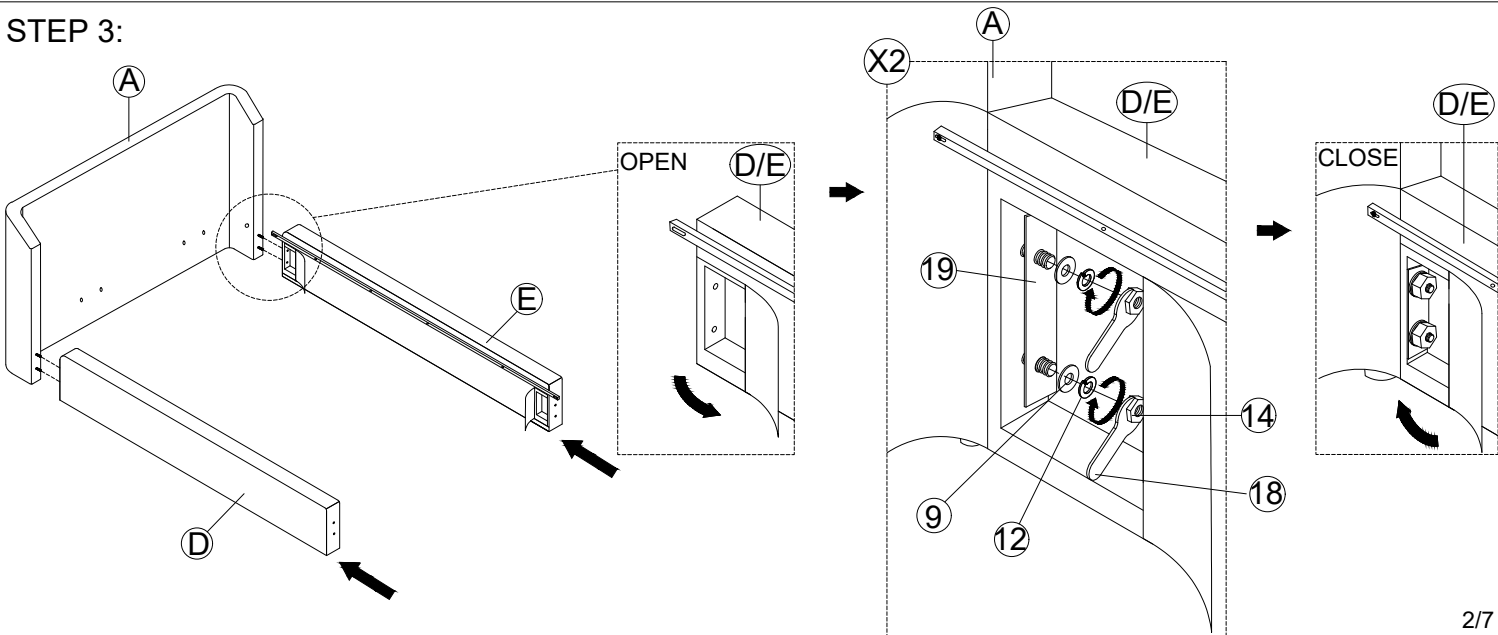

KIKI UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS


STEP 4:

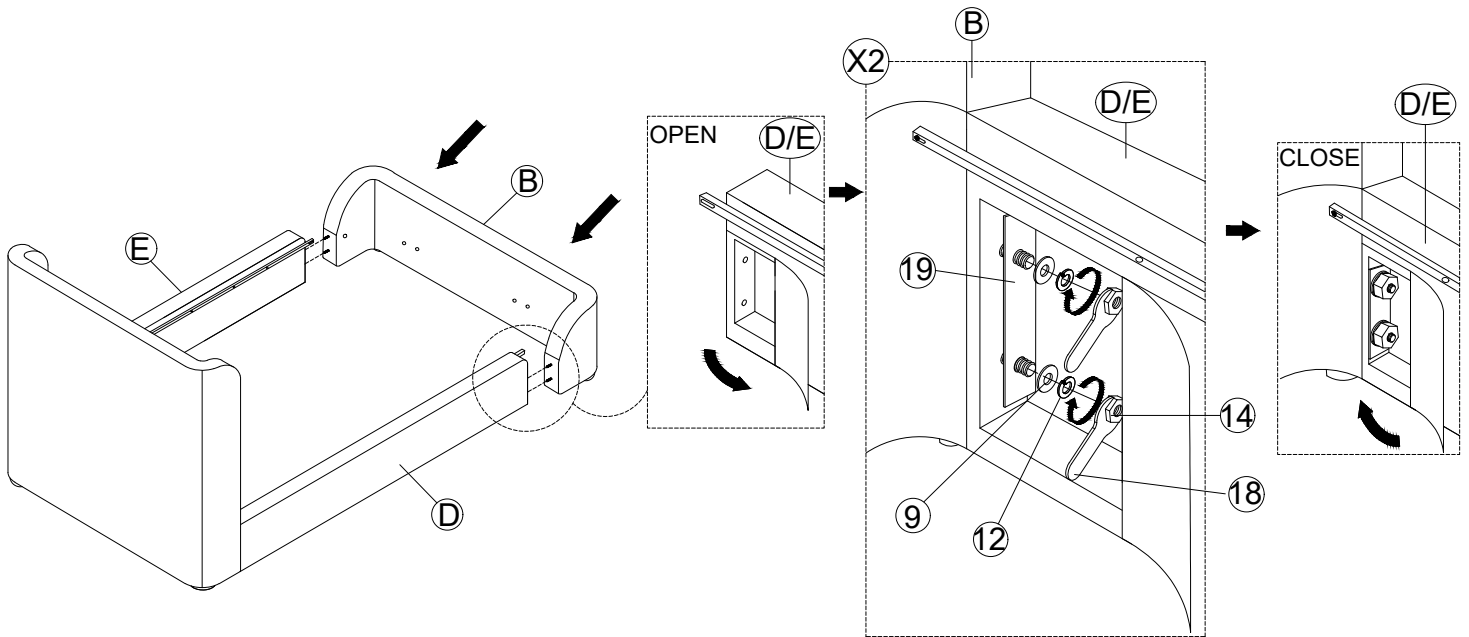

STOP




- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

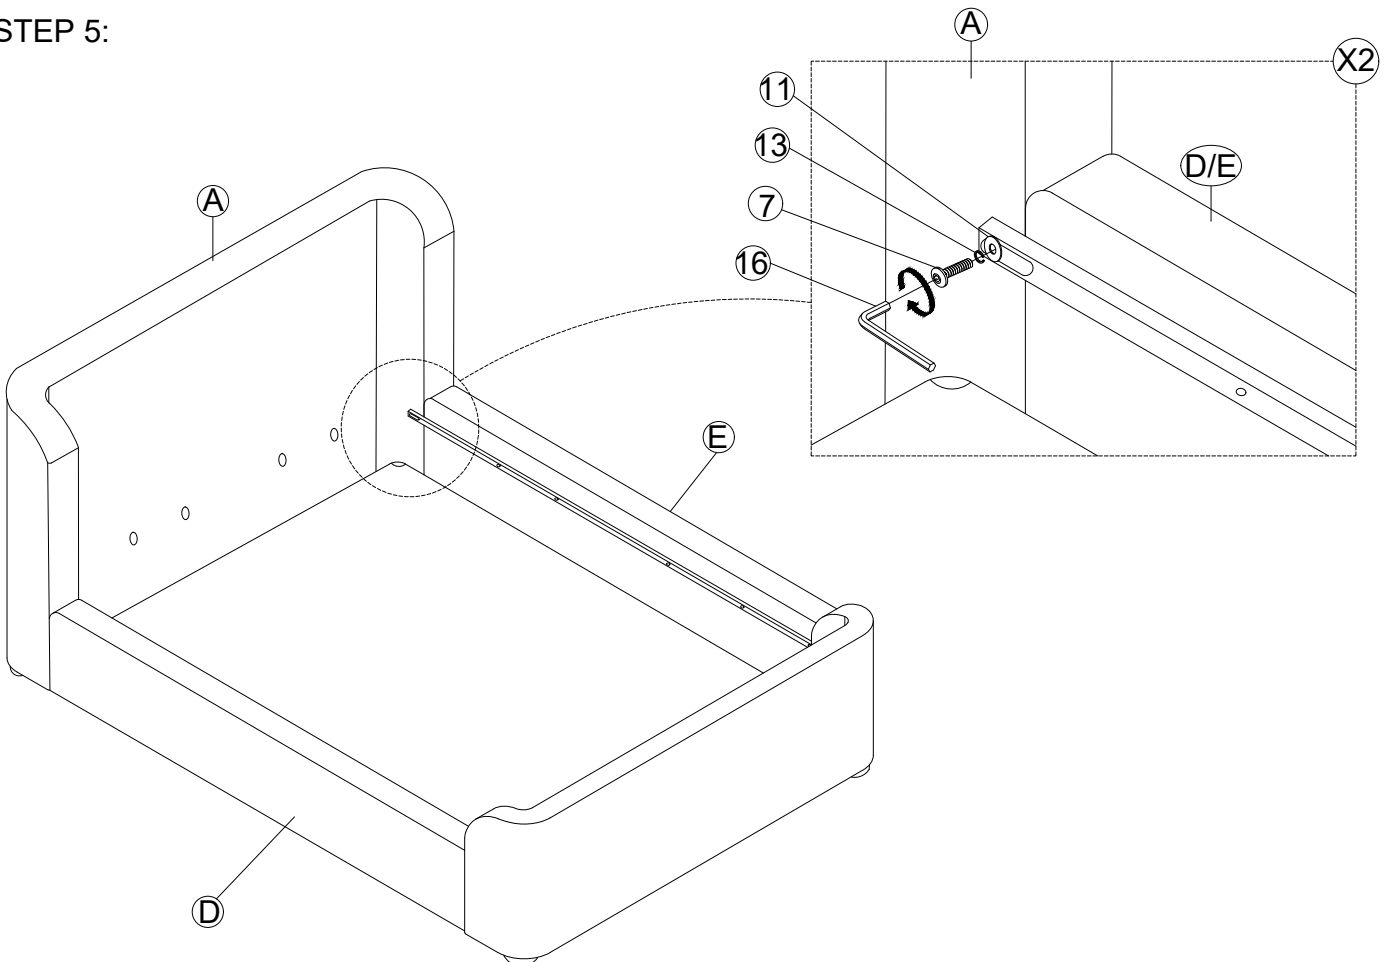

KIKI UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

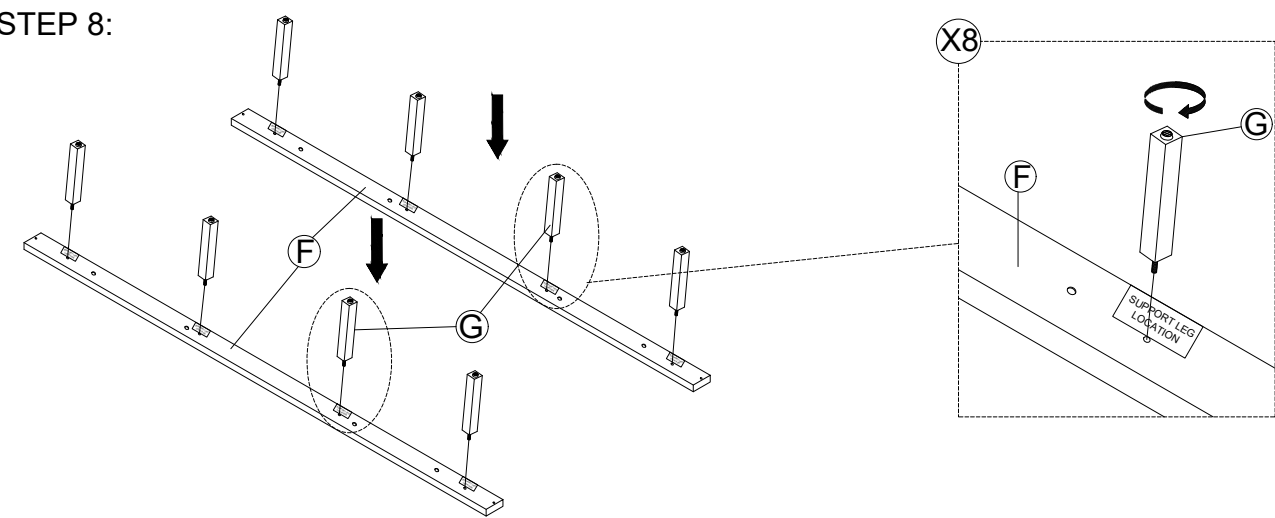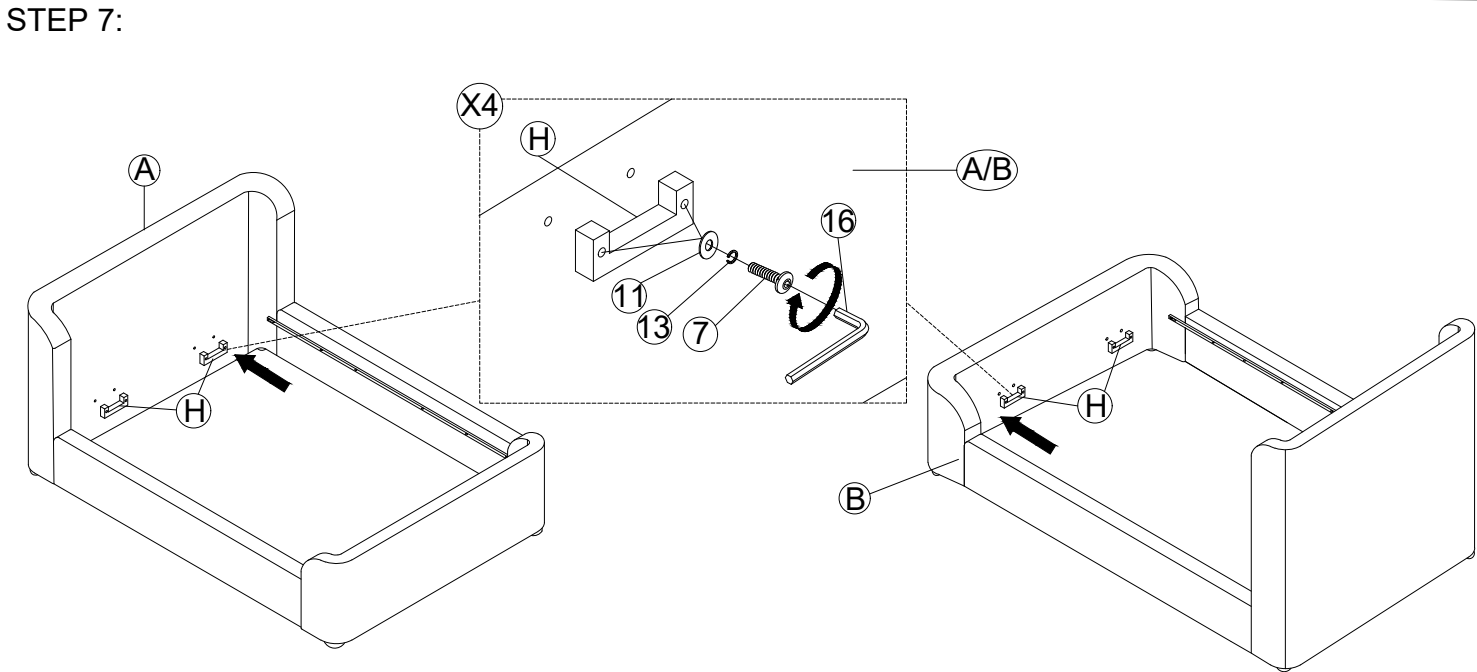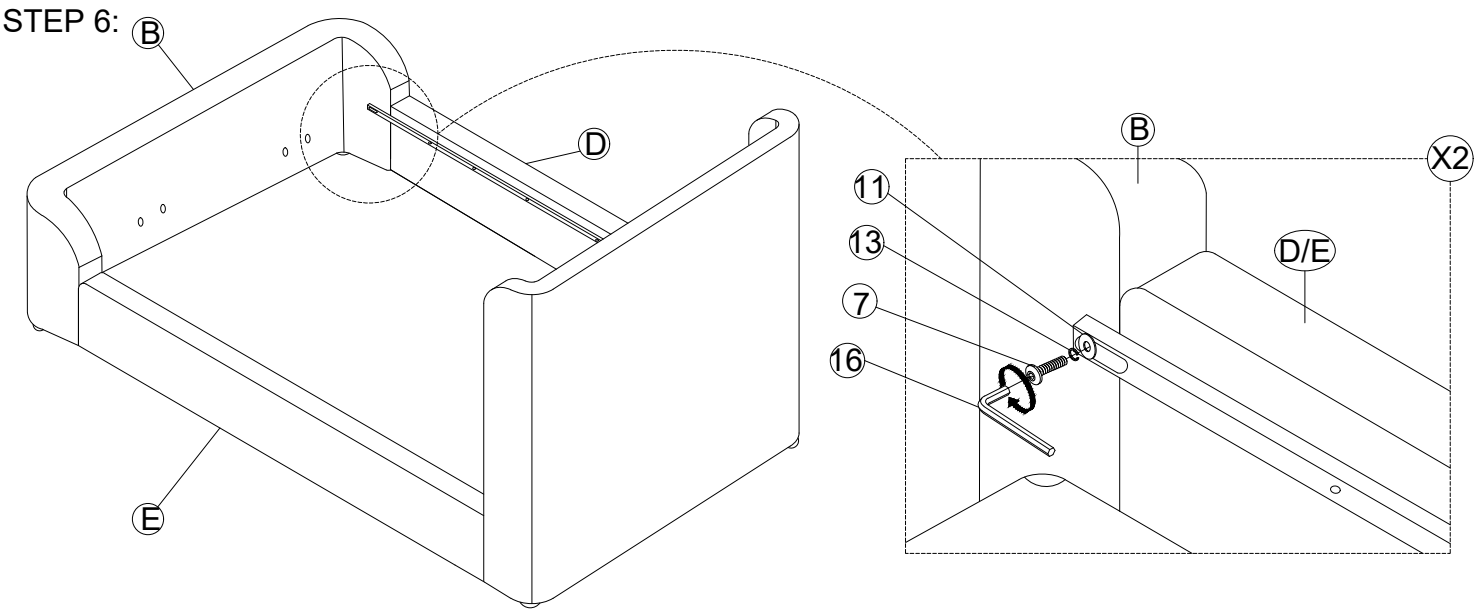


KIKI UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STEP 9:

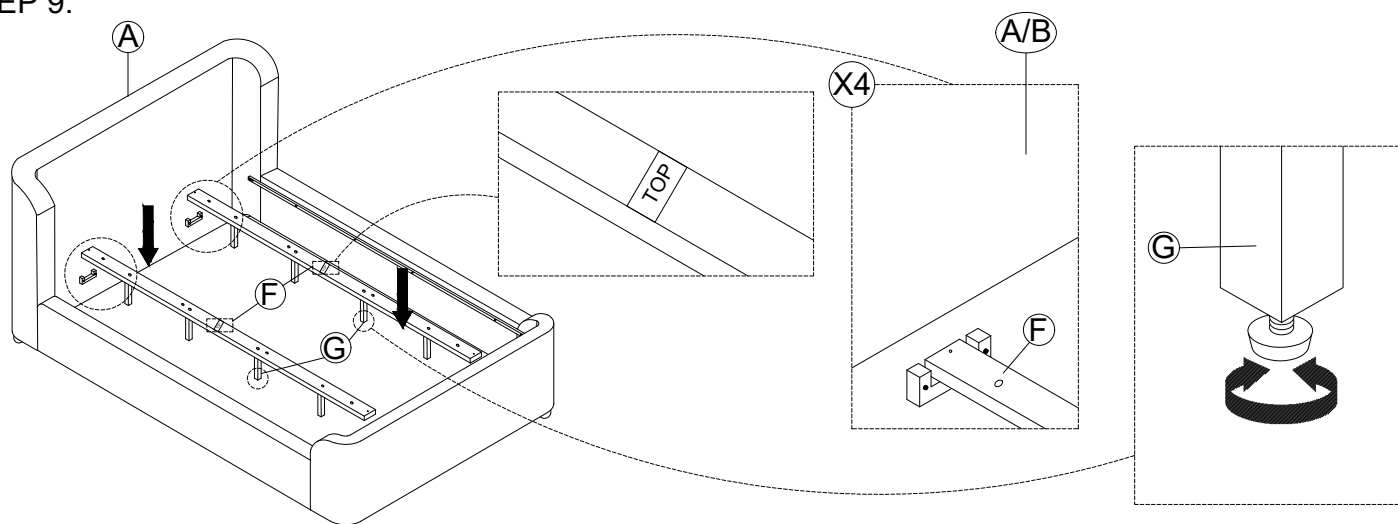

STEP 10:

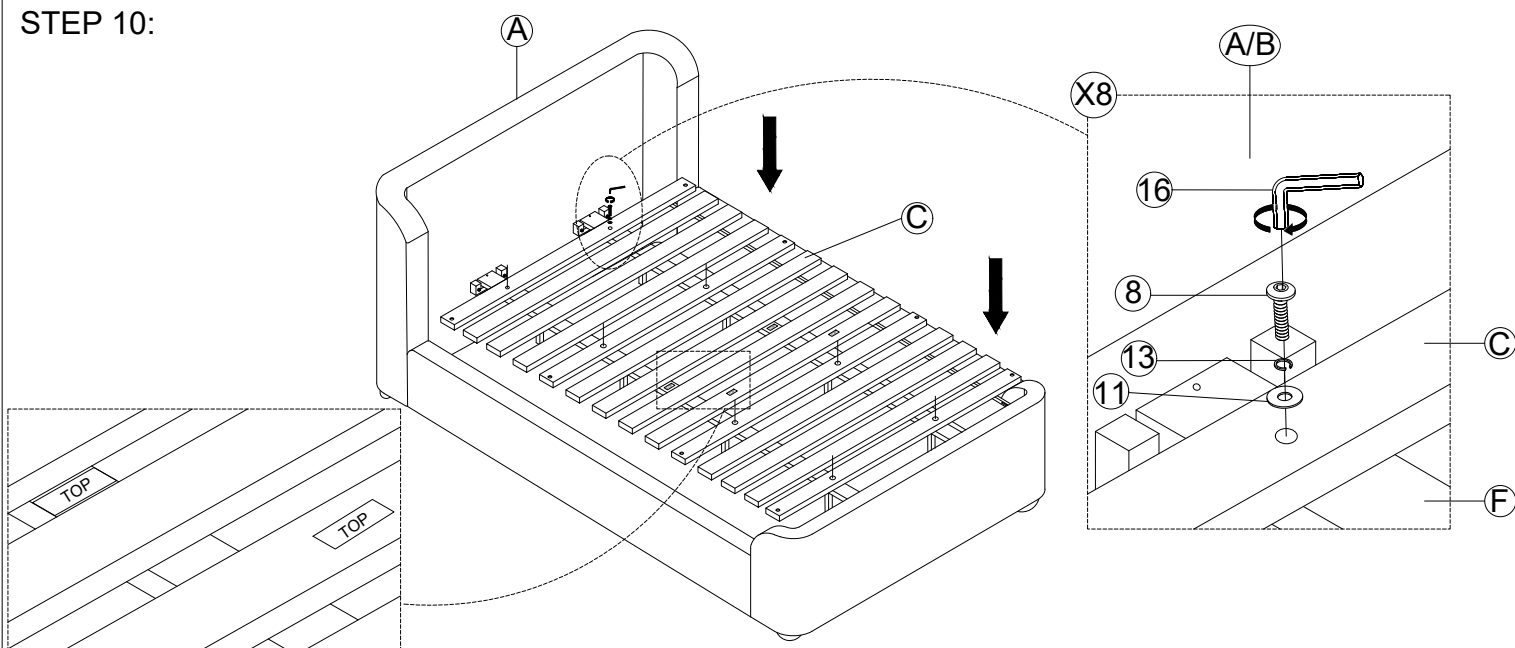


STEP 11:

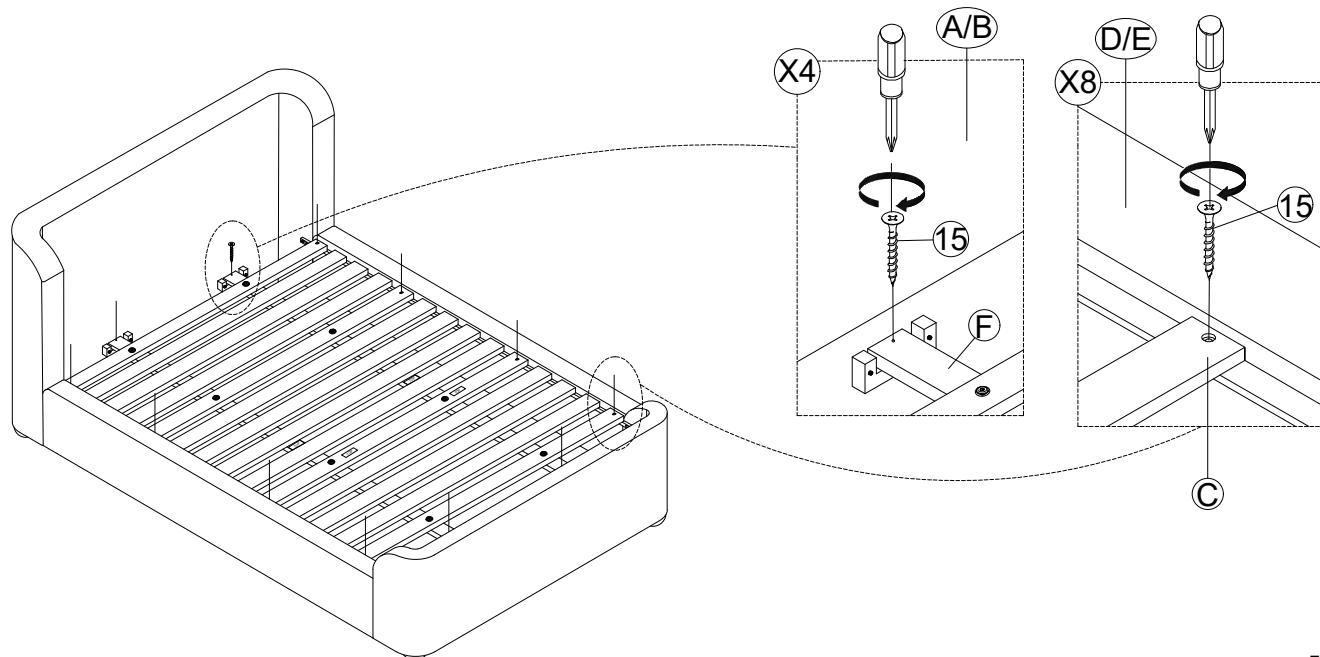

KIKI UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

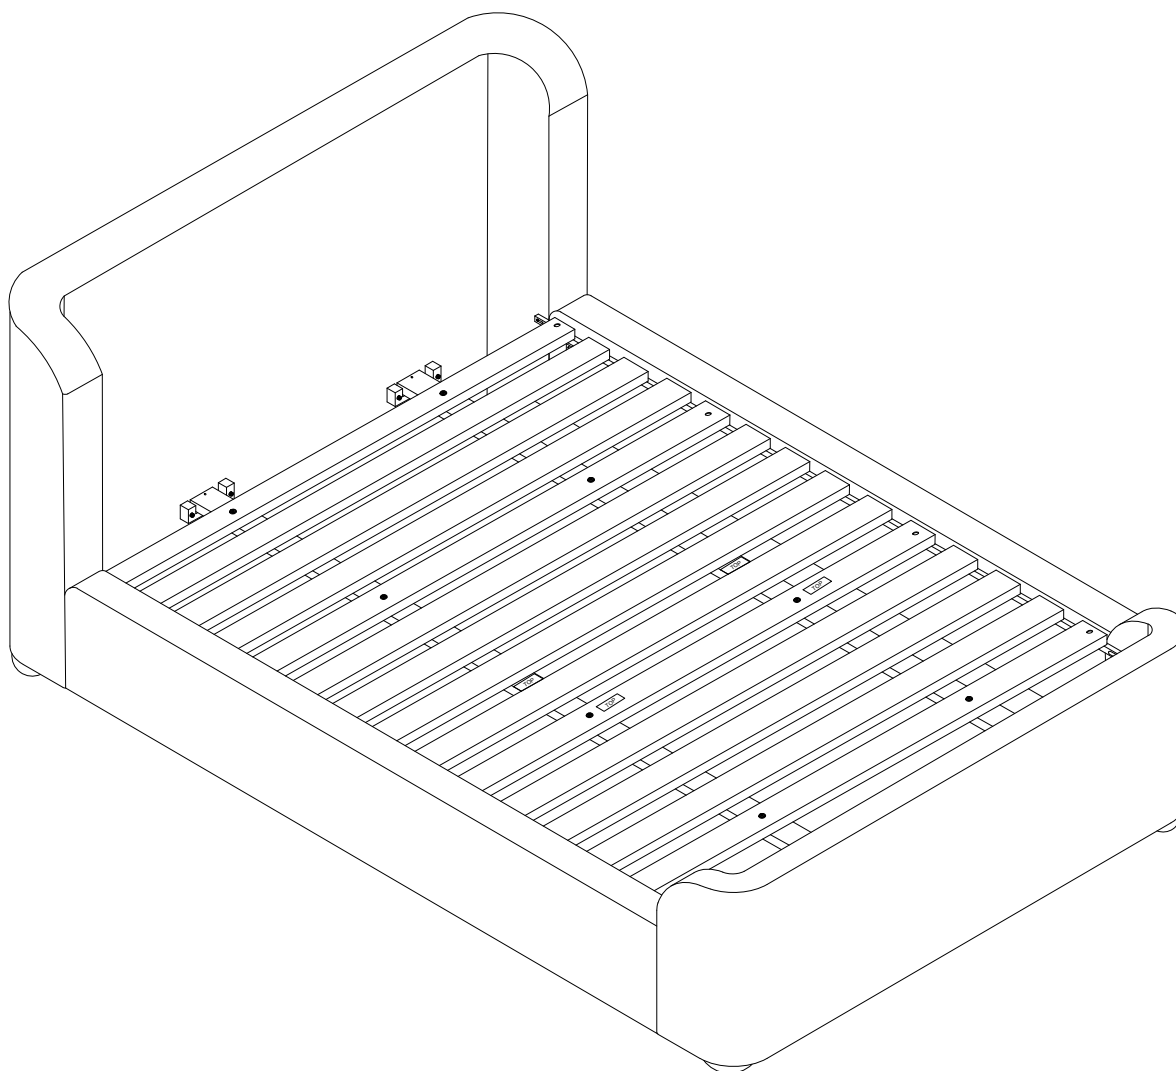


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KIKI UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

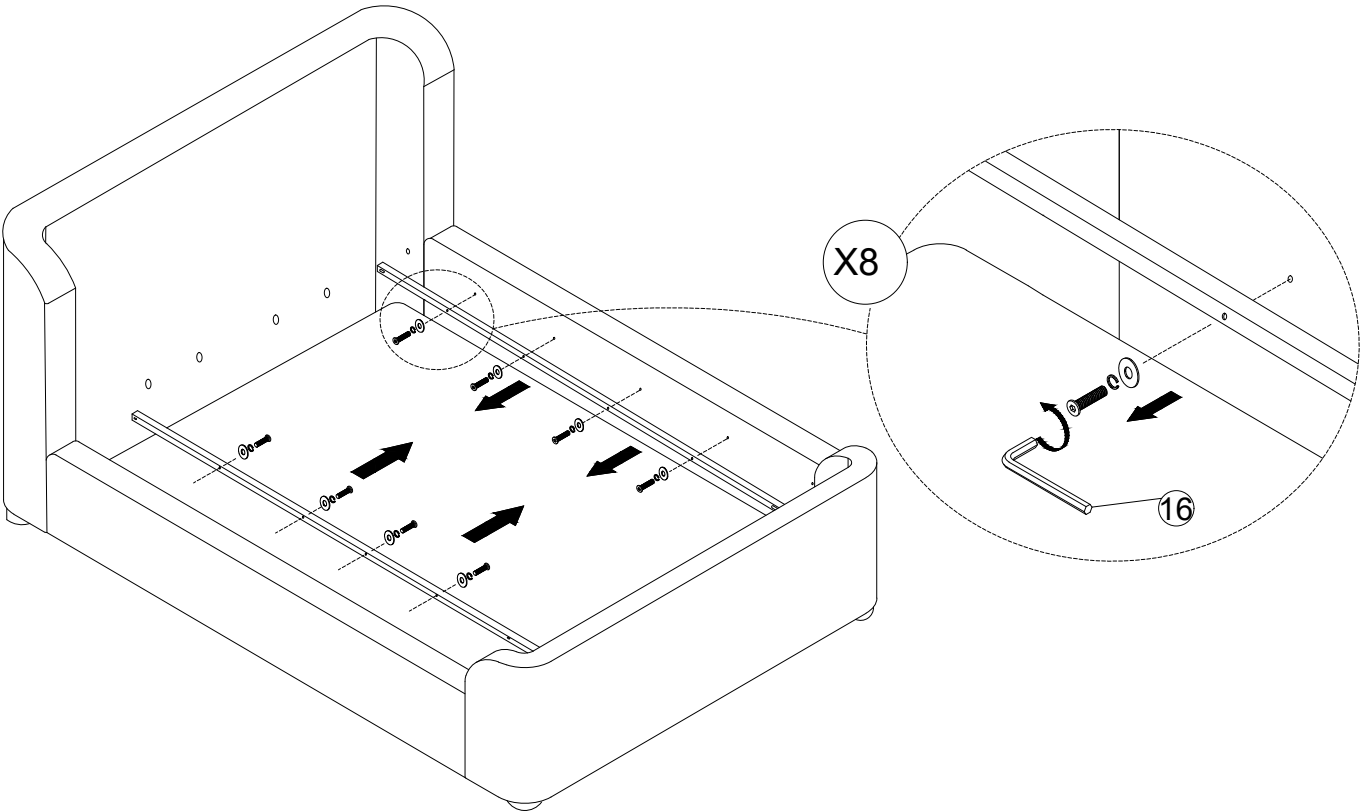

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

KIKI UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

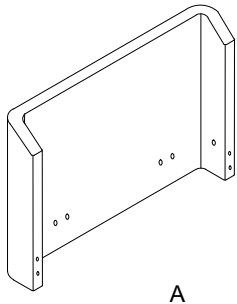

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8 x 50mm)		2 PCS
2	FLAT WASHER (8 x 19mm)		2 PCS
3	LOCK WASHER (8 x 22mm)		2 PCS
4	ALLEN KEY (8mm)		1 PC



HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (8 x 90mm)		8 PCS
6	ALLEN BOLT (8 x 50mm)		2 PCS
7	ALLEN BOLT (6 x 50mm)		12 PCS
8	ALLEN BOLT (6 x 30mm)		6 PCS
9	FLAT WASHER (8 x 22mm)		8 PCS
10	FLAT WASHER (8 x 19mm)		2 PCS
11	FLAT WASHER (6 x 16mm)		18 PCS
12	LOCK WASHER (8 x 22mm)		10 PCS
13	LOCK WASHER (6 x 16mm)		18 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		10 PCS
16	ALLEN KEY (6mm)		1 PC
17	ALLEN KEY (8mm)		1 PC
18	WRENCH		1 PC
19	CONNECTING BRACKET		4 PCS


BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG

1 PC
1 SET
4 PCS
2 PCS

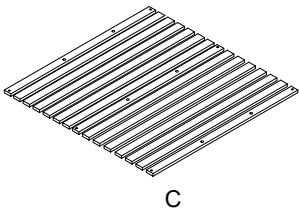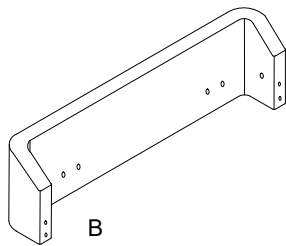







FULLY ASSEMBLED

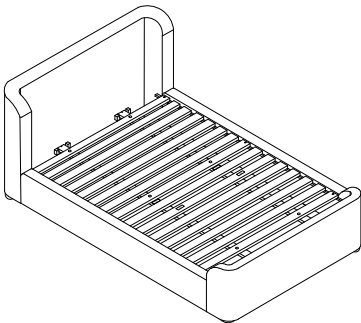

BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG


1 PC
1 PC
2 PCS
8 PCS

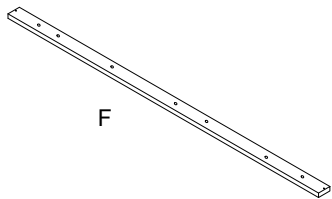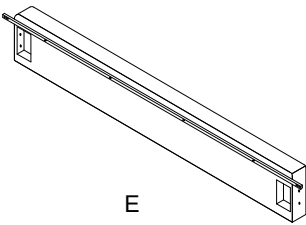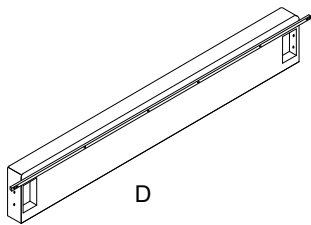


KIKI UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS


STEP 1:

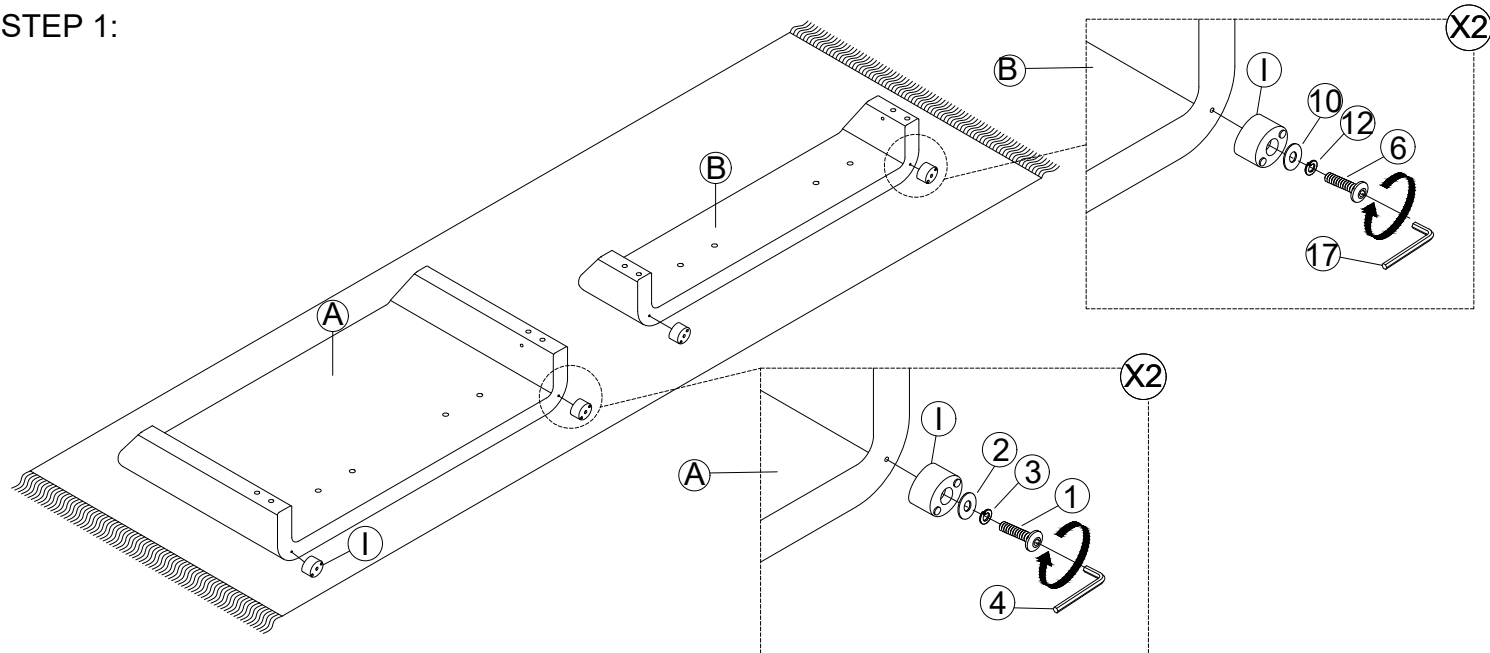

STEP 2:

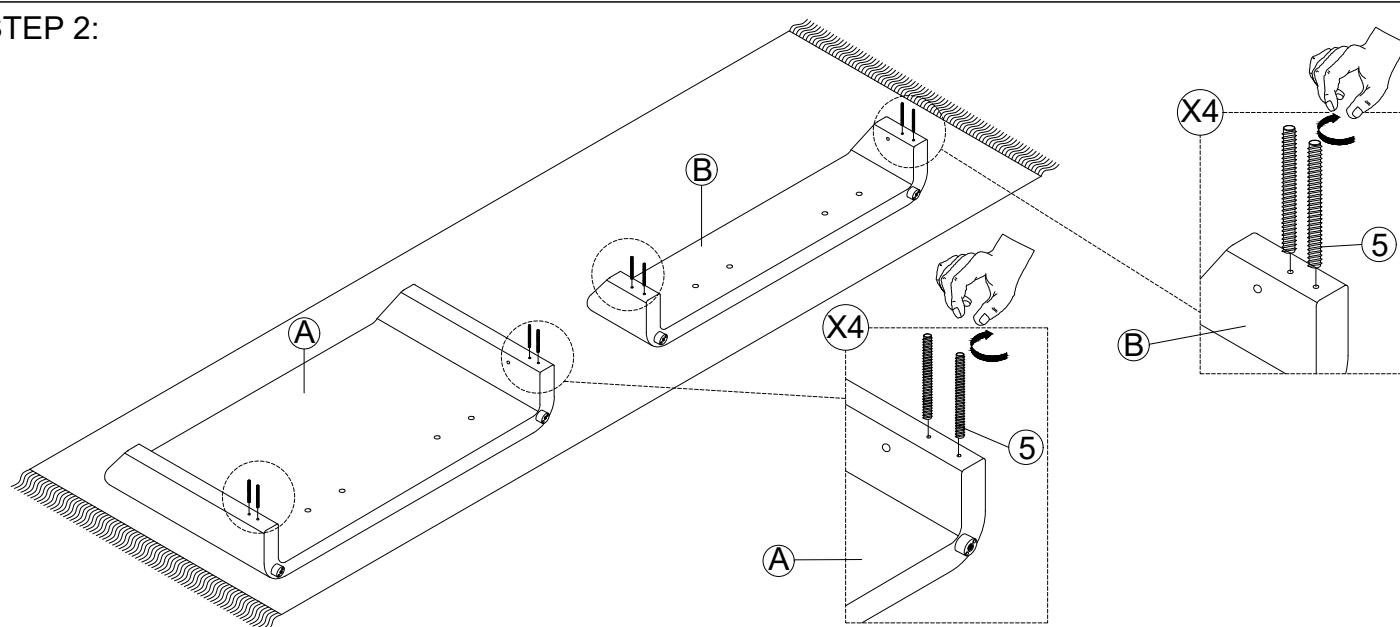

STEP 3:

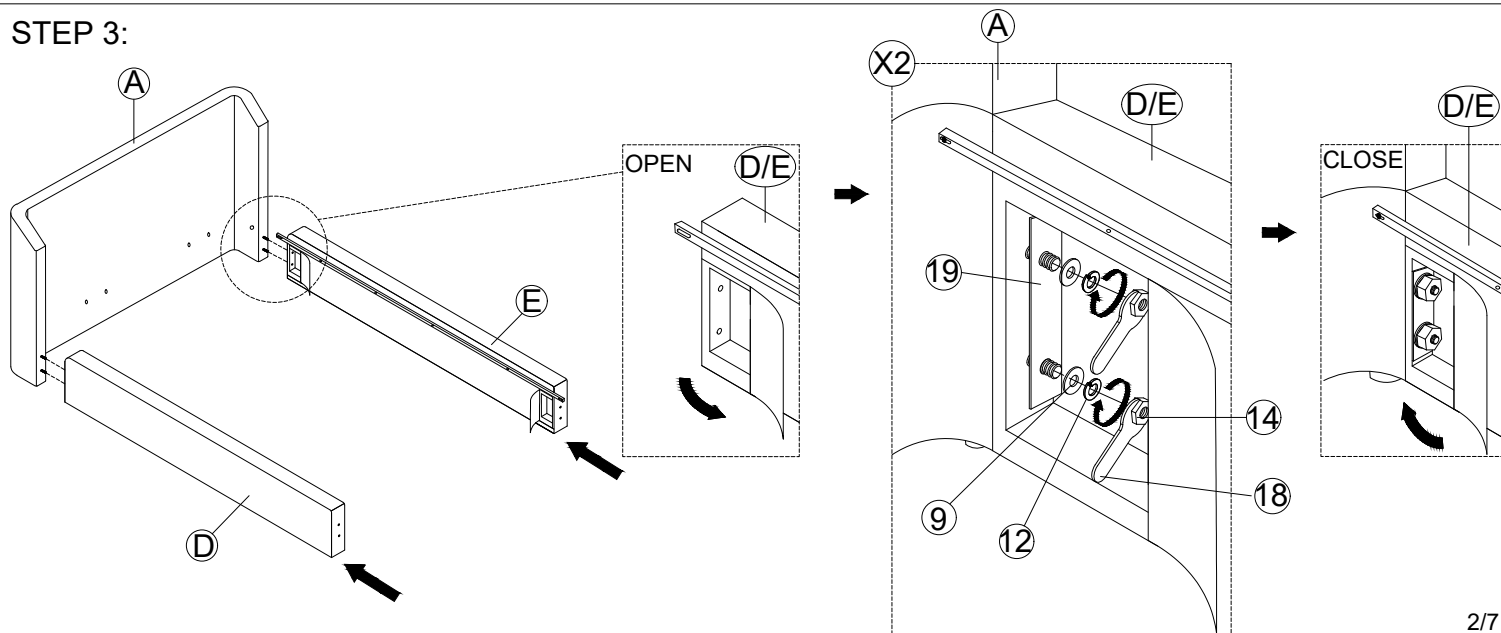


KIKI UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS




STEP 4:

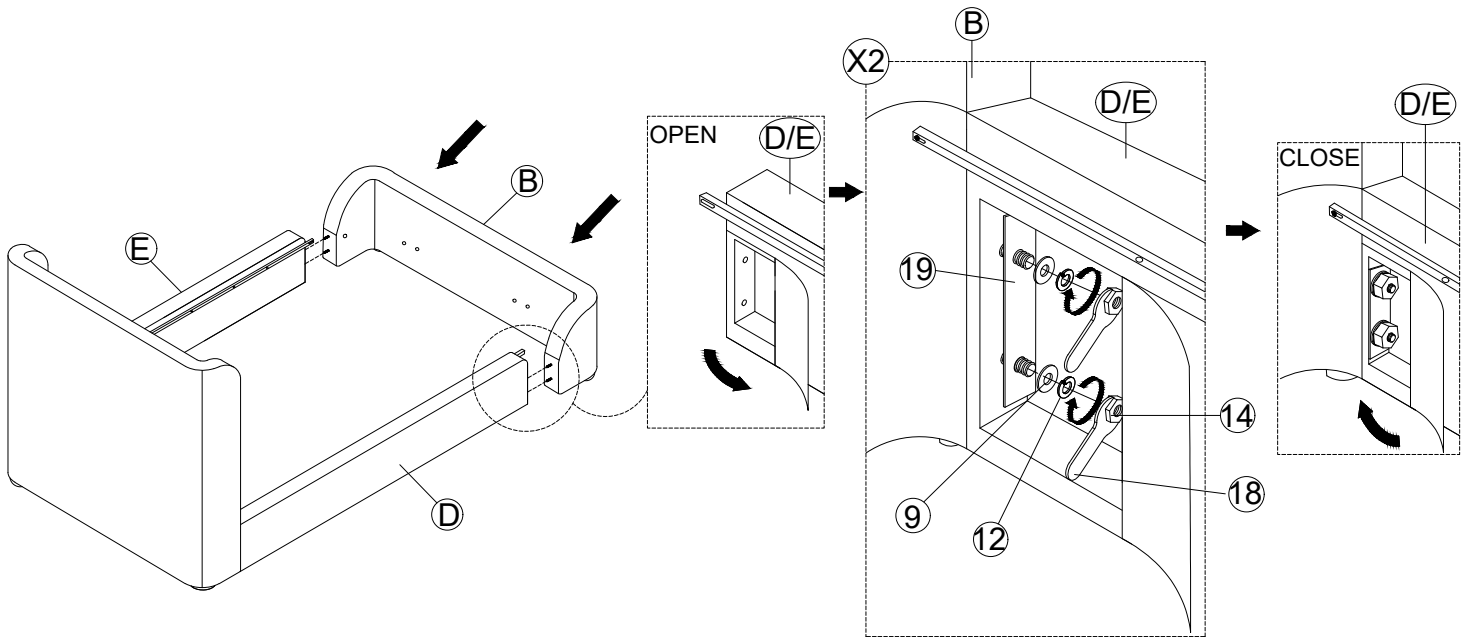

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

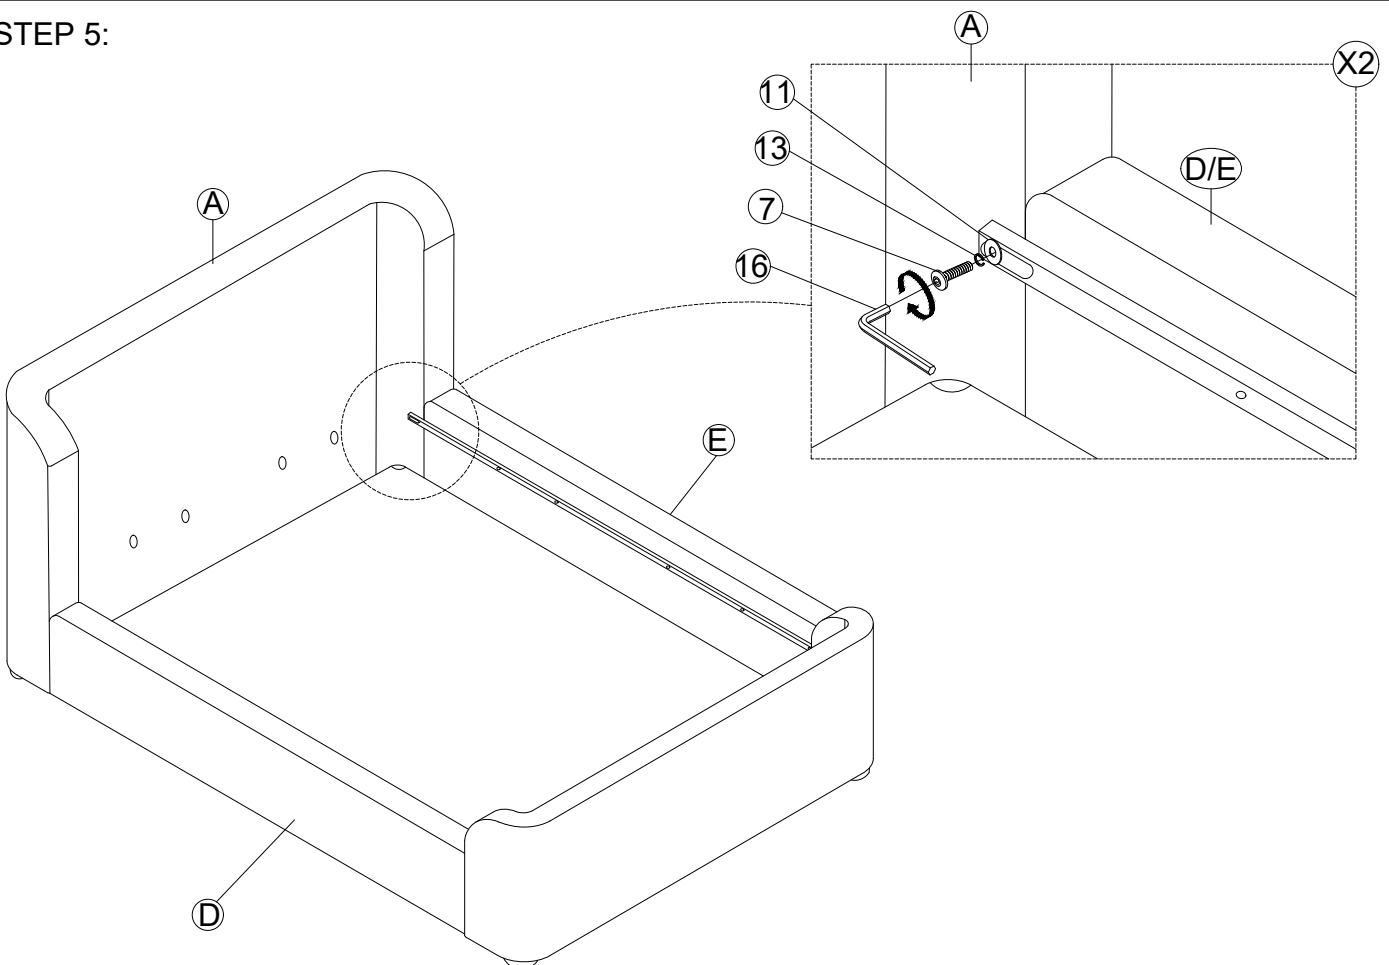


KIKI UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 6:

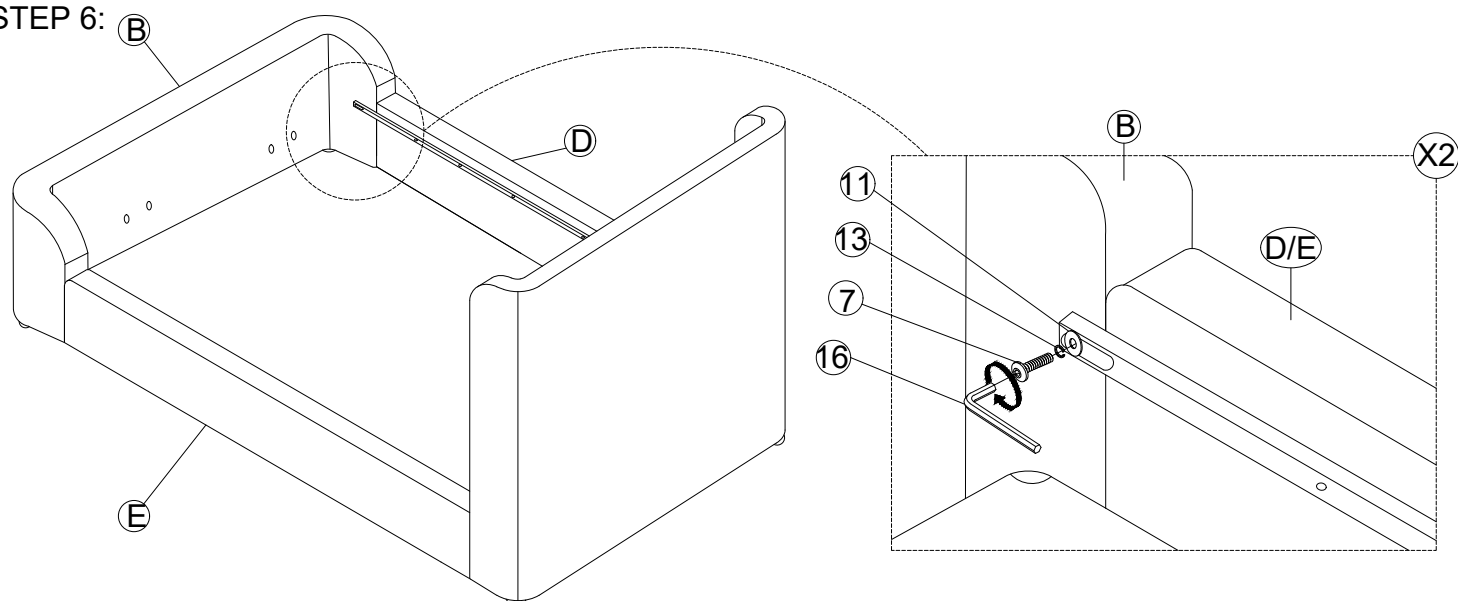

STEP 7:

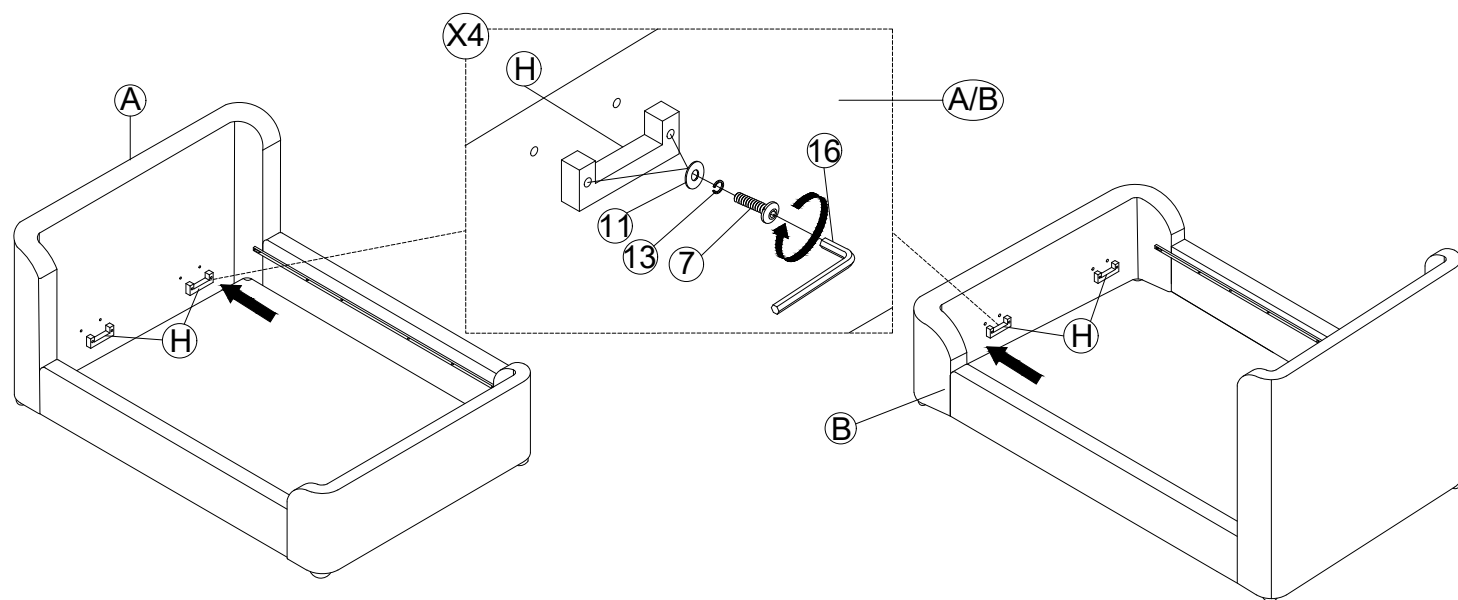

STEP 8:

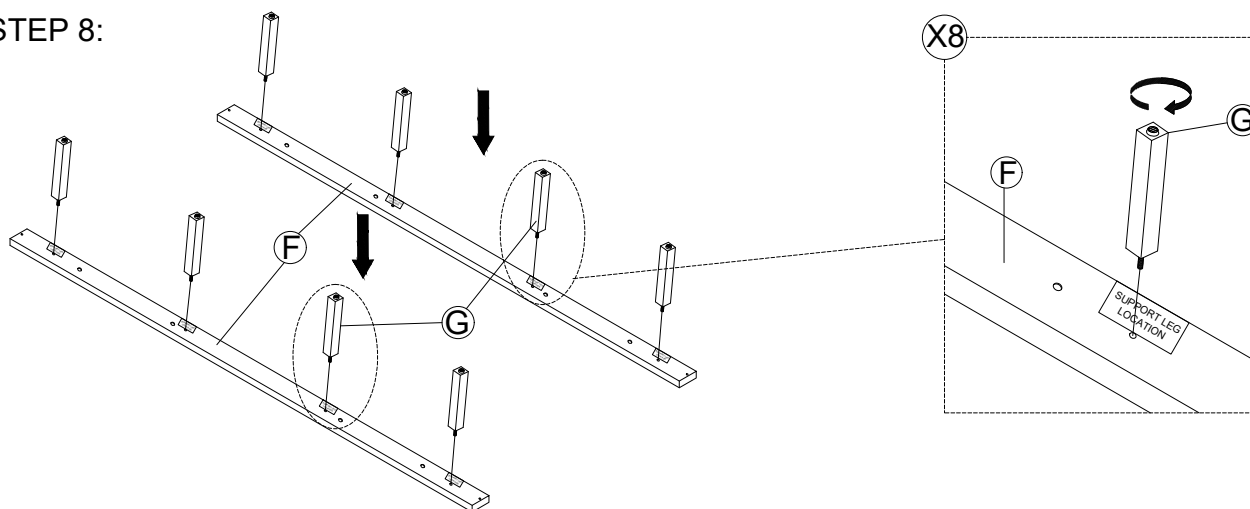


KIKI UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 9:

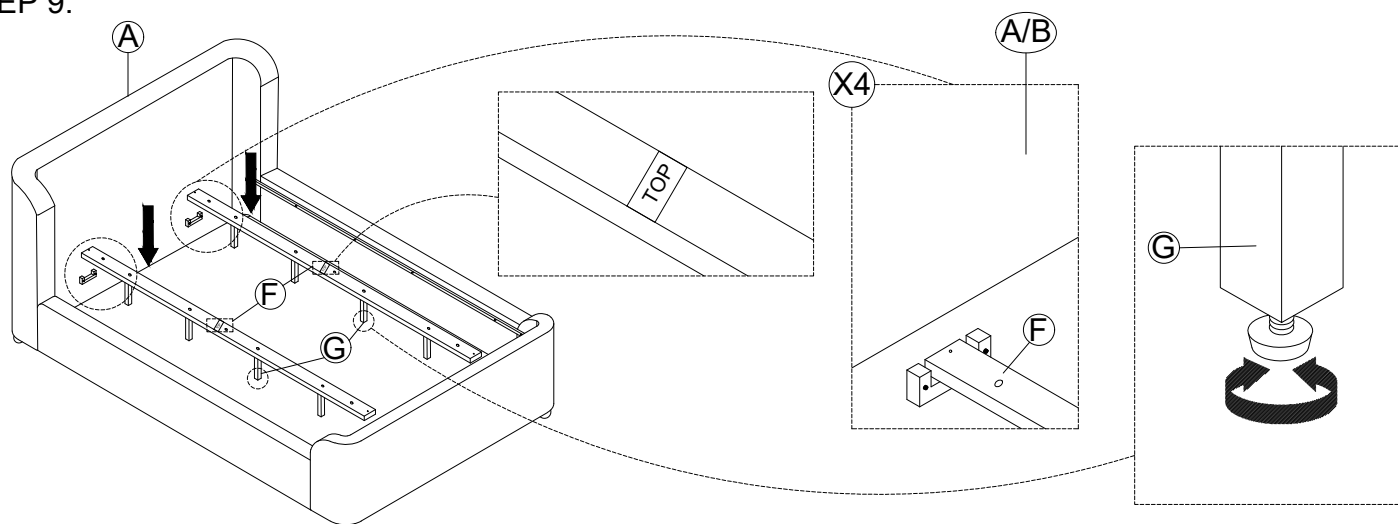

STEP 10:

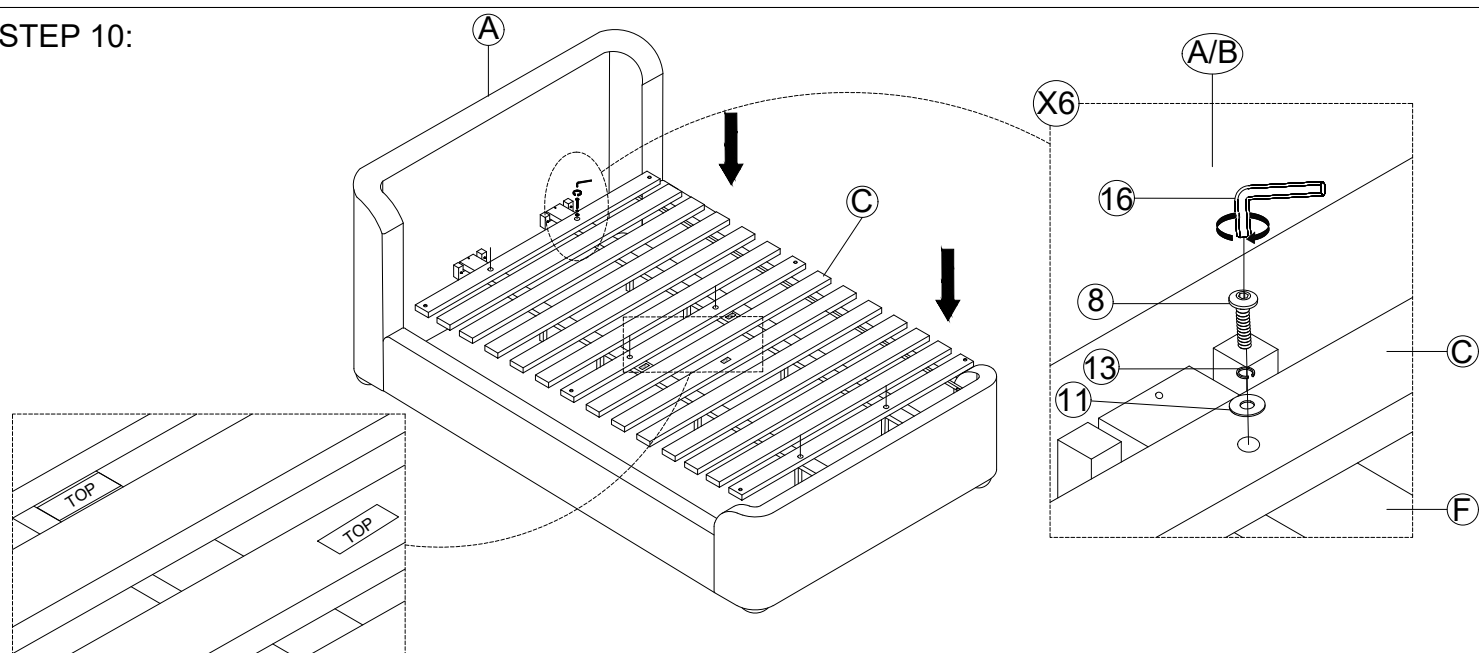


STEP 11:

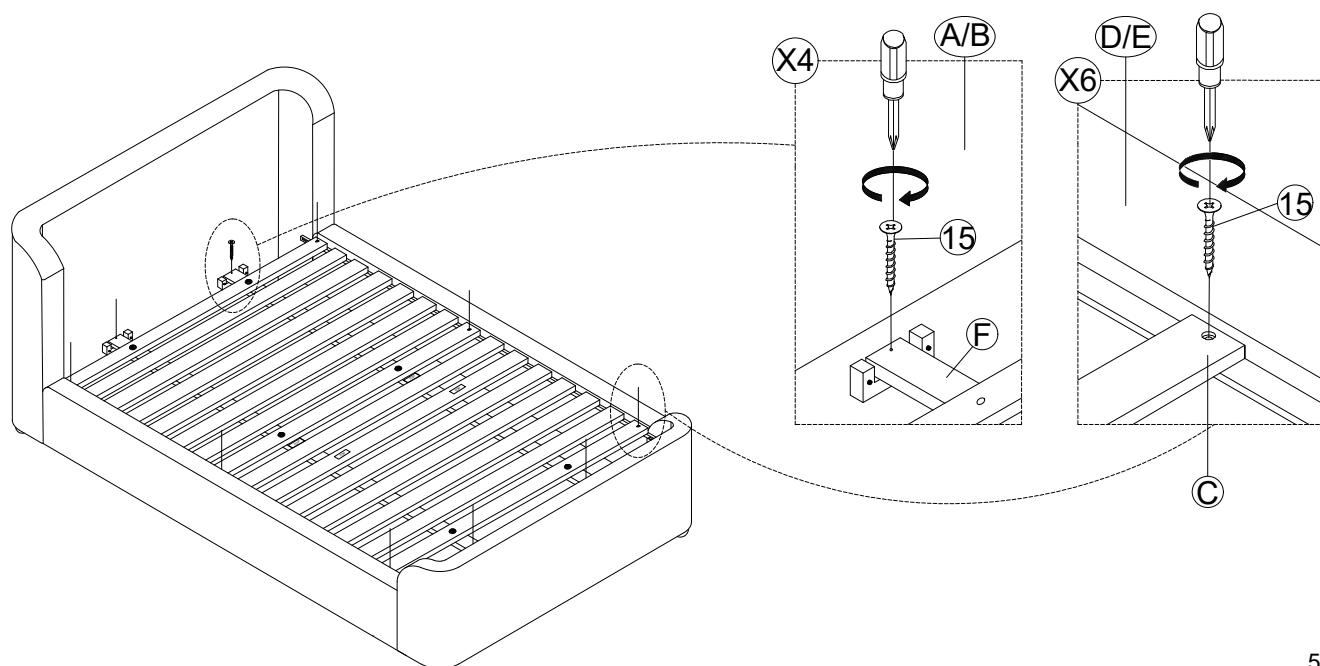

KIKI UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS

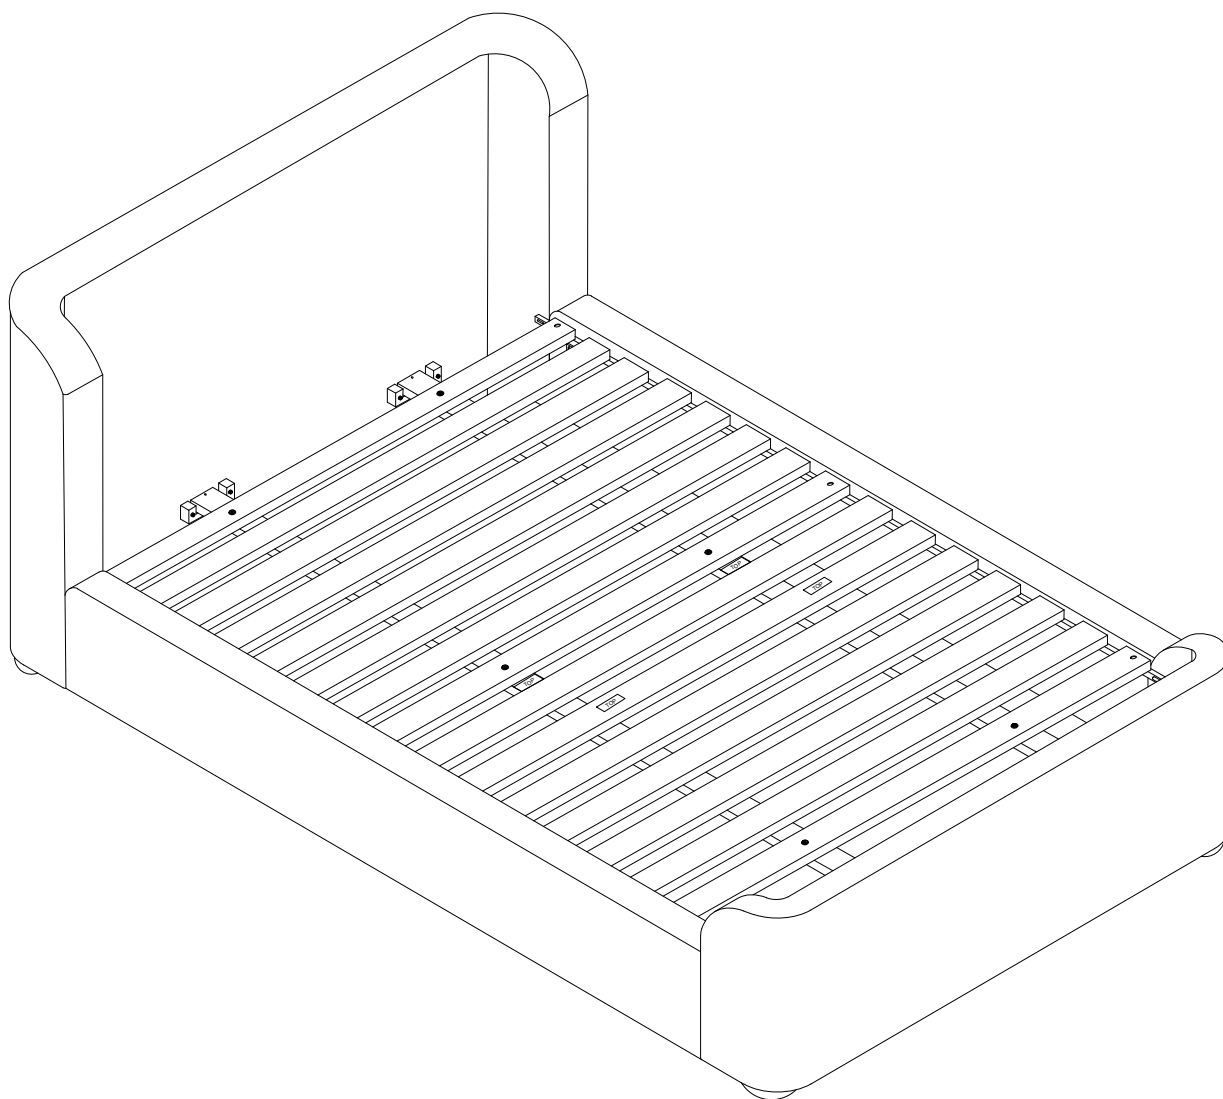


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KIKI UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

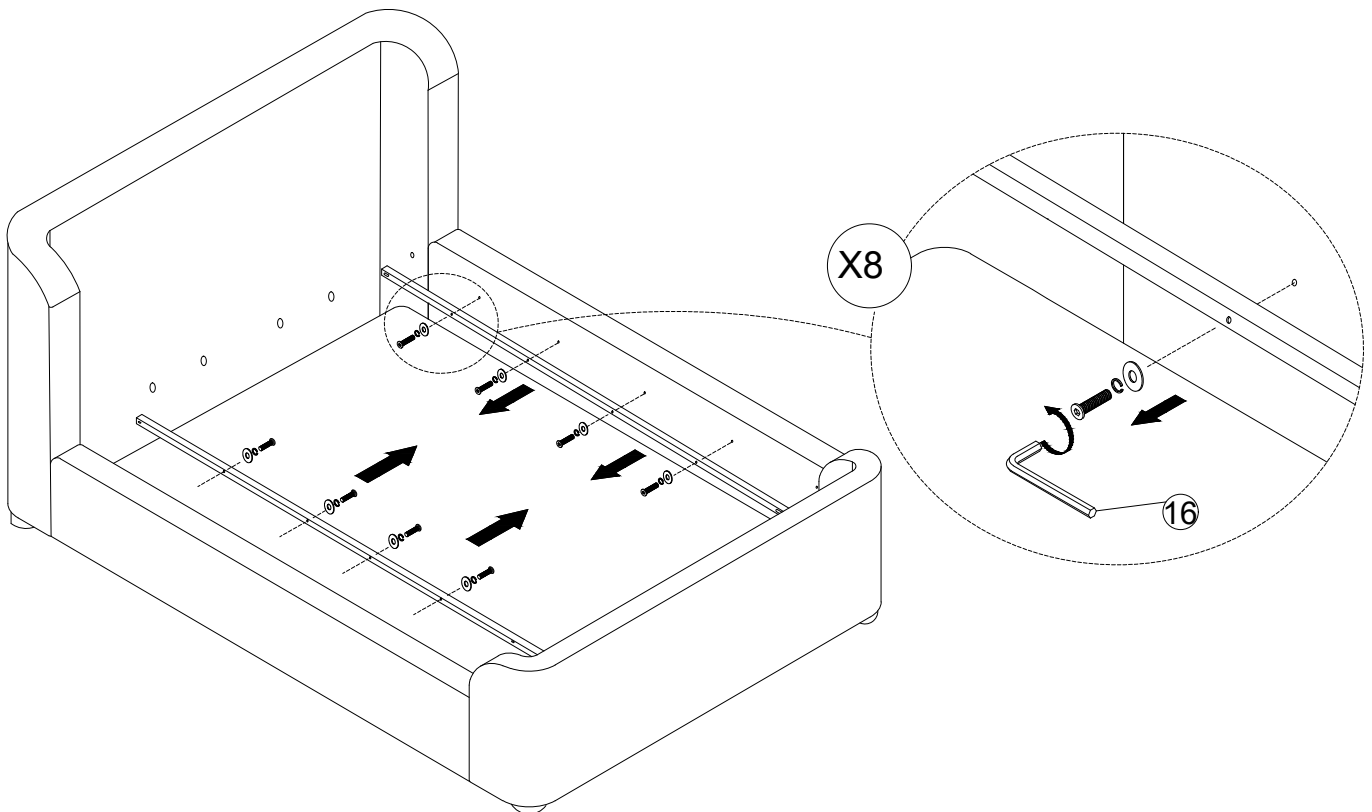

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

KIKI UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

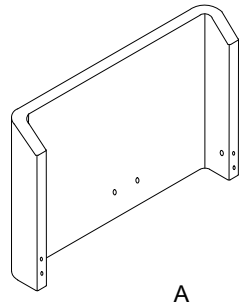

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8 x 50mm)		2 PCS
2	FLAT WASHER (8 x 19mm)		2 PCS
3	LOCK WASHER (8 x 22mm)		2 PCS
4	ALLEN KEY (8mm)		1 PC



HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (8 x 90mm)		8 PCS
6	ALLEN BOLT (8 x 50mm)		2 PCS
7	ALLEN BOLT (6 x 50mm)		8 PCS
8	ALLEN BOLT (6 x 30mm)		3 PCS
9	FLAT WASHER (8 x 22mm)		8 PCS
10	FLAT WASHER (8 x 19mm)		2 PCS
11	FLAT WASHER (6 x 16mm)		11 PCS
12	LOCK WASHER (8 x 22mm)		10 PCS
13	LOCK WASHER (6 x 16mm)		11 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		8 PCS
16	ALLEN KEY (6mm)		1 PC
17	ALLEN KEY (8mm)		1 PC
18	WRENCH		1 PC
19	CONNECTING BRACKET		4 PCS

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG




1 PC
1 SET
2 PCS
2 PCS

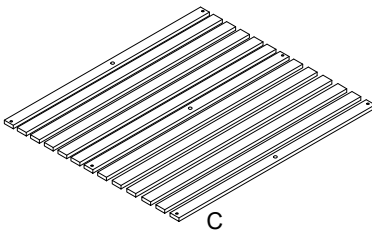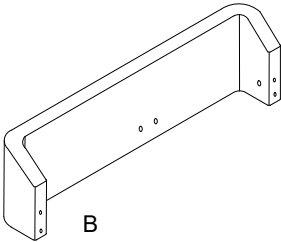





BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
1 PC
4 PCS

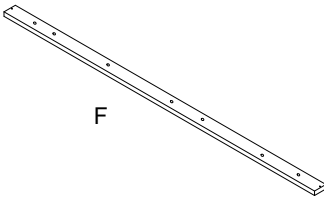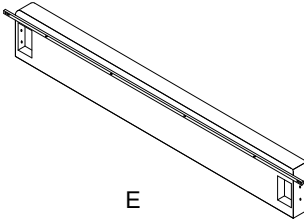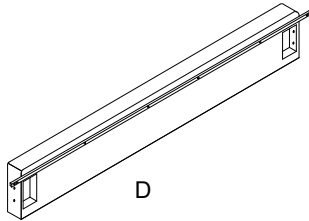


FULLY ASSEMBLED

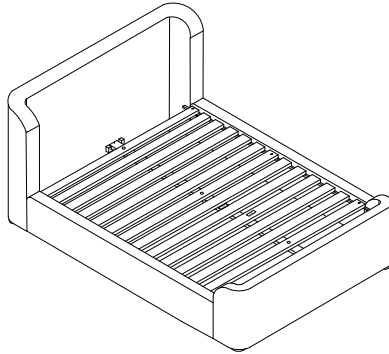


KIKI UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS


STEP 1:

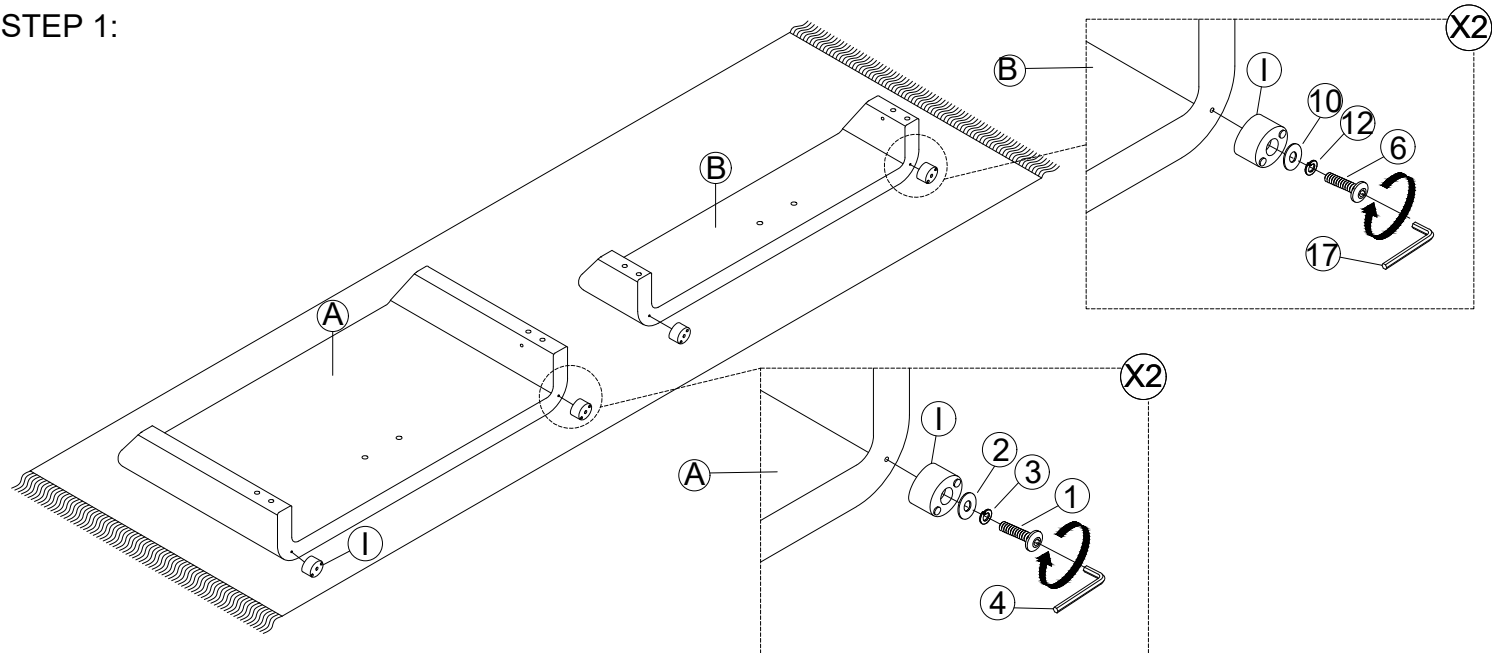

STEP 2:

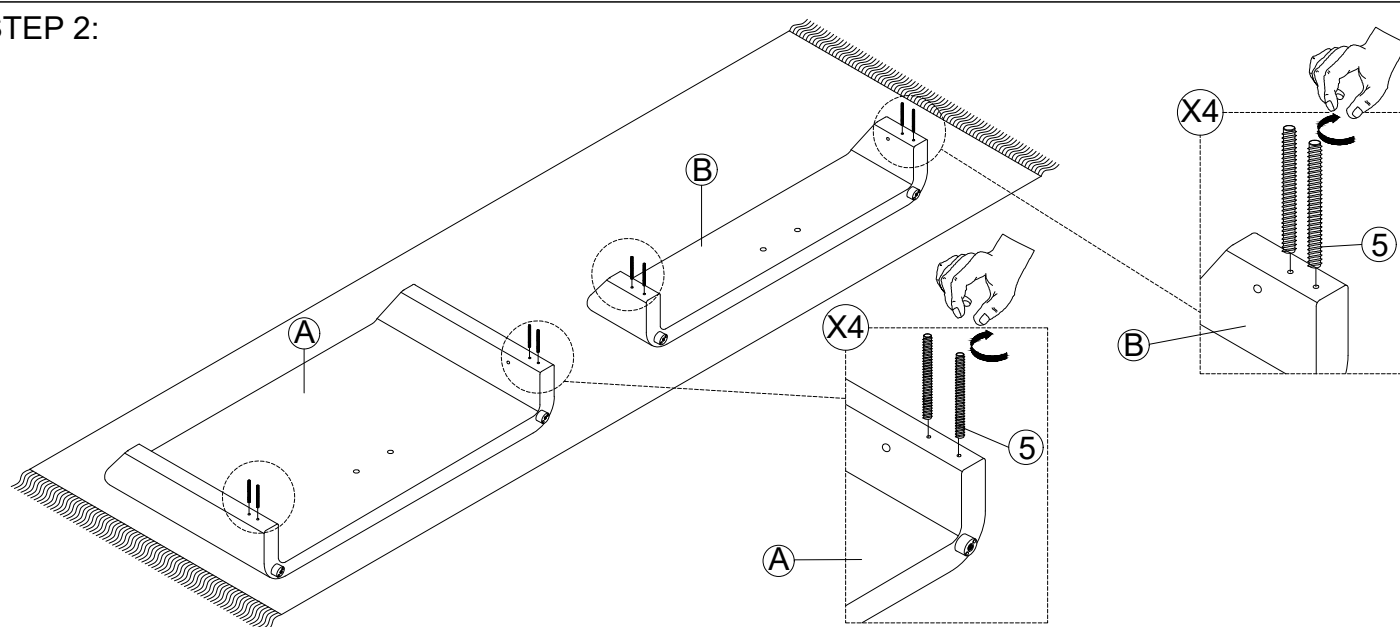


STEP 3:

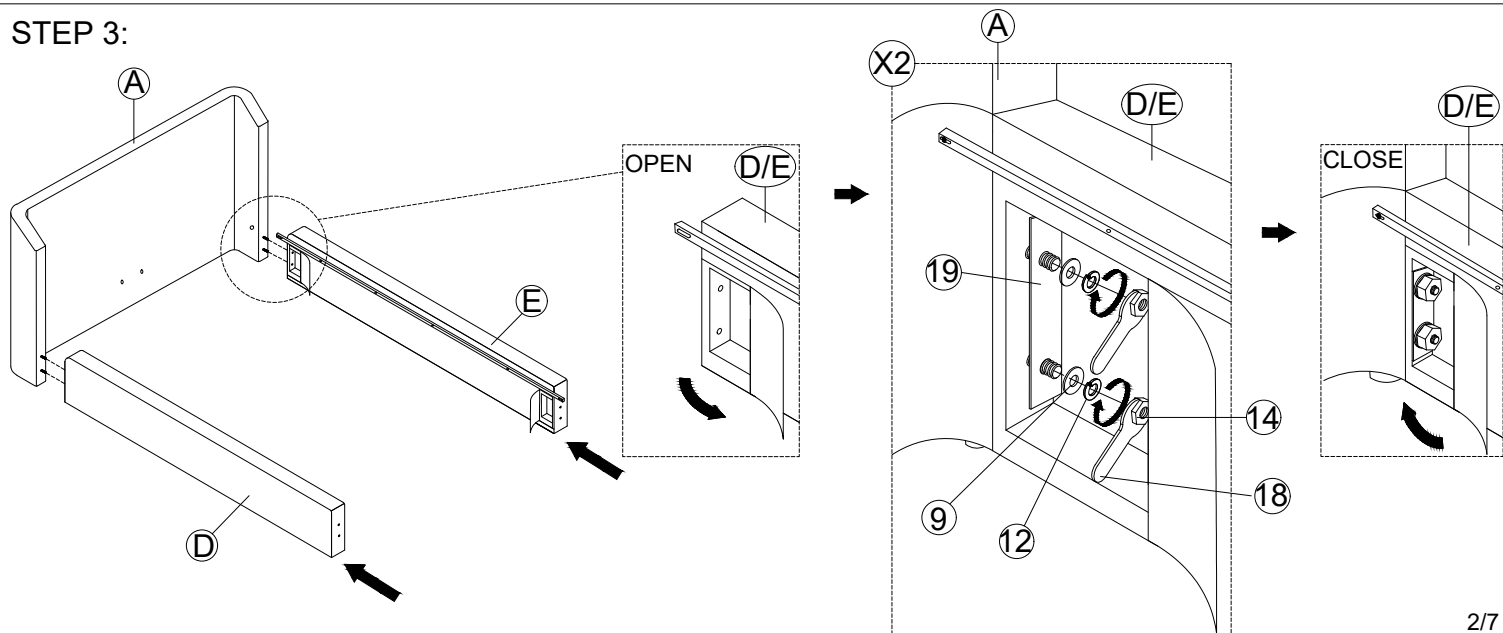

KIKI UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS


STEP 4:

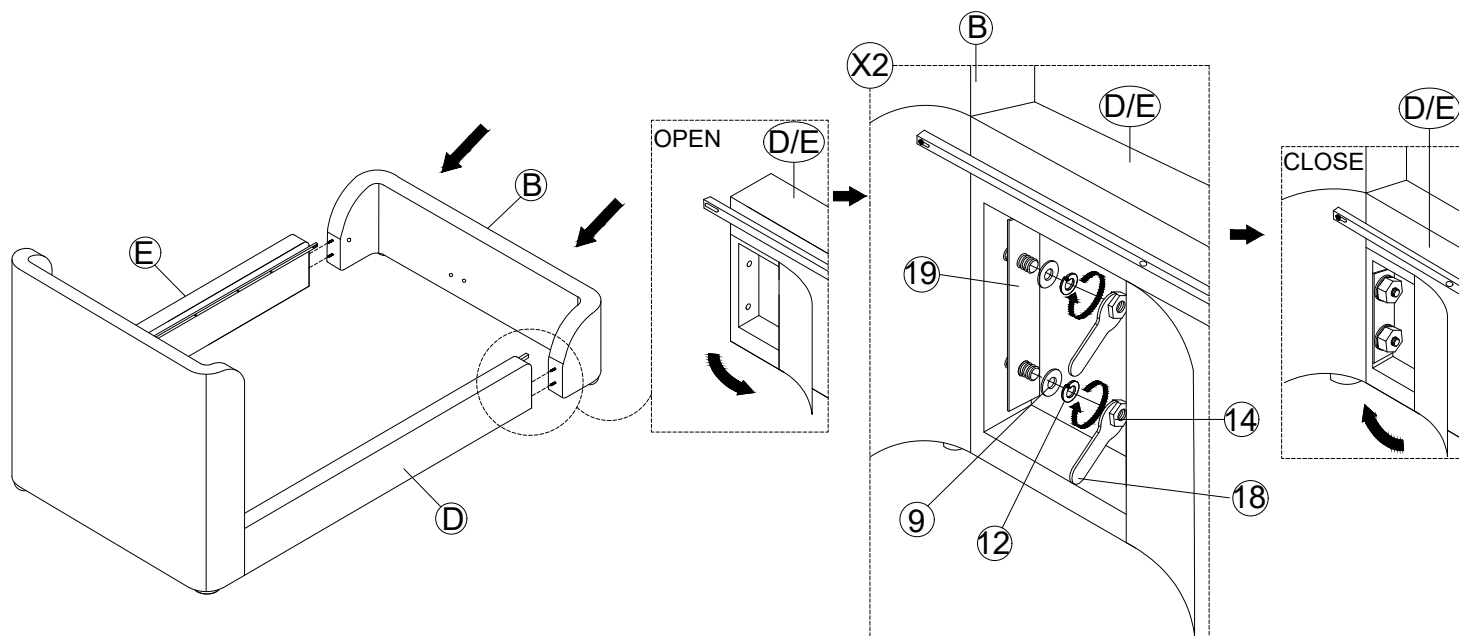

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

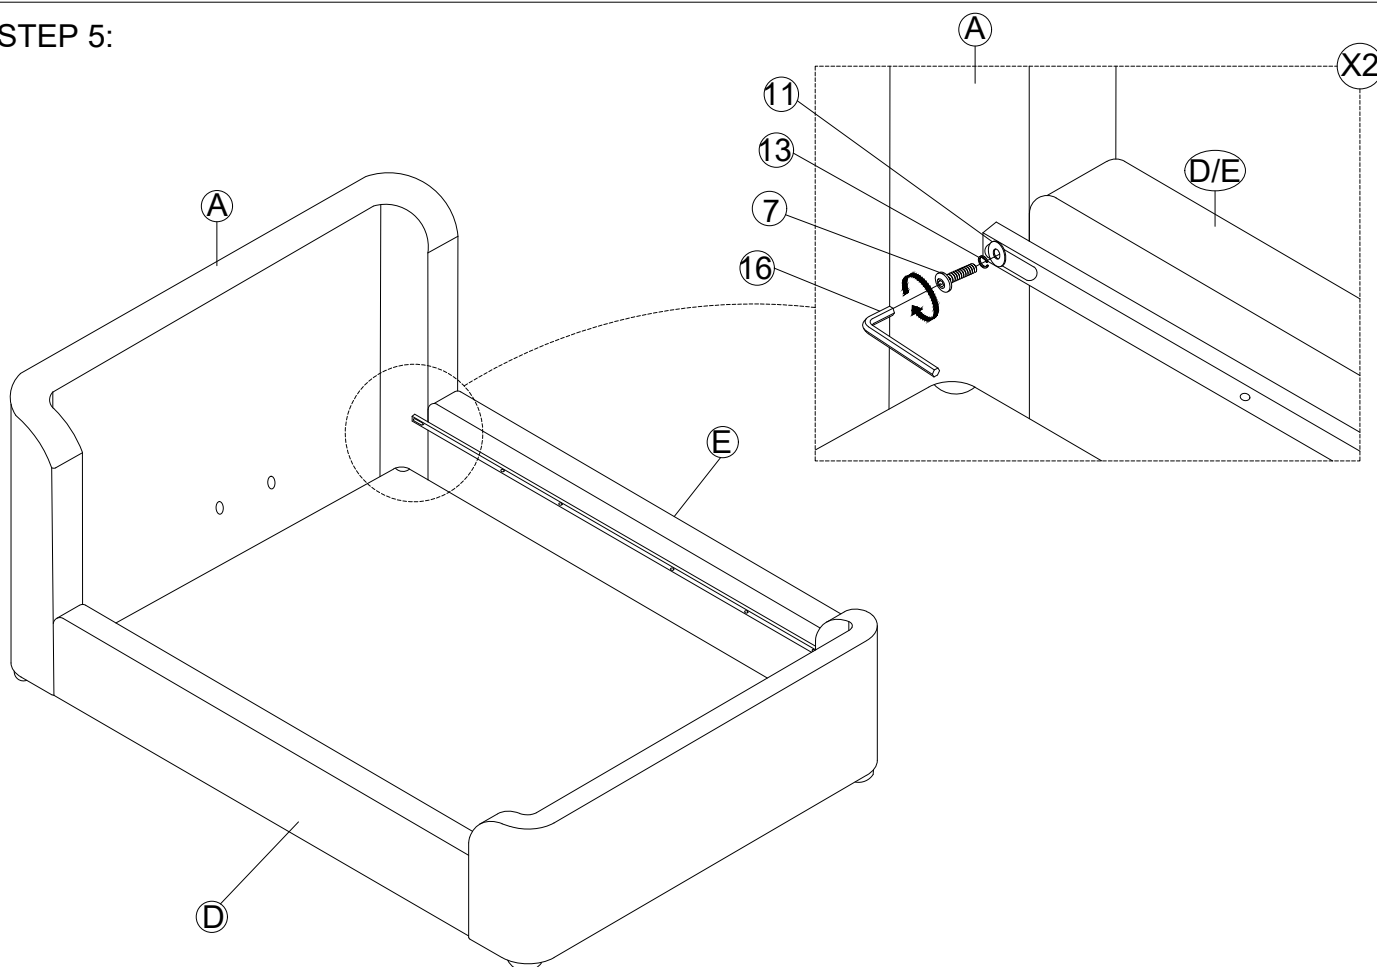


KIKI UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STEP 6:

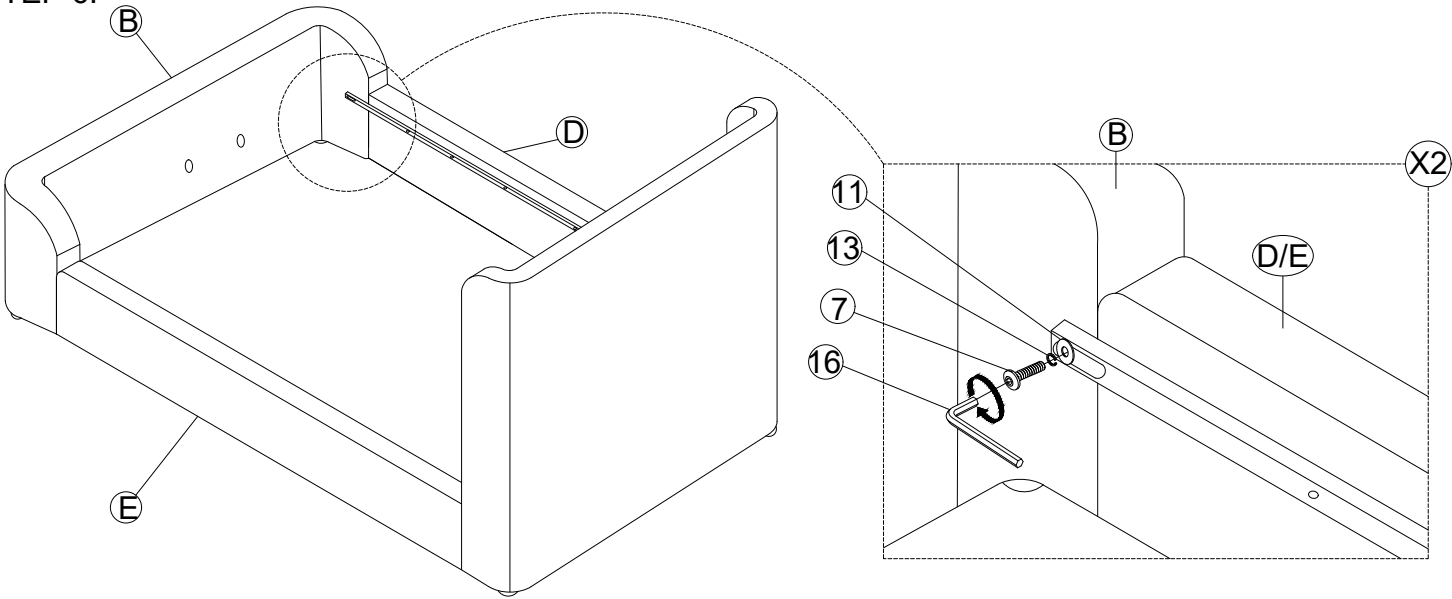

STEP 7:

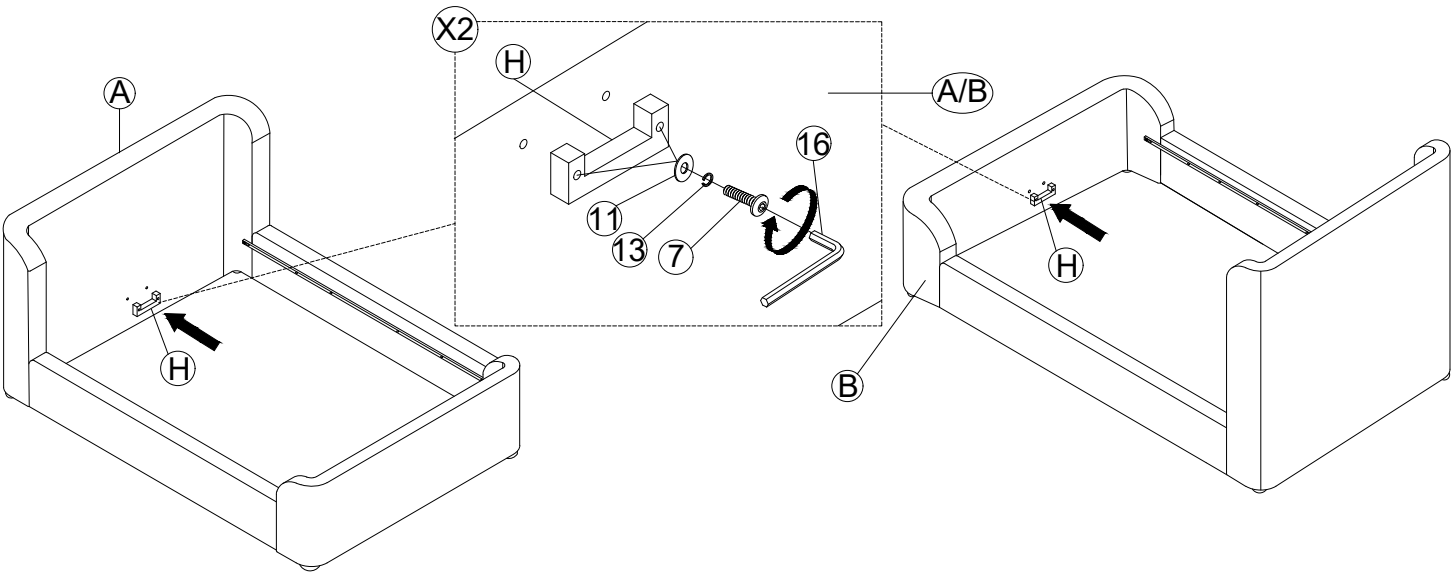

STEP 8:

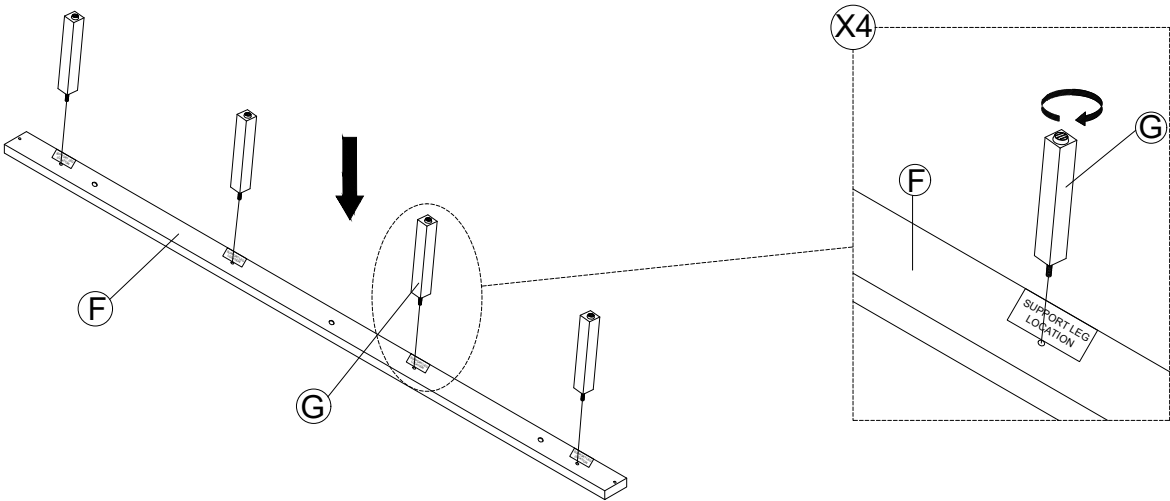


KIKI UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STEP 9:

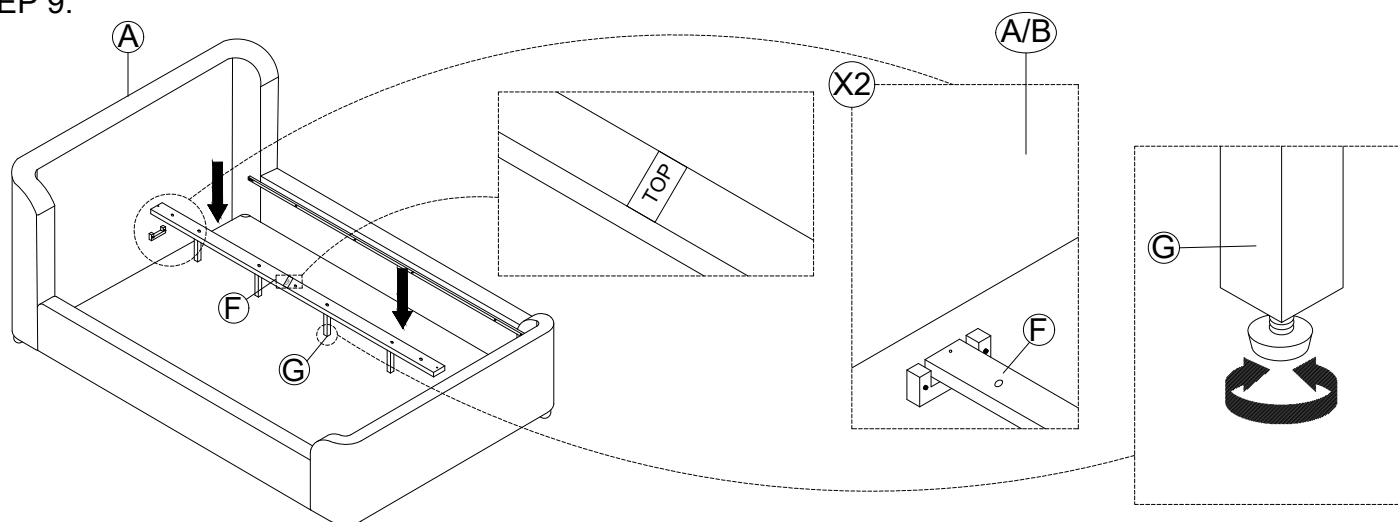


STEP 10:

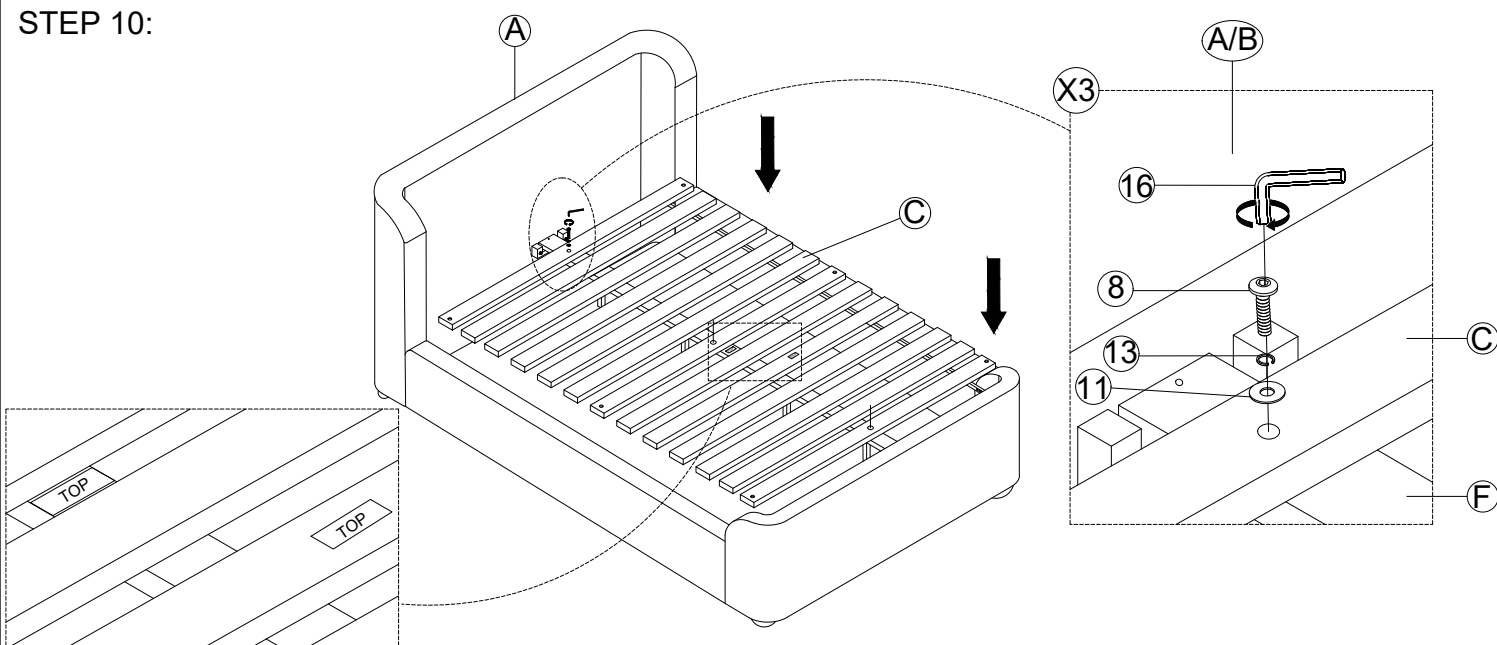

STEP 11:

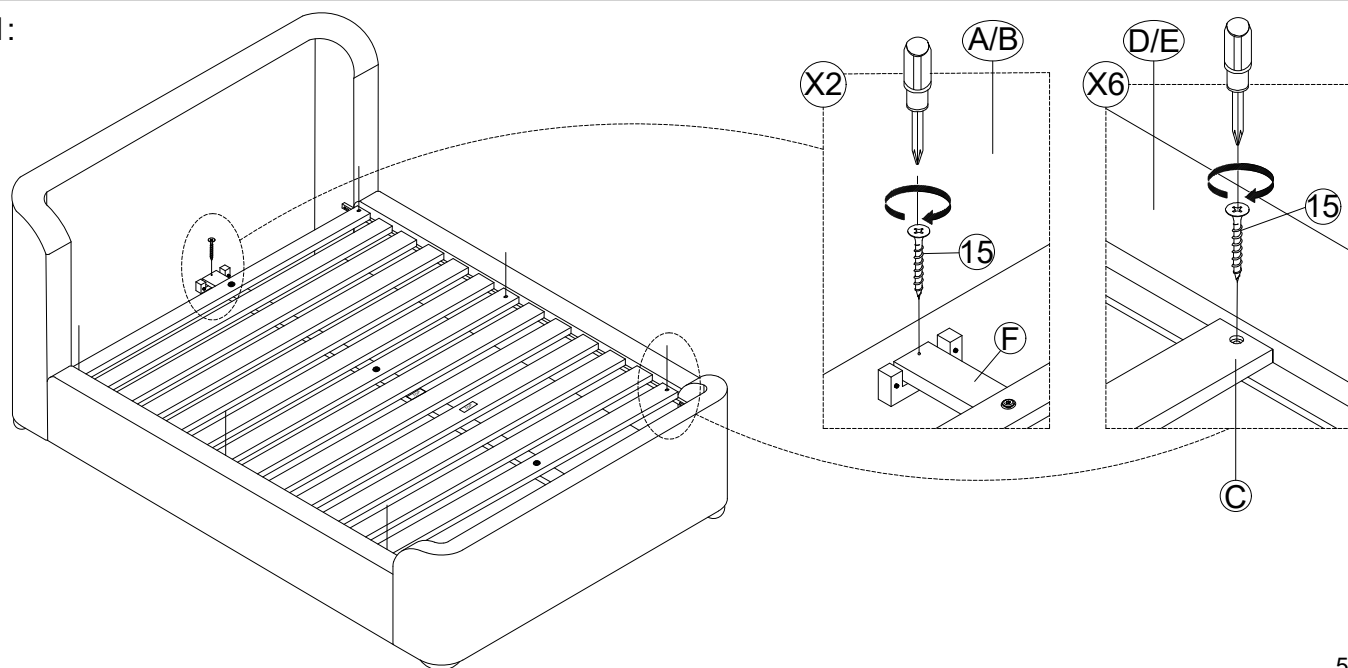

KIKI UPHOLSTERED FULL BED ASSEMBLY INSTRUCTIONS

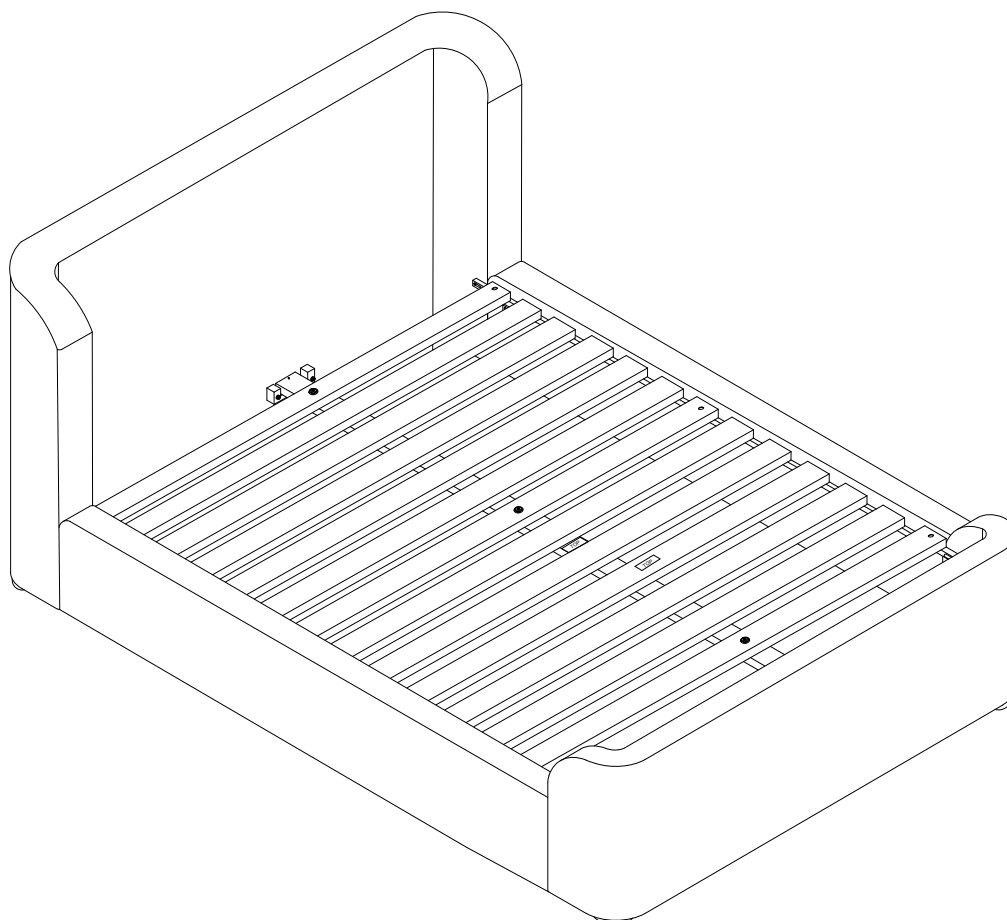


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KIKI UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

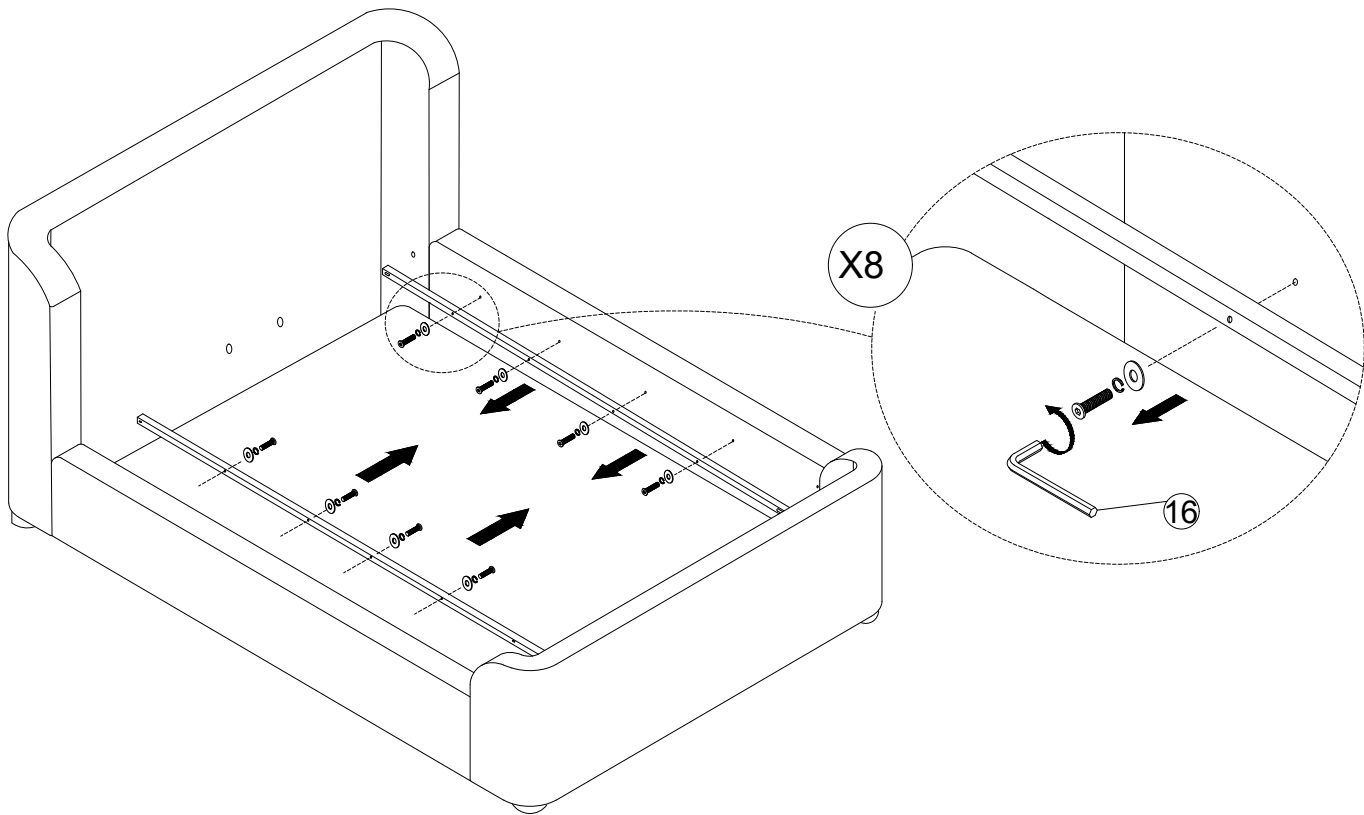

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION