




SHOWER TRIM

MODEL: 0142-01-L/HD-TRM

INSTALLATION GUIDE

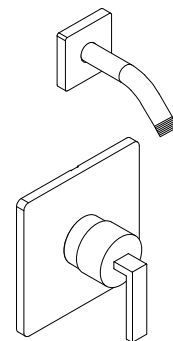

FEATURE HIGHLIGHTS

Shower Trim shall include metal lever handle and shower arm with decorative flange.
Shower Trim shall be metal construction plated in standard polished chrome finish.

COMPLIANCE


- ASME A112.18.1/CSA B125.1



WARRANTY


5 Years - for industrial/commercial installations.
Refer to symmons.com/warranty for complete warranty information.

DIMENSIONS


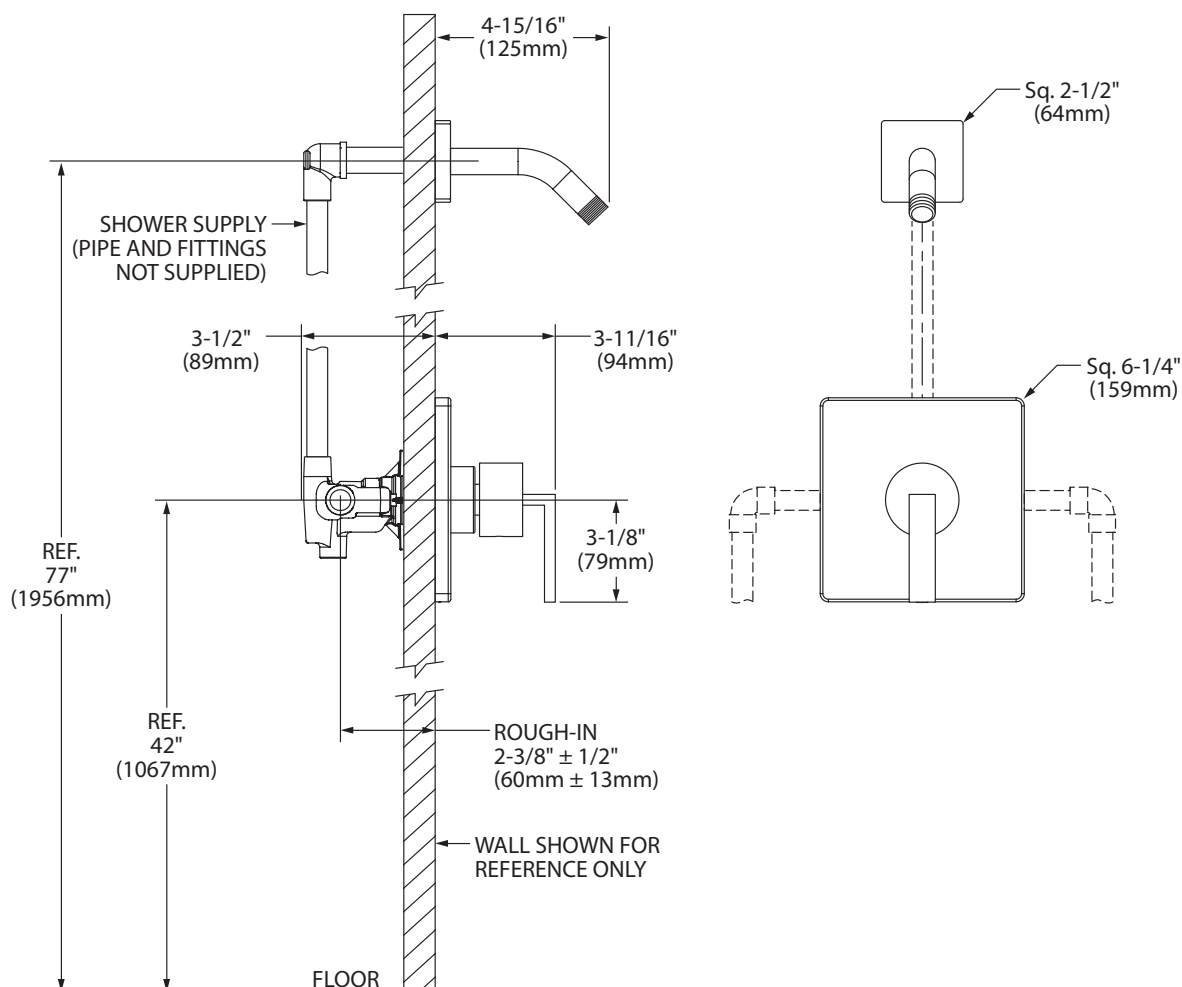


Note: Dimensions subject to change without notice.

INSTALLATION/PARTS BREAKDOWN

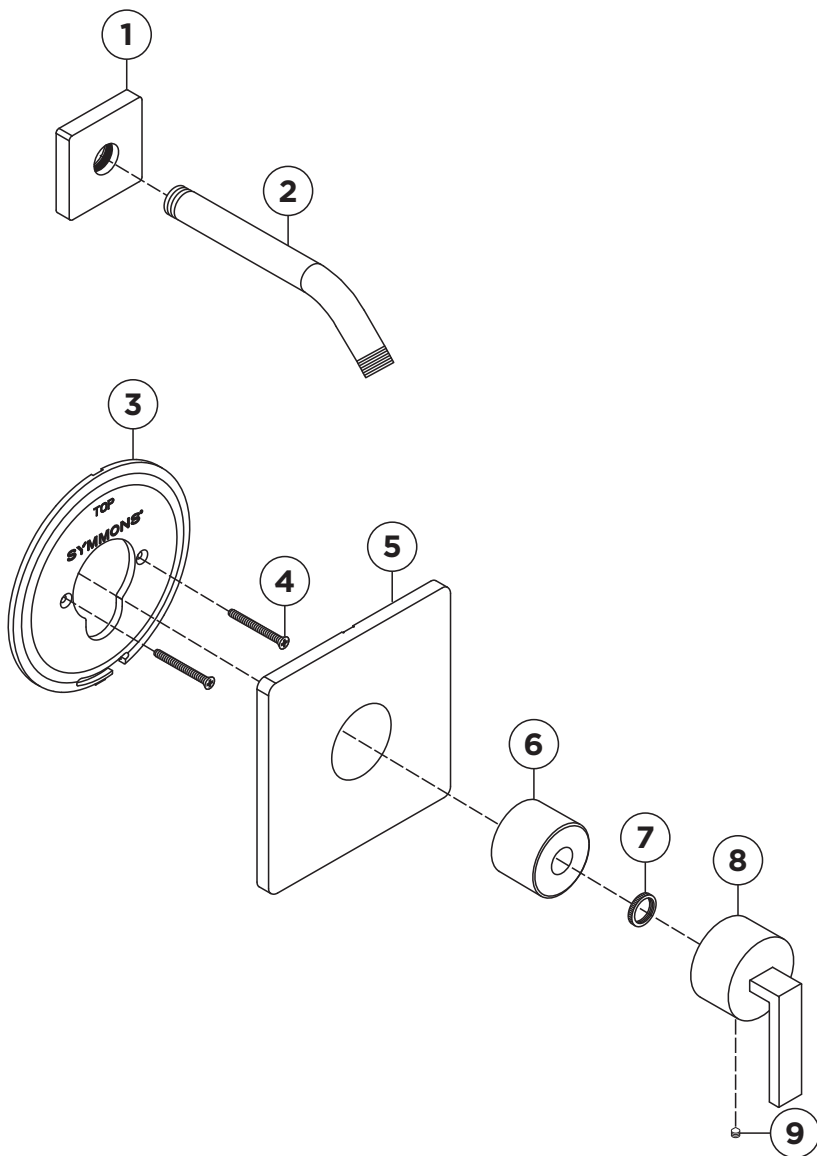

Item	Description	Part Number
1	Flange	300SQ
2	Shower Arm	
3	Mounting Plate	
4	Mounting Screws	RTS-065
5	Shower Escutcheon	
6	Dome Cover	
7	Lock Nut	T-19/20
8	Handle	
9	Set Screw	RTS-068
9	Set Screw	TS-18A

Tools Required	
Adjustable Wrench	
Allen Wrench: Handle (3mm)	
Phillips Head Screwdriver	
Plumber Tape	
Silicone	

Notes:

- 1) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall (less mounting plates and brackets). Leave opening on bottom of escutcheon for weep hole.
- 2) Apply plumber tape to threaded connections as necessary.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.