
ITEM: FS-AZ0059**
ANZZI Freestanding Tub Filler
INSTALLATION & OPERATION MANUAL
V2.1
08/30/2026

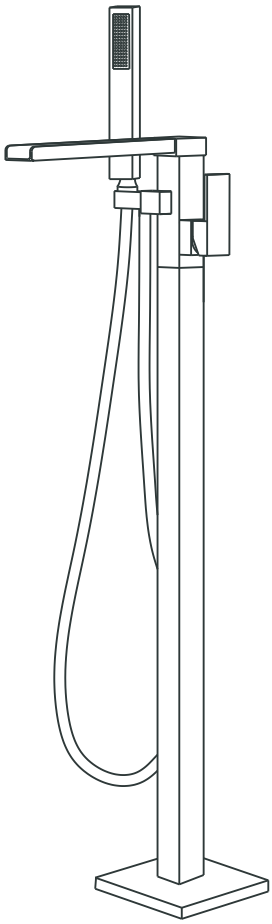

DON'T WAIT!
REGISTER NOW!

Register your product within 90 days to ensure your purchase is recognized and eligible for warranty coverage.

Register online at https://anzzi.com/pages/register or scan the QR code on PG. 2.

PRODUCT REGISTRATION*

IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at https://anzzi.com/pages/register or Scan the QR code below.
Registering your product maximizes your warranty benefits and ensures prompt service and support.

1


USE YOUR PHONE CAMERA TO SCAN THE QR CODE

2

FILL IN A QUICK REGISTRATION FORM


3

CLICK SUBMIT AND ENJOY PEACE OF MIND

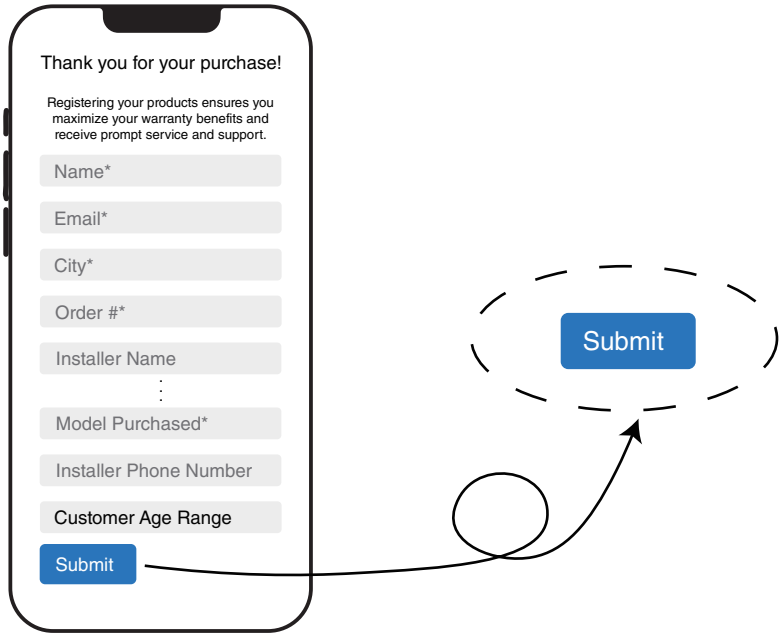


Need help? For technical support call **305-363-4679** or visit us at **www.ANZZI.com**


PRODUCT SIZE CHART

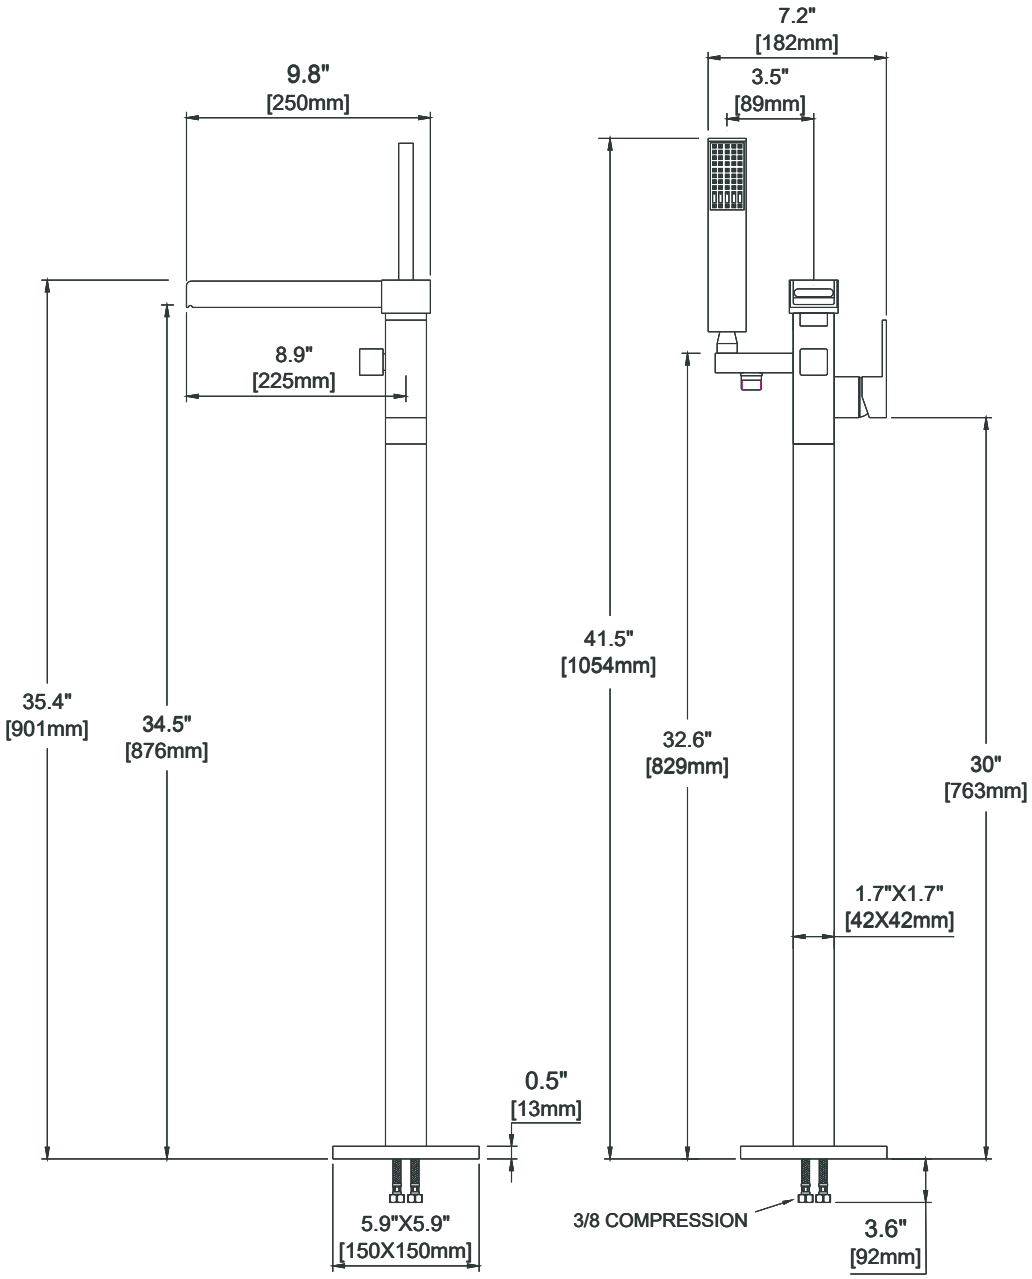


TOOLS AND MATERRIALS

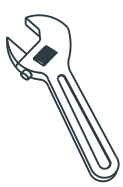

Wrench




Marker Pen

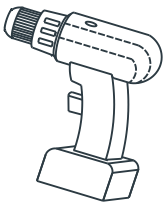

Drill




25/64"(10mm)
Drill Bitl

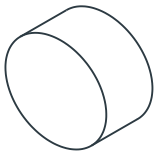

2"Hole Saw

COMPONENT

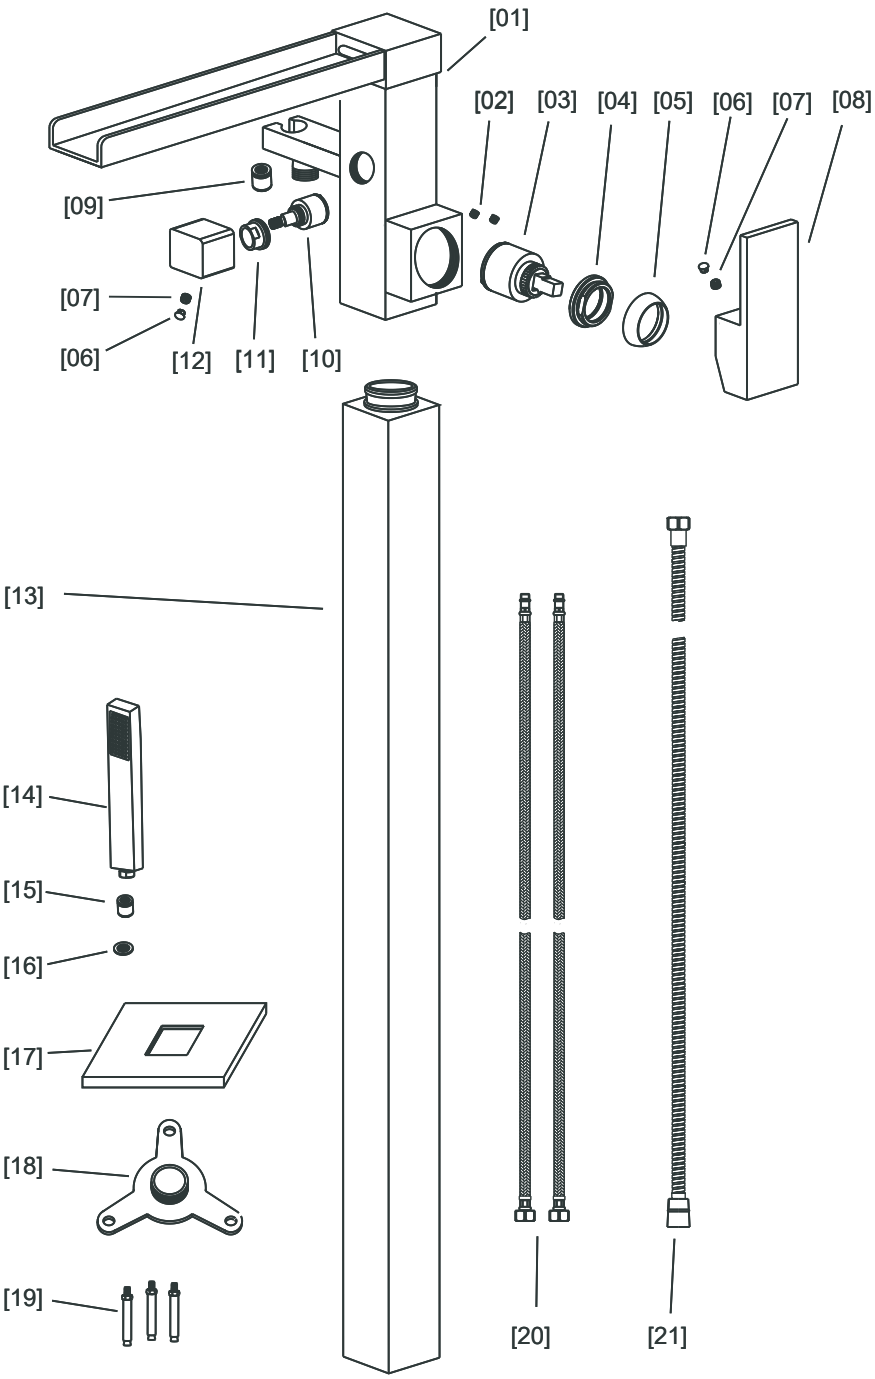


Part	Discription	Qty
[01]	Faucet	1
[02]	Screw	2
[03]	Cartridge	1
[04]	Retainer	1
[05]	Cover	1
[06]	Cap	2
[07]	Screws	2
[08]	Handle	1
[09]	Check Valve	1
[10]	Diverter	1
[11]	Retainer(Diverter)	1
[12]	Handle(Diverter)	1
[13]	Post	1
[14]	Hand Shower	1
[15]	Check Valve	1
[16]	Gasket	1
[17]	Escutcheon	1
[18]	Anchor	1
[19]	Expansion Screw	3
[20]	Inlet Hose	2
[21]	Shower Hose	1


Before installation:

1. Please check that all components are present.
2. Ensure that all supply lines are free of debris with supply stops installed.
3. Ensure water pressure is between 20-125 PSI.
4. If you are having difficuties on installation, please contact a professional plumber.


INSTALLATION

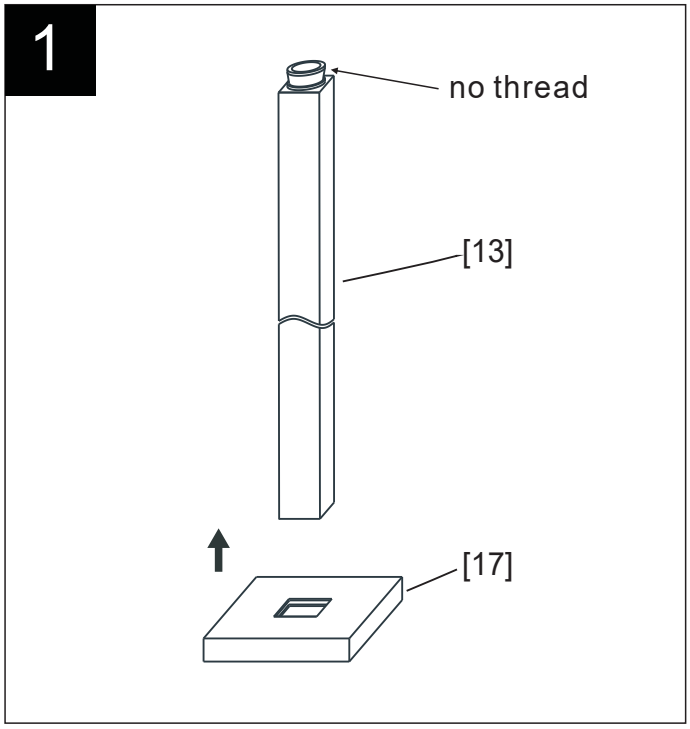


STEP 1:
Slide the **Escutcheon [17]** onto the **Post [13]**.
Note: The unthreaded point of the **Post [13]** points upward.

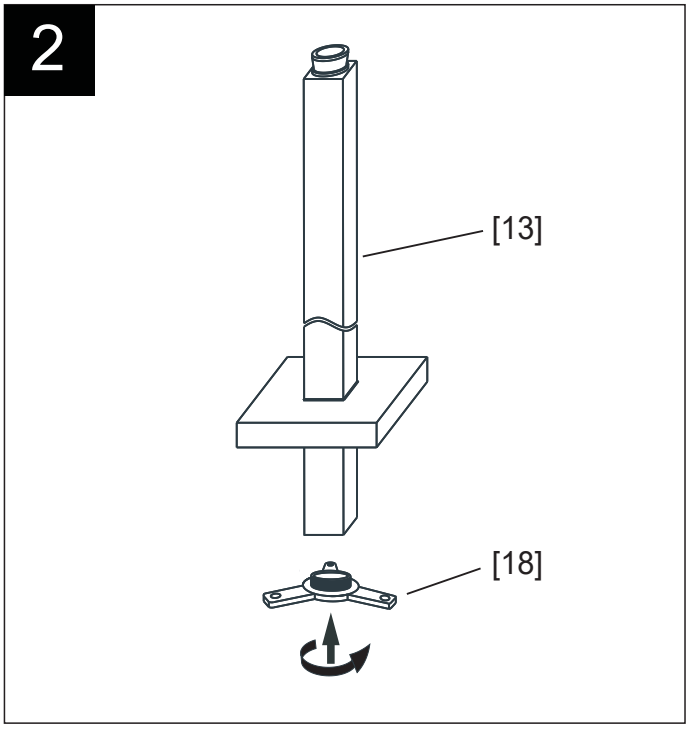

STEP 2:
Install the **Anchor [18]** to the **Post [13]** and secure.

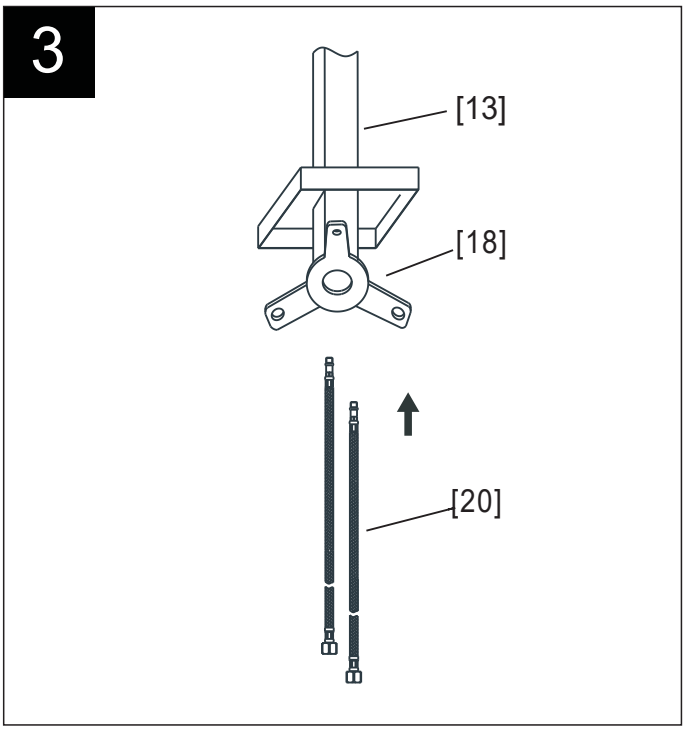


STEP 3:
Slide the **Inlet Hoses [20]** through the **Post [13]** from the bottom of the **Anchor [18]**.

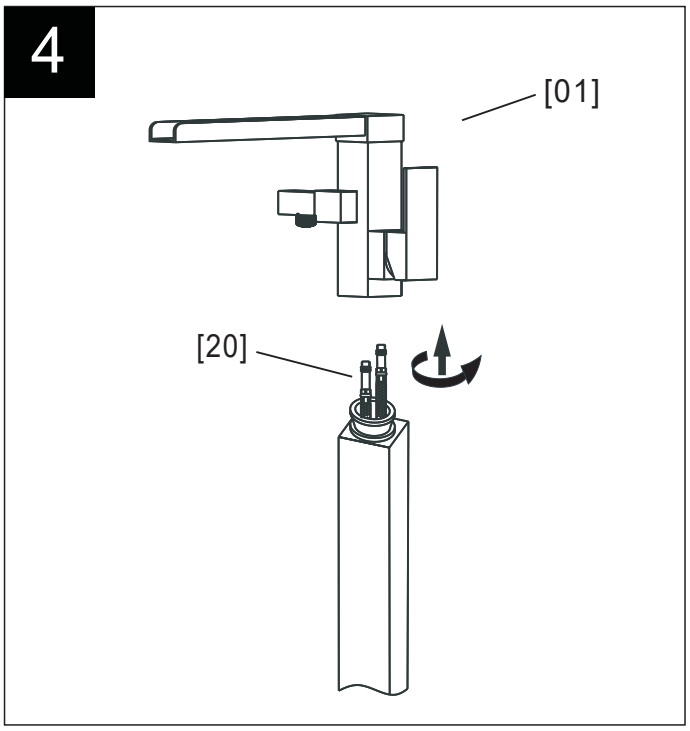


STEP 4:
Install the **Inlet Hoses [20]** to the **Faucet [01]** and secure.
Note: Makes sure to connect the **Inlet Hose [20]** labeled "Hot" to the **Faucet [01]** inlet marked "H" and the **Inlet Hose [20]** labeled "Cold" to the **Faucet [01]** inlet marked "C".


INSTALLATION

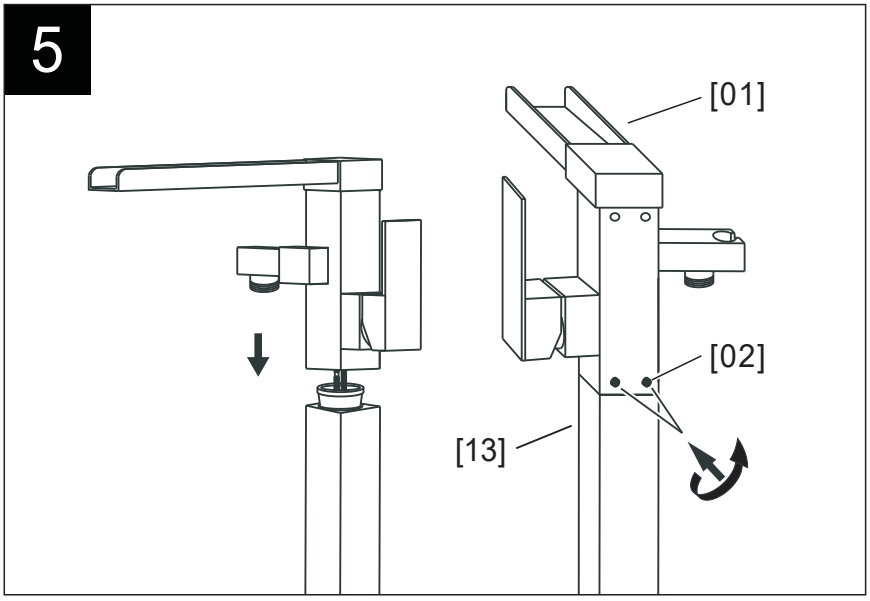

STEP 5:
Install the **Faucet [01]** to the **Post [13]**. Align the **Faucet [01]** with the **Post [13]** and tighten the **Screw [02]** to secure.

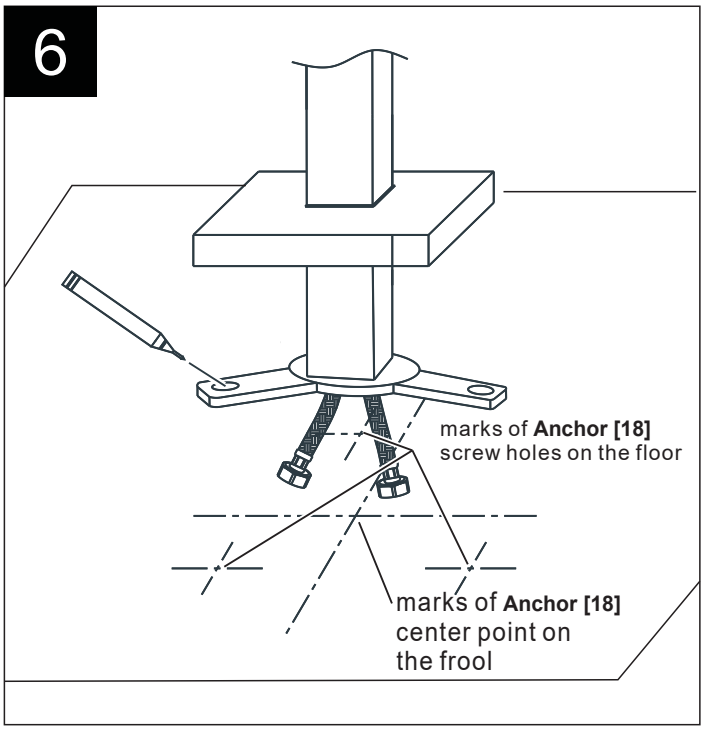


STEP 6:
Position the **Faucet [01]** over the intended installation spot. Mark the center point on the floor. Then, mark the **Anchor [18]** screw holes on the floor.

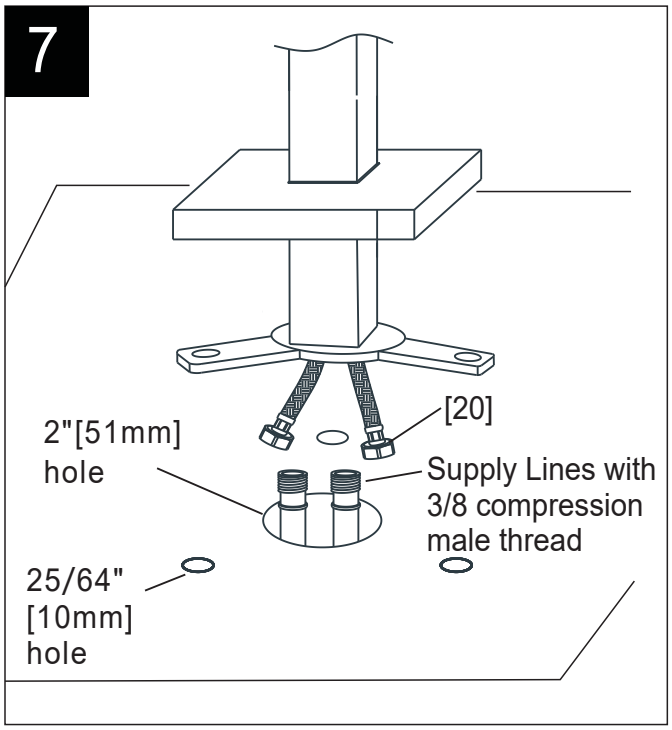

STEP 7:
a. Drill a 2" [51mm] hole into the floor, see Fig. 7.
b. Drill three 25/64" [10mm] holes into the concrete floor. If the floor is composed of wood, then there is no need for drilling.
c. Connect the **Inlet Hoses [20]** to the water supply lines (which should be protruding from the ground and have matching male threading).

Note: Make sure to connect the **Inlet Hose [20]** labeled "Hot" to the hot water supply line and the **Inlet Hose [20]** labeled "Cold" to the cold water supply line.

INSTALLATION

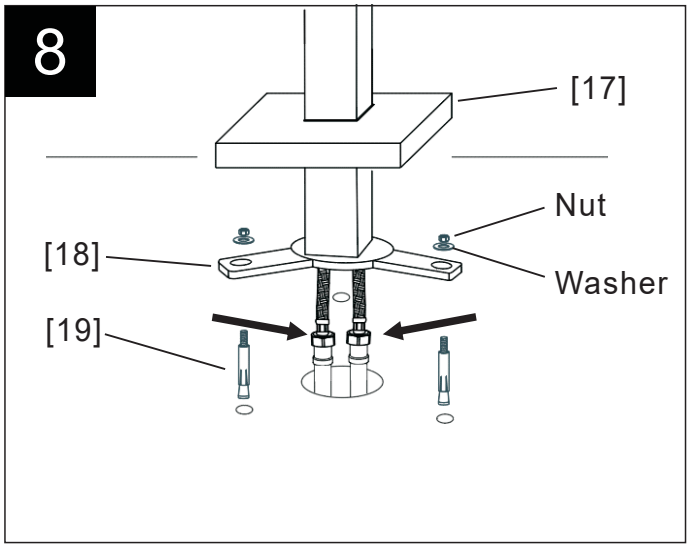


STEP 8:

a. Turn on hot and cold water supplies and check connections at arrows for leaks. Retighten if necessary, but do not overtighten.

b-1. Install the **Expansion Screw [19]** for concrete floor. Position the anchor of the faucet through the **Expansion Screw[19]**, slide the washers onto the anchor and secure the anchor by tighten the nuts.

b-2. For the wood floor, please secure the faucet with #14 Phillips pan head self-taping screws(not provided).


c. Slide the **Escutcheon[17]** to the floor to cover the **Anchor[18]**.

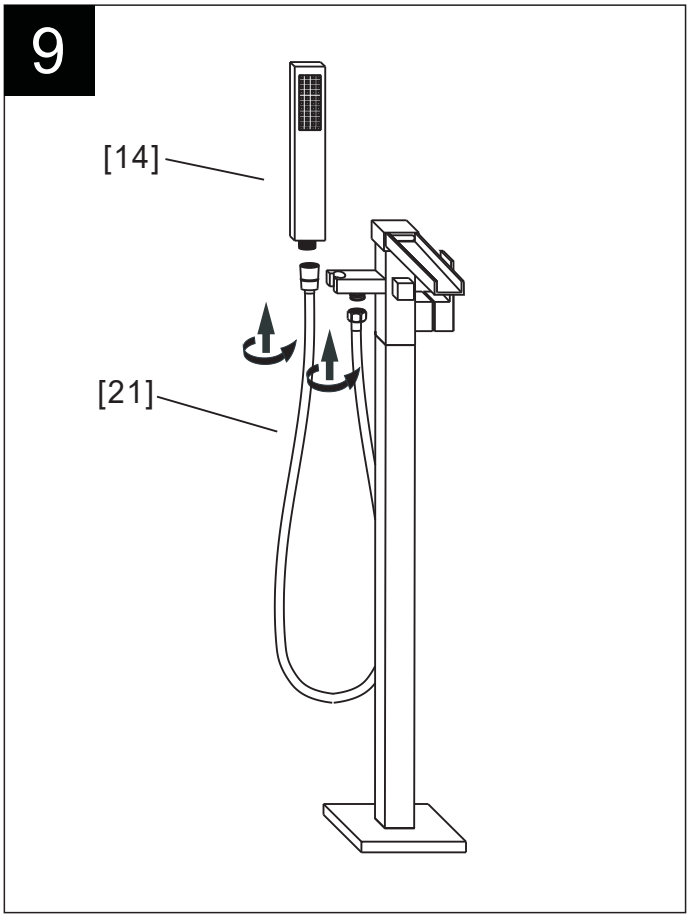

STEP 9:

Install and secure the **Hand Shower [14]** and **Shower Hose [21]** to the faucet as the figure shows.

Note: Make sure there are washers between the connections.

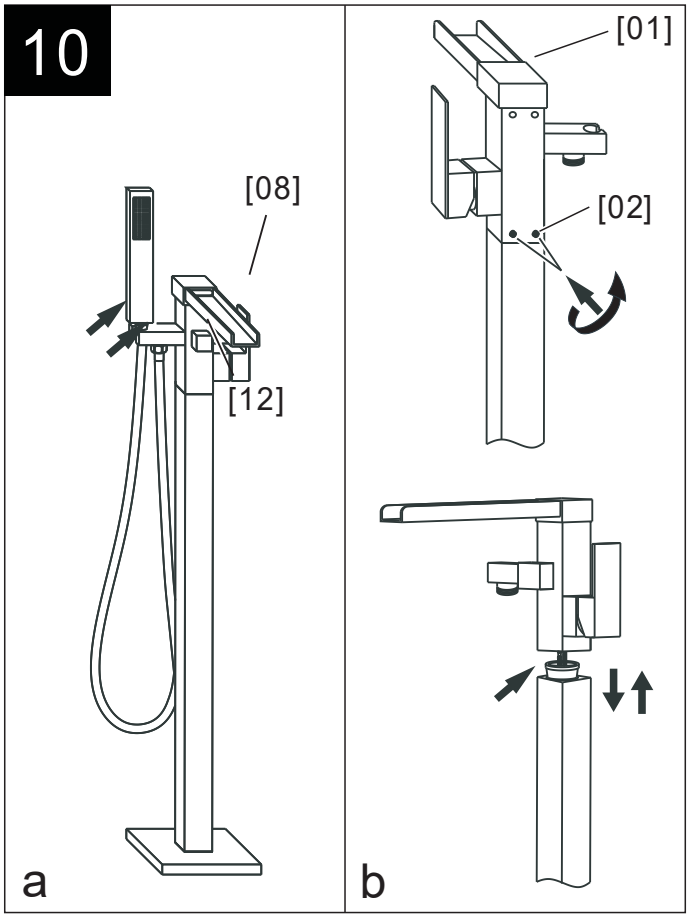

STEP 10:

a. Open the **Handle [08]**, then turn the **Handle(Diverter) [12]** to check the flow of spout and hand shower. Check connections at arrows for leaks. Retighten if necessary, but do not over tighten.

b. Unscrew the **Screws [02]** and lift up the **Faucet [01]** to check connections at arrows for leaks. Retighten if necessary, but do not overtighten. Replace and adjust the **Faucet [01]**, secure it again.

CLEANING & MAINTENANCE

1. To preserve the finish on the metallic parts of your ANZZI faucet, apply non-abrasive wax, such as car wax. Any cleaners should be rinsed off immediately.
2. Clean the flow regulator regularly for calcium build up or any blockage that reducing water flow.

ANZZI®