


# ASSEMBLY INSTRUCTIONS


## WEAVE ROPE BENCH

**A** Seat

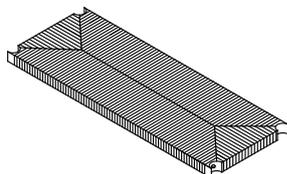


1pc

**B** Leg




2pcs

**C** Post

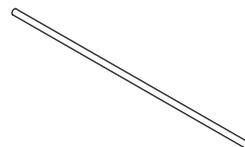

2pcs

**D** Bolt  
M8 x 45mm

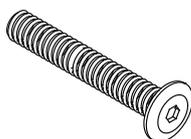

**E** Bolt  
M8 x 25mm




**F** Lock Washer  
ø13mm



**G** Flat Washer  
ø20mm




**H** Allen Key  
M6



4pcs


4pcs

1pc

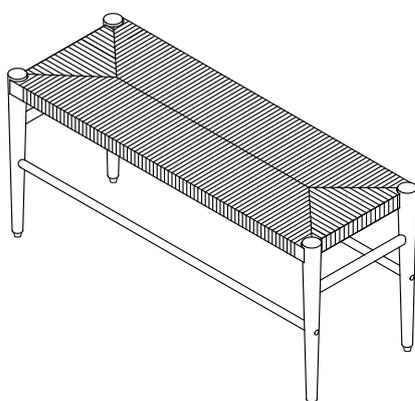


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1** Attach the Post (C) to the Leg (B) using Bolt (D) with the Allen Key (H).

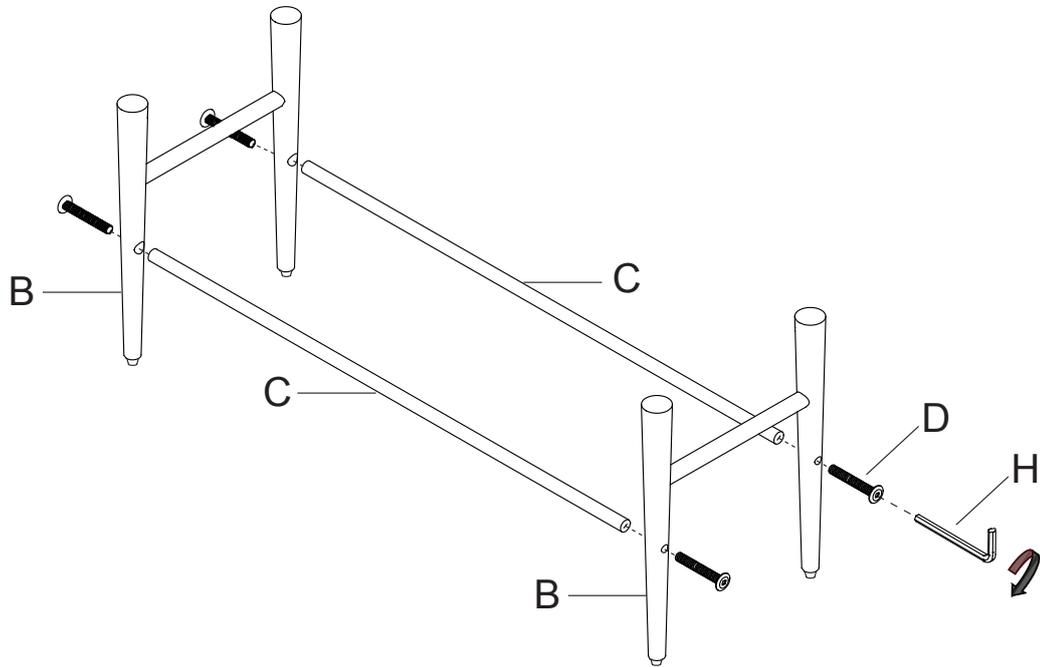


**2** Attach the assembled frames to the Seat (A) using Bolt (E), Lock Washer (F) and Flat Washer (G) with the Allen Key (H).

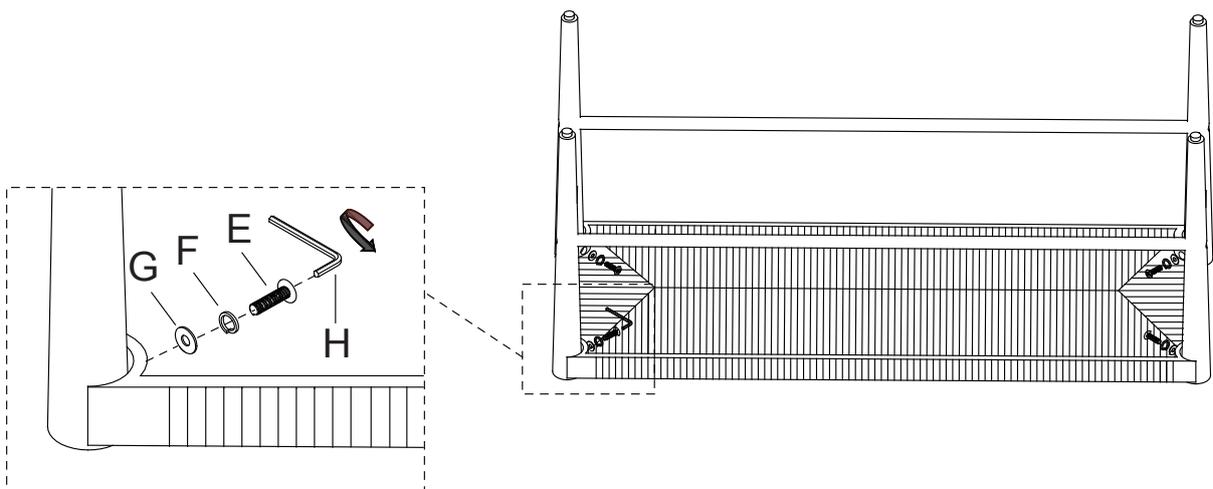

---

**3** Adjust the height of the pre-installed levelers under the legs to achieve balance.

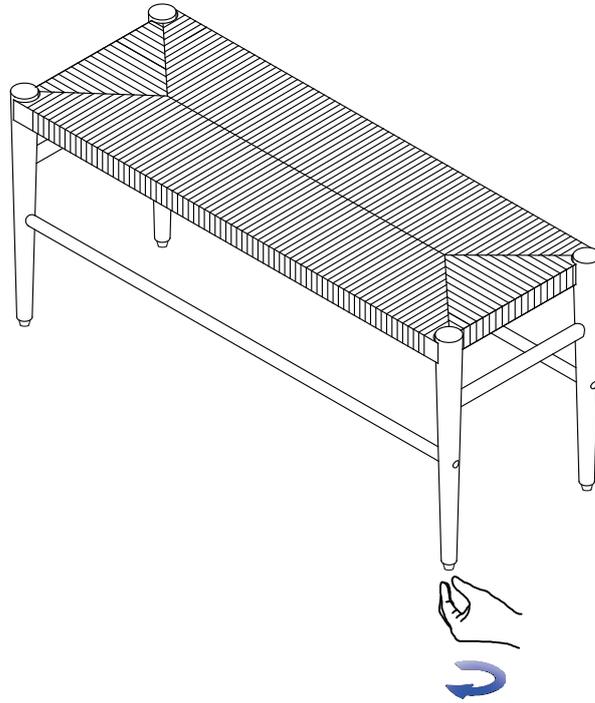

---

#### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.